

YAMAHA

OWNER'S MANUAL

XV535H

4BU-28199-25

XV535H**OWNER'S MANUAL****©1995 by Yamaha Motor Co., Ltd.****1st Edition, July 1995****All rights reserved. Any reprinting or
unauthorized use without the written
permission of Yamaha Motor Co., Ltd.
is expressly prohibited.****Printed in Japan****INTRODUCTION**

Congratulations on your purchase of the Yamaha XV535. This model is the result of Yamaha's vast experience in the production of fine sporting, touring, and pacesetting racing machines. It represents the high degree of craftsmanship and reliability that have made Yamaha a leader in these fields.

This manual will give you an understanding of the operation, inspection, and basic maintenance of this motorcycle. If you have any questions about the operation or maintenance of your motorcycle, please consult a Yamaha dealer.

Particularly important information is distinguished in this manual by the following notations:



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

! WARNING

Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander or a person inspecting or repairing the motorcycle.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the motorcycle.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

EUU00000

NOTE:

This manual should be considered a permanent part of this motorcycle and should remain with it even if the motorcycle is subsequently sold.

EUU13800

NOTE:

Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If there is any question concerning this manual, please consult your Yamaha dealer.

 **WARNING**

**PLEASE READ THIS MANUAL CAREFULLY
AND COMPLETELY BEFORE OPERATING
THIS MOTORCYCLE.**

CONTENTS

SAFETY INFORMATION	1-1	Front brake lever	5-6
LOCATION OF THE IMPORTANT LABELS.....	2-1	Rear brake pedal.....	5-6
DESCRIPTION.....	3-1	Fuel tank cap.....	5-6
MOTORCYCLE IDENTIFICATION.....	4-1	Starter "CHOKE"	5-7
Identification numbers record.....	4-1	Steering lock	5-7
Key identification number	4-1	Seat.....	5-8
Vehicle identification number	4-2	Helmet holder	5-9
Engine serial number	4-2	Rear shock absorbers	5-10
CONTROL FUNCTIONS	5-1	Sidestand	5-10
Main switch	5-1	Sidestand/clutch switch operation check.....	5-11
Indicator lights	5-2	PRE-OPERATION CHECKS.....	6-1
Speedometer.....	5-2	Brakes	6-3
Handlebar switches	5-3	Brake fluid leakage (Front)	6-3
Clutch lever.....	5-5	Clutch.....	6-4
Shift pedal	5-5	Throttle grip	6-4
		Engine oil	6-4
		Final gear oil	6-5
		Tires	6-5

Wheels	6-7	Engine oil	8-7
Fittings/Fasteners.....	6-8	Final gear oil	8-10
Lights and signals.....	6-8	Air filter.....	8-12
Switches	6-8	Carburetor adjustment	8-15
Battery.....	6-8	Idle speed adjustment	8-15
Fuel.....	6-9	Throttle cable adjustment	8-16
		Valve clearance adjustment.....	8-16
OPERATION AND IMPORTANT RIDING		Spark plug inspection	8-17
POINTS.....	7-1	Front brake lever free play	
Starting and warming up		adjustment.....	8-18
a cold engine	7-1	Rear brake pedal height and	
Starting a warm engine	7-4	free play adjustment.....	8-19
Shifting	7-4	Brake light switch adjustment	8-21
Engine break-in	7-5	Checking the front brake pads and	
Parking.....	7-6	rear brake shoes.....	8-21
		Inspecting the brake fluid level.....	8-22
PERIODIC MAINTENANCE AND		Brake fluid replacement.....	8-23
MINOR REPAIR.....	8-1	Clutch lever free play adjustment.....	8-24
Tool kit	8-1	Cable inspection and lubrication	8-25
Periodic maintenance / lubrication	8-3	Throttle cable and grip lubrication ...	8-25
Torque specifications	8-6	Brake and shift pedal lubrication.....	8-25

Brake and clutch lever lubrication ...	8-25
Sidestand lubrication	8-25
Front fork inspection	8-26
Rear shock absorber adjustment	8-26
Steering inspection.....	8-27
Wheel bearings	8-28
Battery.....	8-28
Fuse replacement	8-30
Headlight bulb replacement	8-31
Front wheel removal	8-33
Front wheel installation.....	8-34
Rear wheel removal.....	8-36
Rear wheel installation.....	8-37
Troubleshooting	8-38
Troubleshooting chart.....	8-39
CLEANING AND STORAGE.....	9-1
A. Cleaning	9-1
B. Storage	9-2

SPECIFICATIONS	10-
HOW TO USE THE CONVERSION TABLE	11-
NOISE REGULATION (FOR Australia).....	12-
WIRING DIAGRAM	

⚠ SAFETY INFORMATION

TWO-WHEELED MOTORCYCLES ARE SINGLE TRACK VEHICLES. THEIR SAFE USE AND OPERATION ARE DEPENDENT UPON THE USE OF PROPER RIDING TECHNIQUES AS WELL AS THE EXPERTISE OF THE OPERATOR.

EVERY OPERATOR SHOULD KNOW THE FOLLOWING REQUIREMENTS BEFORE RIDING.

HE OR SHE SHOULD:

- 1. OBTAIN THOROUGH INSTRUCTIONS FROM A COMPETENT SOURCE ON ALL ASPECTS OF MOTORCYCLE OPERATION.**
- 2. OBSERVE THE WARNINGS AND MAINTENANCE REQUIREMENTS IN THE OWNER'S MANUAL.**
- 3. OBTAIN QUALIFIED TRAINING IN SAFE AND PROPER RIDING TECHNIQUES.**
- 4. OBTAIN PROFESSIONAL TECHNICAL SERVICE AS INDICATED BY THE OWNER'S MANUAL AND/OR WHEN MADE NECESSARY BY MECHANICAL CONDITIONS.**

SAFE RIDING

- 1. Always make pre-operation checks. Careful checks may help prevent an accident.**
- 2. This motorcycle is designed to carry the operator and a passenger.**

- 3. The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous appears to be very effective in reducing the chance of this type of accident.**

Therefore:

- a. Wear a brightly colored jacket.**
 - b. Use extra caution when you approach and pass through intersections, since intersections are the most likely places for motorcycle accidents.**
 - c. Ride where other motorists can see you. Avoid riding in another motorist's "blind spot".**
- 4. Many accidents involve inexperienced operators. In fact, many operators who have been involved in accidents do not even have a current motorcycle license.**
 - a. Make sure you are qualified. Also, only lend your motorcycle to experienced operators.**
 - b. Know your skills and limits. Staying within your limits may help you to avoid an accident.**
 - c. We recommend that you practice riding your motorcycle where there is no traffic until you have become thoroughly familiar with your motorcycle and all of its controls.**

- 5. Many motorcycle accidents have been caused by motorcycle operator errors. A typical error made by the operator is veering wide on a turn due to EXCESSIVE SPEED or undercornering (insufficient lean angle for the speed).**
 - a. Always obey the speed limits and never travel faster than warranted by road and traffic conditions.**
 - b. Always signal before turning or changing lanes. Make sure other motorists see you.**
- 6. The operator's and passenger's posture are important for proper control.**
 - a. The operator should keep both hands on the handlebars and both feet on the operator footrests during operation to maintain control of the motorcycle.**
 - b. The passenger should always hold on to the operator, or the seat strap or grab bar if the motorcycle is so equipped, with both hands and keep both feet on the passenger footrests.**
 - c. Never carry a passenger unless he or she can firmly place both feet on the passenger footrests.**
- 7. Never ride under the influence of alcohol or drugs.**
- 8. This motorcycle is designed for on-road use only. It is not suitable for off-road use.**

PROTECTIVE APPAREL

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

1. Always wear an approved helmet.
2. Wear a face shield or goggles. Wind on your unprotected eyes could contribute to an impairment of vision which could delay seeing a hazard.
3. The use of heavy boots, jacket, trousers, gloves, etc. is effective in preventing or reducing abrasions or lacerations.
4. Never wear loose fitting clothing. It could catch on the control levers, footrests, or wheels and cause injury or accident.
5. Never touch the engine or exhaust system during or after operation. They become very hot and can cause burns. Always wear protective clothing that covers your legs, ankles, and feet.
6. A passenger should also observe the above precautions.

MODIFICATION

Modifications made to the motorcycle not approved by Yamaha, or the removal of original equipment, may render your motorcycle unsafe for use and may cause severe personal injury. Modifications may also make your motorcycle illegal to use.

LOADING AND ACCESSORIES

Adding accessories or cargo to your motorcycle can adversely affect stability and handling if the weight distribution of the machine is changed. To avoid the possibility of an accident, extreme caution should be used if adding cargo or accessories to your motorcycle. Use extra care if riding a motorcycle which has added cargo or accessories. Here are some general guidelines to follow if loading cargo or adding accessories to your motorcycle:

LOADING

The total weight of the operator, passenger, accessories and cargo must not exceed the maximum load limit of 220 kg.

When loading within these weight limits, keep the following in mind:

- 1. Cargo and accessory weight should be kept as low and close to the motorcycle as possible. Be sure to distribute the weight as evenly as possible on both sides of the machine to minimize imbalance or instability.**
- 2. Shifting weights can create a sudden imbalance. Make sure that accessories and cargo are securely attached to the motorcycle before riding. Recheck accessory mounts and cargo restraints frequently.**

- 3. Never attach any large or heavy items to the handlebars, front forks, or front fender. These items, including such cargo as sleeping bags, duffle bags, or tents, can create unstable handling or slow steering response.**

ACCESSORIES

Genuine Yamaha accessories have been specifically designed for use on this motorcycle. Since Yamaha cannot test all other accessories which may be available, you must personally be responsible for the proper selection, installation and use of non-Yamaha accessories. You should use extreme caution when selecting and installing any accessories.

Keep in mind these guidelines for mounting accessories in addition to those provided under "LOADING".

- 1. Never install accessories or carry cargo that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation, or obscure lights or reflectors.**
 - a. Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution or aerodynamic changes. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.**

- b. **Bulky or large accessories may seriously affect the stability of the motorcycle due to aerodynamic effects. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds. These accessories may also cause instability when being passed by or passing large vehicles.**
 - c. **Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the operator and may limit control ability. Therefore such accessories are not recommended.**
2. **Caution must be used if adding electrical accessories. If these accessories exceed the capacity of the motorcycle's electrical system, an electric failure could result, which could cause a dangerous loss of lights or engine power.**


GASOLINE AND EXHAUST GAS

1. **GASOLINE IS HIGHLY FLAMMABLE:**
 - a. **Always turn off the engine when refueling.**
 - b. **Take care not to spill any gasoline on the engine or exhaust pipe(s)/muffler(s) when refueling.**
 - c. **Never refuel while smoking or in the vicinity of an open flame.**

- 2. Never start the engine or let it run for any length of time in a closed area. The exhaust fumes are poisonous and may cause loss of consciousness and death within a short time. Always operate your motorcycle in an area that has adequate ventilation.**
- 3. Always turn off the engine before leaving the motorcycle unattended and remove the ignition key. When parking the motorcycle, note the following:**
 - a. The engine and exhaust pipe(s)/muffler(s) may be hot. Park the motorcycle in a place where pedestrians or children are not likely to touch these hot areas.**
 - b. Do not park the motorcycle on a slope or soft ground; the motorcycle may fall over.**
 - c. Do not park the motorcycle near a flammable source, e.g. a kerosene heater, or near an open flame. The motorcycle could catch fire.**
- 4. When transporting the motorcycle in another vehicle, be sure it is kept upright. If it should lean over, gasoline may leak out of the carburetor or fuel tank.**
- 5. If you should swallow any gasoline, inhale a lot of gasoline vapor, or allow gasoline to get in your eye(s), see your doctor immediately. If any gasoline spills on your skin or clothing, immediately wash it off with soap and water and change your clothes.**

LOCATION OF THE IMPORTANT LABELS

Please read the following labels carefully before operating this motorcycle.

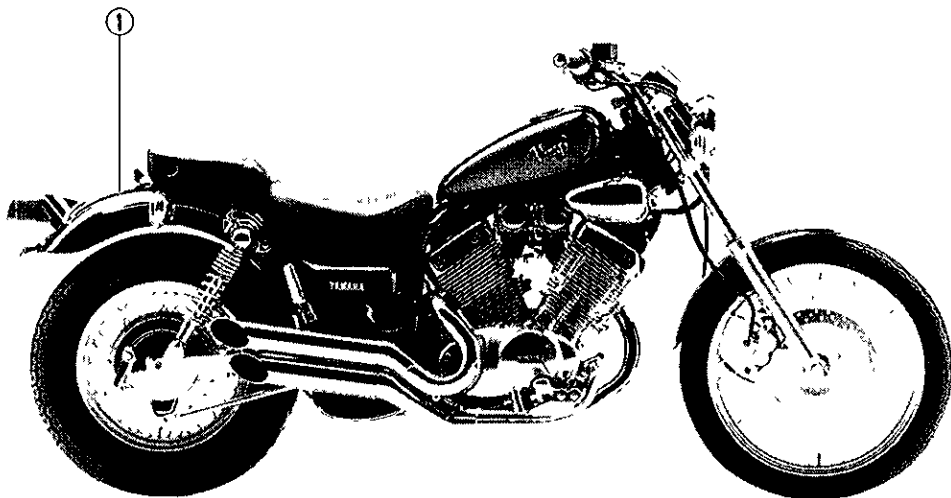

①




WARNING

Before you operate this vehicle,
read the owner's manual.

English

3HP-21568-00

DESCRIPTION

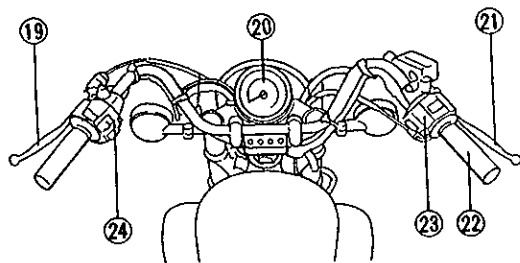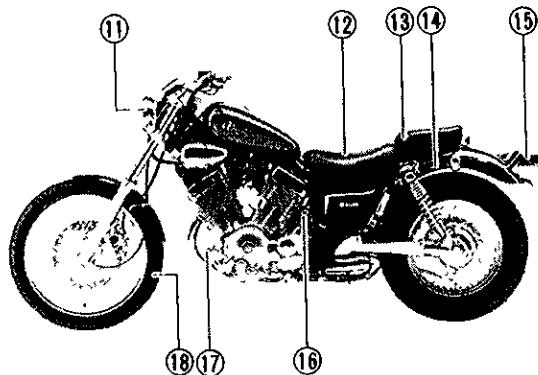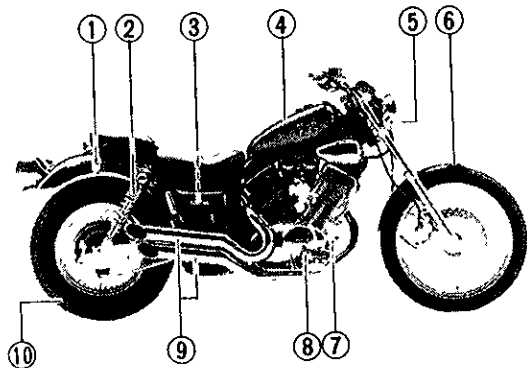

- | | |
|-----------------------|---------------------------|
| 1 Rear flasher light | 13. Passenger seat |
| 2 Rear shock absorber | 14. Helmet holder |
| 3 Fuel tank | 15. Tail/brake light |
| 4 Upper fuel tank | 16. Main switch |
| 5 Front flasher light | 17. Shift pedal |
| 6 Front fender | 18. Front wheel |
| 7 Brake pedal | 19 Clutch lever |
| 8 Footrest | 20. Speedometer |
| 9. Silencer | 21. Brake lever |
| 10. Rear wheel | 22 Throttle grip |
| 11. Headlight | 23 Right handlebar switch |
| 12 Rider seat | 24 Left handlebar switch |

MOTORCYCLE IDENTIFICATION

Identification numbers record

Record the key identification number, vehicle identification number and engine serial number in the spaces provided for assistance when ordering spare parts from a Yamaha dealer or for reference in case the vehicle is stolen.


1. KEY IDENTIFICATION NUMBER:

2. VEHICLE IDENTIFICATION NUMBER:

3. ENGINE SERIAL NUMBER:

Key identification number


The key identification number is stamped on the key. Record this number in the space provided and use it for reference when obtaining a new key.

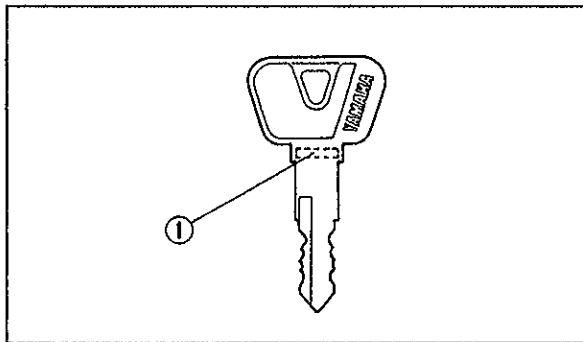

1 Key identification number

Vehicle identification number

The vehicle identification number is stamped into the steering head pipe.

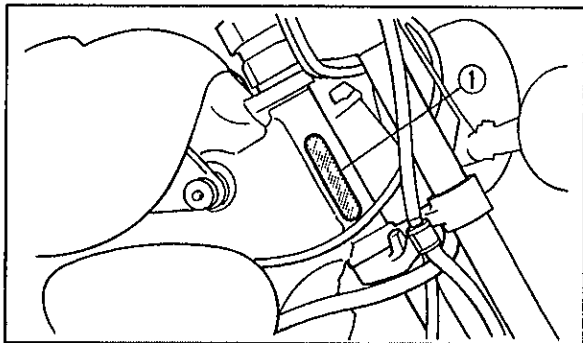


1. Vehicle identification number

NOTE:

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your state.

Engine serial number

The engine serial number is stamped into the crankcase.

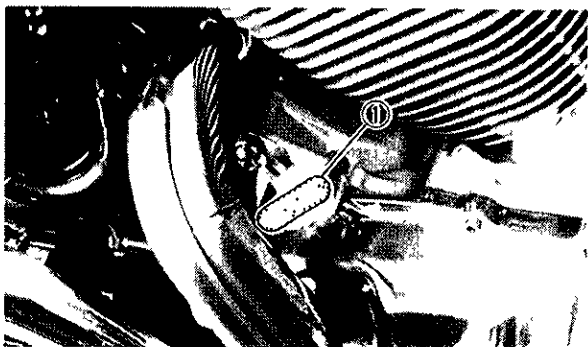

1 Engine serial number

NOTE:

The first three digits of these numbers are for model identification; the remaining digits are the unit production number. Keep a record of these numbers for reference when ordering parts from a Yamaha dealer.


EAB00000

CONTROL FUNCTIONS

EAB00100

Main switch

The main switch controls the ignition and lighting systems. Its operation is described below.

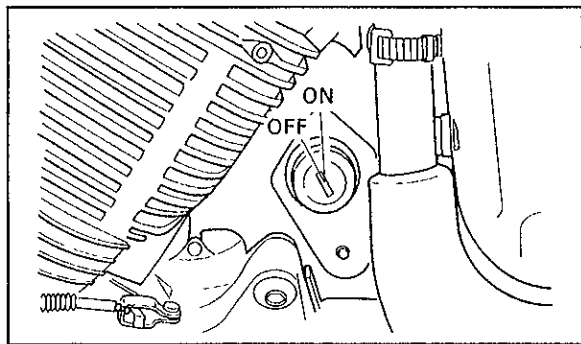

EAB01300

ON:

Electrical circuits are switched on, and the headlight, meter light, and taillight come on. The engine can be started. The key cannot be removed in this position.

EAB00600

OFF:


All electrical circuits are switched off. The key can be removed in this position.

EUU08800

NOTE:

Always turn the main switch to "OFF" and remove the key when the motorcycle is unattended.

Indicator lights

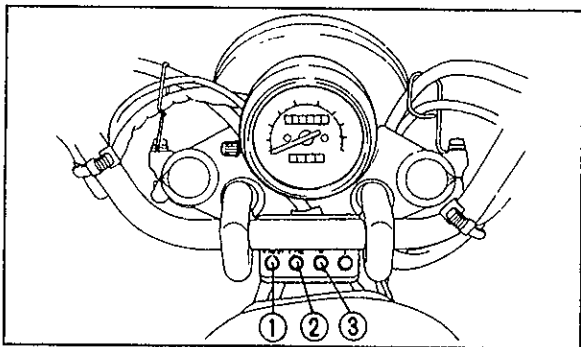

- 1 High beam indicator light "HIGH BEAM"
- 2 Neutral indicator light "NEUTRAL"
- 3 Turn indicator light "TURN"

Turn indicator light "TURN"

This indicator flashes when the turn switch is moved to the left or right.

Neutral indicator light "NEUTRAL"


This indicator comes on when the transmission is in neutral.

High beam indicator light "HIGH BEAM"

This indicator comes on when the headlight high beam is used


Speedometer

The speedometer shows riding speed. This speedometer is equipped with an odometer and trip odometer. The trip odometer can be reset to "0" with the reset knob. Use the trip odometer to estimate how far you can ride on a tank of fuel. This information will enable you to plan fuel stops in the future.

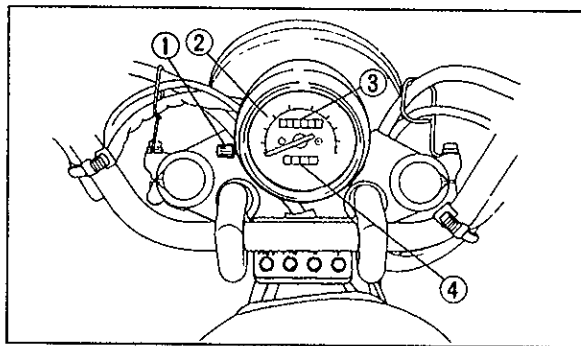

- | | |
|--------------|-----------------|
| 1 Reset knob | 2 Speedometer |
| 3 Odometer | 4 Trip odometer |

Handlebar switches

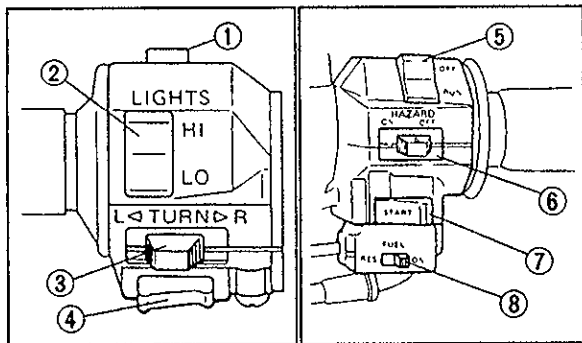

- | | |
|------------------------------|-------------------------------------|
| 1. Pass switch "PASS" | 5. Engine stop switch "ENGINE STOP" |
| 2. Dimmer switch "LIGHTS" | 6. Hazard switch "HAZARD" |
| 3. Turn signal switch "TURN" | 7. Start switch "START" |
| 4. Horn switch "HORN" | 8. Fuel reserve switch "FUEL" |

Pass switch "PASS"

Press the switch to operate the passing light.

Dimmer switch "LIGHTS"

Turn the switch to "HI" for the high beam and to "LO" for the low beam.

Turn signal switch "TURN"

This model is equipped with self-cancelling turn signals. To signal a right-hand turn, push the switch to the right. To signal a left-hand turn, push the switch to the left. Once the switch is released it will return to the center position. To cancel the signal, push the switch in after it has returned to the center position. If the switch is not cancelled by hand, it will self-cancel after the motorcycle has travelled for about 10 seconds or approximately 150 m whichever is greater. The self-cancelling mechanism only operates when the motorcycle is moving. Therefore the signal will not self-cancel while you are stopped at an intersection.

EAB60201

Horn switch "HORN"

Press the switch to sound the horn.

EAB60902

Engine stop switch "ENGINE STOP"

The engine stop switch is a safety device for use in an emergency such as when the motorcycle overturns or if trouble occurs in the throttle system. Turn the switch to "RUN" to start the engine. In case of emergency, turn the switch to "OFF" to stop the engine.

EAB62801

Hazard switch "HAZARD"

The hazard switch should be turned on under emergency or hazardous conditions. Both front and rear flasher lights will flash simultaneously when this switch is turned on with the main switch in the "ON" position.

EUU46100

CAUTION:

The battery can discharge from extended use, making it difficult to operate the starter.

EUU01101

NOTE:

Turn on the hazard switch to warn other drivers if your motorcycle must be stopped where it might be a traffic hazard.

EAB60702

Start switch "START"

The starter motor cranks the engine when pushing the starter switch.

EUU30700

CAUTION:

See starting instructions prior to starting the engine.

Fuel reserve switch "FUEL"

This switch should usually be kept "ON" while riding. If you run out of fuel while riding, move the switch to "RES" and refuel at the first opportunity. Then move the switch to "ON".

EUU12900

NOTE:

When the switch is turned to "RES", about 2.5 L remain in the fuel tank.

EAB70002

Clutch lever


The clutch lever is located on the left handlebar, and the ignition circuit cut-off system is incorporated in the clutch lever holder. Pull the clutch lever to the handlebar to disengage the clutch, and release the lever to engage the clutch. The lever should be pulled rapidly and released slowly for smooth clutch operation. (Refer

to the engine starting procedures for a description of the starting circuit cut-off system.)

EAB80001

Shift pedal

This motorcycle is equipped with a constant-mesh 5-speed transmission. The shift pedal is located on the left side of the engine and is used in combination with the clutch when shifting.

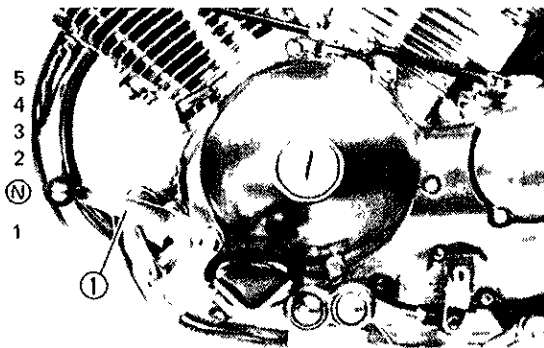

N Neutral

1 Shift pedal

EAB90001

Front brake lever

The front brake lever is located on the right handlebar. Pull it toward the handlebar to apply the front brake.

EAB90101

Rear brake pedal


The rear brake pedal is on the right side of the motorcycle. Press down on the brake pedal to apply the rear brake.

EAC00101

Fuel tank cap

TO OPEN:

Insert the key and turn it 1/4 turn clockwise. The lock will be released and the cap can be opened.

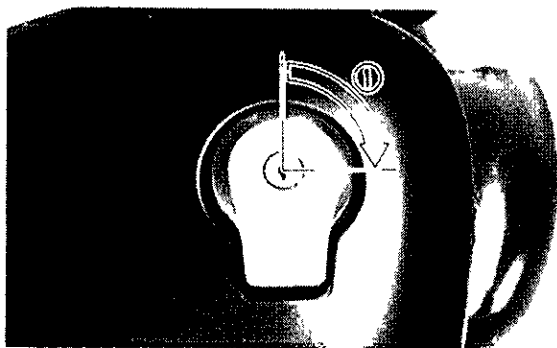

1 Open

TO CLOSE:

Push the tank cap into position with the key inserted. To remove the key, turn it counterclockwise to the original position.

EUU01200

NOTE:

This tank cap cannot be closed unless the key is in the lock. The key cannot be removed if the cap is not locked properly.

⚠ WARNING


Be sure the cap is properly installed and locked in place before riding the motorcycle.

EAC20502

Starter "CHOKE"

Starting a cold engine requires a richer air-fuel mixture. A separate starter circuit supplies this mixture.

Move in direction (a) to turn on the starter.
Move in direction (b) to turn off the starter.

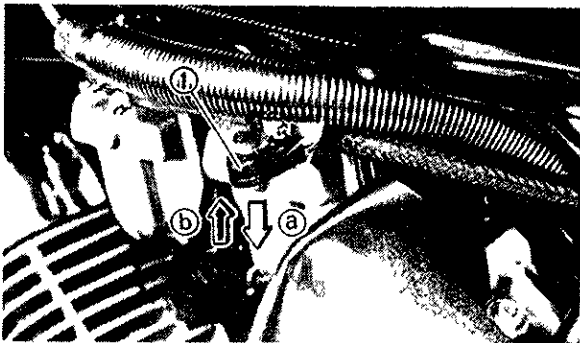


1 Starter "CHOKE"

EAC30201

Steering lock

To lock the steering, turn the handlebars all the way to the right. Open the steering lock cover, turn the key 1/8 counterclockwise then push the key in and turn it 1/8 turn clockwise. After checking to see that the steering is locked, remove the key from the lock and close the cover. To release the lock, reverse the above procedure.

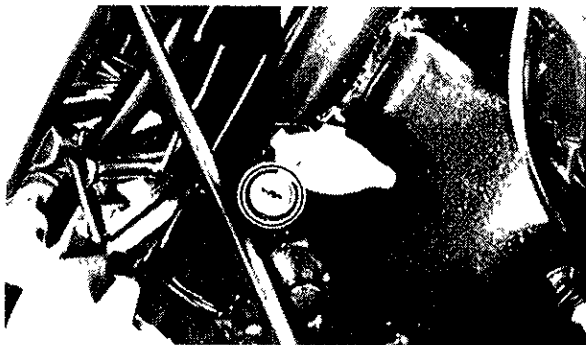


Seat

1. Passenger seat:

To open the seat lock, insert the key in the lock and turn it clockwise.


Then remove the seat. When reinstalling the seat, insert the lobe on the rear of the seat into the receptacle on the frame, then push down the seat.

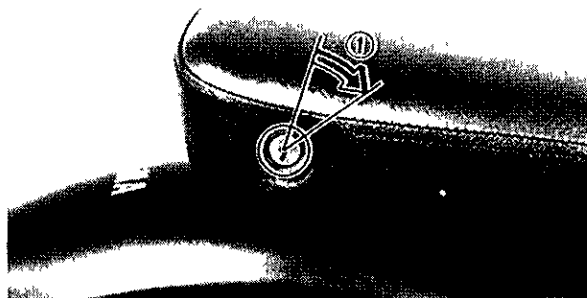


1 Open

2. Rider seat

- a. Remove the passenger seat.
- b. Remove the two bolts and remove the rider seat.

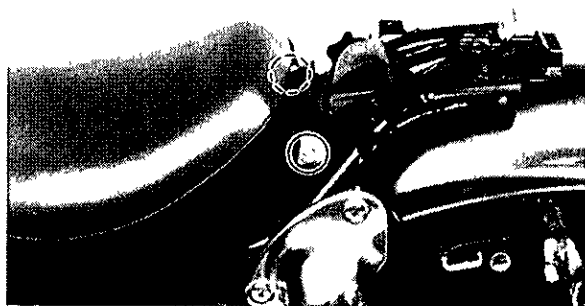

- c. When reinstalling the seat, insert the lobes on the front of the seat into the receptacles on the frame, then tighten the bolts.
- d. Reinstall the passenger seat.

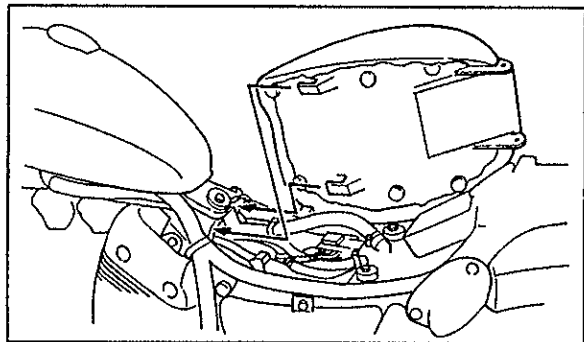

EUU01700

NOTE: _____
Make sure that the seat is securely fitted.

EAC50001


Helmet holder

To open the helmet holder, insert the key in the lock and turn it as shown. To lock the helmet holder, replace the holder in its original position.

EUU72900

⚠ WARNING

Never ride with a helmet in the helmet holder. The helmet may hit objects, causing loss of control and possibly an accident.

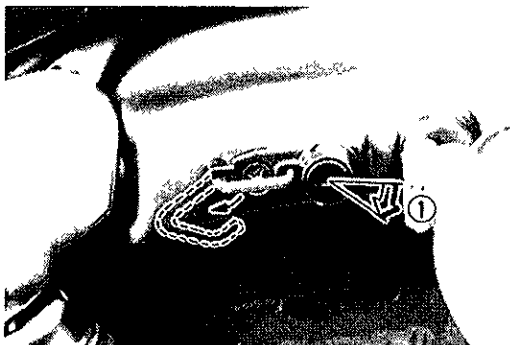

1 Open

Rear shock absorbers

The spring preload of the rear shock absorbers can be adjusted to suit the rider's preference, motorcycle's load (e.g. optional accessories, etc.) and road conditions. (See page 8-26 for details.)

Sidestand



This model is equipped with an ignition circuit cut-off system. The motorcycle must not be ridden when the sidestand is down. The sidestand is located on the left side of the frame. (Refer to page 7-1 for an explanation of this system.)



This motorcycle must not be operated with the sidestand in the down position. If the stand is not properly retracted, it could contact the ground and distract the operator, resulting in a possible loss of control. Yamaha has designed into this motorcycle a lockout system to assist the operator in fulfilling the responsibility of retracting the sidestand. Please check carefully the operating instructions listed below and if there is any indication of a malfunction, return the motorcycle to a Yamaha dealer immediately for repair.

Sidestand/clutch switch operation check

Check the operation of the sidestand switch and clutch switch against the information below.

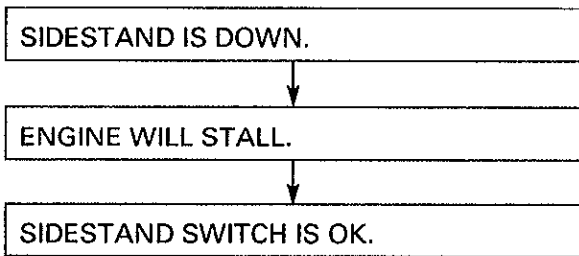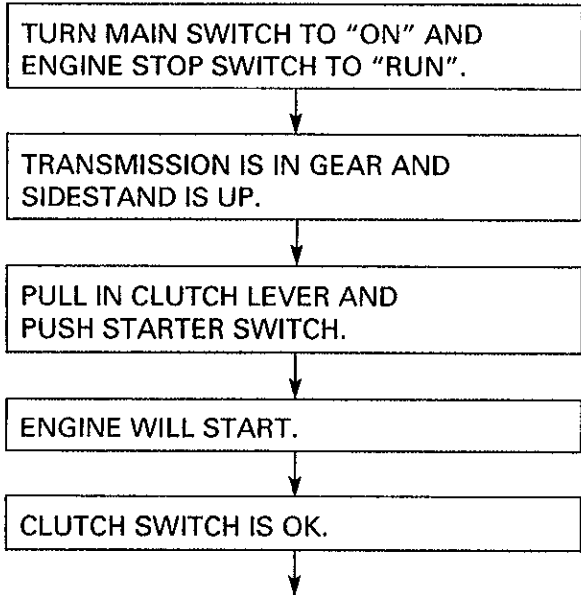

EUU69100

⚠ WARNING

If improper operation is noted, consult a Yamaha dealer immediately.

PRE-OPERATION CHECKS

Before using this motorcycle, check the following points:

ITEM	ROUTINE	PAGE
Front brake	<ul style="list-style-type: none"> • Check operation, free play, fluid level and fluid leakage. • Fill with DOT 4 (or DOT 3) brake fluid if necessary. 	6-3~6-4, 8-18~8-23
Rear brake	<ul style="list-style-type: none"> • Check operation, condition and free play. • Adjust if necessary 	
Clutch	<ul style="list-style-type: none"> • Check operation, condition and free play. • Adjust if necessary. 	6-4, 8-24
Throttle grip/Housing	<ul style="list-style-type: none"> • Check for smooth operation • Lubricate if necessary. 	6-4, 8-16, 8-25
Engine oil	<ul style="list-style-type: none"> • Check oil level/fill the engine with oil as required. 	6-4, 8-7~8-10
Final gear oil	<ul style="list-style-type: none"> • Check for leakage. 	6-5, 8-10~8-11
Wheels/Tires	<ul style="list-style-type: none"> • Check tire pressure, wear, damage and spoke tightness. 	6-5~6-8, 8-33~8-37
Control/Meter cables	<ul style="list-style-type: none"> • Check for smooth operation • Lubricate if necessary. 	8-25
Brake and shift pedal shafts	<ul style="list-style-type: none"> • Check for smooth operation • Lubricate if necessary. 	8-25
Brake and clutch lever pivots	<ul style="list-style-type: none"> • Check for smooth operation • Lubricate if necessary 	8-25
Sidestand pivot	<ul style="list-style-type: none"> • Check for smooth operation • Lubricate if necessary. 	8-25~8-26

ITEM	ROUTINE	PAGE
Fittings/Fasteners	<ul style="list-style-type: none"> • Check all chassis fittings and fasteners • Tighten/Adjust if necessary. 	6-8, 8-6
Fuel tank	<ul style="list-style-type: none"> • Check fuel level/fill with fuel as required. 	6-9
Lights and signals	<ul style="list-style-type: none"> • Check for proper operation. 	6-8, 8-31~8-33
Battery	<ul style="list-style-type: none"> • Check fluid level, fill with distilled water if necessary. 	6-8, 8-28~8-30

NOTE:

Pre-operation checks should be made each time the motorcycle is used. Such an inspection can be thoroughly accomplished in a very short time, and the added safety it assures is more than worth the time involved.

⚠ WARNING

If any item in the Pre-Operation Check is not working properly, have it inspected and repaired before operating the motorcycle.

Brakes

1. Brake lever and brake pedal
Check for correct free play in the front brake lever and rear brake pedal and adjust if necessary. Make sure the brakes are working properly by checking at low speed shortly after starting out. (See page 8-18 for details)

EUU62300

⚠ WARNING

A soft, spongy feeling in the brake lever indicates a failure in the brake system. Do not operate the motorcycle until the failure in the brake system is corrected. Ask a Yamaha dealer for immediate repairs. A soft, spongy feeling could indicate a hazardous condition in the brake system.

2. Brake fluid
Check the brake fluid level. Fill the master cylinder with brake fluid if necessary

Recommended brake fluid: DOT 4

EUU13100

NOTE: _____
If DOT 4 is not available, DOT 3 can be used.

- 3 Check the disc pads.
Refer to page 8-21.
4. Check the brake shoes.
Refer to page 8-22.

EUU02201

NOTE: _____
When this brake service is necessary, consult a Yamaha dealer.

EAE11302

Brake fluid leakage (Front)

Apply the brake for a few minutes. Check to see if any brake fluid leaks out from the pipe joints or the master cylinder.

EUU37801

CAUTION: _____

Brake fluid may deteriorate painted surfaces or plastic parts. Never spill any fluid. If spilled, clean it up immediately.

⚠ WARNING

If brake fluid leakage is found, ask a Yamaha dealer for immediate repairs. Such leakage could indicate a hazardous condition.

Clutch


Check the free play in the clutch lever, and make sure the clutch operates properly. If the free play is incorrect, adjust it. (See page 8-24 for details)

Throttle grip

Turn the throttle grip to see if it operates properly, and check the free play. Make sure the grip returns by spring force when released. Ask a Yamaha dealer to make any necessary adjustments. (See page 8-16 for details)

Engine oil

Make sure the engine oil is at the specified level. Fill with oil as necessary (see page 8-7 for details).

Recommended oil:**Recommended engine oil classification:**

API Service "SE", "SF" type or equivalent
(e.g. "SF-SE", "SF-SE-CC",
"SF-SE-SD" etc.)

Oil quantity:

Total amount:

3.2 L

Periodic oil change:

2.6 L

With oil filter replacement:

2.8 L

Final gear oil

Make sure the final gear oil is at the specified level. Fill with oil as necessary (see page 8-10 for details).

Recommended oil:

SAE 80 API GL-4 Hypoid gear oil
If desired, an SAE 80W90 hypoid gear oil may be used for all conditions.

NOTE:

"GL-4" is a quality and additive rating. "GL-5" or "GL-6" rated hypoid gear oils may also be used.

Tires

To ensure maximum performance, long service, and safe operation, note the following:

1. Tire air pressure

Always check and adjust the tire pressure before operating the motorcycle.

WARNING

Tire inflation pressure should be checked and adjusted when the temperature of the tire equals the ambient air temperature. Tire inflation pressure must be adjusted according to total weight of cargo, rider, passenger, and accessories (fairing, saddlebags, etc. if approved for this model), and vehicle speed.

Basic weight. With oil and full fuel tank	195 kg	
Maximum load**	220 kg	
Cold tire pressure:	Front	Rear
Up to 90 kg load*	200 kPa (2.00 kg/cm ² , 2.00 bar)	225 kPa (2.25 kg/cm ² , 2.25 bar)
90 kg load ~ Maximum load*	200 kPa (2.00 kg/cm ² , 2.00 bar)	250 kPa (2.50 kg/cm ² , 2.50 bar)


* Load is the total weight of cargo, rider, passenger, and accessories

⚠ WARNING

Proper loading of your motorcycle is important for several characteristics of your motorcycle; such as handling, braking, performance and safety. Do not carry loosely packed items that can shift. Securely pack your heaviest items close to the center of the motorcycle, and distribute the weight evenly from side to side. Properly adjust the suspension for your load, and check the condition and pressure of your tires. **NEVER OVERLOAD YOUR MOTORCYCLE.** Make sure the total weight of the cargo, rider, passenger, and accessories (fairing, saddlebags, etc. if approved for this model) does not exceed the maximum load of the motorcycle. Operation of an overloaded motorcycle could cause tire damage, an accident, or even injury.

2. Tire inspection

Always check the tires before operating the motorcycle. If a tire tread shows crosswise lines (minimum tread depth), if the tire has a nail or glass fragments in it, or if the side wall is cracked, contact a Yamaha dealer immediately and have the tire replaced.

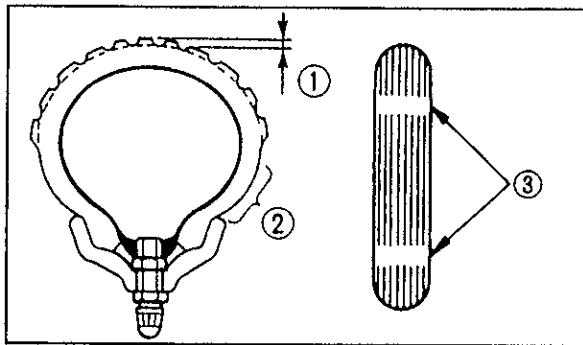

1 Tread depth 2 Side wall 3 Wear indicator

FRONT

Manufacturer	Size	Type
Bridgestone	3.00-19 49S	L303A
Dunlop	3.00-19 49S	F14G

REAR

Manufacturer	Size	Type
Bridgestone	140/90-15 M/C 70S	G508
Dunlop	140/90-15 M/C 70S	K425

Minimum tire tread depth (front and rear)	1.0 mm
--	--------

EUU70001

WARNING

- 1. Operating the motorcycle with excessively worn tires decrease riding stability and can lead to loss of control. Have excessively worn tires replaced by a Yamaha dealer immediately. Brakes, tires, and related wheel parts replacement should be left to a Yamaha Service Technician.**

- 2. Patching a punctured tube is not recommended. If it is absolutely necessary to do so, use great care and replace the tube as soon as possible with a good quality replacement.**
-

EAE93400

Wheels

To ensure maximum performance, long service, and safe operation, note the following:

- 1. Always inspect the wheels before a ride. Check for cracks, bends, or warpage of the wheel; be sure the spokes are tight and undamaged. If any abnormal condition exists in a wheel, consult a Yamaha dealer. Do not attempt even small repairs to the wheel. If a wheel is deformed or cracked, it must be replaced.**

2. Tires and wheels should be balanced whenever either one is changed or replaced. Failure to have a wheel balanced can result in poor performance, adverse handling characteristics, and shortened tire life.
3. After installing a tire, ride conservatively to allow the tire to seat itself on the rim properly. Failure to allow proper seating may cause tire failure, resulting in damage to the motorcycle and injury to the rider.

EAE85000

Fittings/Fasteners

Always check the tightness of chassis fittings and fasteners before a ride. Use the chart on page 8-6 to find the correct torque.

EAE70000

Lights and signals

Check the headlight, flasher lights, tail-light, brake light, meter lights, and all the indicator lights to make sure they are in working condition.

EAE70700

Switches

Check the operation of the headlight switch, turn switch, brake light switch, horn switch, starter switch, main switch, etc.

EAE70501

Battery


Check the fluid level and fill if necessary. Use only distilled water if refilling is necessary. (see page 8-28 for details)

Fuel

Make sure there is sufficient fuel in the tank.

⚠ WARNING

Do not overfill the fuel tank. Avoid spilling fuel on the hot engine. Do not fill the fuel tank above the bottom of the filler tube as shown in the illustration or it may overflow when the fuel heats up later and expands.

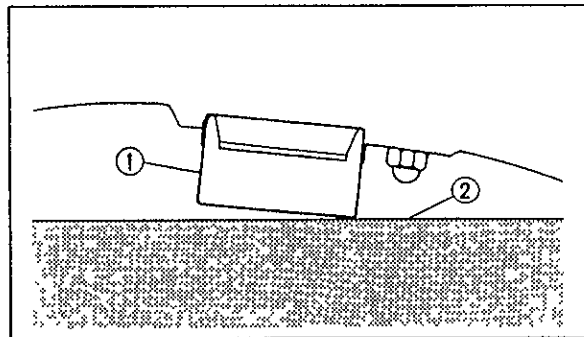

1 Filler tube

2 Fuel level

CAUTION:

Always wipe off spilled fuel immediately with a dry and clean soft cloth. Fuel may deteriorate painted surfaces or plastic parts.

Recommended fuel:

Regular gasoline

For Australia:

Unleaded fuel only

Fuel tank capacity:

Total:

13.5 L

Reserve:

2.5 L

OPERATION AND IMPORTANT RIDING POINTS

EUU67200

WARNING

Before riding this motorcycle, become thoroughly familiar with all operating controls and their functions. Consult a Yamaha dealer regarding any control or function that you do not thoroughly understand.

EUU62800

WARNING

1. Never start your engine or let it run for any length of time in a closed area. The exhaust fumes are poisonous and can cause loss of consciousness and death within a short time. Always operate your motorcycle in an area with adequate ventilation.

2. Before starting out, always be sure the sidestand is up. Failure to retract the sidestand completely can result in a serious accident when you try to turn a corner.

EAF16302

Starting and warming up a cold engine

EUU02800


NOTE:

This motorcycle is equipped with a starting and an ignition circuit cut-off switch.

1. The engine can be started only under the following conditions:
 - a. The transmission is in neutral.
 - b. The sidestand is up, the transmission is in gear, and the clutch is disengaged.
2. The motorcycle must not be ridden when the sidestand is down.

⚠ WARNING

Before going through the following steps, check the function of the sidestand switch and clutch switch. (Refer to page 5-11.)

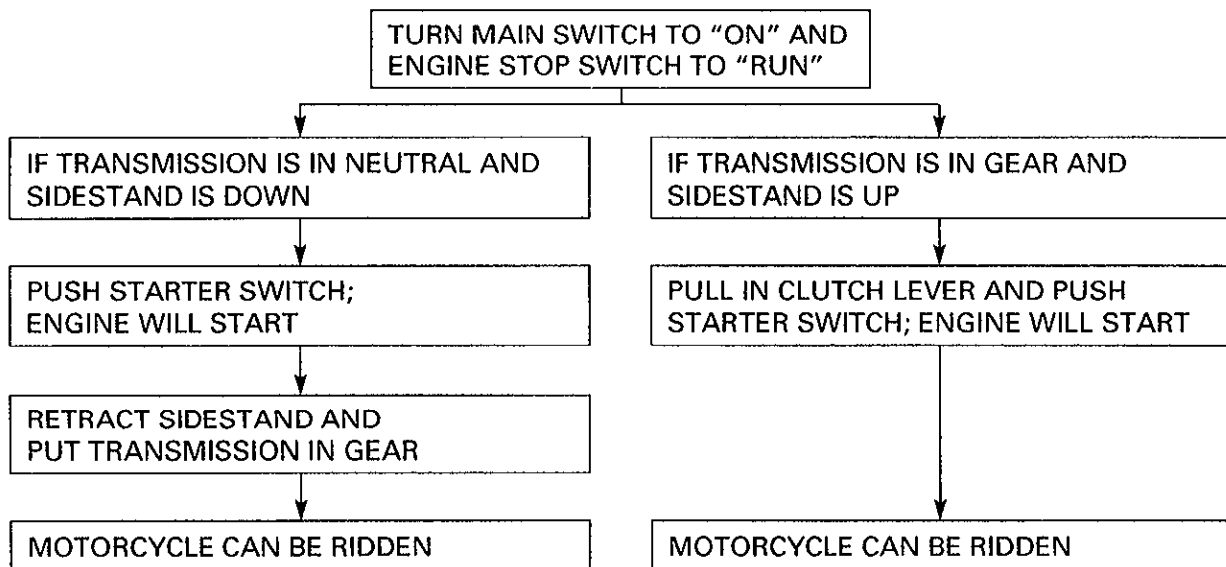

1. Turn the main switch to "ON" and the engine stop switch to "RUN".
2. Shift transmission into neutral.

EUU03001

NOTE: _____

When the transmission is in neutral, the neutral indicator light should be on. If the light does not come on, ask a Yamaha dealer to inspect it.

3. Fully open the starter (CHOKE) and completely close the throttle grip.
4. Start the engine by pushing the starter switch.

EUU02500

NOTE: _____

If the engine fails to start, release the starter switch, wait a few seconds, then try again. Each attempt should be as short as possible to preserve the battery. Do not crank the engine more than 10 seconds on any one attempt.

5. After starting the engine, turn back the starter to the warming up position (about halfway).

EUU02600

NOTE: _____

For maximum engine life, always warm up the engine before starting off. Never accelerate hard with a cold engine.

6. After warming up the engine, turn off the starter completely.

EUU02700

NOTE: _____

The engine is warm when it responds normally to the throttle with the starter turned off.

Starting a warm engine

The starter "CHOKE" is not required when the engine is warm.

CAUTION:

See "Break-in section" prior to operating the motorcycle for the first time.

Shifting

The transmission lets you control the amount of power you have available at a given speed for starting, accelerating, climbing hills, etc. The use of the shift pedal is shown in the illustration. (Page 5-5)

To shift into neutral, depress the shift pedal repeatedly until it reaches the end of its travel, then raise the pedal slightly.

CAUTION:

1. Do not coast for long periods with the engine off, and do not tow the motorcycle a long distance. Even with gears in neutral, the transmission is only properly lubricated when the engine is running. Inadequate lubrication may damage the transmission.
 2. Always use the clutch when changing gears. The engine, transmission, and driveline are not designed to withstand the shock of forced shifting and can be damaged by shifting without using the clutch.
-

Engine break-in

There is never a more important period in the life of your motorcycle than the period between zero and 1,000 km. For this reason we ask that you carefully read the following material. Because the engine is brand new, you must not put an excessive load on it for the first 1,000 km. The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full throttle operation, or any condition which might result in excessive heating of the engine, must be avoided.

1. 0 ~ 150 km:

Avoid operation above 1/3 throttle. Stop the engine and let it cool for 5 to 10 minutes after every hour of operation. Vary the speed of the motorcycle from time to time. Do not operate it at one set throttle position.

2. 150 ~ 500 km:

Avoid prolonged operation above 1/2 throttle. Rev the motorcycle freely through the gears, but do not use full throttle at any time.

3. 500 ~ 1,000 km:

Avoid cruising speeds in excess of 3/4 throttle.

CAUTION

After 1,000 km of operation, be sure to replace the engine oil, oil filter element, and final gear oil.

4. 1,000 km and beyond:

Avoid prolonged full-throttle operation. Vary speed occasionally.

CAUTION

If any engine trouble should occur during the break-in period, consult a Yamaha dealer immediately.

Parking

When parking the motorcycle, stop the engine and remove the ignition key.

WARNING

The muffler and exhaust pipe are hot. Park the motorcycle in a place where pedestrians or children are not likely to touch the motorcycle. Do not park the motorcycle on a slope or soft ground; the motorcycle may overturn.

PERIODIC MAINTENANCE AND MINOR REPAIR

EAH00400

Periodic inspection, adjustment and lubrication will keep your motorcycle in the safest and most efficient condition possible. Safety is an obligation of the motorcycle owner. The maintenance and lubrication schedule chart should be considered strictly as a guide to general maintenance and lubrication intervals. YOU MUST TAKE INTO CONSIDERATION THAT WEATHER, TERRAIN, GEOGRAPHICAL LOCATIONS, AND A VARIETY OF INDIVIDUAL USES ALL TEND TO DEMAND THAT EACH OWNER ALTER THIS TIME SCHEDULE TO SHORTER INTERVALS TO MATCH THE ENVIRONMENT. The most important points of motorcycle inspection, adjustment, and lubrication are explained in the following pages.



If you are not familiar with motorcycle service, this work should be done by a Yamaha dealer.


EAH10101

Tool kit

The service information included in this manual is intended to provide you, the owner, with the necessary information for completing some of your own preventive maintenance and minor repairs. The tools provided in the owner's tool kit are to assist you in the performance of periodic maintenance. However, some other tools such as a torque wrench are also necessary to perform the maintenance correctly.

! WARNING

Modifications to this motorcycle not approved by Yamaha may cause loss of performance, and render it unsafe for use. Consult a Yamaha dealer before attempting any changes.

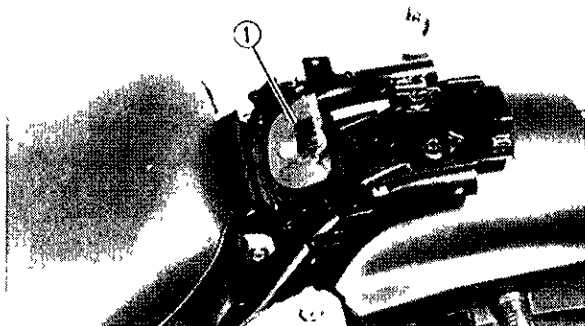

1 Tool kit

EUU18500

NOTE:

If you do not have necessary tools required during a service operation, take your motorcycle to a Yamaha dealer for service.

PERIODIC MAINTENANCE / LUBRICATION

ITEM	REMARKS	BREAK-IN 1,000 km	EVERY	
			6,000 km or 6 months	12,000 km or 12 months
Valve(s)*	<ul style="list-style-type: none"> • Check valve clearance. • Adjust if necessary 	○	○	○
Spark plug(s)	<ul style="list-style-type: none"> • Check condition. • Clean or replace if necessary 	○	○	○
Air filter	<ul style="list-style-type: none"> • Clean. • Replace if necessary. 		○	○
Carburetor*	<ul style="list-style-type: none"> • Check idle speed/synchronization/starter operation • Adjust if necessary 	○	○	○
Fuel line*	<ul style="list-style-type: none"> • Check fuel hose for cracks or damage. • Replace if necessary 		○	○
Fuel filter*	<ul style="list-style-type: none"> • Check condition • Replace if necessary 			○
Engine oil	<ul style="list-style-type: none"> • Replace (Warm engine before draining). 	○	○	○
Engine oil filter*	<ul style="list-style-type: none"> • Replace. 	○		○
Final gear oil	<ul style="list-style-type: none"> • Check oil level/oil leakage • Replace every 24,000 km or 24 months 	REPLACE	○	○
Front brake*	<ul style="list-style-type: none"> • Check operation/fluid leakage/See NOTE page 8-5 • Correct if necessary. 		○	○
Rear brake	<ul style="list-style-type: none"> • Check operation. • Adjust if necessary 		○	○
Clutch	<ul style="list-style-type: none"> • Check operation • Adjust if necessary 		○	○

ITEM	REMARKS	BREAK-IN 1,000 km	EVERY	
			6,000 km or 6 months	12,000 km or 12 months
Swingarm pivot*	<ul style="list-style-type: none"> • Check swingarm assembly for looseness • Correct if necessary • Moderately repack every 24,000 km or 24 months *** 			○
Wheels*	<ul style="list-style-type: none"> • Check balance/damage/runout/spoke tightness • Replace if necessary 		○	○
Wheel bearings*	<ul style="list-style-type: none"> • Check bearing assembly for looseness/damage • Replace if damaged 		○	○
Steering bearing*	<ul style="list-style-type: none"> • Check bearing assemblies for looseness • Correct if necessary • Moderately repack every 24,000 km or 24 months ** 	○		○
Front forks*	<ul style="list-style-type: none"> • Check operation/oil leakage • Repair if necessary 		○	○
Rear shock absorber*	<ul style="list-style-type: none"> • Check operation/oil leakage • Repair if necessary 		○	○
Fittings/Fasteners*	<ul style="list-style-type: none"> • Check all chassis fittings and fasteners. • Correct if necessary 	○	○	○
Sidestand*	<ul style="list-style-type: none"> • Check operation • Repair if necessary 	○	○	○
Sidestand switch*	<ul style="list-style-type: none"> • Check operation • Clean or replace if necessary. 	○	○	○
Battery*	<ul style="list-style-type: none"> • Check specific gravity • Check breather pipe for proper operation. • Correct if necessary 		○	○

* It is recommended that these items be serviced by a Yamaha dealer.

** Lithium soap base grease

*** Molybdenum disulfide grease


NOTE:

Brake fluid replacement:

1. When disassembling the master cylinder or caliper cylinder, replace the brake fluid. Normally check the brake fluid level and fill the master cylinder with fluid as required.
 2. On the inner parts of the master cylinder and caliper cylinder, replace the oil seals every two years.
 3. Replace the brake hoses every four years, or if cracked or damaged.
-

Torque specifications

Use a torque wrench to tighten these items. It is recommended that these items be checked occasionally, especially before a long trip. Always check the tightness of these items whenever they are loosened for any reason.

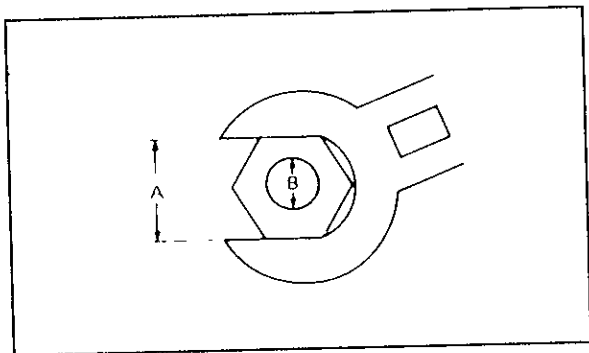

A (Nut)	B (Bolt)	General torque specifications	
		Nm	m.kg
10 mm	6 mm	6	0.6
12 mm	8 mm	15	1.5
14 mm	10 mm	30	3.0
17 mm	12 mm	55	5.5
19 mm	14 mm	85	8.5
22 mm	16 mm	130	13.0

Item	Torque	
	Nm	m.kg
Spark plug	20	2.0
Engine oil drain plug	43	4.3
Engine oil filter bolt	10	1.0
Final gear oil drain plug	23	2.3
Final gear oil filler bolt	23	2.3
Front axle pinch bolt	23	2.3
Front wheel axle	58	5.8
Rear wheel axle nut	107	10.7
Rear axle pinch bolt	16	1.6
Tension bar bolt	20	2.0

Engine oil


1. Oil level measurement
 - a. Place the motorcycle on a level place and hold it in an upright position. Warm up the engine for several minutes.

EUU03901

NOTE:

Be sure the motorcycle is positioned straight up when checking the oil level. A slight tilt toward the side can result in false readings.

- b. With the engine stopped, check the oil level through the level window located at the lower part of the left side crankcase cover.

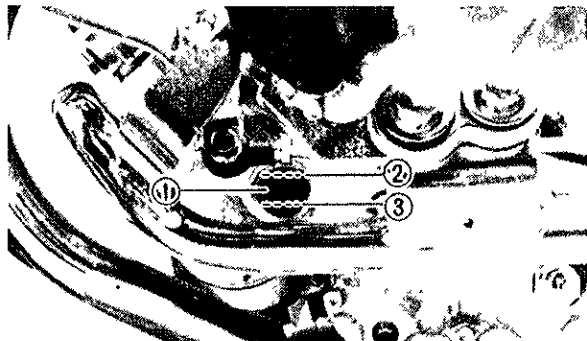

1. Level window
3. Minimum mark

2. Maximum mark

EUU04000


NOTE:

Wait a few minutes until the oil level settles before checking.


- c. The oil level should be between the maximum and minimum marks. If the level is low, add oil to raise it to the proper level.

2. Engine oil and oil filter replacement

- a. Warm up the engine for a few minutes.
- b. Stop the engine. Place an oil pan under the engine and remove the oil filler cap.

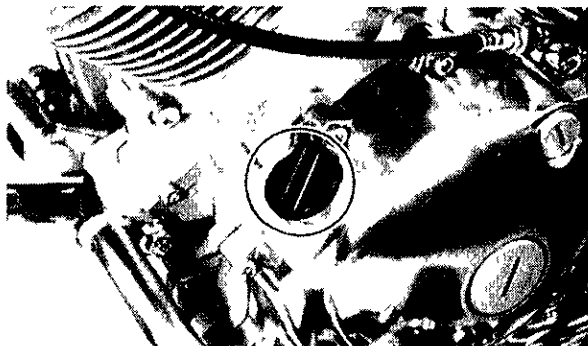


- c. Remove the drain plug and drain the oil.

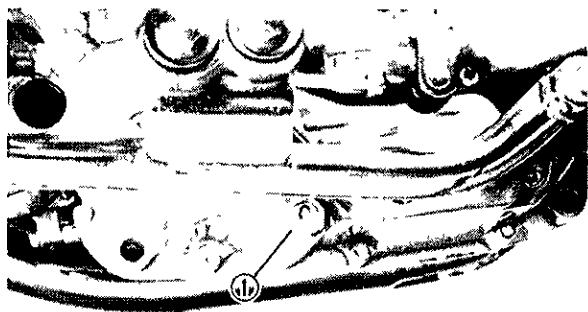

1 Drain plug

- d. Remove the oil filter bolt and filter element.

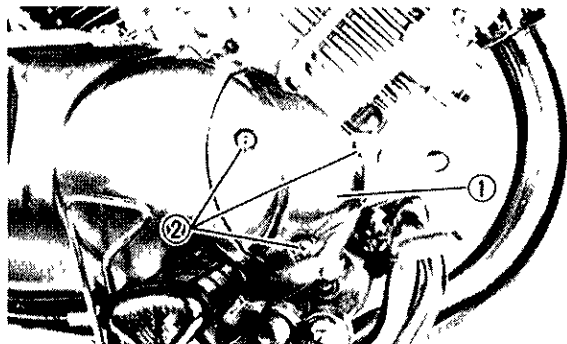

1 Oil filter cover


2 Oil filter bolt (x 3)

- e. Reinstall the drain plug (make sure it is tight).

Drain plug torque:
43 Nm (4.3 m·kg)

- f. Install the new oil filter element, new O-ring and the filter cover. Then tighten the oil filter bolt.

Oil filter bolt torque:
10 Nm (1.0 m·kg)

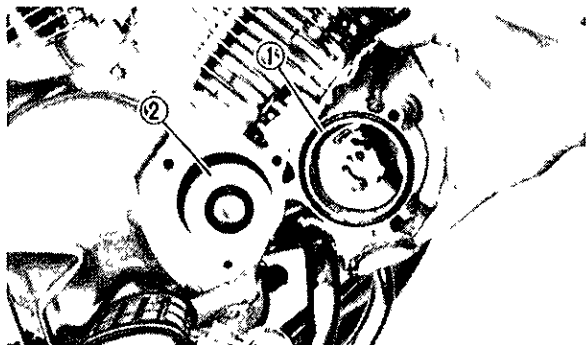

1 O-ring


2 Oil filter

EUU04101

NOTE: _____
Make sure the O-ring is seated properly.

- g. Fill engine with oil. Install the oil filler cap and tighten.

Recommended oil:



Recommended engine oil classification:

API Service "SE", "SF" type or equivalent
(e.g. "SF-SE", "SF-SE-CC",
"SF-SE-SD", etc.).

Oil quantity:

Total amount:

3.2 L

Periodic oil change:

2.6 L

With oil filter replacement:

2.8 L

CAUTION:

Do not put in any chemical additives. Engine oil also lubricates the clutch and additives could cause clutch slippage.

CAUTION:


Be sure no foreign material enters the crankcase.

- h. Start the engine and warm it up for a few minutes. While warming up, check for oil leakage. If oil leakage is found, stop the engine immediately and check for the cause.

Final gear oil**! WARNING**

Do not let foreign material enter the final gear case. Be sure oil does not get on the tire or wheel.


1. Oil level measurement
 - a. Place the motorcycle on a level place, and hold it in an upright position. The engine should be cool at ambient temperature.
 - b. Remove the oil filler bolt and check the oil level. The oil level should be at the brim of the hole. Add oil as necessary.

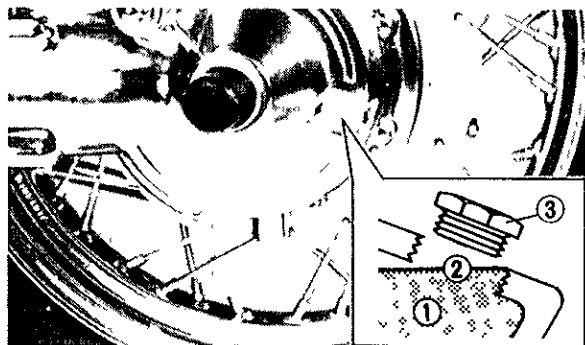

1. Final gear oil 2. Correct oil level 3. Oil filler bolt

2. Gear oil replacement

- a. Place an oil pan under the final gear case.
- b. Remove the oil filler bolt and the drain plug to drain the oil.

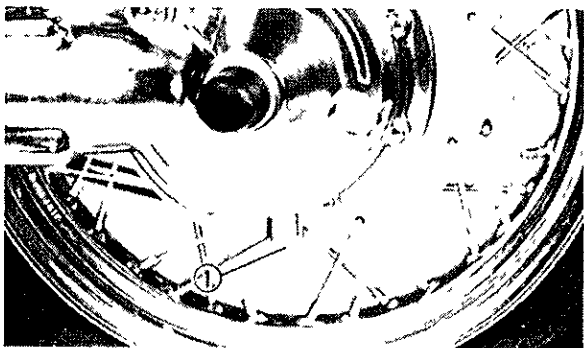

1. Final gear drain plug

- c. Reinstall and tighten the drain plug.

Drain plug torque:
23 Nm (2.3 m·kg)

- d. Fill the gear case to the specified level.

Oil capacity:

Final gear case:

0.19 L

Recommended oil:

SAE 80 API GL-4 Hypoid gear oil

If desired, an SAE 80W90 hypoid gear oil may be used for all conditions.

EUU02300

NOTE:

"GL-4" is a quality and additive rating. "GL-5" or "GL-6" rated hypoid gear oils may also be used.

- e. Reinstall the oil filler bolt.


Tightening torque:
23 Nm (2.3 m·kg)

- f. After replacement of final gear oil, be sure to check for oil leaks.


Air filter

The air filter element should be cleaned at the specified intervals. It should be cleaned more frequently if you are riding in unusually wet or dusty areas.

1. Remove the seats.
2. Remove the upper fuel tank holding bolts.

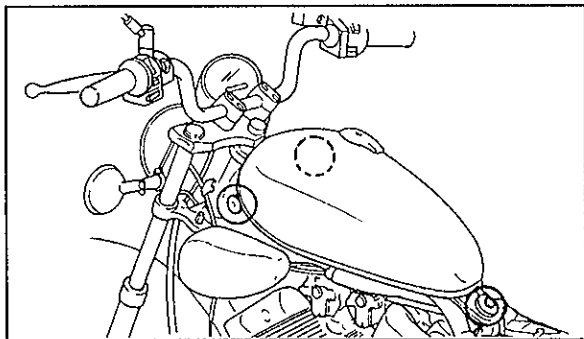

3. Lift the front of the upper fuel tank upward and position it away from the air cleaner. (Do not remove it.)

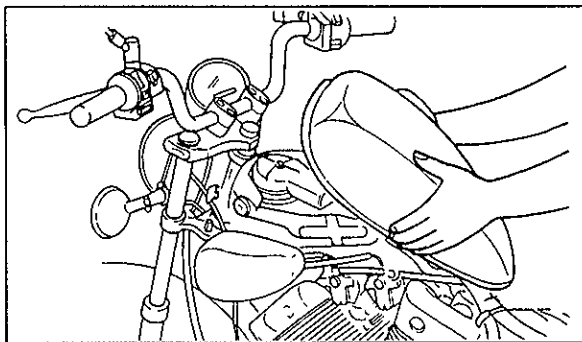


EUU78400

⚠ WARNING

- Support the upper fuel tank carefully during this procedure.
- Do not tilt the upper fuel tank too much or pull it too hard because the fuel hose connections may become loose and a fuel leak may result.

4. Remove the air filter case cover by removing the screw.

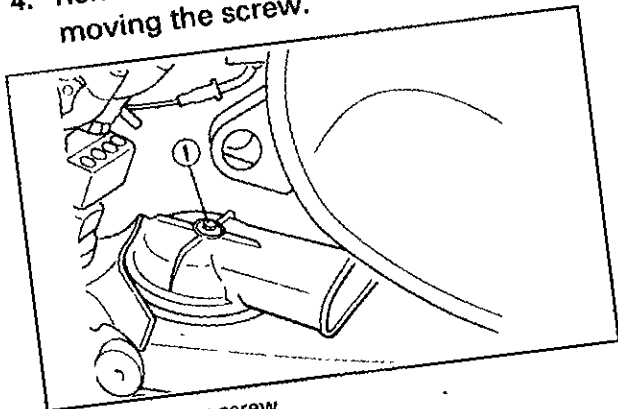

1 Air filter case screw

5. Pull out the element.
6. Tap the element lightly to remove most of the dust and dirt. Blow out the remaining dirt with compressed air as shown. If the element is damaged, replace it.



7. Reassemble by reversing the removal procedure.

EUU35701

CAUTION:


Make sure the element is properly seated in the filter case.

⚠ WARNING

- Before reinstallation, make sure that the fuel hoses are not damaged at all. If any damage is found, it may result in a fuel leak, so do not start the engine. Ask a Yamaha dealer for repairs.
- Always make sure that the fuel hoses are properly connected, in place, and not pinched.

⚠ CAUTION

When reinstalling the upper fuel tank holding bolts, make sure that the washers, dampers and others are positioned properly.

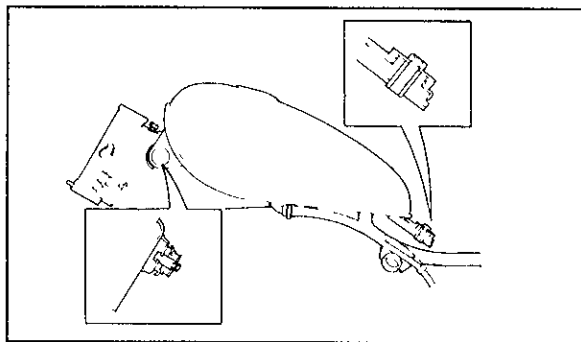**⚠ CAUTION**

The engine should never be run without the air filter element installed; excessive piston and/or cylinder wear may result.

Carburetor adjustment

The carburetors are important parts of the engine and require very sophisticated adjustment. Most adjustments should be left to a Yamaha dealer who has the professional knowledge and experience to do so. However, the following may be serviced by the owner as part of routine maintenance.

EUA13700

NOTE:

A diagnostic tachometer must be used for this procedure.


EUA47100

CAUTION:

The carburetors were set at the Yamaha factory after many tests. If they are changed, poor engine performance and damage may result.

Idle speed adjustment

1. Attach the tachometer. Start the engine and warm it up for a few minutes (normally, 1 or 2 minutes) at approximately 1,000 to 2,000 r/min. Occasionally rev the engine to 4,000 to 5,000 r/min. The engine is warm when it quickly responds to the throttle.
2. Set the idle to the specified engine speed by adjusting the throttle stop screw; turn the screw in to increase engine speed, and out to decrease engine speed.

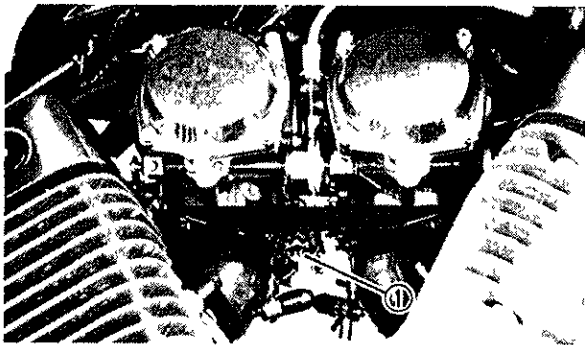

Standard idle speed:
1,150 ~ 1,250 r/min

EUU04500

NOTE:

If the specified idle speed cannot be obtained by performing the above adjustment, consult a Yamaha dealer.

EAH92200


Throttle cable adjustment

EUU06400

NOTE:

Before adjusting the throttle cable free play, the engine idling speed should be adjusted.

The throttle cable should have a specified free play in the turning direction at the grip flange. If the free play is incorrect, ask a Yamaha dealer to make adjustment.

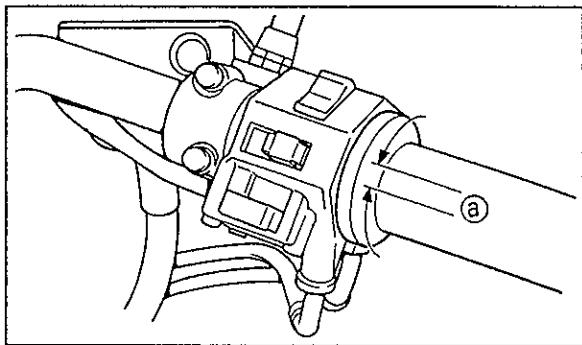

a Free play

Free play: 3 ~ 5 mm

EAH90801

Valve clearance adjustment

The correct valve clearance changes with use, resulting in improper fuel/air supply or engine noise. To prevent this, the valve clearance must be adjusted regularly. This adjustment however, should be left to a professional Yamaha service technician.

Spark plug inspection

The spark plug is an important engine component and is easy to inspect. The condition of the spark plug can indicate the condition of the engine.

Normally, all spark plugs from the same engine should have the same color on the white insulator around the center electrode. The ideal color at this point is a medium-to-light tan color for a motorcycle that is being ridden normally. If one spark plug shows a distinctly different color, there could be something wrong with the engine.


Do not attempt to diagnose such problems yourself. Instead, take the motorcycle to a Yamaha dealer. You should periodically remove and inspect the spark plugs because heat and deposits will cause any spark plug to slowly break down and erode. If electrode erosion becomes exces-

sive, or if carbon and other deposits are excessive, you should replace the spark plug with the specified plug.

Specified spark plug:

BPR7ES/NGK or
W22EPR-U/NIPPONDENSO

Before installing any spark plug, measure the electrode gap with a wire thickness gauge. Adjust the gap to specification.

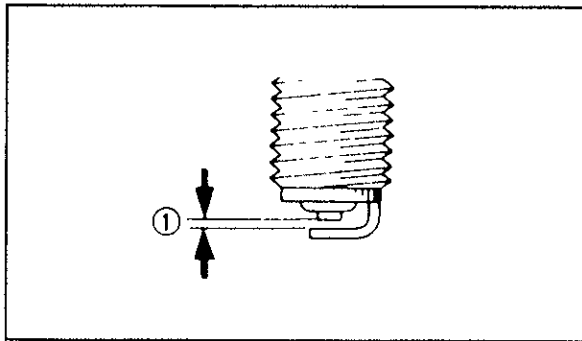

1. Spark plug gap

Spark plug gap:

0.7 ~ 0.8 mm

When installing the spark plug, always clean the gasket surface and use a new gasket. Wipe off any grime from the threads and tighten the spark plug to the specified torque.

Tightening torque:

Spark plug:

20 Nm (2.0 m·kg)

EUU03802

NOTE:


If a torque wrench is not available when you are installing a spark plug, a good estimate of the correct torque is 1/4 to 1/2 turn past finger tight. Have the spark plug tightened to the specified torque as soon as possible.

EAH80102

Front brake lever free play adjustment

The free play at the front brake lever should be 2 ~ 5 mm.

1. Loosen the locknut.
2. Turn the adjusting bolt so that the brake lever movement is 2 ~ 5 mm before the bolt contacts the master cylinder piston.
3. After adjusting, tighten the locknut.

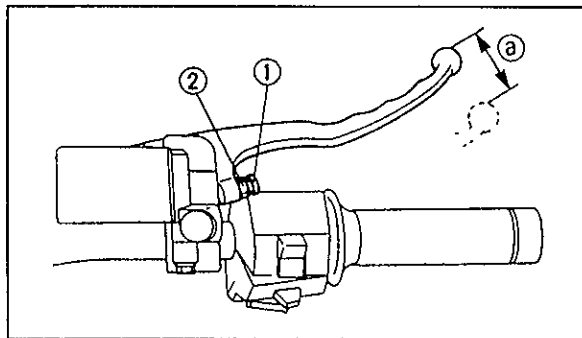

1 Adjusting bolt 2 Locknut a 2~5 mm

⚠ WARNING

Check the brake lever free play. Be sure the brake is working properly.


⚠ WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the brake system. This air must be removed by bleeding the brake system before the motorcycle is operated. Air in the system will cause greatly diminished braking capability and can result in loss of control and an accident. Have a Yamaha dealer inspect and bleed the system if necessary.

Rear brake pedal height and free play adjustment**⚠ WARNING**

It is advisable to have a Yamaha dealer make this adjustment.


1. Pedal height
 - a. Loosen the locknut.

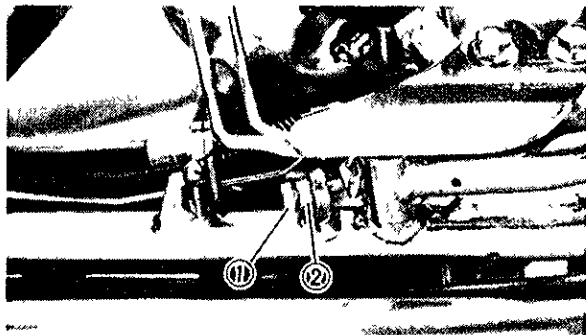

1 Adjusting bolt

2 Locknut

- b. By turning the adjusting bolt clockwise or counterclockwise, adjust the brake pedal position as shown.

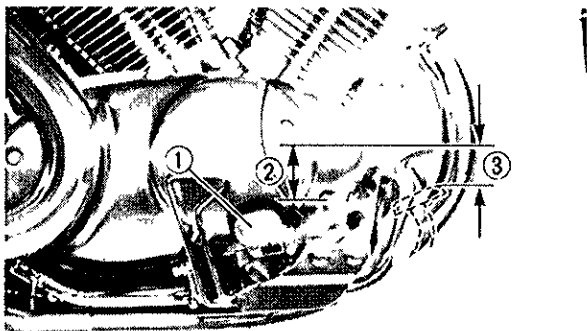

- 1 Footrest
2. Pedal height: 38 mm
3 Free play: 20~30 mm

- c. Tighten the locknut.


EUU64400

⚠ WARNING

After adjusting the pedal height adjust brake pedal free play.

2. Free play

The rear brake pedal free play should be adjusted to 20 ~ 30 mm at the brake pedal end. Turn the adjusting nut on the brake rod in direction (a) to reduce free play or in direction (b) to increase free play.

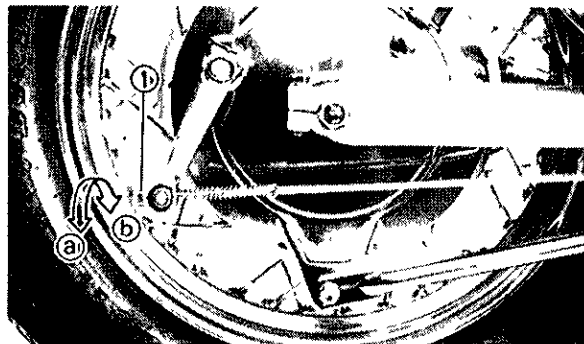

- 1 Adjusting nut


EUU64500

⚠ WARNING

Check the operation of the brake light after adjusting the rear brake.

Brake light switch adjustment

The brake light switch is operated by movement of the brake pedal. To adjust, hold the main body of the switch so it does not rotate and turn the adjusting nut. Proper adjustment is achieved when the brake light comes on just before the brake begins to take effect.

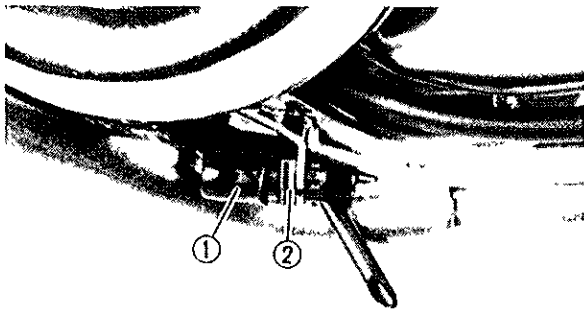

1. Main body


2. Adjusting nut

Checking the front brake pads and rear brake shoes

A wear indicator is provided on each brake. This indicator allows checking of brake pad/shoe wear without disassembling the brake.

FRONT

Apply the brake and inspect the wear indicator. If the brake pads are worn to the wear limit, have a Yamaha dealer replace the pads.

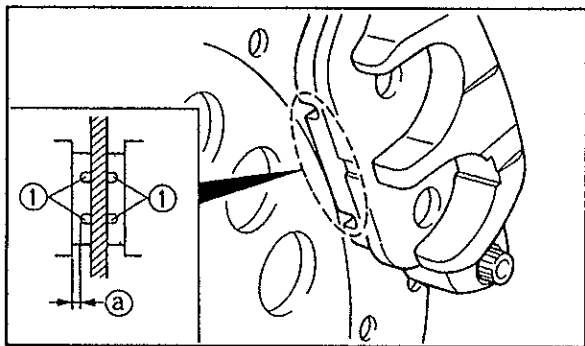


1 Wear indicator

a. Wear limit 0.8 mm

REAR

Apply the brake and inspect the wear indicator.

If the indicator reaches the wear limit line, ask a Yamaha dealer to replace the shoes.

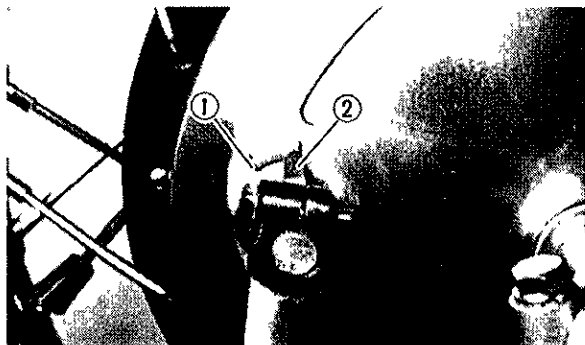

1 Wear limit

2 Wear indicator

Inspecting the brake fluid level

Insufficient brake fluid may let air enter the brake system, possibly causing the brakes to become ineffective.

Before riding, check that the brake fluid is above the minimum level and fill when necessary.

Observe these precautions:


1. When checking the fluid level, make sure the top of the master cylinder is level by turning the handlebars.
2. Use only the designated quality brake fluid. Otherwise, the rubber seals may deteriorate, causing leakage and poor brake performance.

Recommended brake fluid: DOT 4

NOTE: _____

If DOT 4 is not available, DOT 3 can be used.

3. Refill with the same type of brake fluid. Mixing fluids may result in a harmful chemical reaction and lead to poor brake performance.
4. Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.
5. Brake fluid may deteriorate painted surfaces or plastic parts. Always clean up spilled fluid immediately.
6. Have a Yamaha dealer check the cause if the brake fluid level goes down.

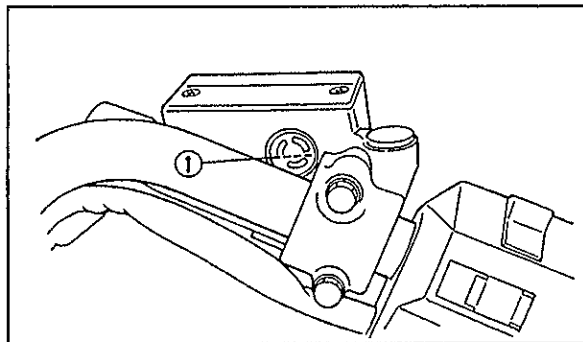

1 Minimum level "LOWER"

EAH83501


Brake fluid replacement

1. Complete fluid replacement should be done only by trained Yamaha service personnel.
2. Have a Yamaha dealer replace the following components during periodic maintenance or when they are damaged or leaking.
 - a. Replace all rubber seals every two years.
 - b. Replace all hoses every four years.


Clutch lever free play adjustment

The clutch lever free play should be adjusted to 10 ~ 15 mm. If the free play is incorrect, adjust as follows.

Free play: 10 ~ 15 mm

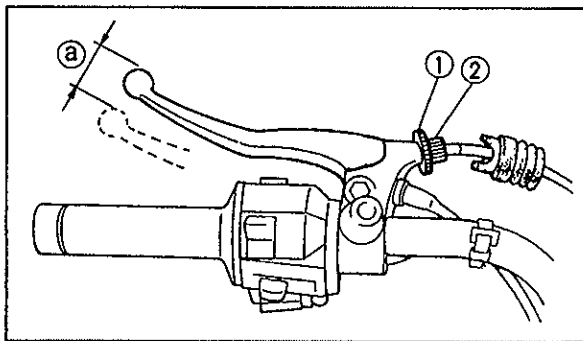

1 Locknut 2. Adjusting bolt a 10 ~15 mm

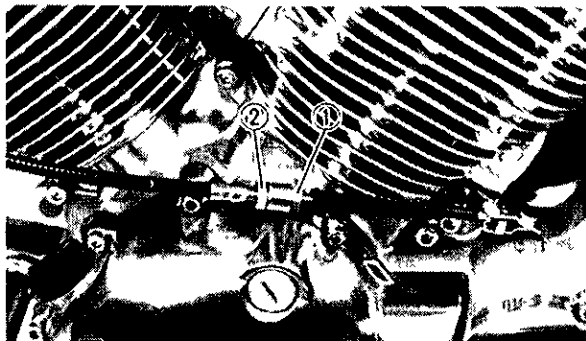

1 Locknut 2. Adjusting nut

1. Loosen the locknut at the handlebar.
2. Turn the adjusting bolt in or out until specified lever free play is obtained.
3. Tighten the locknut.
4. If the free play is still incorrect, make an adjustment at the crankcase side.

EUU17800

NOTE:

If proper adjustment cannot be obtained or the clutch does not work correctly, ask a Yamaha dealer to inspect the internal clutch mechanism.

EAI10701

Cable inspection and lubrication

EUU64601

WARNING

Damage to the outer housing of cables may allow internal rusting and cause interference with cable movement. Replace damaged cables as soon as possible to prevent unsafe conditions.

Lubricate the inner cable and the cable end. If it does not operate smoothly, ask a Yamaha dealer to replace them.

Recommended lubricant:
SAE 10W30 motor oil

EAI10201

Throttle cable and grip lubrication

The throttle twist grip assembly should be greased at the time that the cable is lubricated, since the grip must be removed to get at the end of the throttle cable. After removing the screws, hold the end of the cable up in the air and put in several drops of

lubricant. With the throttle grip disassembled, coat the metal surface of the grip assembly with a suitable all-purpose grease.

EAI30602

Brake and shift pedal lubrication

Lubricate the pivoting parts.

Recommended lubricant:
SAE 10W30 motor oil

EAI30701

Brake and clutch lever lubrication

Lubricate the pivoting parts.

Recommended lubricant:
SAE 10W30 motor oil

EAI31103

Sidestand lubrication

Lubricate the pivoting and mating parts. Check to see that the sidestand moves up and down smoothly.

Recommended lubricant:
SAE 10W30 motor oil

⚠ WARNING

If the sidestand does not move smoothly, consult a Yamaha dealer.

EAI20502

Front fork inspection

EUU65700

⚠ WARNING

Securely support the motorcycle so there is no danger of it falling over.

1. Visual check

Check for scratches or damage on the inner tube and excessive oil leakage from the front fork.


2. Operation check

Place the motorcycle on a level place.

- Hold the motorcycle in an upright position and apply the front brake.
- Push down hard on the handlebars several times and check if the fork rebounds smoothly.

CAUTION

If any damage or unsmooth movement is found with the front fork, consult a Yamaha dealer.

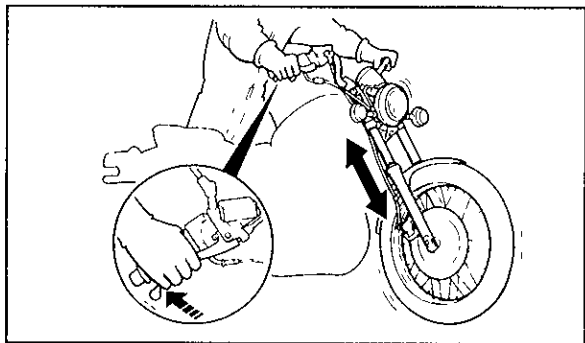


EAI50902

Rear shock absorber adjustment

Each shock absorber is equipped with a spring preload adjuster.

Adjust spring preload as follows.

Turn adjuster in direction ② to increase spring preload and in direction ① to decrease spring preload.

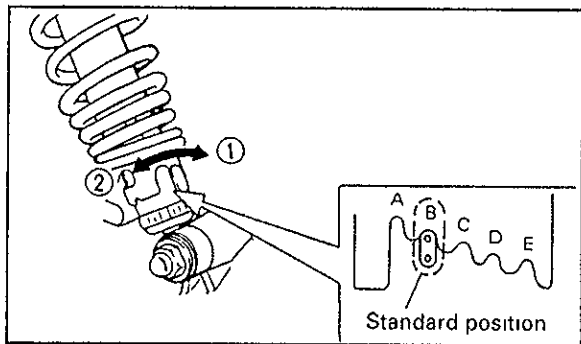

1 Softer

2 Harder

EUU65200

⚠ WARNING

Always adjust each shock absorber to the same setting. Uneven adjustment can cause poor handling and loss of stability.

EUU20700


NOTE:

Ask a Yamaha dealer to make this adjustment.

EAI60301

Steering inspection

Periodically inspect the condition of the steering. Worn out or loose steering bearings may be dangerous. Place a stand under the engine to raise the front wheel off the ground. Hold the lower end of the front forks and try to move them forward and backward. If any free play can be felt, ask a Yamaha dealer to inspect and adjust the steering. Inspection is easier if the front wheel is removed.

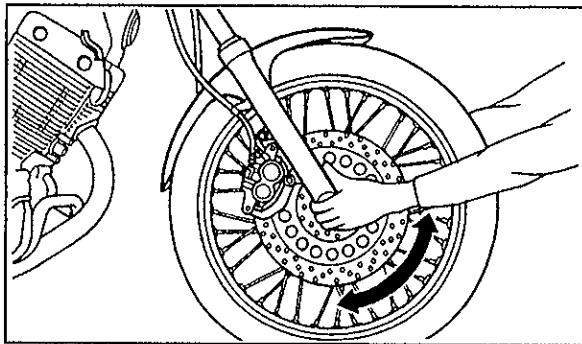

⚠ WARNING

Securely support the motorcycle so there is no danger of it falling over.

EAI60201


Wheel bearings

If there is play in the front or rear wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer inspect the wheel bearings. The wheel bearings should be inspected according to the Maintenance Schedule.

EAI70303

Battery

Check the level of the battery electrolyte and make sure that the terminals are tight. Fill with distilled water if the electrolyte level is low.

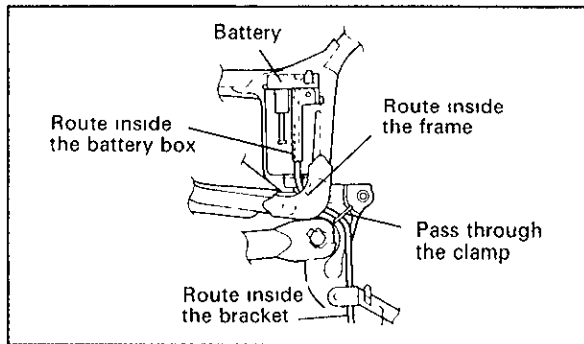

EUU33601

CAUTION

When inspecting the battery, be sure the breather pipe is routed correctly. If the breather pipe is positioned in such a way as to cause battery electrolyte or gas to exit onto the frame, structural and cosmetic damage to the motorcycle can occur.

⚠ WARNING

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. It contains sulfuric acid. Avoid contact with skin, eyes or clothing.

Antidote:

EXTERNAL: Flush with water.


INTERNAL: Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg, or vegetable oil. Call a physician immediately.

EYES: Flush with water for 15 minutes and get prompt medical attention. Batteries produce explosive gases. Keep sparks, flame, cigarettes etc., away. Ventilate when charging or using in an enclosed space. Always shield your eyes when working near batteries.

KEEP OUT OF REACH OF CHILDREN.

Replenishing the battery fluid

A poorly maintained battery will corrode and discharge quickly. The battery fluid should be checked at least once a month. The level should be between the minimum and maximum marks. Use only distilled water if refilling is necessary.

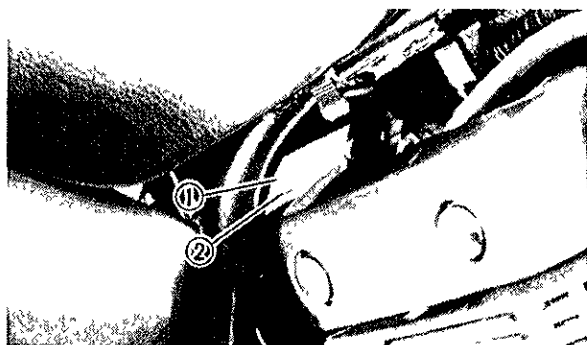

1. Maximum level "UPPER LEVEL"
2. Minimum level "LOWER LEVEL"

CAUTION:


Normal tap water contains minerals which are harmful to a battery; therefore, refill only with distilled water.

Storage

1. When the motorcycle will not be used for a month or longer, remove the battery and store it in a cool, dark place. Completely recharge the battery before reusing.
2. If the battery will be stored for longer than two months, check the specific gravity of the fluid at least once a month and recharge the battery when it is too low.
3. Always make sure the connections are correct when putting the battery back in the motorcycle. Make sure the breather pipe is properly connected and is not damaged or obstructed.

Fuse replacement

1. The fuse box is located under the seat.
2. If any fuse is blown, turn off the ignition switch and the switch of the circuit in question. Install a new fuse of proper amperage. Turn on the switches and see if the electrical device operates. If the fuse immediately blows again, consult a Yamaha dealer.

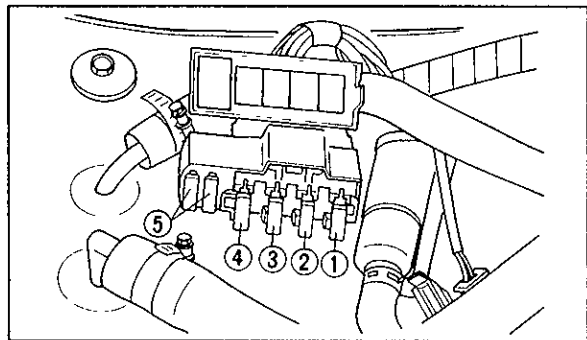

- | | | |
|-------------|---------------------|----------|
| 1 Main fuse | 2 Headlight | 3 Signal |
| 4 Ignition | 5. Spare fuse (x 2) | |

CAUTION

Do not use fuses of higher amperage rating than those recommended. Substitution of a fuse of improper rating can cause extensive electrical system damage and possibly a fire.

Specified fuse:


Main:	30A
Head:	15A
Signal:	15A
Ignition:	15A

Headlight bulb replacement

This motorcycle is equipped with a quartz bulb headlight.


If the headlight bulb burns out, replace the bulb as follows:

1. Remove the screws holding the light unit assembly.

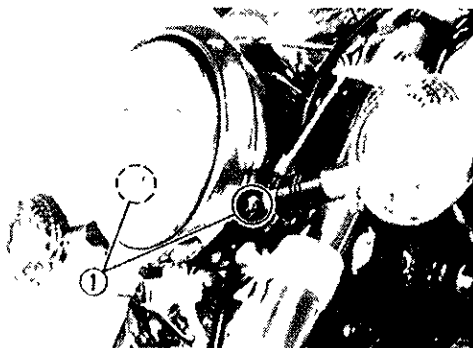

1 Holding screw (x 2)


2. Disconnect the headlight leads, remove the light unit assembly and then the bulb holder cover.

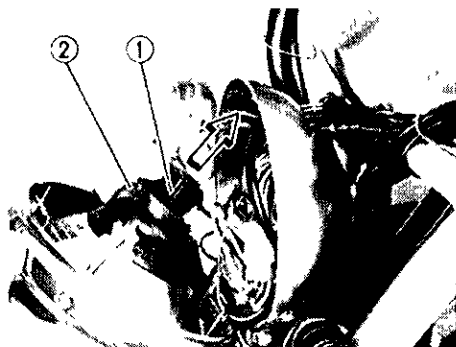

1 Headlight leads

2. Bulb holder cover

3. Turn the bulb holder counterclockwise to remove it and remove the defective bulb.

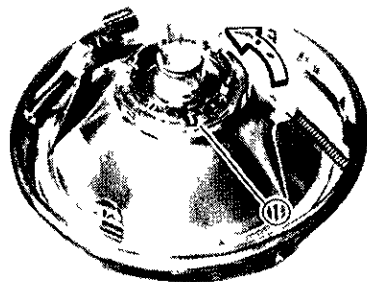

1 Bulb holder

EUU66001



WARNING

Keep flammable products and your hands away from the bulb while it is on, as it is hot. Do not touch the bulb until it cools down.

- Put a new bulb into position and secure it in place with the bulb holder.

EUU34100

CAUTION:

Avoid touching the glass part of the bulb. Keep it free from oil; otherwise, the transparency of the glass, life of the bulb, and illuminous flux will be adversely affected. If oil gets on the bulb, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.

- Install the bulb holder cover.
- Connect headlight leads.
- Install the light unit assembly.
If the headlight beam adjustment is necessary, ask a Yamaha dealer to make adjustment.

EAJ24402

Front wheel removal

EUU66201

⚠ WARNING


It is advisable to have a Yamaha dealer service the wheel.

EUU65700

⚠ WARNING


Securely support the motorcycle so there is no danger of it falling over.

- Remove the speedometer cable from the front wheel side.

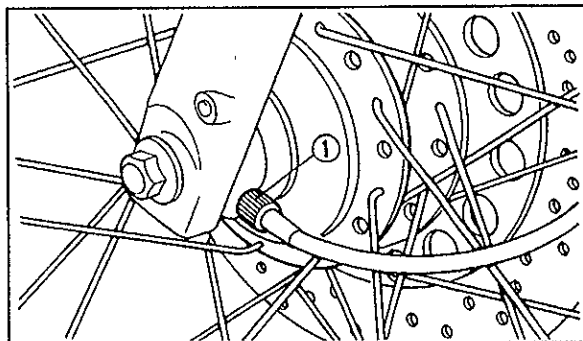

1 Speedometer cable

2. Loosen the pinch bolt and wheel axle.

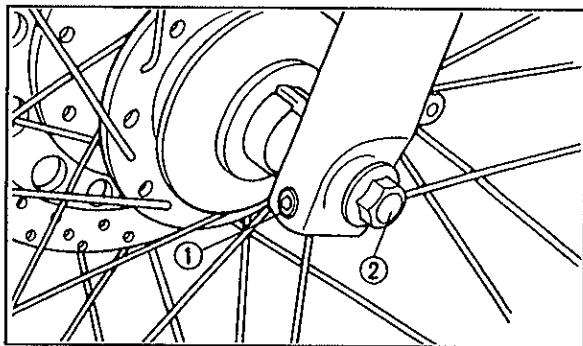

1 Pinch bolt

2 Wheel axle

3. Elevate the front wheel by placing a suitable stand under the engine.
4. Remove the wheel axle and the front wheel. Make sure the motorcycle is properly supported.

EUU05400


NOTE:

Do not depress the brake lever when the disc is off the caliper as the brake pads will be forced shut.

Front wheel installation


When installing the front wheel, reverse the removal procedure. Pay attention to the following points:

1. Make sure the wheel hub and the speedometer gear unit are installed with the projections meshed into the slots.

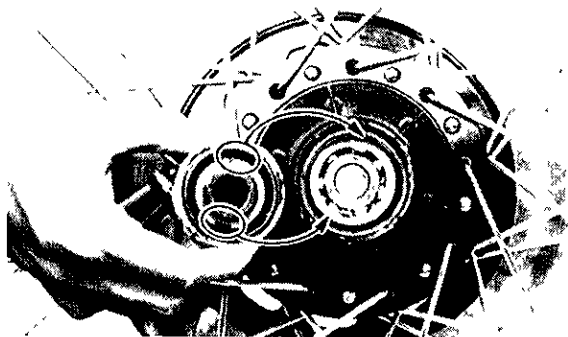

2. Make sure there is enough gap between the brake pads before inserting the brake disc.

3. Make sure the slot in the speedometer gear unit fits over the stopper on the front fork outer tube.

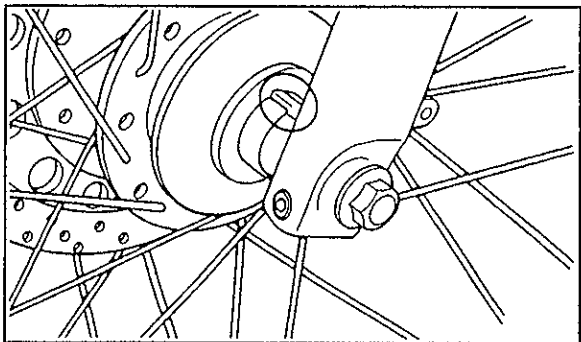

4. Tighten the wheel axle to the specified torque.

Tightening torque:

Wheel axle:

58 Nm (5.8 m·kg)

5. Before tightening the pinch bolt, push down hard on the handlebars several times to check for proper fork operation.
6. Tighten the pinch bolt to the specified torque.

Tightening torque:

Pinch bolt:

23 Nm (2.3 m·kg)

Rear wheel removal


⚠ WARNING

It is advisable to have a Yamaha dealer service the rear wheel.

⚠ WARNING

Securely support the motorcycle so there is no danger of it falling over.


1. Remove the axle nut cotter pin and loosen the axle nut.

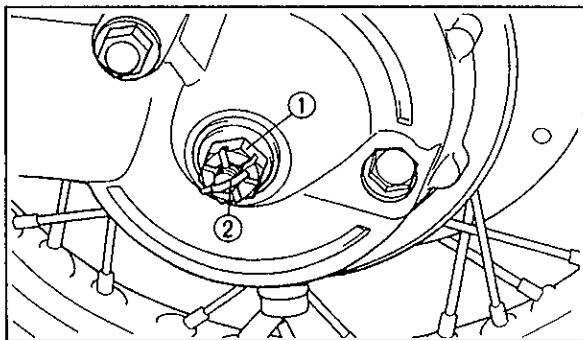

1 Axle nut

2 Axle nut cotter pin

2. Remove the tension bar cotter pin, nut and bolt from the brake shoe plate.

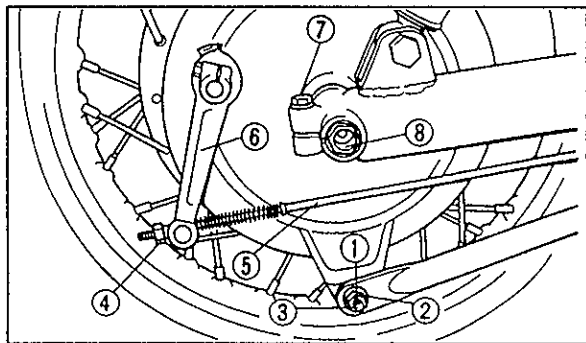

- | | |
|--------------------------|-------------------|
| 1 Tension bar cotter pin | 2 Nut |
| 3 Bolt | 4 Brake adjuster |
| 5 Brake rod | 6 Brake cam lever |
| 7 Rear axle pinch bolt | 8 Rear axle |

3. Elevate the rear wheel by placing a suitable stand under the engine.
4. Remove the brake adjuster and brake rod from the brake cam lever.
5. Remove the axle nut.
6. Loosen the rear axle pinch bolt and pull out the rear axle.


7. Move the wheel to the right to separate it from the final gear case, and remove the rear wheel.

EAJ30602

Rear wheel installation

When installing the rear wheel, reverse the removal procedure. Pay attention to the following points:

1. Apply a light coating of lithium base grease to final gear case splines and rear wheel hub splines.
2. Make sure the splines on the wheel hub fit into the final gear case.

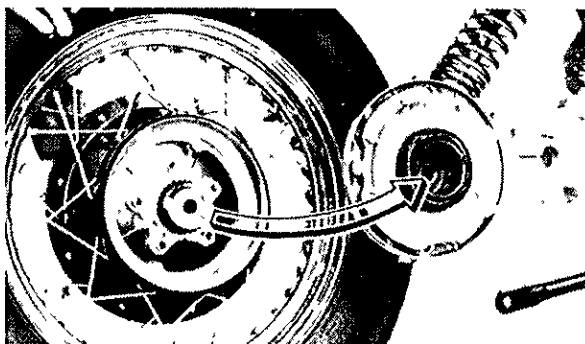

3. Tighten the following parts to the specified torque, and make sure a new cotter pin is installed.

EUU78000

⚠ WARNING

Always use a new cotter pin.

Tightening torque:

Axle nut:

107 Nm (10.7 m·kg)

Tension bar bolt:

20 Nm (2.0 m·kg)

Pinch bolt:

16 Nm (1.6 m·kg)

4. Adjust the rear brake. (See page 8-19)

EUU64500

⚠ WARNING

Check the operation of the brake light after adjusting the rear brake.

Troubleshooting

Although Yamaha motorcycles receive a rigid inspection before shipment from the factory, trouble may occur during operation.


Any problem in the fuel, compression, or ignition systems can cause poor starting and loss of power. The troubleshooting chart describes a quick, easy procedure for making checks.

If your motorcycle requires any repair, bring it to a Yamaha dealer. The skilled technicians at a Yamaha dealership have the tools, experience, and know-how to properly service your motorcycle. Use only genuine Yamaha parts on your motorcycle. Imitation parts may look like Yamaha parts, but they are often inferior. Consequently, they have a shorter service life and can lead to expensive repair bills.

Troubleshooting chart

⚠ WARNING

Never check the fuel system while smoking or in the vicinity of an open flame.

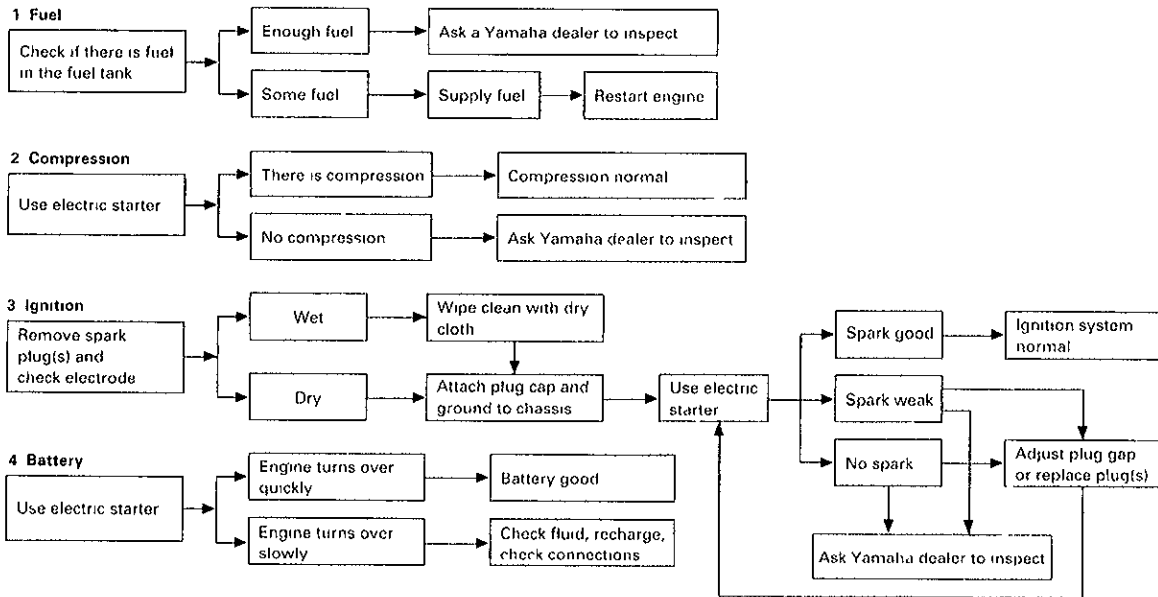

CLEANING AND STORAGE

EAK01102

A. CLEANING

Frequent, thorough cleaning of your motorcycle will not only enhance its appearance but will improve its general performance and extend the useful life of many components.

1. Before cleaning the motorcycle:
 - a. Block off the end of the exhaust pipe to prevent water entry; a plastic bag and strong rubber band may be used.
 - b. Make sure the spark plug(s) and all filler caps are properly installed.
2. If the engine case is excessively greasy, apply degreaser with a paint brush. Do not apply degreaser to wheel axles.
3. Rinse the dirt and degreaser off with a garden hose. Use only enough pressure to do the job.

CAUTION:

Excessive hose pressure may cause water seepage and deterioration of wheel bearings, front fork, brakes, transmission seals and electrical parts.

Many expensive repair bills have resulted from improper high pressure detergent applications such as those available in coin-operated car washers.

4. Once the majority of the dirt has been hosed off, wash all surfaces with warm water and mild, detergent-type soap. An old toothbrush or bottle brush is handy for hard-to-get-at places.
5. Rinse the motorcycle off immediately with clean water and dry all surfaces with a chamois, clean towel, or soft absorbent cloth.

6. Clean the seat with a vinyl upholstery cleaner to keep the cover pliable and glossy.
7. Automotive-type wax may be applied to all painted and chrome-plated surfaces. Avoid combination cleaner-waxes. Many contain abrasives which may mar the paint or protective finish. When finished, start the engine and let it idle for several minutes.

EAK00400

B. STORAGE

Long term storage (60 days or more) of your motorcycle will require some preventive procedures to guard against deterioration. After thoroughly cleaning the motorcycle, prepare for storage as follows:

1. Drain the fuel tank, fuel lines, and carburetor float bowl(s).

2. Remove the empty fuel tank, pour a cup of SAE 10W30 or 20W40 motor oil in the tank, shake the tank to coat the inner surfaces thoroughly and drain off the excess oil. Reinstall the tank.
3. Remove the spark plug, pour about one tablespoon of SAE 10W30 or 20W40 motor oil in the spark plug hole and reinstall the spark plug. Turn the engine over several times (ground spark plug lead wires) to coat the cylinder walls with oil.

EUU66400



When using the starter motor to crank the engine, remove the spark plug wires, and ground them to prevent sparking.

4. Lubricate all control cables.
5. Block up the frame to raise both wheels off the ground.


6. Tie a plastic bag over the exhaust pipe outlet to prevent moisture from entering.
7. If storing in a humid or salt-air atmosphere, coat all exposed metal surfaces with a light film of oil. Do not apply oil to any rubber parts or the seat cover.
8. Remove the battery and charge it. Store it in a dry place and recharge it once a month. Do not store the battery in an excessively warm or cold place (less than 0°C or more than 30°C).

EUU05800

NOTE: _____
Make any necessary repairs before storing the motorcycle.

SPECIFICATIONS

Model	XV535
Dimension: Overall length Overall width Overall height Seat height Wheel base Minimum ground clearance	2,225 mm 780 mm 1,120 mm 720 mm 1,520 mm 160 mm
Basic weight: With oil and full fuel tank	195 kg
Minimum turning radius:	2,900 mm
Engine: Type Cylinder arrangement Displacement Bore × Stroke Compression ratio Starting system Lubrication system	Air cooled, 4-stroke, gasoline, SOHC V-2 cylinder 535 cm ³ 76.0 × 59.0 mm 9.0 · 1 Electric starter Wet sump

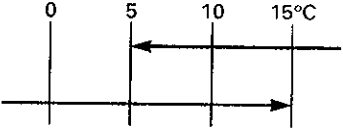Model	XV535
<p>Engine oil (4-cycle) Type</p>  <p>Capacity Periodic oil change With oil filter replacement Total amount</p>	<p>SAE 20W40 type SE motor oil</p> <p>SAE 10W30 type SE motor oil</p> <p>2.6 L 2.8 L 3.2 L</p>
<p>Final gear oil Type Capacity</p>	<p>SAE 80 API GL-4 Hypoid gear oil 0.19 L</p>
<p>Air filter:</p>	<p>Dry type element</p>
<p>Fuel: Type Tank capacity Reserve amount</p>	<p>Regular gasoline For Australia: Unleaded fuel only 13.5 L 2.5 L</p>
<p>Carburetor. Type/manufacture</p>	<p>BDS34/MIKUNI</p>
<p>Spark plug: Type/manufacture Gap</p>	<p>BPR7ES/NGK or W22EPR-U/NIPPONDENSO 0.7 ~ 0.8 mm</p>

Model	XV535
Clutch type:	Wet, multi-disc
Transmission: Primary reduction system Primary reduction ratio Secondary reduction system Secondary reduction ratio Transmission type Operation Gear ratio 1st 2nd 3rd 4th 5th	Spur gear 70/36 (1.944) Shaft drive 19/18 × 32/11 (3.071) Constant mesh 5-speed Left foot operation 38/14 (2.714) 38/20 (1.900) 35/24 (1.458) 28/24 (1.167) 29/30 (0.967)
Chassis: Frame type Caster angle Trail	Pressed backbone 31.5° 125 mm
Tire: Type Size – Front Rear	With tube 3.00-19 49S 140/90-15 M/C 70S
Brake: Front brake type Operation Rear brake type Operation	Single, Disc brake Right hand operation Drum brake Right foot operation

Model	XV535
Suspension: Front Rear	Telescopic fork Swingarm
Shock absorber. Front Rear	Coil spring, Oil damper Coil spring, Oil damper
Wheel travel: Front Rear	150 mm 85 mm
Electrical: Ignition system Generator system Battery type/capacity	TCI (Digital) AC Magneto GM12AZ-3A/12V 12AH
Headlight type:	Quartz bulb
Bulb voltage, wattage × quantity: Headlight Tail/brake light Flasher light Meter light Neutral indicator light High beam indicator light Turn indicator light	12V 60W/55W × 1 12V 5W/21W × 2 12V 21W × 4 12V 3W × 1 12V 3W × 1 12V 1.7W × 1 12V 3W × 1

HOW TO USE THE CONVERSION TABLE

All specification data in this manual is listed in SI and METRIC UNITS.

Use this table to convert METRIC unit data to IMP unit data.

Ex.

METRIC		MULTIPLIER	=	IMP
**mm	×	0.03937	=	**in
2 mm	×	0.03937	=	0.08 in

CONVERSION TABLE

METRIC TO IMP			
	Known	Multiplier	Result
Torque	m kg	7 233	ft lb
	m kg	86 794	in-lb
	cm·kg	0.0723	ft lb
	cm kg	0.8679	in-lb
Weight	kg	2 205	lb
	g	0.03527	oz
Distance	km/hr	0.6214	mph
	km	0.6214	mi
	m	3 281	ft
	m	1.094	yd
	cm	0 3937	in
mm	0 03937	in	
Volume/ Capacity	cc (cm ³)	0 03527	oz (IMP liq.)
	cc (cm ³)	0 06102	cu-in
	lit (liter)	0 8799	qt (IMP liq.)
	lit (liter)	0.2199	gal (IMP liq.)
Miscella- neous	kg/mm	55 997	lb/in
	kg/cm ²	14 2234	psi (lb/in ²)
	Centigrade	9/5(°C)+32	Fahrenheit (°F)

NOISE REGULATION (FOR Australia)

“TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED”

Owners are warned that the law may prohibit:


- (a) The removal or rendering inoperative by any person other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; and
- (b) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

PRINTED ON RECYCLED PAPER

YAMAHA
YAMAHA MOTOR CO., LTD

PRINTED IN JAPAN
95 7-03×1 CR
(英)

WIRING DIAGRAM XV535

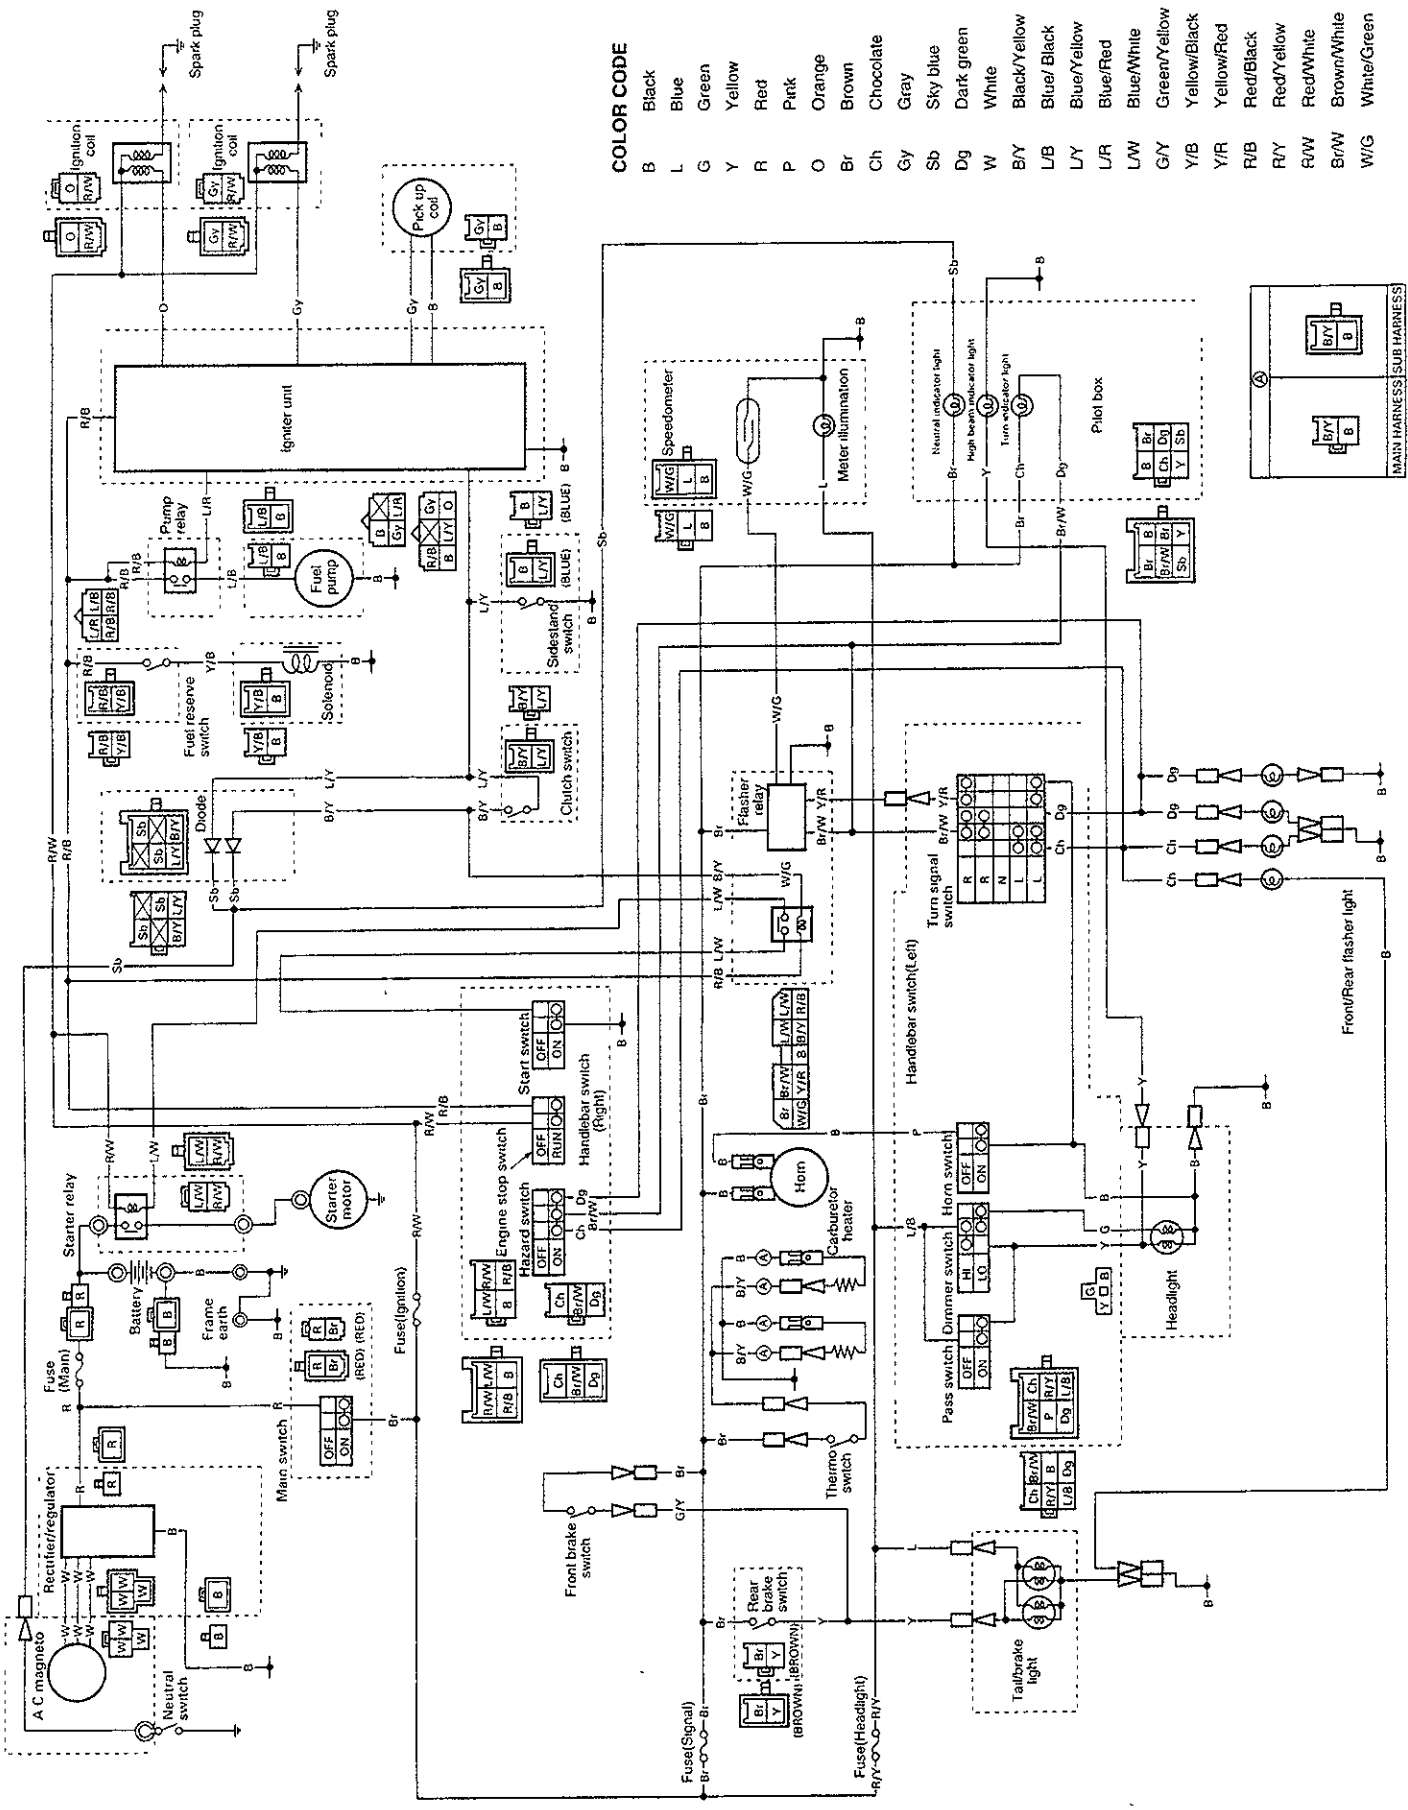

COLOR CODE

B	Black
L	Blue
G	Green
Y	Yellow
R	Red
P	Pink
O	Orange
Br	Brown
Ch	Chocolate
Gy	Gray
Sb	Sky blue
Dg	Dark green
W	White
B/Y	Black/Yellow
L/B	Blue/Black
L/Y	Blue/Yellow
L/R	Blue/Red
L/W	Blue/White
G/Y	Green/Yellow
Y/B	Yellow/Black
Y/R	Yellow/Red
R/B	Red/Black
R/Y	Red/Yellow
R/W	Red/White
Br/W	Brown/White
W/G	White/Green

