



MASTER COPY

OWNER'S MANUAL

YAMAHA
1000

4XJ-28199-25

Congratulations on your purchase of the Yamaha YZF1000R. This model is the result of Yamaha's vast experience in the production of fine sporting, touring, and pacesetting racing machines. It represents the high degree of craftsmanship and reliability that have made Yamaha a leader in these fields.

This manual will give you an understanding of the operation, inspection, and basic maintenance of this motorcycle. If you have any questions concerning the operation or maintenance of your motorcycle, please consult a Yamaha dealer.

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following notations



The Safety Alert Symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!**



Failure to follow **WARNING** instructions could result in severe injury or death to the motorcycle operator, a bystander, or a person inspecting or repairing the motorcycle.



A **CAUTION** indicates special precautions that must be taken to avoid damage to the motorcycle.

NOTE:

A **NOTE** provides key information to make procedures easier or clearer

NOTE:

- This manual should be considered a permanent part of this motorcycle and should remain with it even if the motorcycle is subsequently sold.
 - Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If you have any questions concerning this manual, please consult your Yamaha dealer.
-

IMPORTANT MANUAL INFORMATION

 **WARNING**

EW000002

PLEASE READ THIS MANUAL CAREFULLY AND COMPLETELY BEFORE OPERATING THIS MOTORCYCLE.

IMPORTANT MANUAL INFORMATION

EAU03337

YZF1000RP

OWNER'S MANUAL

© 2000 by Yamaha Motor Co., Ltd.

1st Edition, October 2000

All rights reserved.

**Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.**

Printed in Japan.

1 SAFETY INFORMATION

1

2 DESCRIPTION

2

3 INSTRUMENT AND CONTROL FUNCTIONS

3

4 PRE-OPERATION CHECKS

4

5 OPERATION AND IMPORTANT RIDING POINTS

5

6 PERIODIC MAINTENANCE AND MINOR REPAIR

6

7 MOTORCYCLE CARE AND STORAGE

7

8 SPECIFICATIONS

8

9 CONSUMER INFORMATION

9

INDEX

Safe riding	1-1
Protective apparel	1-3
Modifications	1-3
Loading and accessories	1-3
Gasoline and exhaust gas	1-5
Location of important labels	1-7



MOTORCYCLES ARE SINGLE TRACK VEHICLES. THEIR SAFE USE AND OPERATION ARE DEPENDENT UPON THE USE OF PROPER RIDING TECHNIQUES AS WELL AS THE EXPERTISE OF THE OPERATOR. EVERY OPERATOR SHOULD KNOW THE FOLLOWING REQUIREMENTS BEFORE RIDING THIS MOTORCYCLE.

HE OR SHE SHOULD

1. OBTAIN THOROUGH INSTRUCTIONS FROM A COMPETENT SOURCE ON ALL ASPECTS OF MOTORCYCLE OPERATION.
2. OBSERVE THE WARNINGS AND MAINTENANCE REQUIREMENTS IN THE OWNER'S MANUAL.
3. OBTAIN QUALIFIED TRAINING IN SAFE AND PROPER RIDING TECHNIQUES.
4. OBTAIN PROFESSIONAL TECHNICAL SERVICE AS INDICATED BY THE OWNER'S MANUAL AND/OR WHEN MADE NECESSARY BY MECHANICAL CONDITIONS.

Safe riding

1. Always make pre-operation checks. Careful checks may help prevent an accident.
2. This motorcycle is designed to carry the operator and a passenger.
3. The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous appears to be very effective in reducing the chance of this type of accident.

Therefore

- a. Wear a brightly colored jacket.
- b. Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
- c. Ride where other motorists can see you. Avoid riding in another motorist's blind spot.

SAFETY INFORMATION

4. Many accidents involve inexperienced operators. In fact, many operators who have been involved in accidents do not even have a current motorcycle license.
 - a. Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.
 - b. Know your skills and limits. Staying within your limits may help you to avoid an accident.
 - c. We recommend that you practice riding your motorcycle where there is no traffic until you have become thoroughly familiar with the motorcycle and all of its controls.
5. Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to EXCESSIVE SPEED or undercornering (insufficient lean angle for the speed).
 - a. Always obey the speed limit and never travel faster than warranted by road and traffic conditions.
 - b. Always signal before turning or changing lanes. Make sure that other motorists can see you.
6. The posture of the operator and passenger is important for proper control.
 - a. The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
 - b. The passenger should always hold onto the operator, the seat strap or grab bar, if equipped, with both hands and keep both feet on the passenger footrests.
 - c. Never carry a passenger unless he or she can firmly place both feet on the passenger footrests.
7. Never ride under the influence of alcohol or other drugs.
8. This motorcycle is designed for on-road use only. It is not suitable for off-road use.

SAFETY INFORMATION

Protective apparel

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

1. Always wear an approved helmet
2. Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.
3. The use of a jacket, heavy boots, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
4. Never wear loose-fitting clothes, otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
5. Never touch the engine or exhaust system during or after operation. They become very hot and can cause burns. Always wear protective clothing that covers your legs, ankles, and feet.
6. A passenger should also observe the above precautions.

Modifications

Modifications made to this motorcycle not approved by Yamaha, or the removal of original equipment, may render the motorcycle unsafe for use and may cause severe personal injury. Modifications may also make your motorcycle illegal to use.

Loading and accessories

Adding accessories or cargo to your motorcycle can adversely affect stability and handling if the weight distribution of the motorcycle is changed. To avoid the possibility of an accident, use extreme caution when adding cargo or accessories to your motorcycle. Use extra care when riding a motorcycle that has added cargo or accessories. Here are some general guidelines to follow if loading cargo or adding accessories to your motorcycle.

Loading

The total weight of the operator, passenger, accessories and cargo must not exceed the maximum load limit of 196 kg. When loading within this weight limit, keep the following in mind:

1. Cargo and accessory weight should be kept as low and close to the motorcycle as possible. Make sure to distribute the weight as evenly as possible on both sides of the motorcycle to minimize imbalance or instability.
2. Shifting weights can create a sudden imbalance. Make sure that accessories and cargo are securely attached to the motorcycle before riding. Check accessory mounts and cargo restraints frequently.
3. Never attach any large or heavy items to the handlebar, front fork, or front fender. These items, including such items as sleeping bags, duffel bags, or tents, can create unstable handling or a slow steering response.

Accessories

Genuine Yamaha accessories have been specifically designed for use on this motorcycle. Since Yamaha cannot test all other accessories that may be available, you must personally be responsible for the proper selection, installation and use of non-Yamaha accessories. Use extreme caution when selecting and installing any accessories.

Keep the following guidelines in mind, as well as those provided under “Loading” when mounting accessories:

1. Never install accessories or carry cargo that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation, or obscure lights or reflectors.
 - a. Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution or aerodynamic changes. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.



SAFETY INFORMATION

1

- b. Bulky or large accessories may seriously affect the stability of the motorcycle due to aerodynamic effects. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds. These accessories may also cause instability when passing or being passed by large vehicles.
 - c. Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the operator and may limit control ability, therefore, such accessories are not recommended.
2. Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an electric failure could result, which could cause a dangerous loss of lights or engine power.

Gasoline and exhaust gas

1. GASOLINE IS HIGHLY FLAMMABLE.
 - a. Always turn the engine off when refueling.
 - b. Take care not to spill any gasoline on the engine or exhaust system when refueling.
 - c. Never refuel while smoking or in the vicinity of an open flame.
2. Never start the engine or let it run for any length of time in a closed area. The exhaust fumes are poisonous and may cause loss of consciousness and death within a short time. Always operate your motorcycle in an area that has adequate ventilation.
3. Always turn the engine off before leaving the motorcycle unattended and remove the key from the main switch. When parking the motorcycle, note the following:
 - a. The engine and exhaust system may be hot, therefore, park the motorcycle in a place where pedestrians or children are not likely to touch these hot areas.
 - b. Do not park the motorcycle on a slope or soft ground, otherwise it may fall over.
 - c. Do not park the motorcycle near a flammable source (e.g., a kerosene heater, or near an open flame), otherwise it could catch fire.



SAFETY INFORMATION

- 4 When transporting the motorcycle in another vehicle, make sure that it is kept upright. If the motorcycle should lean over, gasoline may leak out of the carburetor or fuel tank
- 5 If you should swallow any gasoline, inhale a lot of gasoline vapor, or allow gasoline to get into your eyes, see your doctor immediately. If any gasoline spills on your skin or clothing, immediately wash the affected area with soap and water and change your clothes.


SAFETY INFORMATION

EAU02977


Location of important labels

Please read the following important labels carefully before operating this motorcycle.

1

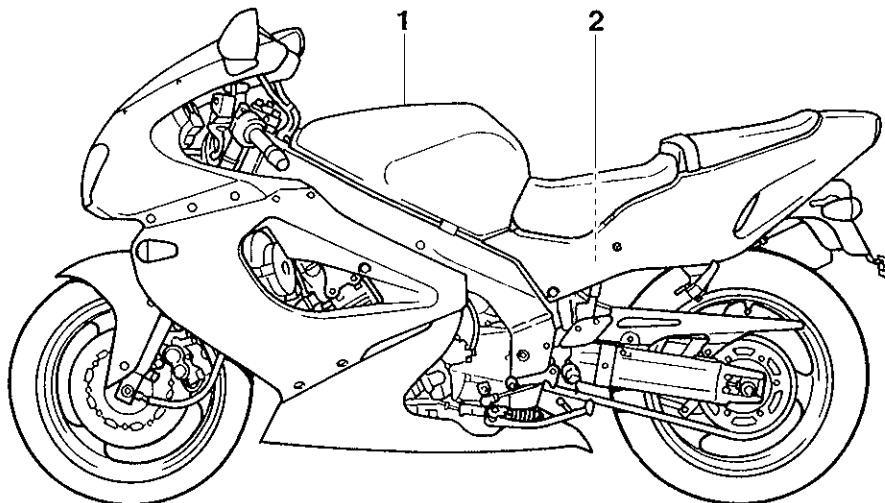

1

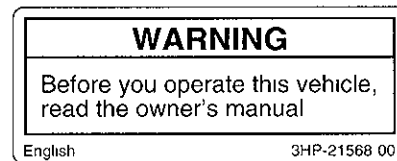


2



DESCRIPTION

Left view	2-1
Right view	2-2
Controls and instruments	2-3


Left view

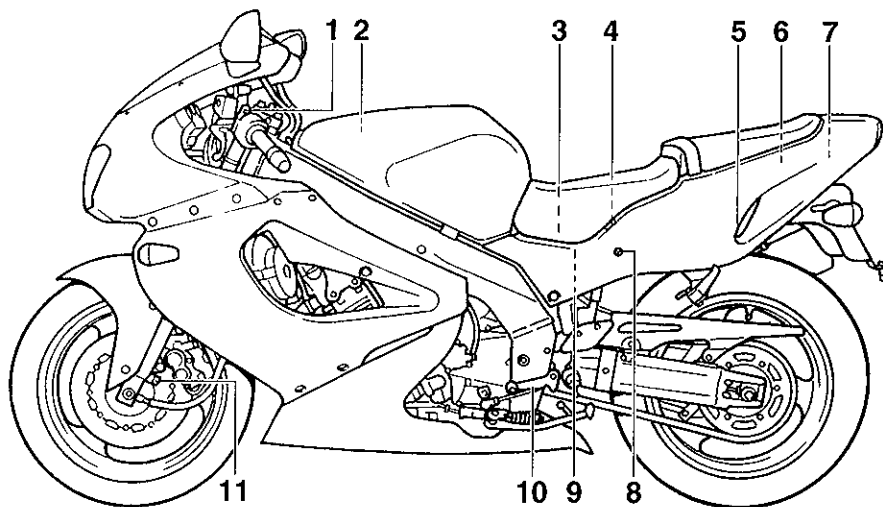

2

- | | | | |
|--------------------------|-------------|---|-------------|
| 1. Starter (choke) lever | (page 3-9) | 8 Shock absorber assembly compression damping force adjusting screw | (page 3-15) |
| 2 Air filter element | (page 6-13) | 9. Main fuse | (page 6-31) |
| 3. Fuse box | (page 6-31) | 10. Shift pedal | (page 3-6) |
| 4. Helmet holder | (page 3-11) | 11 Front fork compression damping force adjusting screw | (page 3-13) |
| 5. Rider seat lock | (page 3-10) | | |
| 6. Storage compartment | (page 3-12) | | |
| 7. Owner's tool kit | (page 6-1) | | |

Right view

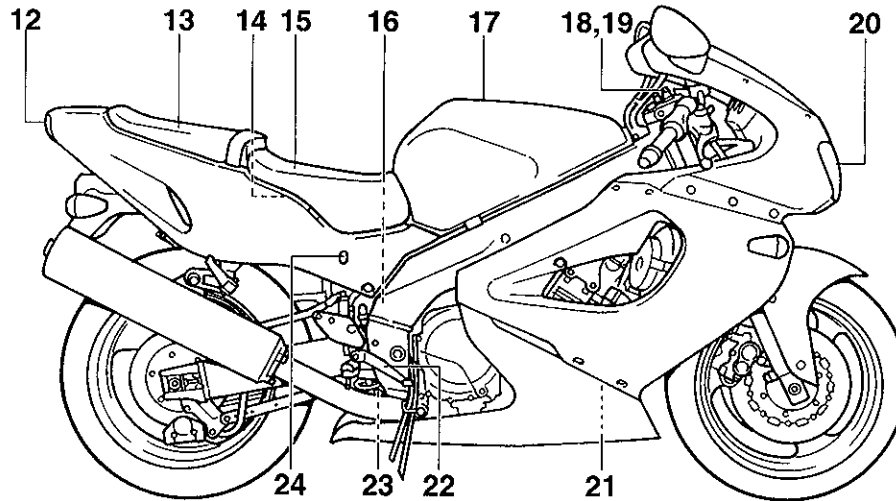


- | | | | |
|--|-------------|---|-------------|
| 12. Tail/brake light | (page 6-33) | 19. Front fork rebound damping force
adjusting screw | (page 3-13) |
| 13. Passenger seat | (page 3-10) | 20. Headlight | (page 6-32) |
| 14. Coolant reservoir | (page 6-12) | 21. Engine oil filter cartridge | (page 6-9) |
| 15. Rider seat | (page 3-10) | 22. Brake pedal | (page 3-7) |
| 16. Shock absorber assembly spring preload
adjusting ring | (page 3-14) | 23. Shock absorber assembly rebound
damping force adjusting knob | (page 3-15) |
| 17. Fuel tank | (page 3-8) | 24. Rear brake fluid level check window | (page 6-22) |
| 18. Front fork spring preload adjusting bolt | (page 3-12) | | |

DESCRIPTION

Controls and instruments

2

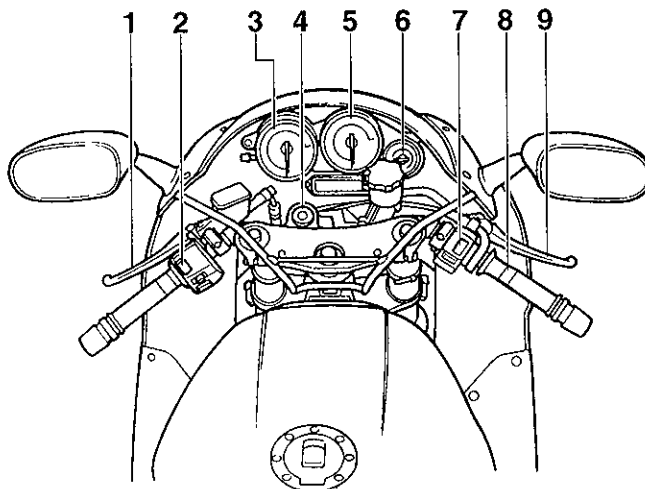


- | | |
|-----------------------------|-------------|
| 1 Clutch lever | (page 3-6) |
| 2 Left handlebar switches | (page 3-5) |
| 3. Speedometer unit | (page 3-3) |
| 4 Main switch/steering lock | (page 3-1) |
| 5. Tachometer | (page 3-3) |
| 6 Coolant temperature gauge | (page 3-4) |
| 7. Right handlebar switches | (page 3-5) |
| 8. Throttle grip | (page 6-17) |
| 9 Brake lever | (page 3-7) |

INSTRUMENT AND CONTROL FUNCTIONS

Main switch/steering lock	3-1	Fuel	3-9
Indicator and warning lights	3-2	Starter (choke) lever	3-9
Speedometer unit	3-3	Seats	3-10
Tachometer	3-3	Helmet holder	3-11
Self-diagnosis device	3-4	Storage compartment	3-12
Coolant temperature gauge	3-4	Adjusting the front fork	3-12
Handlebar switches	3-5	Adjusting the shock absorber assembly	3-14
Clutch lever	3-6	Luggage strap holders	3-16
Shift pedal	3-6	EXUP system	3-16
Brake lever	3-7	Sidestand	3-17
Brake pedal	3-7	Ignition circuit cut-off system	3-17
Fuel tank cap	3-8		

3

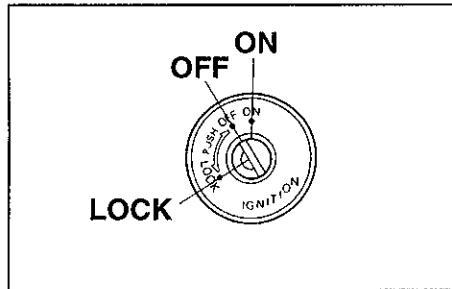

EAU00029

Main switch/steering lock

The main switch/steering lock controls the ignition and lighting systems, and is used to lock the steering. The various positions are described below.

ON


EAU00030

All electrical systems are supplied with power, and the headlight, meter lighting and taillight come on, and the engine can be started. The key cannot be removed.

OFF

EAU00038

All electrical systems are off. The key can be removed.

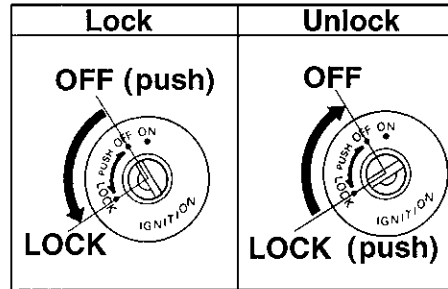

EAU00040

LOCK


The steering is locked, and all electrical systems are off. The key can be removed.

To lock the steering

- 1 Turn the handlebars all the way to the left.
- 2 Push the key in from the "OFF" position, and then turn it to "LOCK" while still pushing it.
- 3 Remove the key.

To unlock the steering

Push the key in, and then turn it to "OFF" while still pushing it.

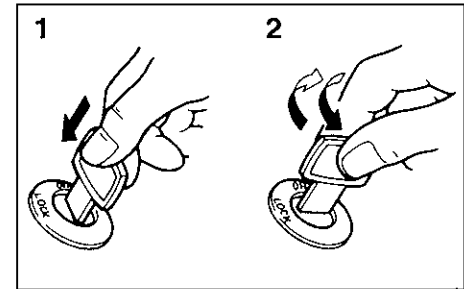


- 1 Push
- 2 Turn

EW000016

WARNING

Never turn the key to "OFF" or "LOCK" while the motorcycle is moving, otherwise the electrical systems will be switched off, which may result in loss of control or an accident. Make sure that the motorcycle is stopped before turning the key to "OFF" or "LOCK".

INSTRUMENT AND CONTROL FUNCTIONS

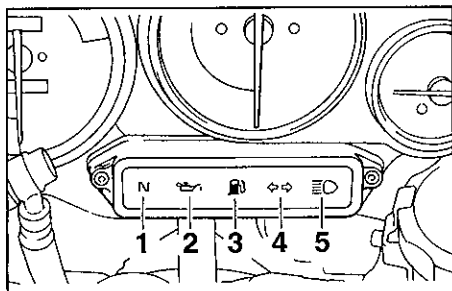

- 1 Neutral indicator light "N"
- 2 Oil level warning light "油"
- 3 Fuel level warning light "油"
- 4 Turn signal indicator light "◀ ▶"
- 5 High beam indicator light "≡O"

EAU03034

Indicator and warning lights

EAU00061

Neutral indicator light "N"

This indicator light comes on when the transmission is in the neutral position.

EAU03201

Oil level warning light "油"

This warning light comes on when the engine oil level is low

The electrical circuit of the warning light can be checked according to the following procedure

- 1 Set the engine stop switch to "O" and turn the key to "ON".
2. Shift the transmission into the neutral position or pull the clutch lever
3. Push the start switch. If the warning light does not come on while pushing the start switch, have a Yamaha dealer check the electrical circuit.

NOTE: _____

Even if the oil level is sufficient, the warning light may flicker when riding on a slope or during sudden acceleration or deceleration, but this is not a malfunction.

EAU03509

Fuel level warning light "油"

This warning light comes on when the fuel level drops below approximately 4.5 L. When this occurs, refuel as soon as possible.

The electrical circuit of the warning light can be checked according to the following procedure.


- 1 Set the engine stop switch to "O" and turn the key to "ON"
- 2 Shift the transmission into the neutral position or pull the clutch lever.
3. Push the start switch. If the warning light does not come on, have a Yamaha dealer check the electrical circuit.






NOTE: _____

This model is equipped with a self-diagnosis device for the fuel level warning light circuit (See page 3-4 for an explanation of the self-diagnosis device.)

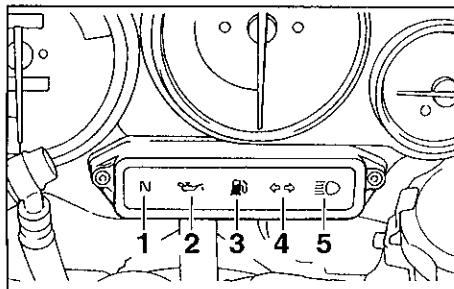INSTRUMENT AND CONTROL FUNCTIONS

3



- 1 Neutral indicator light “N”
- 2 Oil level warning light “”
- 3 Fuel level warning light “”
- 4 Turn signal indicator light “ ”
- 5 High beam indicator light “”

EAU00057


Turn signal indicator light “ ”

This indicator light flashes when the turn signal switch is pushed to the left or right

EAU00063

High beam indicator light “”

This indicator light comes on when the high beam of the headlight is switched on

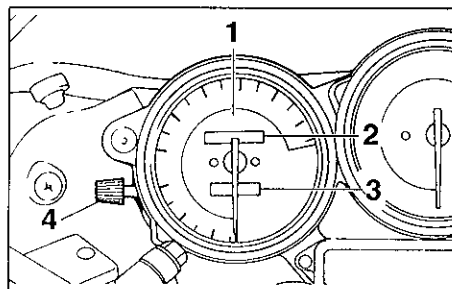


- 1 Speedometer
- 2 Odometer
- 3 Tripmeter
- 4 Tripmeter reset knob

EAU00095

Speedometer unit

The speedometer unit is equipped with a speedometer, an odometer and a tripmeter. The speedometer shows riding speed. The odometer shows the total distance traveled. The tripmeter shows the distance traveled since it was last set to zero with the reset knob. The tripmeter can be used to estimate the distance that can be traveled with a full tank of fuel. This information will enable you to plan future fuel stops.

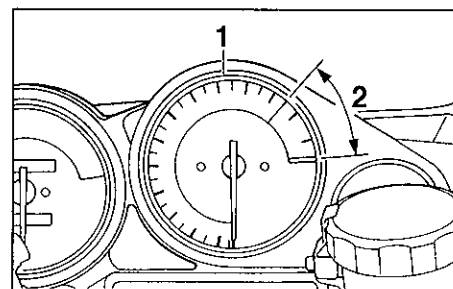

- 1 Tachometer
- 2 Tachometer red zone

EAU00101

Tachometer

The electric tachometer allows the rider to monitor the engine speed and keep it within the ideal power range

EC000003

CAUTION

Do not operate the engine in the tachometer red zone.

Red zone: 11,500 r/min and above

INSTRUMENT AND CONTROL FUNCTIONS


Self-diagnosis device

EAU03910

This model is equipped with a self-diagnosis device for the following electrical circuits:

- throttle position sensor
- EXUP system
- fuel level warning light

If any of those circuits are defective, the tachometer will repeatedly display the following error code:

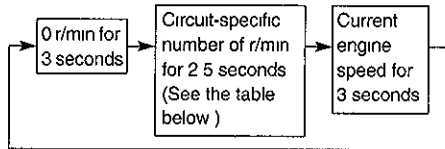

Use the chart below to identify the faulty electrical circuit


Specific r/min	Faulty electrical circuit
3,000 r/min	Throttle position sensor
7,000 r/min	EXUP system
8,000 r/min	Fuel level warning light

If the tachometer displays such an error code, note the circuit-specific number of r/min, and then have a Yamaha dealer check the motorcycle

EC000004

CAUTION

When the tachometer displays an error code, the motorcycle should be checked as soon as possible in order to avoid engine damage.

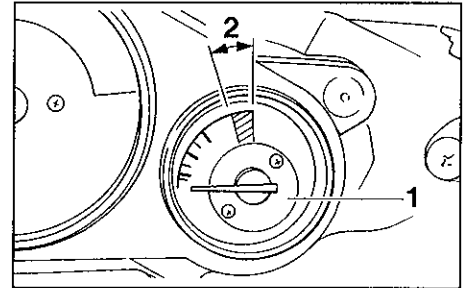

- 1 Coolant temperature gauge
- 2 Coolant temperature gauge red zone

EAU01652

Coolant temperature gauge

With the key in the "ON" position, the coolant temperature gauge indicates the temperature of the coolant. The coolant temperature varies with changes in the weather and engine load. If the needle reaches or enters the red zone, stop the motorcycle and let the engine cool. (See page 6-41 for further instructions.)


EC000002

CAUTION:

Do not operate the engine if it is overheated.

INSTRUMENT AND CONTROL FUNCTIONS

3

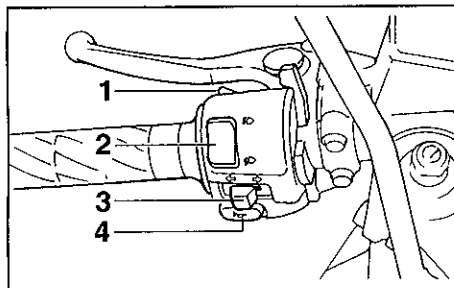

- 1 Pass switch "PASS"
- 2 Dimmer switch "☰/☱"
- 3 Turn signal switch "↔/↔"
- 4 Horn switch "📣"

EAU00118

Handlebar switches

EAU00120

Pass switch "PASS"

Press this switch to flash the headlight

EAU03888

Dimmer switch "☰/☱"

Set this switch to "☰" for the high beam and to "☱" for the low beam

EAU03889


Turn signal switch "↔/↔"

To signal a right-hand turn, push this switch to "↔" To signal a left-hand turn, push this switch to "↔" When released, the switch returns to the center position To cancel the turn signal lights, push the switch in after it has returned to the center position.

EAU00129

Horn switch "📣"

Press this switch to sound the horn.

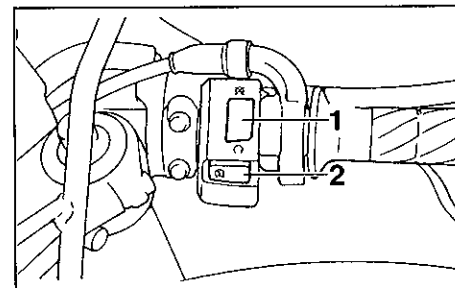

- 1 Engine stop switch "⊗/⊘"
- 2 Start switch "⊘"

EAU03890

Engine stop switch "⊗/⊘"

Set this switch to "⊘" before starting the engine. Set this switch to "⊗" to stop the engine in case of an emergency, such as when the motorcycle over-
turns or when the throttle cable is stuck.

EAU00143

Start switch "⊘"

Push this switch to crank the engine with the starter

EC000005

CAUTION


See page 5-1 for starting instructions prior to starting the engine.

INSTRUMENT AND CONTROL FUNCTIONS

Clutch lever

EAU00153


The clutch lever is located at the left handlebar grip. To disengage the clutch, pull the lever toward the handlebar grip. To engage the clutch, release the lever. The lever should be pulled rapidly and released slowly for smooth clutch operation.

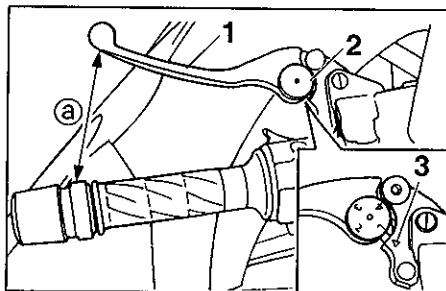

- 1 Clutch lever
- 2 Clutch lever position adjusting dial
- 3 Arrow mark
- a Distance between clutch lever and handlebar grip

The clutch lever is equipped with a clutch lever position adjusting dial. To adjust the distance between the clutch lever and the handlebar grip, turn the adjusting dial while holding the lever pushed away from the handlebar grip. Make sure that the appropriate setting on the adjusting dial is aligned with the arrow mark on the clutch lever.

The clutch lever is equipped with a clutch switch, which is part of the ignition circuit cut-off system. (See page 3-17 for an explanation of the ignition circuit cut-off system.)

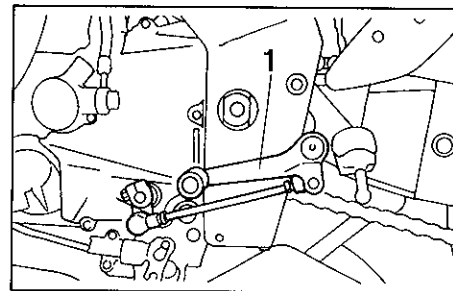

- 1 Shift pedal

Shift pedal

EAU00157


The shift pedal is located on the left side of the engine and is used in combination with the clutch lever when shifting the gears of the 5-speed constant-mesh transmission equipped on this motorcycle.

INSTRUMENT AND CONTROL FUNCTIONS

Brake lever


The brake lever is located at the right handlebar grip. To apply the front brake, pull the lever toward the handlebar grip

EAU00161

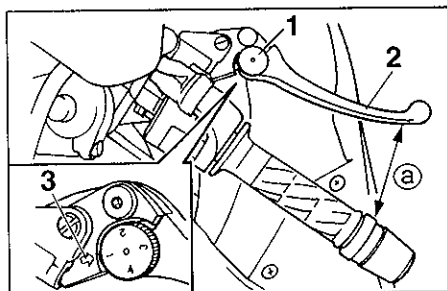

- 1 Brake lever position adjusting dial
- 2 Brake lever
- 3 Arrow mark
- a Distance between brake lever and handlebar grip

The brake lever is equipped with a position adjusting dial. To adjust the distance between the brake lever and the handlebar grip, turn the adjusting dial while holding the lever pushed away from the handlebar grip. Make sure that the appropriate setting on the adjusting dial is aligned with the arrow mark on the brake lever.

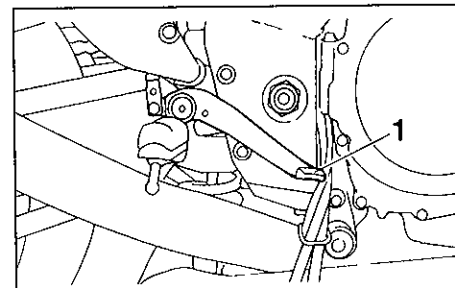


- 1 Brake pedal

EAU00162

Brake pedal

The brake pedal is on the right side of the motorcycle. To apply the rear brake, press down on the brake pedal.

INSTRUMENT AND CONTROL FUNCTIONS

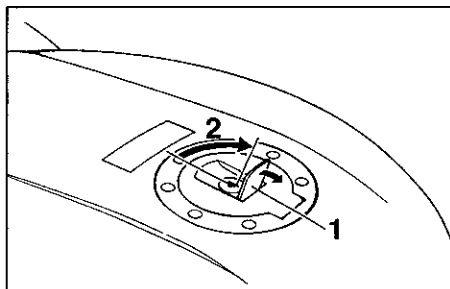

- 1 Fuel tank cap lock cover
- 2 Unlock

EAU02935

Fuel tank cap

To open the fuel tank cap

Open the fuel tank cap lock cover, insert the key into the lock, and then turn it 1/4 turn clockwise. The lock will be released and the fuel tank cap can be opened.

To close the fuel tank cap

1. Push the fuel tank cap into position with the key inserted in the lock.

- 2 Turn the key counterclockwise to the original position, remove it, and then close the lock cover

NOTE: _____
The fuel tank cap cannot be closed unless the key is in the lock. In addition, the key cannot be removed if the cap is not properly closed and locked.

EWA00025




WARNING _____

Make sure that the fuel tank cap is properly closed before riding.

INSTRUMENT AND CONTROL FUNCTIONS

3

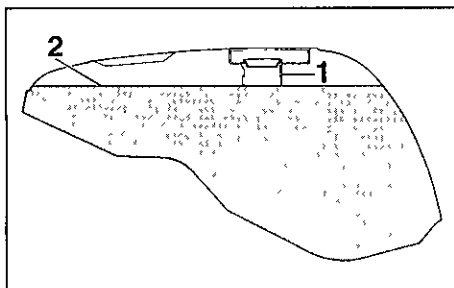

- 1 Fuel tank filler tube
- 2 Fuel level

EAU03753

Fuel

Make sure that there is sufficient fuel in the tank. Fill the fuel tank to the bottom of the filler tube as shown

EW000130

! WARNING

- Do not overfill the fuel tank, otherwise it may overflow when the fuel warms up and expands.
- Avoid spilling fuel on the hot engine.


EAU00185

CAUTION

Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts.

EAU00192

Recommended fuel.
Regular gasoline
For Australia
Unleaded fuel only
Fuel tank capacity
Total amount
20 L
Reserve amount.
4.5 L

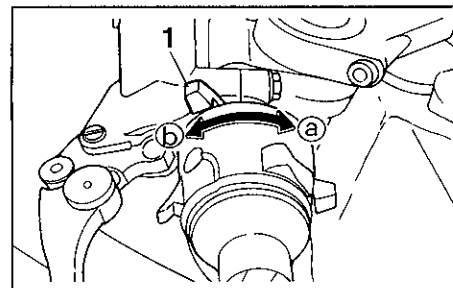

- 1 Starter (choke) lever “| \ |”

EAU03839


Starter (choke) lever “| \ |”

Starting a cold engine requires a richer air-fuel mixture, which is supplied by the starter (choke).

Move the lever in direction **(a)** to turn on the starter (choke)

Move the lever in direction **(b)** to turn off the starter (choke)

INSTRUMENT AND CONTROL FUNCTIONS

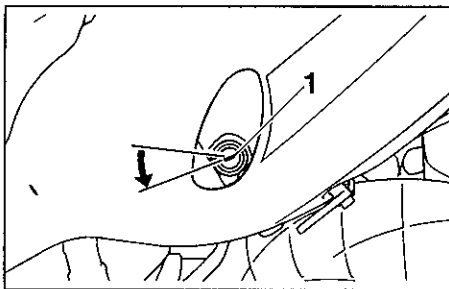

1 Rider seat lock


EAU01698

Seats

Rider seat

To remove the rider seat


1. Insert the key into the seat lock, and then turn it as shown.
2. Pull the rider seat off.

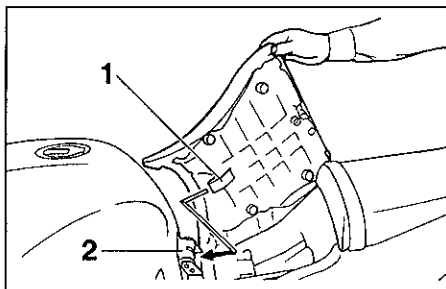

1 Projection
2 Seat holder

To install the rider seat

1. Insert the projection on the front of the rider seat into the seat holder as shown, and then push the rear of the seat down to lock it in place
2. Remove the key.

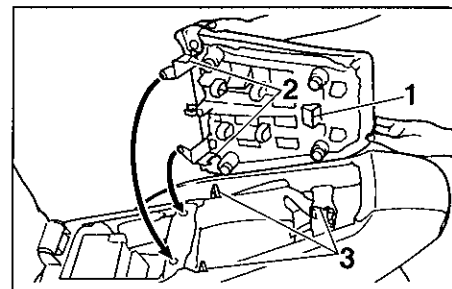

1 Projection
2 Hook (x 2)
3 Seat holder (x 3)

Passenger seat

To remove the passenger seat

1. Remove the rider seat
2. Pull the passenger seat up

To install the passenger seat


1. Insert the projection on the rear of the passenger seat and the hooks on the front of the passenger seat into the seat holders as shown, and then push the seat toward the back
2. Install the rider seat

INSTRUMENT AND CONTROL FUNCTIONS

NOTE:

Make sure that the seats are properly secured before riding.

3

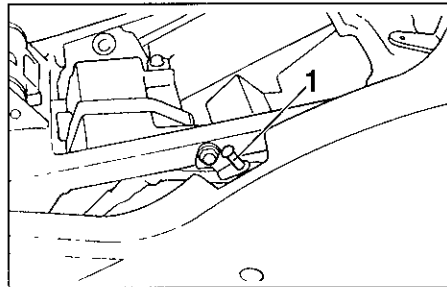

1 Helmet holder

EAU00264

Helmet holder

The helmet holder is located under the rider seat

To secure a helmet to the helmet holder

- 1 Remove the rider seat (See page 3-10 for rider seat removal and installation procedures.)
- 2 Attach the helmet to the helmet holder, and then securely install the seat

EW000030


WARNING

Never ride with a helmet attached to the helmet holder, since the helmet may hit objects, causing loss of control and possibly an accident.

To release the helmet from the helmet holder

Remove the rider seat, remove the helmet from the helmet holder, and then install the seat

INSTRUMENT AND CONTROL FUNCTIONS

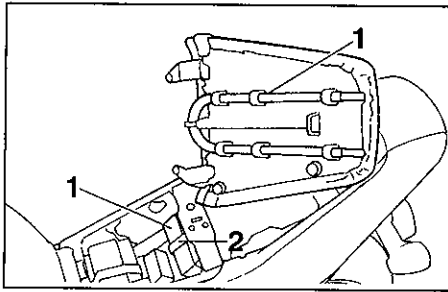

- 1 U-LOCK
- 2 Strap

EAU01688

Storage compartment

This storage compartment is designed to hold a genuine Yamaha U-LOCK (Other locks may not fit) When placing a U-LOCK in the storage compartment, securely fasten it with the straps. When the U-LOCK is not in the storage compartment, be sure to secure the straps to prevent losing them.

When storing the owner's manual or other documents in the storage compartment, be sure to wrap them in a plastic bag so that they will not get wet When washing the motorcycle, be careful not to let any water enter the storage compartment

EAU01862


Adjusting the front fork

This front fork is equipped with spring preload adjusting bolts, rebound damping force adjusting bolts and compression damping force adjusting screws.

EW000035



Always adjust both fork legs equally, otherwise poor handling and loss of stability may result.

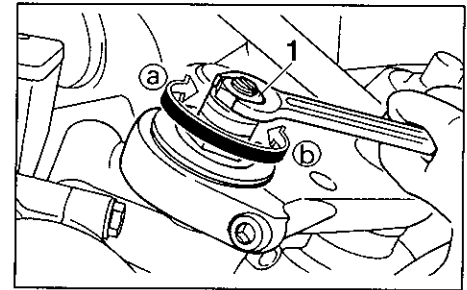

- 1 Spring preload adjusting bolt

Spring preload


To increase the spring preload and thereby harden the suspension, turn the adjusting bolt on each fork leg in direction (a) To decrease the spring preload and thereby soften the suspension, turn the adjusting bolt on each fork leg in direction (b)

NOTE:

Align the appropriate groove on the adjusting mechanism with the top of the front fork cap bolt


INSTRUMENT AND CONTROL FUNCTIONS

3

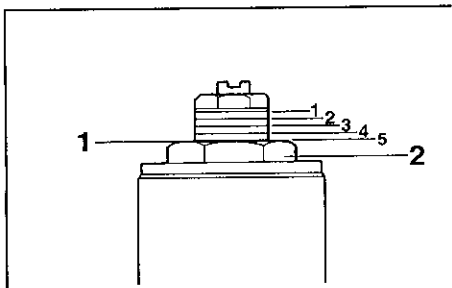

- 1 Current setting
- 2 Front fork cap bolt

	Setting
Minimum (soft)	5
Standard	4
Maximum (hard)	1

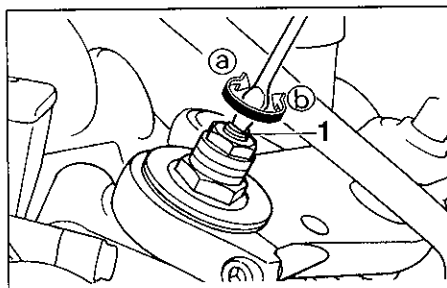


- 1 Rebound damping force adjusting screw

Rebound damping force

To increase the rebound damping force and thereby harden the rebound damping, turn the adjusting screw on each fork leg in direction ①. To decrease the rebound damping force and thereby soften the rebound damping, turn the adjusting screw on each fork leg in direction ②.

Minimum (soft)	17 clicks in direction ①*
Standard	9 clicks in direction ②*
Maximum (hard)	0 clicks in direction ②*

* With the adjusting screw fully turned in direction ①

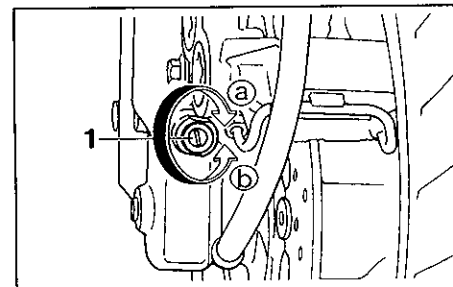

- 1 Compression damping force adjusting screw

Compression damping force

To increase the compression damping force and thereby harden the compression damping, turn the adjusting screw on each fork leg in direction ①. To decrease the compression damping force and thereby soften the compression damping, turn the adjusting screw on each fork leg in direction ②.

Minimum (soft)	21 clicks in direction ①*
Standard	12 clicks in direction ②*
Maximum (hard)	0 clicks in direction ②*

* With the adjusting screw fully turned in direction ①

INSTRUMENT AND CONTROL FUNCTIONS

EC000015

CAUTION

Never attempt to turn an adjusting mechanism beyond the maximum or minimum settings.

NOTE:

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

EAU01699


Adjusting the shock absorber assembly

This shock absorber assembly is equipped with a spring preload adjusting ring, a rebound damping force adjusting knob and a compression damping force adjusting screw

EC000015

CAUTION

Never attempt to turn an adjusting mechanism beyond the maximum or minimum settings.

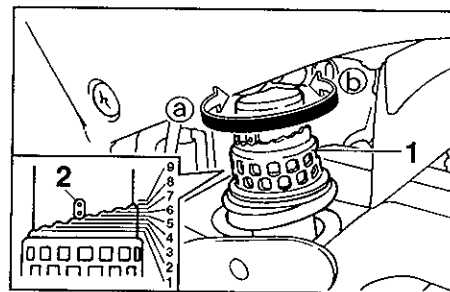

- 1 Spring preload adjusting ring
- 2 Position indicator


Spring preload

To increase the spring preload and thereby harden the suspension, turn the adjusting ring in direction (a). To decrease the spring preload and thereby soften the suspension, turn the adjusting ring in direction (b)

	Setting
Minimum (soft)	1
Standard	4
Maximum (hard)	9

INSTRUMENT AND CONTROL FUNCTIONS

3

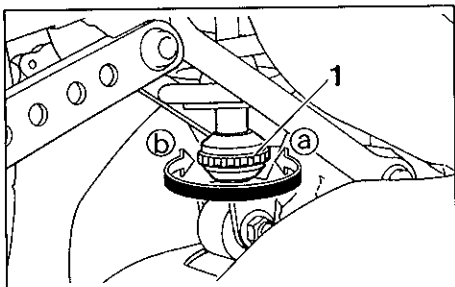


1 Rebound damping force adjusting knob

Rebound damping force

To increase the rebound damping force and thereby harden the rebound damping, turn the adjusting knob in direction ①. To decrease the rebound damping force and thereby soften the rebound damping, turn the adjusting knob in direction ②.

Minimum (soft)	20 clicks in direction ②*
Standard	10 clicks in direction ②*
Maximum (hard)	0 clicks in direction ②*

* With the adjusting knob fully turned in direction ①

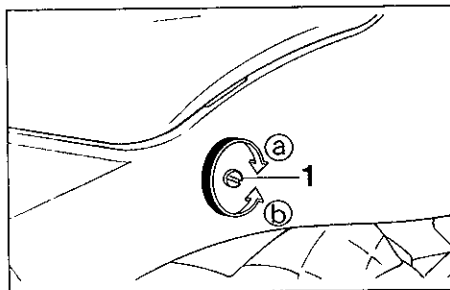

1 Compression damping force adjusting screw

Compression damping force

To increase the compression damping force and thereby harden the compression damping, turn the adjusting screw in direction ①. To decrease the compression damping force and thereby soften the compression damping, turn the adjusting screw in direction ②.

Minimum (soft)	0 clicks in direction ①*
Standard	10 clicks in direction ①*
Maximum (hard)	24 clicks in direction ①*

* With the adjusting screw fully turned in direction ②

NOTE:

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.


INSTRUMENT AND CONTROL FUNCTIONS

EAU00315

⚠ WARNING

This shock absorber contains highly pressurized nitrogen gas. For proper handling, read and understand the following information before handling the shock absorber. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling.

- Do not tamper with or attempt to open the gas cylinder.
- Do not subject the shock absorber to an open flame or other high heat sources, otherwise it may explode due to excessive gas pressure.
- Do not deform or damage the gas cylinder in any way, as this will result in poor damping performance.
- Always have a Yamaha dealer service the shock absorber.

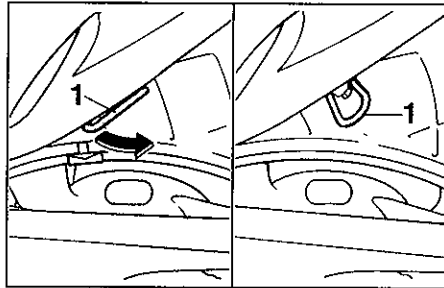

1 Luggage strap holder (x 4)

EAU00324

Luggage strap holders

There are four luggage strap holders below the passenger seat, two of which can be turned out for easier access

EAU01571

EXUP system

This motorcycle is equipped with Yamaha's EXUP (EXhaust Ultimate Power valve) system. This system boosts engine power by means of a valve that regulates the diameter of the exhaust pipe. The EXUP system valve is constantly adjusted in accordance with the engine speed by a computer-controlled servomotor.

3

EC000027

CAUTION:

- The EXUP system has been set and extensively tested at the Yamaha factory. Changing these settings without sufficient technical knowledge may result in poor performance of or damage to the engine.
- If the EXUP system does not operate, have a Yamaha dealer check it.

INSTRUMENT AND CONTROL FUNCTIONS

EAU00330

Sidestand

The sidestand is located on the left side of the frame. Raise the sidestand or lower it with your foot while holding the motorcycle upright.

NOTE:

3

The built-in sidestand switch is part of the ignition circuit cut-off system, which cuts the ignition in certain situations (See further down for an explanation of the ignition circuit cut-off system)

EW000044

WARNING

The motorcycle must not be ridden with the sidestand down, or if the sidestand cannot be properly moved up (or does not stay up), otherwise the sidestand could contact the ground and distract the operator, resulting in a possible loss of control. Yamaha's ignition circuit cut-off system has been designed to assist the operator in fulfilling the responsibility of raising the sidestand before starting off. Therefore, check this system regularly as described below and have a Yamaha dealer repair it if it does not function properly.

EAU03720

Ignition circuit cut-off system

The ignition circuit cut-off system (comprising the sidestand switch, clutch switch and neutral switch) has the following functions

- It prevents starting when the transmission is in gear and the sidestand is up, but the clutch lever is not pulled.
- It prevents starting when the transmission is in gear and the clutch lever is pulled, but the sidestand is still down
- It cuts the running engine when the transmission is in gear and the sidestand is moved down.

Periodically check the operation of the ignition circuit cut-off system according to the following procedure

EW000045

WARNING

If a malfunction is noted, have a Yamaha dealer check the system before riding.

INSTRUMENT AND CONTROL FUNCTIONS

With the engine turned off
1 Move the sidestand down
2 Make sure that the engine stop switch is set to "O"
3 Turn the key to "ON"
4 Shift the transmission into the neutral position
5 Push the start switch
Does the engine start?

YES

NO

With the engine still running
6 Move the sidestand up.
7 Keep the clutch lever pulled
8 Shift the transmission into gear
9 Move the sidestand down
Does the engine stall?

YES

NO

After the engine has stalled
10 Move the sidestand up.
11 Keep the clutch lever pulled
12 Push the start switch
Does the engine start?

YES

NO

The system is OK **The motorcycle can be ridden.**

NOTE:

This check is most reliable if performed with a warmed-up engine.

The neutral switch may be defective
The motorcycle should not be ridden until checked by a Yamaha dealer

The sidestand switch may be defective
The motorcycle should not be ridden until checked by a Yamaha dealer

The clutch switch may be defective
The motorcycle should not be ridden until checked by a Yamaha dealer

PRE-OPERATION CHECKS

Pre-operation check list 4-1

PRE-OPERATION CHECKS

The condition of a vehicle is the owner's responsibility. Vital components can start to deteriorate quickly and unexpectedly, even if the vehicle remains unused (for example, as a result of exposure to the elements). Any damage, fluid leakage or loss of tire air pressure could have serious consequences. Therefore, it is very important, in addition to a thorough visual inspection, to check the following points before each ride.

Pre-operation check list

ITEM	CHECKS	PAGE
Fuel	<ul style="list-style-type: none">• Check fuel level in fuel tank• Refuel if necessary• Check fuel line for leakage	3-9
Engine oil	<ul style="list-style-type: none">• Check oil level in engine• If necessary, add recommended oil to specified level• Check vehicle for oil leakage	6-9
Coolant	<ul style="list-style-type: none">• Check coolant level in reservoir• If necessary, add recommended coolant to specified level• Check cooling system for leakage	6-12-6-13
Front brake	<ul style="list-style-type: none">• Check operation• If soft or spongy, have Yamaha dealer bleed hydraulic system• Check fluid level in reservoir• If necessary, add recommended brake fluid to specified level• Check hydraulic system for leakage	6-21-6-23
Rear brake	<ul style="list-style-type: none">• Check operation• If soft or spongy, have Yamaha dealer bleed hydraulic system• Check fluid level in reservoir• If necessary, add recommended brake fluid to specified level• Check hydraulic system for leakage	6-21-6-23
Clutch	<ul style="list-style-type: none">• Check operation• If soft or spongy, have Yamaha dealer bleed hydraulic system• Check fluid level in reservoir• If necessary, add recommended fluid to specified level• Check hydraulic system for leakage	6-22
Throttle grip	<ul style="list-style-type: none">• Make sure that operation is smooth• Lubricate throttle grip, housing and cables if necessary• Check free play• If necessary, have Yamaha dealer make adjustment	6-17

PRE-OPERATION CHECKS

ITEM	CHECKS	PAGE
Control cables	<ul style="list-style-type: none"> • Make sure that operation is smooth • Lubricate if necessary 	6-26
Drive chain	<ul style="list-style-type: none"> • Check chain slack • Adjust if necessary • Check chain condition • Lubricate if necessary 	6-24
Wheels and tires	<ul style="list-style-type: none"> • Check for damage • Check tire condition and tread depth • Check air pressure • Correct if necessary 	6-17-6-20
Brake and shift pedals	<ul style="list-style-type: none"> • Make sure that operation is smooth • Lubricate pedal pivoting points if necessary 	6-26
Brake and clutch levers	<ul style="list-style-type: none"> • Make sure that operation is smooth • Lubricate lever pivoting points if necessary 	6-26
Sidestand	<ul style="list-style-type: none"> • Make sure that operation is smooth • Lubricate pivot if necessary 	6-27
Chassis fasteners	<ul style="list-style-type: none"> • Make sure that all nuts, bolts and screws are properly tightened • Tighten if necessary 	—
Instruments, lights, signals and switches	<ul style="list-style-type: none"> • Check operation • Correct if necessary 	—
Sidestand switch	<ul style="list-style-type: none"> • Check operation of ignition circuit cut-off system • If system is defective, have Yamaha dealer check vehicle 	3-17

4

NOTE:

Pre-operation checks should be made each time the motorcycle is used. Such an inspection can be accomplished in a very short time; and the added safety it assures is more than worth the time involved.

EWA00033

⚠ WARNING

If any item in the Pre-operation check list is not working properly, have it inspected and repaired before operating the motorcycle.

OPERATION AND IMPORTANT RIDING POINTS

Starting and warming up a cold engine	5-1
Starting a warm engine	5-2
Shifting	5-3
Tips for reducing fuel consumption	5-3
Engine break-in	5-4
Parking	5-5

OPERATION AND IMPORTANT RIDING POINTS

EAU00373

EAU00343*

WARNING

- Become thoroughly familiar with all operating controls and their functions before riding. Consult a Yamaha dealer regarding any control or function that you do not thoroughly understand.
- Never start the engine or operate it in a closed area for any length of time. Exhaust fumes are poisonous, and inhaling them can cause loss of consciousness and death within a short time. Always make sure that there is adequate ventilation.
- Before starting out, make sure that the sidestand is up. If the sidestand is not raised completely, it could contact the ground and distract the operator, resulting in a possible loss of control.

Starting and warming up a cold engine

In order for the ignition circuit cut-off system to enable starting, one of the following conditions must be met

- The transmission is in the neutral position
- The transmission is in gear with the clutch lever pulled and the sidestand up.

EW000054

WARNING

- Before starting the engine, check the function of the ignition circuit cut-off system according to the procedure described on page 3-18.
- Never ride with the sidestand down.

- 1 Turn the key to "ON" and make sure that the engine stop switch is set to "○".

EC000035

CAUTION

If the fuel level warning light comes on, check the fuel level, and, if necessary, refuel as soon as possible.

- 2 Shift the transmission into the neutral position

NOTE:

When the transmission is in the neutral position, the neutral indicator light should be on, otherwise have a Yamaha dealer check the electrical circuit.

- 3 Turn the starter (choke) on and completely close the throttle. (See page 3-9 for starter (choke) operation.)
4. Start the engine by pushing the start switch

OPERATION AND IMPORTANT RIDING POINTS

NOTE:

If the engine fails to start, release the start switch, wait a few seconds, and then try again. Each starting attempt should be as short as possible to preserve the battery. Do not crank the engine more than 10 seconds on any one attempt

ECA00060

CAUTION:

The oil level warning light and fuel level warning light should come on when the start switch is pushed and should go off when the start switch is released. If the oil level warning light flickers or remains on, immediately stop the engine and check the engine oil level and for oil leakage. If necessary, fill the engine with oil and check to see that the oil level warning light goes off. If not, consult a Yamaha dealer.

5. After starting the engine, move the starter (choke) lever back halfway

ECA00045

CAUTION:

For maximum engine life, never accelerate hard when the engine is cold!

6. When the engine is warm, turn the starter (choke) off.

NOTE:

The engine is warm when it responds normally to the throttle with the starter (choke) turned off.

EAU01258


Starting a warm engine

Follow the same procedure as for starting a cold engine with the exception that the starter (choke) is not required when the engine is warm

OPERATION AND IMPORTANT RIDING POINTS

EC000048

EAU00424

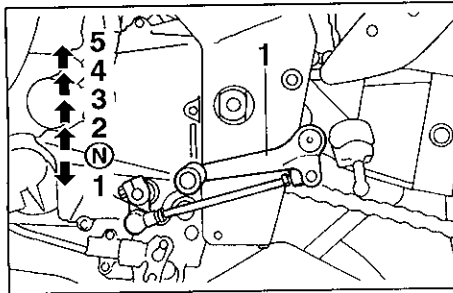

1 Shift pedal
N Neutral position

EAU00423

5

Shifting

Shifting gears lets you control the amount of engine power available for starting off, accelerating, climbing hills, etc

The gear positions are shown in the illustration

NOTE:

To shift the transmission into the neutral position, press the shift pedal down repeatedly until it reaches the end of its travel, and then slightly raise it

CAUTION:

- Even with the transmission in the neutral position, do not coast for long periods of time with the engine off, and do not tow the motorcycle for long distances. The transmission is properly lubricated only when the engine is running. Inadequate lubrication may damage the transmission.
- Always use the clutch while changing gears to avoid damaging the engine, transmission, and drive train, which are not designed to withstand the shock of forced shifting.

Tips for reducing fuel consumption

Fuel consumption depends largely on your riding style. Consider the following tips to reduce fuel consumption:

- Thoroughly warm up the engine
- Turn the starter (choke) off as soon as possible
- Shift up swiftly, and avoid high engine speeds during acceleration
- Do not rev the engine while shifting down, and avoid high engine speeds with no load on the engine
- Turn the engine off instead of letting it idle for an extended length of time (e.g., in traffic jams, at traffic lights or at railroad crossings)

OPERATION AND IMPORTANT RIDING POINTS

EAU00436

Engine break-in

There is never a more important period in the life of your engine than the period between 0 and 1,000 km. For this reason, you should read the following material carefully.

Since the engine is brand new, do not put an excessive load on it for the first 1,000 km. The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full-throttle operation or any condition that might result in engine overheating must be avoided.

EAU00440*

0–150 km

- Avoid prolonged operation above 5,000 r/min.
- After every hour of operation, stop the engine, and then let it cool for five to ten minutes.
- Vary the engine speed from time to time. Do not operate the engine at one set throttle position.

150–500 km

- Avoid prolonged operation above 6,000 r/min.
- Rev the engine freely through the gears, but do not use full throttle at any time.

500–1,000 km

- Avoid prolonged full-throttle operation.
- Avoid prolonged operation above 7,000 r/min.

EC000052

CAUTION:

After 1,000 km of operation, the engine oil must be changed and the oil filter cartridge replaced.

1,000 km and beyond

The vehicle can now be operated normally.

EC000053

CAUTION:

- Keep the engine speed out of the tachometer red zone.
- If any engine trouble should occur during the engine break-in period, immediately have a Yamaha dealer check the vehicle.

OPERATION AND IMPORTANT RIDING POINTS

EAU00460

Parking

When parking, stop the engine, and then remove the key from the main switch

EW000058

WARNING

- Since the engine and exhaust system can become very hot, park in a place where pedestrians or children are not likely to touch them.
- Do not park on a slope or on soft ground, otherwise the motorcycle may overturn.

PERIODIC MAINTENANCE AND MINOR REPAIR

Owner's tool kit	6-1	Checking and lubricating the brake and shift pedals	6-26
Periodic maintenance and lubrication chart	6-2	Checking and lubricating the brake and clutch levers	6-26
Removing and installing cowlings	6-5	Checking and lubricating the sidestand	6-27
Checking the spark plugs	6-7	Lubricating the rear suspension	6-27
Engine oil and oil filter cartridge	6-9	Checking the front fork	6-27
Checking the coolant level	6-12	Checking the steering	6-28
Cleaning the air filter element	6-13	Checking the wheel bearings	6-29
Adjusting the carburetors	6-16	Battery	6-29
Adjusting the engine idling speed	6-16	Replacing the fuses	6-31
Adjusting the throttle cable free play	6-17	Replacing a headlight bulb	6-32
Adjusting the valve clearance	6-17	Replacing the tail/brake light bulb	6-33
Tires	6-17	Replacing a turn signal light bulb	6-33
Cast wheels	6-20	Supporting the motorcycle	6-34
Adjusting the rear brake light switch	6-21	Front wheel	6-35
Checking the front and rear brake pads	6-21	Rear wheel	6-37
Checking the brake and clutch fluid levels	6-22	Troubleshooting	6-39
Changing the brake fluid	6-23	Troubleshooting charts	6-40
Drive chain slack	6-24		
Lubricating the drive chain	6-25		
Checking and lubricating the cables	6-26		

PERIODIC MAINTENANCE AND MINOR REPAIR


EAU00464

Safety is an obligation of the owner. Periodic inspection, adjustment and lubrication will keep your vehicle in the safest and most efficient condition possible. The most important points of inspection, adjustment, and lubrication are explained on the following pages. The intervals given in the periodic maintenance and lubrication chart should be simply considered as a general guide under normal riding conditions. However, **DEPENDING ON THE WEATHER, TERRAIN, GEOGRAPHICAL LOCATION, AND INDIVIDUAL USE, THE MAINTENANCE INTERVALS MAY NEED TO BE SHORTENED.**

EW000060

! WARNING

If you are not familiar with motorcycle maintenance work, have a Yamaha dealer do it for you.

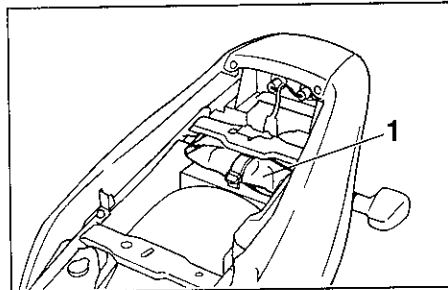

1 Owner's tool kit

EAU03713

Owner's tool kit

The tool kit is located under the passenger seat (See page 3-10 for passenger seat removal procedures). The service information included in this manual and the tools provided in the owner's tool kit are intended to assist you in the performance of preventive maintenance and minor repairs. However, additional tools such as a torque wrench may be necessary to perform certain maintenance work correctly.

NOTE: If you do not have the tools or experience required for a particular job, have a Yamaha dealer perform it for you.

EW000063

! WARNING

Modifications not approved by Yamaha may cause loss of performance and render the vehicle unsafe for use. Consult a Yamaha dealer before attempting any changes.

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU03685

Periodic maintenance and lubrication chart

NOTE:

- The annual checks must be performed every year, except if a kilometer-based maintenance is performed instead.
- From 50,000 km, repeat the maintenance intervals starting from 10,000 km.
- Items marked with an asterisk should be performed by a Yamaha dealer as they require special tools, data and technical skills

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (× 1,000 km)					ANNUAL CHECK
			1	10	20	30	40	
1	* Fuel line	• Check fuel hoses for cracks or damage		√	√	√	√	√
2	* Fuel filter	• Check condition			√		√	
3	Spark plugs	• Check condition • Clean and regap		√		√		
		• Replace			√		√	
4	* Valves	• Check valve clearance • Adjust	Every 40,000 km					
5	Air filter element	• Clean		√		√		
		• Replace			√		√	
6	* Clutch	• Check operation, fluid level and vehicle for fluid leakage (See NOTE on page 6-4)	√	√	√	√	√	
7	* Front brake	• Check operation, fluid level and vehicle for fluid leakage (See NOTE on page 6-4)	√	√	√	√	√	√
		• Replace brake pads	Whenever worn to the limit					
8	* Rear brake	• Check operation, fluid level and vehicle for fluid leakage (See NOTE on page 6-4)	√	√	√	√	√	√
		• Replace brake pads	Whenever worn to the limit					

PERIODIC MAINTENANCE AND MINOR REPAIR

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (× 1,000 km)					ANNUAL CHECK
			1	10	20	30	40	
9	* Brake hoses	• Check for cracks or damage		√	√	√	√	√
		• Replace (See NOTE on page 6-4)	Every 4 years					
10	* Wheels	• Check runout and for damage		√	√	√	√	
11	* Tires	• Check tread depth and for damage						
		• Replace if necessary • Check air pressure • Correct if necessary		√	√	√	√	
12	* Wheel bearings	• Check bearing for looseness or damage		√	√	√	√	
13	* Swingarm	• Check operation and for excessive play		√	√	√	√	
		• Lubricate with lithium-soap-based grease	Every 50,000 km					
14	Drive chain	• Check chain slack • Make sure that the rear wheel is properly aligned • Clean and lubricate	Every 1,000 km and after washing the motorcycle or riding in the rain					
15	* Steering bearings	• Check bearing play and steering for roughness	√	√	√	√	√	
		• Lubricate with lithium-soap-based grease	Every 20,000 km					
16	* Chassis fasteners	• Make sure that all nuts, bolts and screws are properly tightened		√	√	√	√	√
17	Sidestand	• Check operation • Lubricate		√	√	√	√	√
18	* Sidestand switch	• Check operation	√	√	√	√	√	√
19	* Front fork	• Check operation and for oil leakage		√	√	√	√	
20	* Rear shock absorber assembly	• Check operation and shock absorber for oil leakage		√	√	√	√	
21	* Rear suspension relay arm and connecting arm pivoting points	• Check operation		√	√	√	√	
		• Lubricate with lithium-soap-based grease			√		√	
22	* Carburetors	• Check starter (choke) operation • Adjust engine idling speed and synchronization	√	√	√	√	√	√

PERIODIC MAINTENANCE AND MINOR REPAIR


NO	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (× 1,000 km)					ANNUAL CHECK
			1	10	20	30	40	
23	Engine oil	• Change	√	√	√	√	√	√
24	Engine oil filter cartridge	• Replace	√		√		√	
25	* Cooling system	• Check coolant level and vehicle for coolant leakage		√	√	√	√	√
		• Change	Every 3 years					
26	* Front and rear brake switches	• Check operation	√	√	√	√	√	√
27	Moving parts and cables	• Lubricate		√	√	√	√	√
28	* Lights, signals and switches	• Check operation • Adjust headlight beam	√	√	√	√	√	√

EAU03892

NOTE:

- The air filter needs more frequent service if you are riding in unusually wet or dusty areas
- Hydraulic brake and clutch systems
 - After disassembling the brake or clutch master cylinders, caliper cylinders or clutch release cylinder, always change the fluid. Regularly check the brake and clutch fluid levels and fill the reservoirs as required
 - Replace the oil seals on the inner parts of the brake or clutch master cylinders, caliper cylinders and clutch release cylinder every two years.
 - Replace the brake and clutch hoses every four years or if cracked or damaged

PERIODIC MAINTENANCE AND MINOR REPAIR

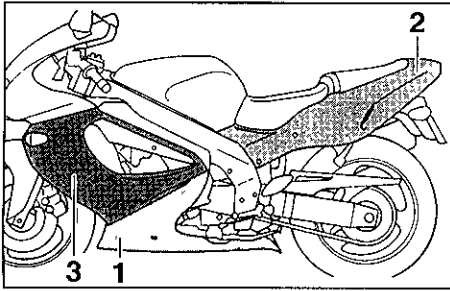


- 1 Cowling A
- 2 Cowling B
- 3 Cowling C

EAU01065

6 Removing and installing cowlings

The cowlings shown above need to be removed to perform some of the maintenance jobs described in this chapter. Refer to this section each time a cowling needs to be removed and installed

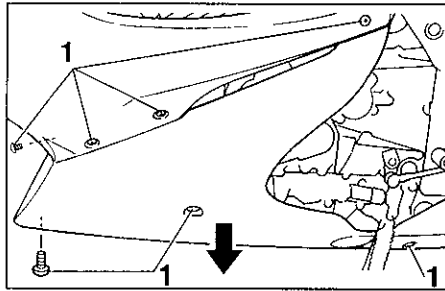

- 1 Screw (x 13)

EAU00484


Cowling A

To remove the cowling

Remove the cowling screws, and then pull the cowling off as shown

To install the cowling

Place the cowling in the original position, and then install the screws.

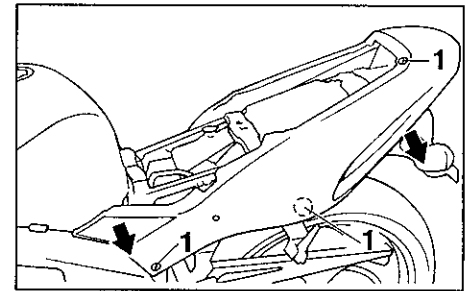

- 1 Screw (x 3)



EAU03946

Cowling B

To remove the cowling


- 1 Remove the rider and passenger seats (See page 3-10 for rider and passenger seat removal and installation procedures.)
2. Remove the cowling screws, and then pull the cowling off as shown

PERIODIC MAINTENANCE AND MINOR REPAIR

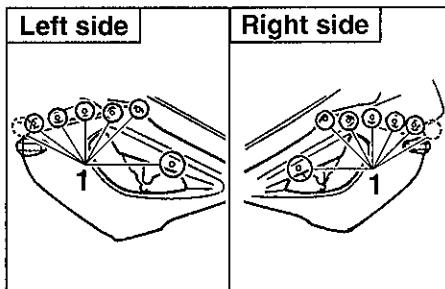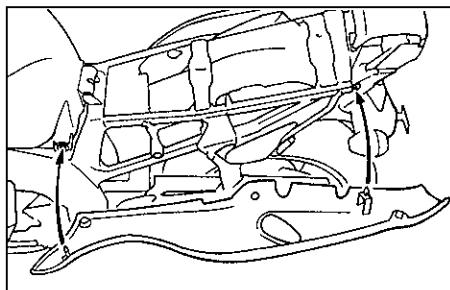

1 Bolt (× 14)

EAU00483

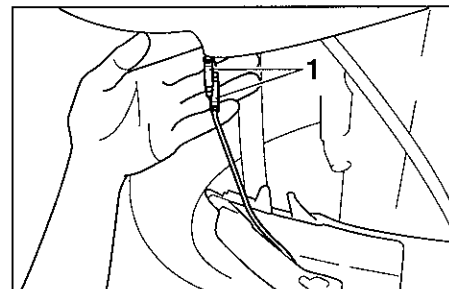

1 Turn signal light lead connector (× 2)

To install the cowling

1. Place the cowling in the original position, and then install the screws
2. Install the seats.

Cowling C


To remove the cowling

- 1 Remove the cowling bolts
- 2 Disconnect the turn signal light lead connectors, and then take the cowling off.

To install the cowling

1. Connect the turn signal light lead connectors.
2. Place the cowling in the original position.
3. Install the cowling bolts

PERIODIC MAINTENANCE AND MINOR REPAIR

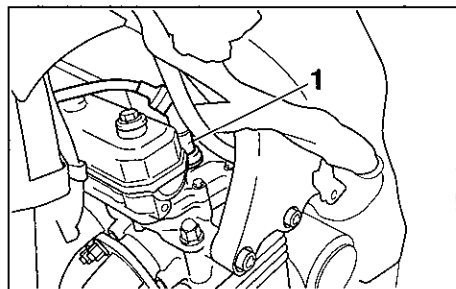

1 Spark plug cap (x 4)


EAU03837

Checking the spark plugs

The spark plugs are important engine components, which are easy to check. Since heat and deposits will cause any spark plug to slowly erode, the spark plugs should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plugs can reveal the condition of the engine.

To remove a spark plug

- 1 Remove cowlings A and C (See pages 6-5 and 6-6 for cowlings removal and installation procedures.)
- 2 Remove the spark plug cap

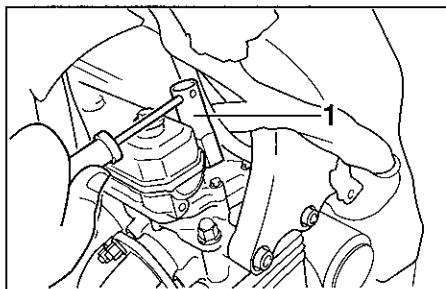

1 Spark plug wrench

- 3 Remove the spark plug as shown with the spark plug wrench included in the owner's tool kit

To check the spark plugs


- 1 Check that the porcelain insulator around the center electrode on each spark plug is a medium-to-light tan (the ideal color when the motorcycle is ridden normally)
- 2 Check that all spark plugs installed in the engine have the same color

NOTE: _____
If any spark plug shows a distinctly different color, the engine could be defective. Do not attempt to diagnose such problems yourself. Instead, have a Yamaha dealer check the motorcycle.

- 3 Check each spark plug for electrode erosion and excessive carbon or other deposits, and replace it if necessary

Specified spark plug.
DR8EA (NGK) or
X24ESR-U (DENSO)

PERIODIC MAINTENANCE AND MINOR REPAIR

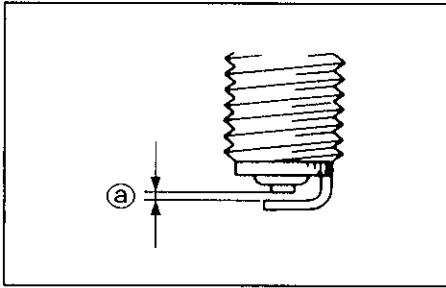

a Spark plug gap

To install a spark plug

1. Measure the spark plug gap with a wire thickness gauge and, if necessary, adjust the gap to specification.

Spark plug gap
0.6–0.7 mm

2. Clean the surface of the spark plug gasket and its mating surface, and then wipe off any grime from the spark plug threads.
3. Install the spark plug with the spark plug wrench, and then tighten it to the specified torque.

Tightening torque:
Spark plug:
18 Nm (1.8 m·kgf)

NOTE: _____
If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4–1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.

4. Install the spark plug cap
5. Install the cowlings

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU03612

Engine oil and oil filter cartridge

The engine oil level should be checked before each ride. In addition, the oil must be changed and the oil filter cartridge replaced at the intervals specified in the periodic maintenance and lubrication chart.


To check the engine oil level

- 1 Place the motorcycle on a level surface and hold it in an upright position

NOTE:

Make sure that the motorcycle is positioned straight up when checking the oil level. A slight tilt to the side can result in a false reading.

- 2 Start the engine, warm it up for several minutes, and then turn it off

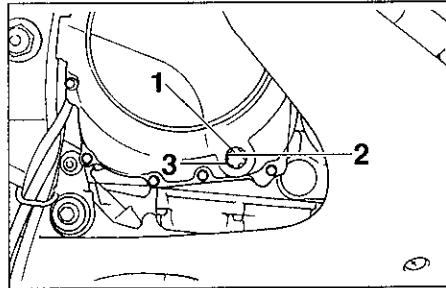


- 1 Engine oil level check window
- 2 Maximum level mark
- 3 Minimum level mark

- 3 Wait a few minutes until the oil settles, and then check the oil level through the check window located at the bottom-right side of the crankcase

NOTE:

The engine oil should be between the minimum and maximum level marks

- 4 If the engine oil is below the minimum level mark, add sufficient oil of the recommended type to raise it to the correct level

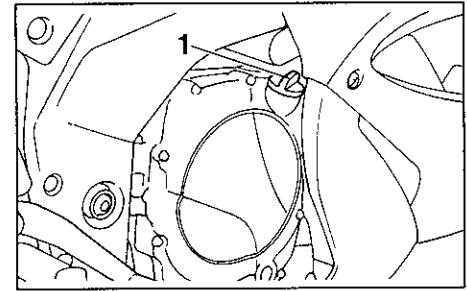


- 1 Engine oil filler cap

To change the engine oil (with or without oil filter cartridge replacement)

- 1 Remove cowling A (See page 6-5 for cowling removal and installation procedures)
- 2 Start the engine, warm it up for several minutes, and then turn it off
- 3 Place an oil pan under the engine to collect the used oil


PERIODIC MAINTENANCE AND MINOR REPAIR

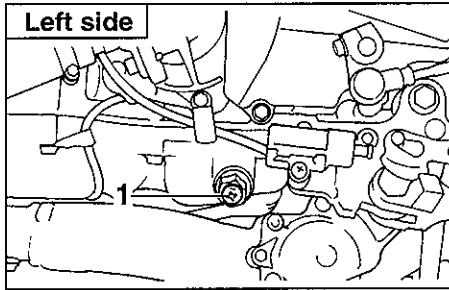

1 Engine oil drain bolt

4. Remove the engine oil filler cap and drain bolt to drain the oil from the crankcase.

NOTE: _____
Skip steps 5–7 if the oil filter cartridge is not being replaced.

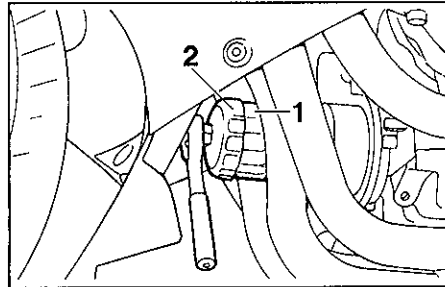


1 Oil filter cartridge

2 Oil filter wrench

5. Remove the oil filter cartridge with an oil filter wrench

NOTE: _____
An oil filter wrench is available at a Yamaha dealer.

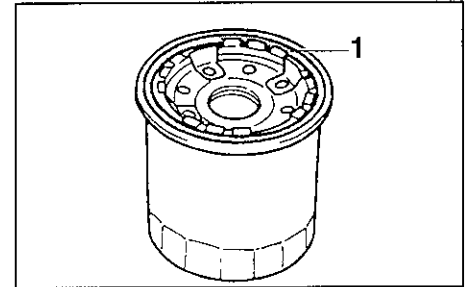


1 O-ring

6. Apply a thin coat of engine oil to the O-ring of the new oil filter cartridge

NOTE: _____
Make sure that the O-ring is properly seated

PERIODIC MAINTENANCE AND MINOR REPAIR

EC000072

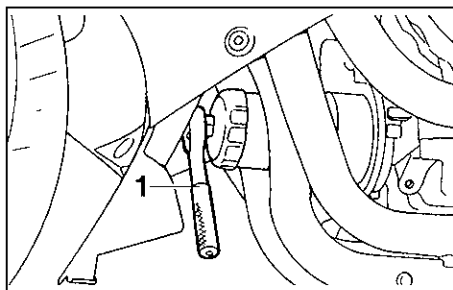

1 Torque wrench

7. Install the new oil filter cartridge, and then tighten it to the specified torque with a torque wrench.

6

Tightening torque
Oil filter cartridge.
17 Nm (1.7 m.kgf)

8. Install the engine oil drain bolt, and then tighten it to the specified torque

Tightening torque
Engine oil drain bolt
43 Nm (4.3 m.kgf)

9. Add the specified amount of the recommended engine oil, and then install and tighten the oil filler cap

Recommended engine oil:
See page 8-1
Oil quantity
Without oil filter cartridge
replacement
3 0 L
With oil filter cartridge
replacement
3 2 L
Total amount (dry engine)
3 5 L

CAUTION

- In order to prevent clutch slippage (since the engine oil also lubricates the clutch), do not mix any chemical additives with the oil or use oils of a higher grade than “CD”. In addition, do not use oils labeled “ENERGY CONSERVING II” or higher.
- Make sure that no foreign material enters the crankcase.

10. Start the engine, and then let it idle for several minutes while checking it for oil leakage. If oil is leaking, immediately turn the engine off and check for the cause

NOTE:

After the engine is started, the engine oil level warning light should go off if the oil level is sufficient

PERIODIC MAINTENANCE AND MINOR REPAIR

EC000067

CAUTION:

If the oil level warning light flickers or remains on, immediately turn the engine off and have a Yamaha dealer check the vehicle.

- 11 Turn the engine off, and then check the oil level and correct it if necessary.
12. Install the cowl

EAU03978


Checking the coolant level

The coolant level should be checked as follows before each ride. In addition, the coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart

- 1 Place the motorcycle on a level surface and hold it in an upright position.

NOTE:

- The coolant level must be checked on a cold engine since the level varies with engine temperature
- Make sure that the motorcycle is positioned straight up when checking the coolant level. A slight tilt to the side can result in a false reading.

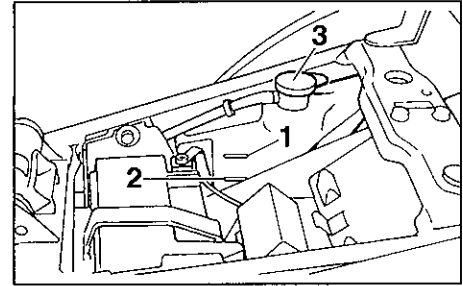

- 1 Maximum level mark
- 2 Minimum level mark
- 3 Coolant reservoir cap

2. Check the coolant level in the coolant reservoir

NOTE:

The coolant should be between the minimum and maximum level marks

3. If the coolant is at or below the minimum level mark, remove the rider seat (See page 3-10 for seat removal and installation procedures), and then open the coolant reservoir cap

PERIODIC MAINTENANCE AND MINOR REPAIR

- 4 Add coolant or distilled water to raise the coolant to the specified level, close the coolant reservoir cap, and then install the rider seat

Coolant reservoir capacity
0.23 L

EC000080

CAUTION:

- If coolant is not available, use distilled water or soft tap water instead. Do not use hard water or salt water since it is harmful to the engine.
- If water has been used instead of coolant, replace it with coolant as soon as possible, otherwise the engine may not be sufficiently cooled and the cooling system will not be protected against frost and corrosion.

- If water has been added to the coolant, have a Yamaha dealer check the antifreeze content of the coolant as soon as possible, otherwise the effectiveness of the coolant will be reduced.


EW000067

WARNING

Never attempt to remove the radiator cap when the engine is hot.

NOTE:

- The radiator fan is automatically switched on or off according to the coolant temperature in the radiator.
- If the engine overheats, see page 6-41 for further instructions.

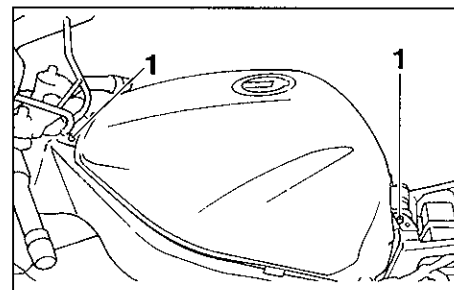

1 Bolt (x 2)

EAU03948*

Cleaning the air filter element

The air filter element should be cleaned at the intervals specified in the periodic maintenance and lubrication chart. Clean the air filter element more frequently if you are riding in unusually wet or dusty areas.

- 1 Remove the rider seat (See page 3-10 for rider seat removal and installation procedures)
- 2 Remove cowling B from both sides. (See page 6-5 for cowling removal and installation procedures)
- 3 Remove the fuel tank bolts


PERIODIC MAINTENANCE AND MINOR REPAIR

- 4 Lift the fuel tank to position it away from the air filter case (Do not disconnect the fuel hoses!)

EW000071


⚠ WARNING

- Make sure that the fuel tank is well supported.
- Do not tilt or pull the fuel tank too much, otherwise the fuel hoses may come loose, which could cause fuel leakage.

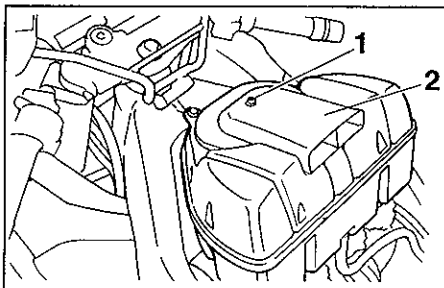


- 1 Screw
- 2 Air filter case cover

5. Remove the air filter case cover by removing the screw

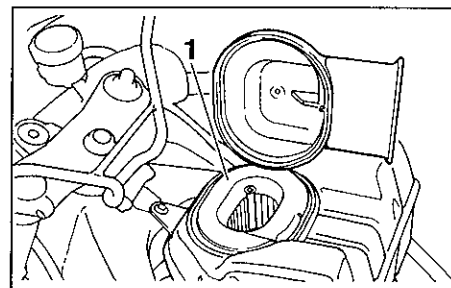

- 1 Air filter element
- 6 Pull the air filter element out

PERIODIC MAINTENANCE AND MINOR REPAIR

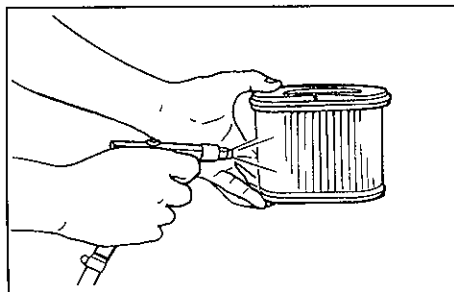

6

- 7 Lightly tap the air filter element to remove most of the dust and dirt, and then blow the remaining dirt out with compressed air as shown. If the air filter element is damaged, replace it.
- 8 Insert the air filter element into the air filter case.

EC000082*

CAUTION

- Make sure that the air filter element is properly seated in the air filter case.
 - The engine should never be operated without the air filter element installed, otherwise the pistons and/or cylinders may become excessively worn.
-
- 9 Install the air filter case cover by installing the screw.
 - 10 Install the fuel tank by installing the bolts

EW000072

WARNING

- Before installing the fuel tank, make sure that the fuel hoses are not damaged. If any fuel hose is damaged, do not start the engine but have a Yamaha dealer replace the hose, otherwise fuel may leak.
 - Make sure that the fuel hoses are properly connected and routed, and not pinched.
-
- 11 Install the cowlings, and then install the rider seat

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU00630

Adjusting the carburetors

The carburetors are important parts of the engine and require very sophisticated adjustment. Therefore, most carburetor adjustments should be left to a Yamaha dealer, who has the necessary professional knowledge and experience. The adjustment described in the following section, however, may be serviced by the owner as part of routine maintenance.

EC000095

CAUTION:

The carburetors have been set and extensively tested at the Yamaha factory. Changing these settings without sufficient technical knowledge may result in poor performance of or damage to the engine.


EAU00632

Adjusting the engine idling speed

The engine idling speed must be checked and, if necessary, adjusted as follows at the intervals specified in the periodic maintenance and lubrication chart

1. Start the engine and warm it up for several minutes at 1,000–2,000 r/min while occasionally revving it to 4,000–5,000 r/min

NOTE: _____
The engine is warm when it quickly responds to the throttle

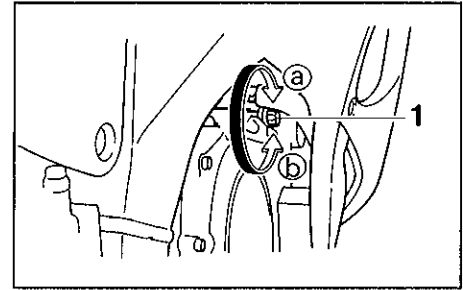


1 Throttle stop screw

2. Check the engine idling speed and, if necessary, adjust it to specification by turning the throttle stop screw. To increase the engine idling speed, turn the screw in direction (a). To decrease the engine idling speed, turn the screw in direction (b).

Engine idling speed
1,050–1,150 r/min

NOTE: _____
If the specified idling speed cannot be obtained as described above, have a Yamaha dealer make the adjustment

PERIODIC MAINTENANCE AND MINOR REPAIR

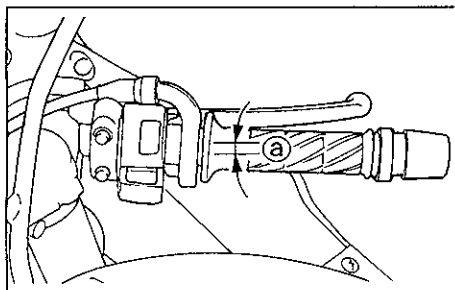

a Throttle cable free play

Adjusting the throttle cable free play

EAU00635

The throttle cable free play should measure 3–7 mm at the throttle grip. Periodically check the throttle cable free play and, if necessary, have a Yamaha dealer adjust it.

6

Adjusting the valve clearance

EAU00637

The valve clearance changes with use, resulting in improper air-fuel mixture and/or engine noise. To prevent this from occurring, the valve clearance must be adjusted by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.

Tires

EAU03296

To maximize the performance, durability, and safe operation of your motorcycle, note the following points regarding the specified tires.

Tire air pressure

The tire air pressure should be checked and, if necessary, adjusted before each ride.

EW00082

! WARNING

- The tire air pressure must be checked and adjusted on cold tires (i.e., when the temperature of the tires equals the ambient temperature).
- The tire air pressure must be adjusted in accordance with the riding speed and with the total weight of rider, passenger, cargo, and accessories approved for this model.

PERIODIC MAINTENANCE AND MINOR REPAIR


EW000083

Tire air pressure (measured on cold tires)		
Load*	Front	Rear
Up to 90 kg	250 kPa (2.50 kgf/cm ² , 2.50 bar)	250 kPa (2.50 kgf/cm ² , 2.50 bar)
90 kg—maximum	290 kPa (2.90 kgf/cm ² , 2.90 bar)	290 kPa (2.90 kgf/cm ² , 2.90 bar)
High-speed riding	290 kPa (2.90 kgf/cm ² , 2.90 bar)	290 kPa (2.90 kgf/cm ² , 2.90 bar)
Maximum load*	196 kg	

* Total weight of rider, passenger, cargo and accessories

WARNING

Proper loading of your motorcycle is important for several characteristics of your motorcycle, such as handling, braking, performance and safety. Do not carry loosely packed items that can shift. Securely pack your heaviest items close to the center of the motorcycle, and distribute the weight evenly from side to side. Properly adjust the suspension for your load, and check the condition and pressure of your tires. **NEVER OVERLOAD YOUR MOTORCYCLE.** Make sure that the total weight of the cargo, rider, passenger, and accessories (cowling, saddlebags, etc. if approved for this model) does not exceed the maximum load of the motorcycle. Operation of an overloaded motorcycle could cause tire damage, an accident, or even injury.

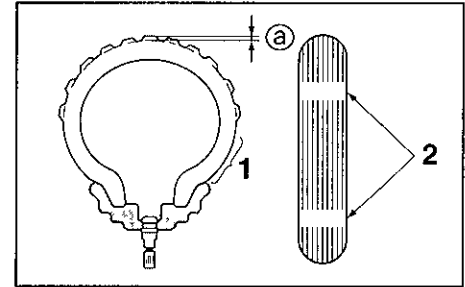

- 1 Tire sidewall
- 2 Tire wear indicator
- a Tire tread depth

Tire inspection

Always check the tires before operating the motorcycle. If a tire tread shows crosswise lines (minimum tread depth), if the tire has a nail or glass fragments in it, or if the sidewall is cracked, contact a Yamaha dealer immediately and have the tire replaced.

PERIODIC MAINTENANCE AND MINOR REPAIR

EW000079

⚠ WARNING


- Have a Yamaha dealer replace excessively worn tires. Besides being illegal, operating the motorcycle with excessively worn tires decreases riding stability and can lead to loss of control.
- The replacement of all wheel- and brake-related parts, including the tires, should be left to a Yamaha dealer, who has the necessary professional knowledge and experience.

6

Minimum tire tread depth (front and rear)	1.0 mm
--	--------

NOTE:

The tire tread depth limits may differ from country to country. Always comply with the local regulations.

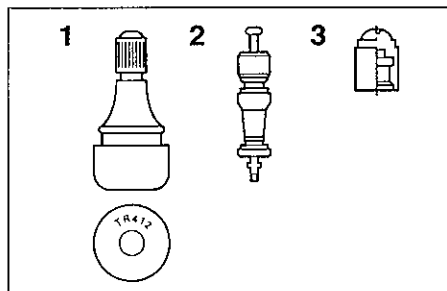

- 1 Tire air valve
- 2 Tire air valve core
- 3 Tire air valve cap with seal

Tire information

This motorcycle is equipped with cast wheels and tubeless tires with valves

EW000080

⚠ WARNING

- The front and rear tires should be of the same make and design, otherwise the handling characteristics of the motorcycle cannot be guaranteed.
- After extensive tests, only the tires listed below have been approved for this model by Yamaha Motor Co., Ltd.
- Always make sure that the valve caps are securely installed to prevent air pressure leakage.
- Use only the tire valves and valve cores listed below to avoid tire deflation during a high-speed ride.

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU00684

EAU03773

FRONT

Manufacturer	Size	Model
Bridgestone	120/70 ZR17	BT50F
Dunlop	120/70 ZR17	D204FN
Michelin	120/70 ZR17	MACADAM 90XM
Metzeler	120/70 ZR17	MEZ1

REAR

Manufacturer	Size	Model
Bridgestone	180/55 ZR17	BT50R
Dunlop	180/55 ZR17	D204M
Michelin	180/55 ZR17	MACADAM 90XM
Metzeler	180/55 ZR17	MEZ1

FRONT & REAR

Tire air valve	TR412
Valve core	#9000A (original)

WARNING

This motorcycle is fitted with super-high-speed tires. Note the following points in order to make the most efficient use of these tires.


- Use only the specified replacement tires. Other tires may run the danger of bursting at super high speeds.
- Brand-new tires can have a relatively poor grip on certain road surfaces until they have been “broken in”. Therefore, it is advisable before doing any high-speed riding to ride conservatively for approximately 100 km after installing a new tire.
- The tires must be warmed up before a high-speed run.
- Always adjust the tire air pressure according to the operating conditions.

Cast wheels

To maximize the performance, durability, and safe operation of your motorcycle, note the following points regarding the specified wheels

- The wheel rims should be checked for cracks, bends or warpage before each ride. If any damage is found, have a Yamaha dealer replace the wheel. Do not attempt even the smallest repair to the wheel. A deformed or cracked wheel must be replaced.
- The wheel should be balanced whenever either the tire or wheel has been changed or replaced. An unbalanced wheel can result in poor performance, adverse handling characteristics, and a shortened tire life
- Ride at moderate speeds after changing a tire since the tire surface must first be “broken in” for it to develop its optimal characteristics.

PERIODIC MAINTENANCE AND MINOR REPAIR

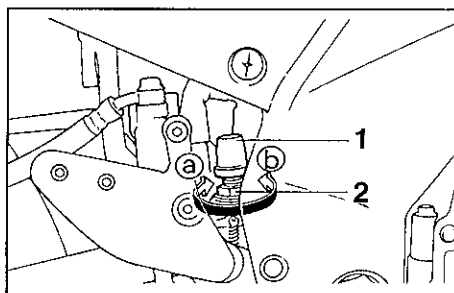


- 1 Rear brake light switch
- 2 Rear brake light switch adjusting nut

EAU00713

Adjusting the rear brake light switch

6 The rear brake light switch, which is activated by the brake pedal, is properly adjusted when the brake light comes on just before braking takes effect. If necessary, adjust the brake light switch as follows

Turn the adjusting nut while holding the rear brake light switch in place. To make the brake light come on earlier, turn the adjusting nut in direction **a**. To make the brake light come on later, turn the adjusting nut in direction **b**.

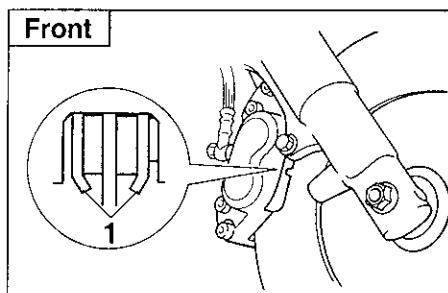


- 1 Brake pad wear indicator

EAU00715


Checking the front and rear brake pads

The front and rear brake pads must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart. Each brake pad is provided with a wear indicator, which allows you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the position of the wear indicator while applying the brake. If a brake pad has worn to the point that the wear indicator almost touches the brake disc, have a Yamaha dealer replace the brake pads as a set.

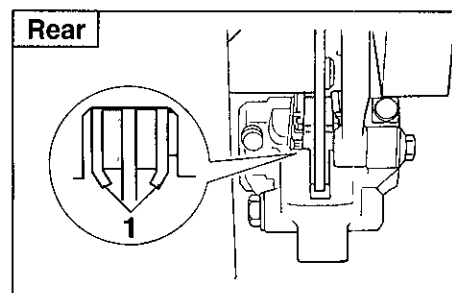


- 1 Brake pad wear indicator


PERIODIC MAINTENANCE AND MINOR REPAIR

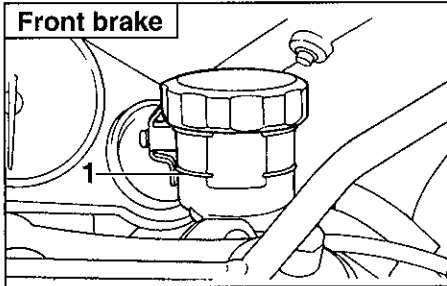

1 Minimum level mark

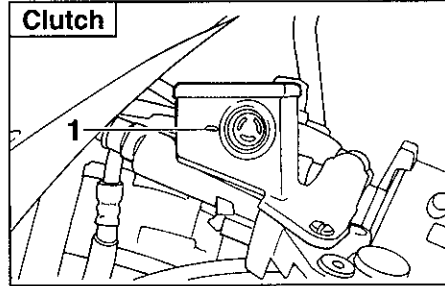

1 Minimum level mark

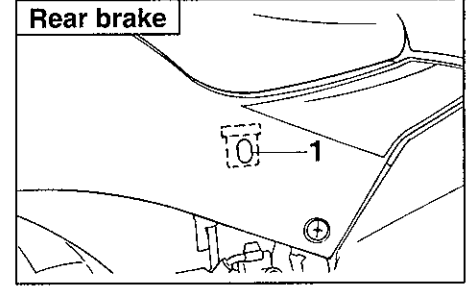

1 Minimum level mark

Checking the brake and clutch fluid levels

EAU03937

Insufficient brake or clutch fluid may allow air to enter the brake or clutch systems, possibly causing them to become ineffective.

Before riding, check that the brake and clutch fluids are above the minimum level marks and replenish if necessary. A low brake or clutch fluid level may indicate brake or clutch system leakage and/or worn brake pads. If the brake or clutch levels are low, be sure to check the brake or clutch systems for leakage and the brake pads for wear.

Observe these precautions



- When checking the brake and clutch fluid levels, make sure that the top of each reservoir is level.
- Use only the recommended quality brake fluid, otherwise the rubber seals may deteriorate, causing leakage and poor braking or clutch performance.

Recommended brake and clutch fluid. DOT 4 brake fluid

- Refill with the same type of brake fluid. Mixing fluids may result in a harmful chemical reaction and lead to poor braking or clutch performance.

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU03073

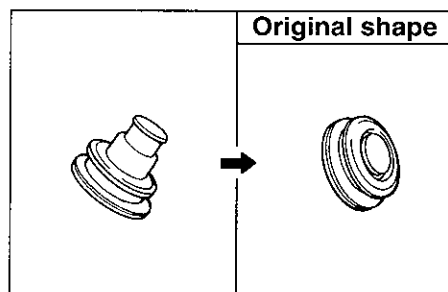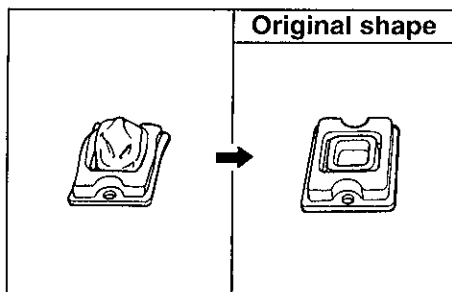

Changing the brake fluid

Have a Yamaha dealer change the brake fluid at the intervals specified in the periodic maintenance and lubrication chart. In addition, have the oil seals of the master cylinder and caliper as well as the brake hoses replaced at the intervals listed below or whenever they are damaged or leaking

- The brake fluid reservoir diaphragm will lose its shape from the negative pressure if the fluid level goes down too far. Be sure to return the diaphragm to its original shape before installing it into the brake fluid reservoir.
- Be careful that water does not enter the brake or clutch fluid reservoir when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock

- Brake fluid may deteriorate painted surfaces or plastic parts. Always clean up spilled fluid immediately.
- As the brake pads wear, it is normal for the brake fluid level to gradually go down. However, if the brake fluid level goes down suddenly, have a Yamaha dealer check the cause

- Oil seals Replace every two years.
- Brake hoses Replace every four years

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU00744

Drive chain slack

The drive chain slack should be checked before each ride and adjusted if necessary.


To check the drive chain slack

1. Place the motorcycle on a level surface and hold it in an upright position.

NOTE:

When checking and adjusting the drive chain slack, the motorcycle should be positioned straight up and there should be no weight on it.

2. Shift the transmission into the neutral position.

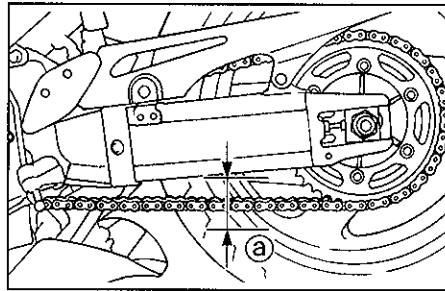


a Drive chain slack

3. Move the rear wheel by pushing the motorcycle to locate the tightest portion of the drive chain, and then measure the drive chain slack as shown

Drive chain slack.
20–35 mm

4. If the drive chain slack is incorrect, adjust it as follows

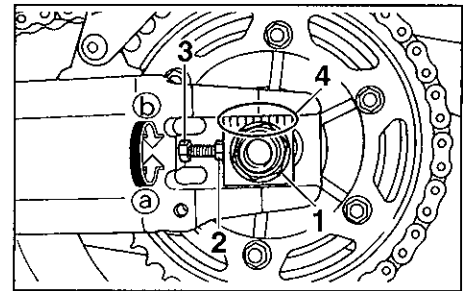

- 1 Axle nut
- 2 Drive chain slack adjusting bolt
- 3 Locknut
- 4 Alignment marks

EAU03608

To adjust the drive chain slack

1. Loosen the axle nut and the locknut on each side of the swingarm
2. To tighten the drive chain, turn the adjusting bolt on each side of the swingarm in direction (a). To loosen the drive chain, turn the adjusting bolt on each side of the swingarm in direction (b), and then push the rear wheel forward

PERIODIC MAINTENANCE AND MINOR REPAIR

NOTE:

Using the alignment marks on each side of the swingarm, make sure that both chain pullers are in the same position for proper wheel alignment.

EC000096

CAUTION:

Improper drive chain slack will overload the engine as well as other vital parts of the motorcycle and can lead to chain slippage or breakage. To prevent this from occurring, keep the drive chain slack within the specified limits.

- 3 Tighten the locknuts, and then tighten the axle nut to the specified torque.

Tightening torque Axle nut: 150 Nm (15.0 m·kgf)

Lubricating the drive chain

EAU03006

The drive chain must be cleaned and lubricated at the intervals specified in the periodic maintenance and lubrication chart, otherwise it will quickly wear out, especially when riding in dusty or wet areas. Service the drive chain as follows.

EC000097

CAUTION:

The drive chain must be lubricated after washing the motorcycle or riding in the rain.

- 1 Clean the drive chain with kerosene and a small soft brush.

ECA00053

CAUTION:

To prevent damaging the O-rings, do not clean the drive chain with steam cleaners, high-pressure washers or inappropriate solvents.

- 2 Wipe the drive chain dry.
- 3 Thoroughly lubricate the drive chain with a special O-ring chain lubricant

CAUTION:

Do not use engine oil or any other lubricants for the drive chain, as they may contain substances that could damage the O-rings.

ECA00052



PERIODIC MAINTENANCE AND MINOR REPAIR

Checking and lubricating the cables

EAU02962

The operation of all control cables and the condition of the cables should be checked before each ride, and the cables and cable ends should be lubricated if necessary. If a cable is damaged or does not move smoothly, have a Yamaha dealer check or replace it

Recommended lubricant:
Engine oil

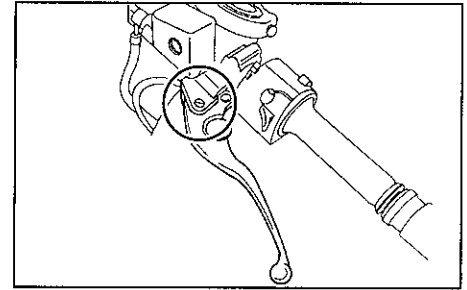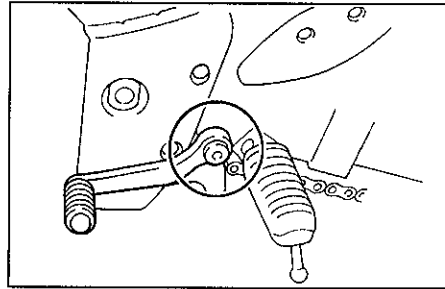

Checking and lubricating the brake and shift pedals

EAU03370

The operation of the brake and shift pedals should be checked before each ride, and the pedal pivots should be lubricated if necessary

Recommended lubricant:
Lithium-soap-based grease
(all-purpose grease)

Checking and lubricating the brake and clutch levers

EAU03164

The operation of the brake and clutch levers should be checked before each ride, and the lever pivots should be lubricated if necessary.


Recommended lubricant:
Lithium-soap-based grease
(all-purpose grease)

WARNING

EW000112

Damage to the outer sheath may interfere with proper cable operation and will cause the inner cable to rust. Replace a damaged cable as soon as possible to prevent unsafe conditions.

PERIODIC MAINTENANCE AND MINOR REPAIR

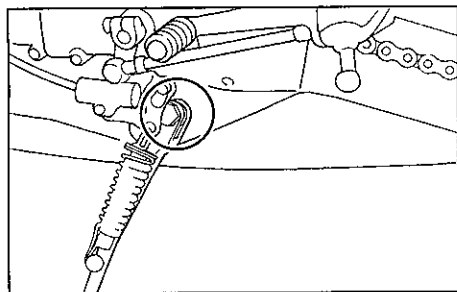

Lubricating the rear suspension

EAU03166

The pivoting points of the rear suspension must be lubricated at the intervals specified in the periodic maintenance and lubrication chart

Recommended lubricant:
Lithium-soap-based grease
(all-purpose grease)

Checking and lubricating the sidestand

EAU03165

The operation of the sidestand should be checked before each ride, and the sidestand pivot and metal-to-metal contact surfaces should be lubricated if necessary.

EW000113

⚠ WARNING

If the sidestand does not move up and down smoothly, have a Yamaha dealer check or repair it.

Recommended lubricant:
Lithium-soap-based grease
(all-purpose grease)

Checking the front fork

EAU02939

The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart

To check the condition


EW000115

⚠ WARNING

Securely support the motorcycle so that there is no danger of it falling over.

Check the inner tubes for scratches, damage and excessive oil leakage.

PERIODIC MAINTENANCE AND MINOR REPAIR

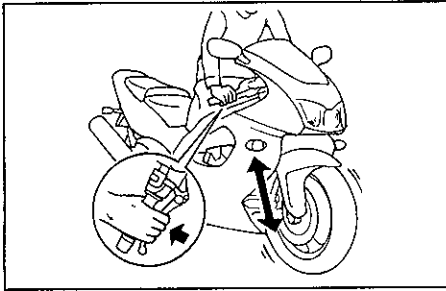

To check the operation

1. Place the motorcycle on a level surface and hold it in an upright position
2. While applying the front brake, push down hard on the handlebars several times to check if the front fork compresses and rebounds smoothly

EC000096

CAUTION

If any damage is found or the front fork does not operate smoothly, have a Yamaha dealer check or repair it.

EAU00794

Checking the steering


Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Place a stand under the engine to raise the front wheel off the ground

EW000115

WARNING

Securely support the motorcycle so that there is no danger of it falling over.

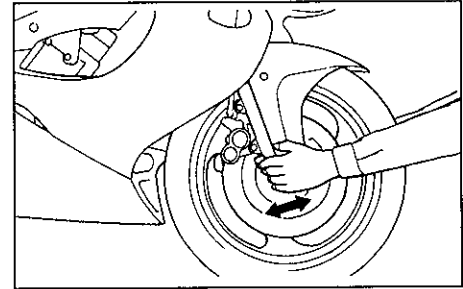

2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU01144

Checking the wheel bearings

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

EAU00800

Battery

This motorcycle is equipped with a sealed-type (MF) battery, which does not require any maintenance. There is no need to check the electrolyte or to add distilled water.

EC000101

CAUTION

Never attempt to remove the battery cell seals, as this would permanently damage the battery.

EW000116

⚠ WARNING

- Electrolyte is poisonous and dangerous since it contains sulfuric acid, which causes severe burns. Avoid any contact with skin, eyes or clothing and always shield your eyes when working near batteries. In case of contact, administer the following FIRST AID.

- **EXTERNAL:** Flush with plenty of water.
 - **INTERNAL:** Drink large quantities of water or milk and immediately call a physician.
 - **EYES:** Flush with water for 15 minutes and seek prompt medical attention.
 - Batteries produce explosive hydrogen gas. Therefore, keep sparks, flames, cigarettes, etc., away from the battery and provide sufficient ventilation when charging it in an enclosed space.
 - **KEEP THIS AND ALL BATTERIES OUT OF THE REACH OF CHILDREN.**
-

PERIODIC MAINTENANCE AND MINOR REPAIR

EC000102

To charge the battery

Have a Yamaha dealer charge the battery as soon as possible if it seems to have discharged. Keep in mind that the battery tends to discharge more quickly if the motorcycle is equipped with optional electrical accessories.


To store the battery

1. If the motorcycle will not be used for more than one month, remove the battery, fully charge it, and then place it in a cool, dry place
2. If the battery will be stored for more than two months, check it at least once a month and fully charge it if necessary
3. Fully charge the battery before installation.
4. After installation, make sure that the battery leads are properly connected to the battery terminals

CAUTION

- Always keep the battery charged. Storing a discharged battery can cause permanent battery damage.
- To charge a sealed-type (MF) battery, a special (constant-voltage) battery charger is required. Using a conventional battery charger will damage the battery. If you do not have access to a sealed-type (MF) battery charger, have a Yamaha dealer charge your battery.

PERIODIC MAINTENANCE AND MINOR REPAIR

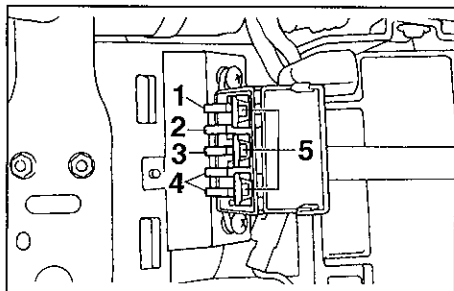

- 1 Headlight fuse
- 2 Ignition fuse
- 3 Signaling system fuse
- 4 Radiator fan fuse (x 2)
- 5 Spare fuse (x 3)

EAU03841


6

Replacing the fuses

One fuse box is located under the rider seat and another behind cowling B (See pages 3-10 and 6-5 for rider seat and cowling removal and installation procedures)

If a fuse is blown, replace it as follows.

1. Turn the key to "OFF" and turn off the electrical circuit in question
2. Remove the blown fuse, and then install a new fuse of the specified amperage.

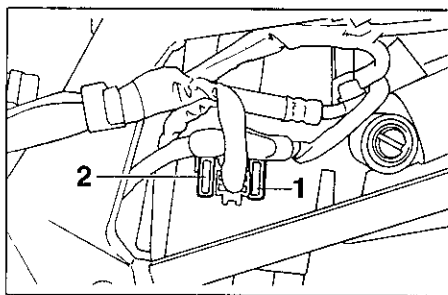

- 1 Main fuse
- 2 Spare main fuse

Specified fuses:

Main fuse	30 A
Headlight fuse	20 A
Signaling system fuse	15 A
Radiator fan fuse.	7.5 A
Ignition fuse.	15 A


EC000103

CAUTION

Do not use a fuse of a higher amperage rating than recommended to avoid causing extensive damage to the electrical system and possibly a fire.

3. Turn the key to "ON" and turn on the electrical circuit in question to check if the device operates
4. If the fuse immediately blows again, have a Yamaha dealer check the electrical system.

PERIODIC MAINTENANCE AND MINOR REPAIR

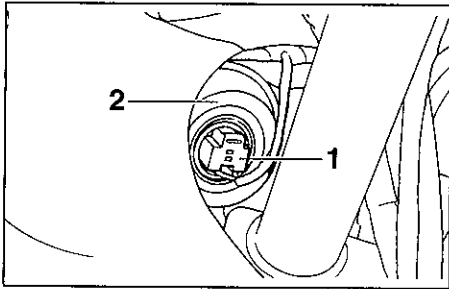


- 1 Headlight coupler
- 2 Headlight bulb cover

EAU00829

Replacing a headlight bulb

This motorcycle is equipped with quartz bulb headlights. If a headlight bulb burns out, replace it as follows:

1. Disconnect the headlight coupler, and then remove the headlight bulb cover.

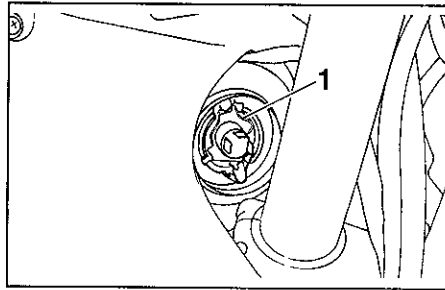


- 1 Headlight bulb holder
2. Unhook the headlight bulb holder, and then remove the defective bulb

EW000119

WARNING

Headlight bulbs get very hot. Therefore, keep flammable products away from a lit headlight bulb, and do not touch the bulb until it has cooled down.

- 3 Place a new bulb into position, and then secure it with the bulb holder

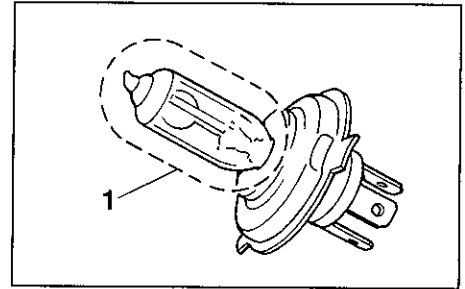

- 1 Do not touch this area


EC000105

CAUTION:


Do not touch the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the luminosity of the bulb, and the bulb life will be adversely affected. Thoroughly clean off any dirt and fingerprints on the headlight bulb using a cloth moistened with alcohol or thinner.

- 4 Install the bulb cover, and then connect the coupler
5. Have a Yamaha dealer adjust the headlight beam if necessary

PERIODIC MAINTENANCE AND MINOR REPAIR

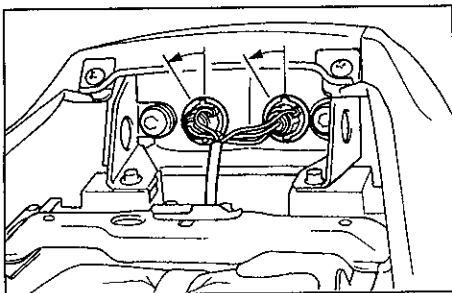

5. Install the socket (together with the bulb) by turning it clockwise
6. Install the passenger seat

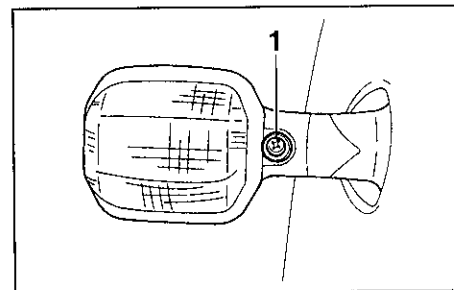

1 Screw

Replacing the tail/brake light bulb

EAU01823

1. Remove the passenger seat (See page 3-10 for passenger seat removal and installation procedures.)
2. Remove the socket (together with the bulb) by turning it counterclockwise.
3. Remove the defective bulb by turning it counterclockwise.
4. Insert a new bulb into the socket, and then turn it clockwise until it stops

Replacing a turn signal light bulb

EAU03497

1. Remove the turn signal light lens by removing the screw
2. Remove the defective bulb by pushing it in and turning it counterclockwise.
3. Insert a new bulb into the socket, push it in, and then turn it clockwise until it stops
4. Install the lens by installing the screw

ECA00065

CAUTION:

Do not overtighten the screw, otherwise the lens may break.

EAU01579

Supporting the motorcycle

Since this model is not equipped with a centerstand, follow these precautions when removing the front and rear wheel or performing other maintenance requiring the motorcycle to stand upright. Check that the motorcycle is in a stable and level position before starting any maintenance. A strong wooden box can be placed under the engine for added stability.

To service the rear wheel

Raise the rear wheel off the ground by using a motorcycle stand or, if a motorcycle stand is not available, by placing a jack either under each side of the frame in front of the rear wheel or under each side of the swingarm

To service the front wheel

- 1 Stabilize the rear of the motorcycle by using a motorcycle stand or, if an additional motorcycle stand is not available, by placing a jack under the frame in front of the rear wheel
- 2 Raise the front wheel off the ground by using a motorcycle stand

PERIODIC MAINTENANCE AND MINOR REPAIR

Front wheel


EAU03582

To remove the front wheel

EW000122


⚠ WARNING

- It is advisable to have a Yamaha dealer service the wheel.
- Securely support the motorcycle so that there is no danger of it falling over.

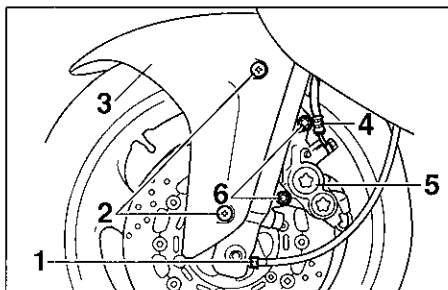

- 1 Speedometer cable
- 2 Bolt (× 4)
- 3 Front fender
- 4 Brake hose holder
- 5 Brake caliper
- 6 Bolt (× 2)

- 1 Disconnect the speedometer cable from the front wheel
- 2 Remove the front fender by removing the bolts

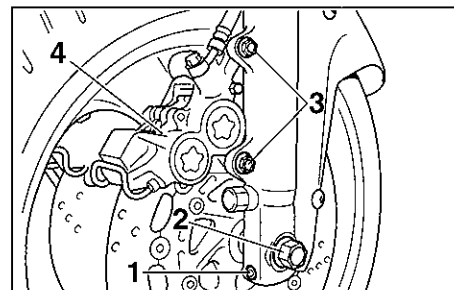

- 1 Front wheel axle pinch bolt
- 2 Wheel axle
- 3 Bolt (× 2)
- 4 Brake caliper


3. Loosen the front wheel axle pinch bolt, then the wheel axle and the brake caliper bolts
4. Lift the front wheel off the ground according to the procedure on page 6-34
5. Remove the brake hose holders on each side by removing the bolts.
6. Remove the brake calipers on each side by removing the bolts
7. Pull the wheel axle out, remove the speedometer gear unit, and then remove the wheel

PERIODIC MAINTENANCE AND MINOR REPAIR

ECA00046

CAUTION:

Do not apply the brake after the brake calipers have been removed, otherwise the brake pads will be forced shut.

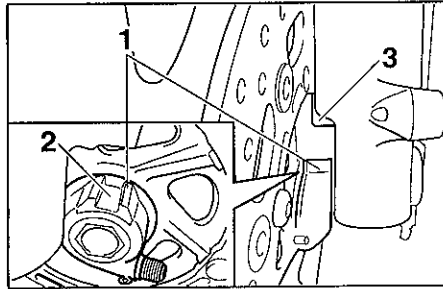

- 1 Speedometer gear unit
- 2 Slot
- 3 Retainer

EAU03979

To install the front wheel

1. Install the speedometer gear unit into the wheel hub so that the projections mesh with the slots
2. Lift the wheel up between the fork legs.

NOTE:

Make sure that the slot in the speedometer gear unit fits over the retainer on the fork leg.

- 3 Insert the wheel axle
4. Lower the front wheel so that it is on the ground.

- 5 Install the brake calipers by installing the bolts

NOTE:

Make sure that there is enough space between the brake pads before installing the brake calipers onto the brake discs

6. Install the brake hose holders by installing the bolts.
- 7 Tighten the wheel axle, then the front wheel axle pinch bolt and the brake caliper bolts to the specified torques.

Tightening torques

Wheel axle	72 Nm (7.2 m.kgf)
Front wheel axle pinch bolt	23 Nm (2.3 m.kgf)
Brake caliper bolt	40 Nm (4.0 m.kgf)

8. Connect the speedometer cable
- 9 Install the front fender by installing the bolts
- 10 Push down hard on the handlebar several times to check for proper fork operation

PERIODIC MAINTENANCE AND MINOR REPAIR

Rear wheel


EAU03537

To remove the rear wheel

EW000122


⚠ WARNING

- It is advisable to have a Yamaha dealer service the wheel.
- Securely support the motorcycle so that there is no danger of it falling over.

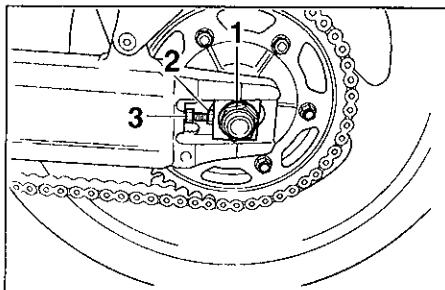

- 1 Axle nut
- 2 Drive chain slack adjusting bolt
- 3 Locknut


- 1 Loosen the axle nut and the brake caliper bolts
- 2 Lift the rear wheel off the ground according to the procedure on page 6-34

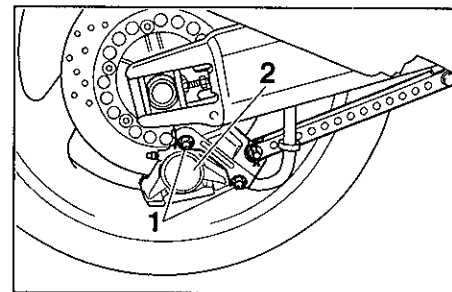

- 1 Bolt (x 2)
- 2 Brake caliper


- 3 Remove the axle nut, and then remove the brake caliper by removing the bolts

PERIODIC MAINTENANCE AND MINOR REPAIR

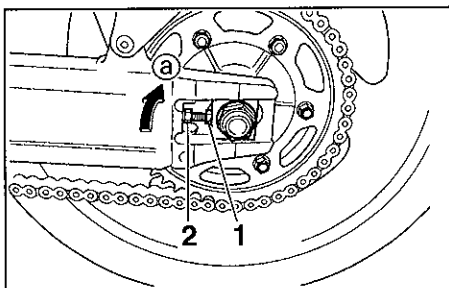

- 1 Drive chain slack adjusting bolt
- 2 Locknut

4. Loosen the locknut on each side of the swingarm.
- 5 Turn the drive chain adjusting bolts fully in direction ⓐ

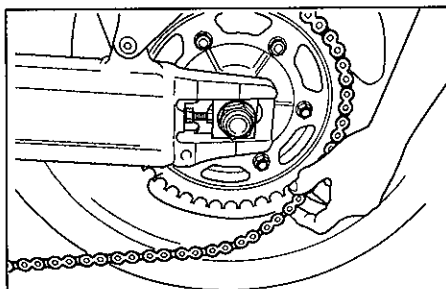

- 6 Push the wheel forward, and then remove the drive chain from the rear sprocket.


NOTE: _____
The drive chain does not need to be disassembled in order to remove and install the rear wheel

7. Pull the wheel axle out, and then remove the wheel.

ECA00048

CAUTION

Do not apply the brake after the wheel has been removed together with the brake disc, otherwise the brake pads will be forced shut.

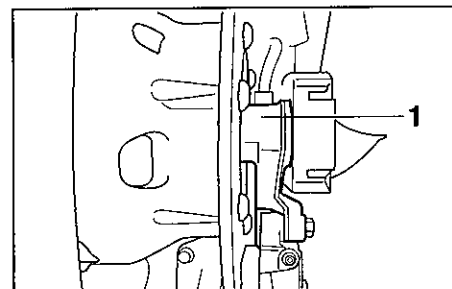

- 1 Brake caliper bracket

EAU03849

To install the rear wheel

1. Install the wheel by inserting the wheel axle from the right-hand side.
- 2 Install the drive chain onto the rear sprocket, and then adjust the drive chain slack (See page 6-24 for drive chain slack adjustment procedures.)
- 3 Install the axle nut, and then lower the rear wheel so that it is on the ground
4. Install the brake caliper by installing the bolts

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU03087

NOTE:

Make sure that there is enough space between the brake pads before installing the brake caliper onto the brake disc

- 5 Tighten the axle nut and the brake caliper bolts to the specified torques

Tightening torques:

Axle nut.

150 Nm (15.0 m.kgf)

Brake caliper bolt.

40 Nm (4.0 m.kgf)

6

Troubleshooting

Although Yamaha motorcycles receive a thorough inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems, for example, can cause poor starting and loss of power.

The following troubleshooting charts represent quick and easy procedures for checking these vital systems yourself. However, should your motorcycle require any repair, take it to a Yamaha dealer, whose skilled technicians have the necessary tools, experience, and know-how to service the motorcycle properly.

Use only genuine Yamaha replacement parts. Imitation parts may look like Yamaha parts, but they are often inferior, have a shorter service life and can lead to expensive repair bills.

PERIODIC MAINTENANCE AND MINOR REPAIR

EAU02990

Troubleshooting charts

Starting problems or poor engine performance


EW000125




WARNING

Keep away open flames and do not smoke while checking or working on the fuel system.


1. Fuel

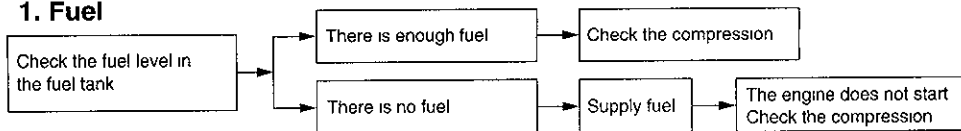


2. Compression

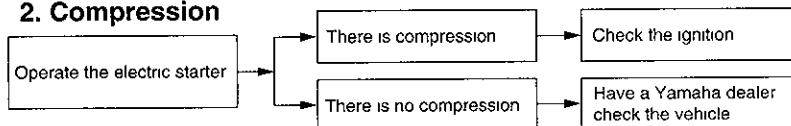

3. Ignition

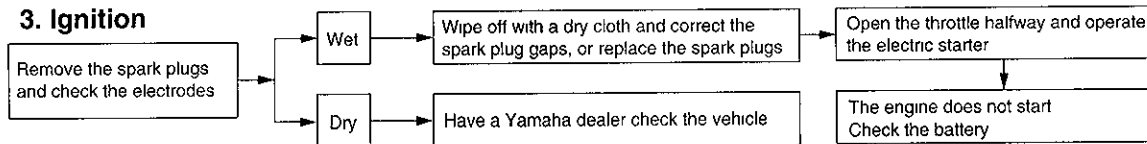

4. Battery

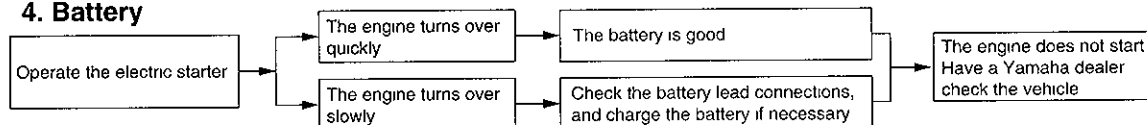

PERIODIC MAINTENANCE AND MINOR REPAIR


Engine overheating

EW000070

WARNING

- Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury. Be sure to wait until the engine has cooled.
- After removing the radiator cap retaining bolt, place a thick rag, like a towel, over the radiator cap, and then slowly rotate the cap counterclockwise to the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning it counterclockwise, and then remove the cap.

6

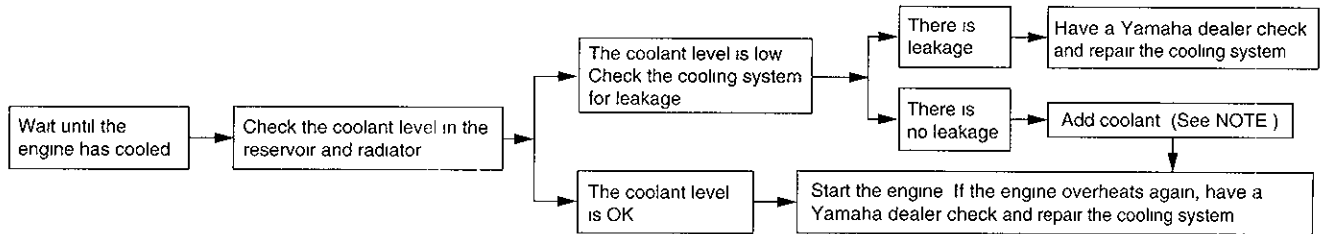

NOTE:

If coolant is not available, tap water can be temporarily used instead, provided that it is changed to the recommended coolant as soon as possible

MOTORCYCLE CARE AND STORAGE

Care	7-1
Storage	7-4

Care

While the open design of a motorcycle reveals the attractiveness of the technology, it also makes it more vulnerable. Rust and corrosion can develop even if high-quality components are used. A rusty exhaust pipe may go unnoticed on a car, however, it detracts from the overall appearance of a motorcycle. Frequent and proper care does not only comply with the terms of the warranty, but it will also keep your motorcycle looking good, extend its life and optimize its performance.

Before cleaning

- 1 Cover the muffler outlet with a plastic bag after the engine has cooled down.
- 2 Make sure that all caps and covers as well as all electrical couplers and connectors, including the spark plug caps, are tightly installed.
- 3 Remove extremely stubborn dirt, like oil burnt onto the crankcase, with a degreasing agent and a brush, but never apply such products onto seals, gaskets, sprockets, the drive chain and wheel axles. Always rinse the dirt and degreaser off with water.

Cleaning

CAUTION

- **Avoid using strong acidic wheel cleaners, especially on spoked wheels. If such products are used on hard-to-remove dirt, do not leave the cleaner on the affected area any longer than instructed. Also, thoroughly rinse the area off with water, immediately dry it, and then apply a corrosion protection spray.**
- **Improper cleaning can damage windshields, cowlings, panels and other plastic parts. Use only a soft, clean cloth or sponge with mild detergent and water to clean plastic.**

MOTORCYCLE CARE AND STORAGE

- Do not use any harsh chemical products on plastic parts. Be sure to avoid using cloths or sponges which have been in contact with strong or abrasive cleaning products, solvent or thinner, fuel (gasoline), rust removers or inhibitors, brake fluid, antifreeze or electrolyte.
- Do not use high-pressure washers or steam-jet cleaners since they cause water seepage and deterioration in the following areas: seals (of wheel and swing-arm bearings, fork and brakes), electric components (couplers, connectors, instruments, switches and lights), breather hoses and vents.

- For motorcycles equipped with a windshield: Do not use strong cleaners or hard sponges as they will cause dulling or scratching. Some cleaning compounds for plastic may leave scratches on the windshield. Test the product on a small hidden part of the windshield to make sure that it does not leave any marks. If the windshield is scratched, use a quality plastic polishing compound after washing.

After normal use

Remove dirt with warm water, a mild detergent, and a soft, clean sponge, and then rinse thoroughly with clean water. Use a toothbrush or bottlebrush for hard-to-reach areas. Stubborn dirt and insects will come off more easily if the area is covered with a wet cloth for a few minutes before cleaning.

After riding in the rain, near the sea or on salt-sprayed roads

Since sea salt or salt sprayed on roads during winter are extremely corrosive in combination with water, carry out the following steps after each ride in the rain, near the sea or on salt-sprayed roads

NOTE:

Salt sprayed on roads in the winter may remain well into spring

- 1 Clean the motorcycle with cold water and a mild detergent, after the engine has cooled down

ECA00012

CAUTION:

Do not use warm water since it increases the corrosive action of the salt.

- 2 Apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces to prevent corrosion

MOTORCYCLE CARE AND STORAGE

After cleaning

- 1 Dry the motorcycle with a chamois or an absorbing cloth.
- 2 Immediately dry the drive chain and lubricate it to prevent it from rusting.
3. Use a chrome polish to shine chrome, aluminum and stainless-steel parts, including the exhaust system (Even the thermally induced discoloring of stainless-steel exhaust systems can be removed through polishing.)
- 4 To prevent corrosion, it is recommended to apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces
5. Use spray oil as a universal cleaner to remove any remaining dirt.
6. Touch up minor paint damage caused by stones, etc
- 7 Wax all painted surfaces
- 8 Let the motorcycle dry completely before storing or covering it

EWA00001

WARNING

- **Make sure that there is no oil or wax on the brakes or tires. If necessary, clean the brake discs and brake linings with a regular brake disc cleaner or acetone, and wash the tires with warm water and a mild detergent.**
- **Before operating the motorcycle test its braking performance and cornering behavior.**

ECA00013

CAUTION

- **Apply spray oil and wax sparingly and make sure to wipe off any excess.**
- **Never apply oil or wax to any rubber and plastic parts, but treat them with a suitable care product.**
- **Avoid using abrasive polishing compounds as they will wear away the paint.**

NOTE: _____
Consult a Yamaha dealer for advice on what products to use.

MOTORCYCLE CARE AND STORAGE

Storage

Short-term

Always store your motorcycle in a cool, dry place and, if necessary, protect it against dust with a porous cover

ECA00014

CAUTION:

- Storing the motorcycle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.
- To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are stored.

Long-term

Before storing your motorcycle for several months:

- 1 Follow all the instructions in the “Care” section of this chapter
- 2 For motorcycles equipped with a fuel cock that has an “OFF” position. Turn the fuel cock lever to “OFF”
- 3 Drain the carburetor float chamber by loosening the drain bolt, this will prevent fuel deposits from building up. Pour the drained fuel into the fuel tank.
- 4 Fill up the fuel tank and add fuel stabilizer (if available) to prevent the fuel tank from rusting and the fuel from deteriorating
- 5 Perform the following steps to protect the cylinders, piston rings, etc from corrosion

- a. Remove the spark plug caps and spark plugs
- b. Pour a teaspoonful of engine oil into each spark plug bore.
- c. Install the spark plug caps onto the spark plugs, and then place the spark plugs on the cylinder head so that the electrodes are grounded (This will limit sparking during the next step)
- d. Turn the engine over several times with the starter (This will coat the cylinder walls with oil)
- e. Remove the spark plug caps from the spark plugs, and then install the spark plugs and the spark plug caps.

EWA00003

WARNING

To prevent damage or injury from sparking, make sure to ground the spark plug electrodes while turning the engine over.

MOTORCYCLE CARE AND STORAGE

- 6 Lubricate all control cables and the pivoting points of all levers and pedals as well as of the sidestand/centerstand.
7. Check and, if necessary, correct the tire air pressure, and then lift the motorcycle so that both of its wheels are off the ground. Alternatively, turn the wheels a little every month in order to prevent the tires from becoming degraded in one spot.
- 8 Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
- 9 Remove the battery and fully charge it. Store it in a cool, dry place and charge it once a month. Do not store the battery in an excessively cold or warm place [less than 0 °C or more than 30 °C]. For more information on storing the battery, see page 6-30

NOTE: _____
Make any necessary repairs before storing the motorcycle

SPECIFICATIONS


Specifications	8-1
Conversion table	8-5

Specifications

Model	YZF1000R
Dimensions	
Overall length	2,085 mm
Overall width	740 mm
Overall height	1,175 mm
Seat height	815 mm
Wheelbase	1,430 mm
Ground clearance	140 mm
Minimum turning radius	3,100 mm
Basic weight (with oil and full fuel tank)	224 kg
Engine	
Engine type	Liquid-cooled 4-stroke, DOHC
Cylinder arrangement	Forward-inclined parallel 4-cylinder
Displacement	1,003 cm ³
Bore × stroke	75.5 × 56.0 mm
Compression ratio	11.5:1
Starting system	Electric starter
Lubrication system	Wet sump

Engine oil

Type

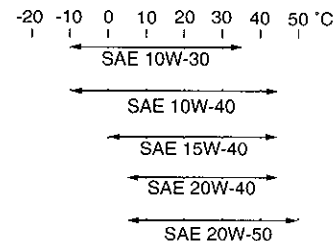

Recommended engine oil classification

API Service SE, SF, SG or higher

CAUTION

Be sure to use motor oils that do not contain anti-friction modifiers. Passenger car motor oils (often labeled "ENERGY CONSERVING II") contain anti-friction additives which will cause clutch and/or starter clutch slippage, resulting in reduced component life and poor engine performance.

Quantity

Without oil filter cartridge replacement	3.0 L
With oil filter cartridge replacement	3.2 L
Total amount (dry engine)	3.5 L

SPECIFICATIONS

Cooling system capacity (total amount)

2.7 L

Air filter

Dry type element

Fuel

Type

Regular gasoline
Unleaded fuel only (For Australia)

Fuel tank capacity

20 L

Fuel reserve amount

4.5 L

Carburetor

Manufacturer

MIKUNI

Model × quantity

BDSR38 × 4

Spark plug

Manufacturer/model

NGK / DR8EA or
DENSO / X24ESR-U

Gap

0.6–0.7 mm

Clutch type

Wet, multiple-disc

Transmission

Primary reduction system

Spur gear

Primary reduction ratio

1.659

Secondary reduction system

Chain drive

Secondary reduction ratio

2.706

Number of drive chain sprocket teeth (front/rear)

17/46

Transmission type

Constant mesh 5-speed

Operation

Left foot

Gear ratio

1st 2.571

2nd 1.778

3rd 1.381

4th 1.174

5th 1.037

Chassis

Frame type

Diamond

Caster angle

24°

Trail

97 mm

Tires

Front

Type

Tubeless tire

Size

120/70 ZR17

Manufacturer/ model

Bridgestone / BT50F

Dunlop / D204FN

Michelin / MACADAM 90XM

Metzeler / MEZ1

Rear

Type

Tubeless tire

Size

180/55 ZR17

Manufacturer/ model

Bridgestone / BT50R

SPECIFICATIONS

	Dunlop / D204M
	Michelin / MACADAM 90XM
	Metzeler / MEZ1
Maximum load*	196 kg
Tire air pressure (measured on cold tires)	
up to 90 kg*	
Front	250 kPa (2 50 kgf/cm ² , 2 50 bar)
Rear	250 kPa (2 50 kgf/cm ² , 2 50 bar)
90 kg–maximum*	
Front	290 kPa (2 90 kgf/cm ² , 2 90 bar)
Rear	290 kPa (2 90 kgf/cm ² , 2 90 bar)
High-speed riding	
Front	290 kPa (2 90 kgf/cm ² , 2 90 bar)
Rear	290 kPa (2 90 kgf/cm ² , 2 90 bar)

* Total weight of rider, passenger, cargo and accessories

Wheels

Front	
Type	Cast wheel
Size	17 × MT 3 50
Rear	
Type	Cast wheel
Size	17 × MT 5 50

Brakes

Front	
Type	Dual disc brake
Operation	Right hand
Fluid	DOT 4
Rear	
Type	Single disc brake
Operation	Right foot
Fluid	DOT 4

Suspension

Front	Telescopic fork
Rear	Swingarm (link suspension)

Spring/shock absorber

Front	Coil spring / oil damper
Rear	Coil spring / gas-oil damper

Wheel travel

Front	120 mm
Rear	120 mm

Electrical systems

Ignition system	T C I (digital)
Charging system	
Type	A C generator
Standard output	13.5 V, 28 A @ 5,000 r/min
Battery	
Model	YTX14-BS
Voltage, capacity	12 V, 12 Ah

Headlight type Quartz bulb (halogen)

Bulb voltage, wattage × quantity

Headlight	12 V, 35/35 W × 2
Tail/brake light	12 V, 5/21 W × 2
Turn signal light	12 V, 21 W × 4
Meter lighting	12 V, 1.7 W × 4
Neutral indicator light	12 V, 3.4 W × 1
High beam indicator light	12 V, 3.4 W × 1
Oil level warning light	12 V, 3.4 W × 1
Turn signal indicator light	12 V, 3.4 W × 1
Fuel level warning light	12 V, 3.4 W × 1

Fuses

Main fuse	30 A
Ignition fuse	15 A
Signaling system fuse	15 A
Headlight fuse	20 A
Radiator fan fuse	7.5 A

SPECIFICATIONS

EAU03941

Conversion table

All specification data in this manual are listed in SI and METRIC UNITS.

Use this table to convert METRIC unit data to IMPERIAL unit data

Example

METRIC		MULTIPLIER	=	IMPERIAL
** mm	×	0.03937	=	** in
2 mm	×	0.03937	=	0.08 in

Conversion table


METRIC TO IMPERIAL			
	Metric unit	Multiplier	Imperial unit
Torque	m kgf	7.233	ft lb
	m kgf	86.794	in lb
	cm kgf	0.0723	ft lb
	cm kgf	0.8679	in lb
Weight	kg	2.205	lb
	g	0.03527	oz
Speed	km/h	0.6214	mi/h
Distance	km	0.6214	mi
	m	3.281	ft
	m	1.094	yd
	cm	0.3937	in
	mm	0.03937	in
Volume, Capacity	cc (cm ³)	0.03527	oz (IMP liq)
	cc (cm ³)	0.06102	cu in
	L (liter)	0.8799	qt (IMP liq)
	L (liter)	0.2199	gal (IMP liq)
Miscellaneous	kgf/mm	55.997	lb/in
	kgf/cm ²	14.2234	psi (lb/in ²)
	Centigrade (°C)	9/5 + 32	Fahrenheit (°F)

Identification numbers ..	9-1
Key identification number .	9-1
Vehicle identification number .	9-1
Model label	9-2
Motorcycle noise regulation (for Australia) .	9-2


Identification numbers

Record the key identification number, vehicle identification number and model label information in the spaces provided below for assistance when ordering spare parts from a Yamaha dealer or for reference in case the vehicle is stolen.

EAU02944

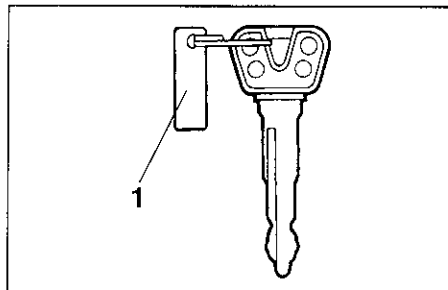

1 Key identification number

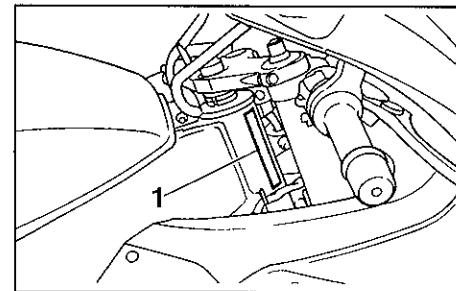

1 Vehicle identification number

1 KEY IDENTIFICATION NUMBER

EAU01041

Key identification number

The key identification number is stamped into the key tag. Record this number in the space provided and use it for reference when ordering a new key.

Vehicle identification number


EAU01043

The vehicle identification number is stamped into the steering head pipe. Record this number in the space provided.

NOTE:
The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your area.

2 VEHICLE IDENTIFICATION NUMBER

3 MODEL LABEL INFORMATION

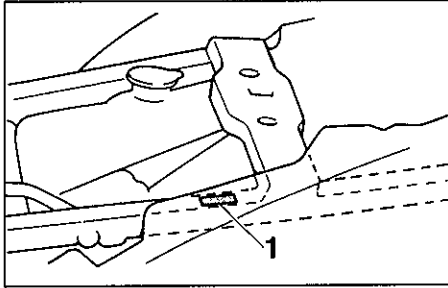

1 Model label

EAU01804

Model label

The model label is affixed to the frame under the rider seat. (See page 3-10 for rider seat removal and installation procedures.) Record the information on this label in the space provided. This information will be needed when ordering spare parts from a Yamaha dealer.

EAU01388

Motorcycle noise regulation (for Australia)

TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED:

Owners are warned that the law may prohibit:

- (a) The removal or rendering inoperative by any person other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, and
- (b) The use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

INDEX

A					
Air filter element, cleaning	6-13				
B					
Battery	6-29				
Brake and clutch fluid levels, checking	6-22				
Brake and clutch levers, checking and lubricating	6-26				
Brake and shift pedals, checking and lubricating	6-26				
Brake fluid, changing	6-23				
Brake lever	3-7				
Brake light switch (rear), adjusting	6-21				
Brake pads, checking	6-21				
Brake pedal	3-7				
C					
Cables, checking and lubricating	6-26				
Carburetors, adjusting	6-16				
Care	7-1				
Clutch lever	3-6				
Conversion table	8-5				
Coolant level, checking	6-12				
Coolant temperature gauge	3-4				
Cowlings, removing and installing	6-5				
D					
Dimmer switch	3-5				
Drive chain, lubricating	6-25				
Drive chain slack	6-24				
Adjusting	6-24				
Checking	6-24				
E					
Engine break-in	5-4				
Engine oil and oil filter cartridge	6-9				
Engine stop switch	3-5				
EXUP system	3-16				
F					
Front fork, adjusting	3-12				
Front fork, checking	6-27				
Fuel	3-9				
Fuel consumption, tips for reducing	5-3				
Fuel level warning light	3-2				
Fuel tank cap	3-8				
Fuses, replacing	6-31				
H					
Handlebar switches	3-5				
Headlight bulb, replacing	6-32				
Helmet holder	3-11				
High beam indicator light	3-3				
Horn switch	3-5				
I					
Identification numbers	9-1				
Idling speed, adjusting	6-16				
Ignition circuit cut-off system	3-17				
Indicator and warning lights	3-2				
K					
Key identification number	9-1				
L					
Labels, location	1-7				
Luggage strap holders	3-16				
M					
Main switch/steering lock	3-1				
Model label	9-2				
N					
Neutral indicator light	3-2				
Noise regulation (for Australia)	9-2				
O					
Oil level warning light	3-2				
P					
Parking	5-5				
Part locations	2-1				
Pass switch	3-5				
Periodic maintenance and lubrication chart	6-2				
Pre-operation check list	4-1				
S					
Safety information	1-1				
Seats	3-10				
Passenger seat	3-10				
Rider seat	3-10				
Self-diagnosis device	3-4				
Shifting	5-3				
Shift pedal	3-6				
Shock absorber assembly, adjusting	3-14				
Sidestand	3-17				
Sidestand, checking and lubricating	6-27				
Spark plugs, checking	6-7				
Specifications	8-1				
Speedometer unit	3-3				
Starter (choke) lever	3-9				

Starting and warming up a cold engine 5-1
Starting a warm engine 5-2
Start switch 3-5
Steering, checking 6-28
Storage 7-4
Storage compartment 3-12
Supporting the motorcycle 6-34
Suspension (rear), lubricating 6-27

T

Tachometer 3-3
Tail/brake light bulb, replacing 6-33
Throttle cable free play, adjusting 6-17
Tires 6-17
Tool kit 6-1
Troubleshooting 6-39
Troubleshooting charts 6-40
Turn signal indicator light 3-3
Turn signal light bulb, replacing 6-33
Turn signal switch 3-5

V

Valve clearance, adjusting 6-17
Vehicle identification number 9-1

W

Wheel bearings, checking 6-29
Wheel (front) 6-35
 Installing 6-36
 Removing 6-35
Wheel (rear) 6-37
 Installing 6-38
 Removing 6-37
Wheels 6-20



YAMAHA MOTOR CO., LTD

PRINTED ON RECYCLED PAPER

PRINTED IN JAPAN
2000 10-0 3×1 CR
(E)