

K
Kawasaki

KX125
KX250




Motorcycle
Service Manual

Quick Reference Guide

General Information	1
Fuel System	2
Cooling System	3
Engine Top End	4
Engine Right Side	5
Engine Removal/Installation	6
Engine Bottom End/Transmission	7
Wheels/Tires	8
Final Drive	9
Brakes	10
Suspension	11
Steering	12
Electrical System	13
Appendix	14
Supplement - 1995 Model	15
Supplement - 1996 Model	16
Supplement - 1997 Model	17
Supplement - 1998 Model	18

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.

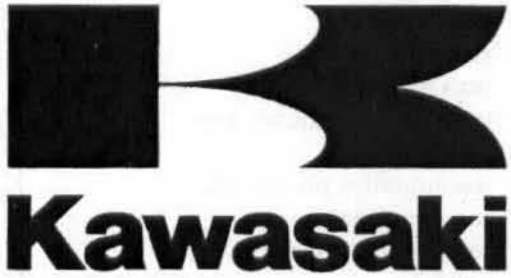

KX125
KX250

Motorcycle
Service Manual

LIST OF ABBREVIATIONS

A	ampere(s)	lb	pound(s)
ABDC	after bottom dead center	m	meter(s)
AC	alternating current	min	minute(s)
ATDC	after top dead center	N	newton(s)
BBDC	before bottom dead center	Pa	pascal(s)
BDC	bottom dead center	PS	horsepower
BTDC	before top dead center	psi	pound(s) per square inch
°C	degree(s) Celsius	r	revolution
DC	direct current	rpm	revolution(s) per minute
F	farad(s)	TDC	top dead center
°F	degree(s) Fahrenheit	TIR	total indicator reading
ft	foot, feet	V	volt(s)
g	gram(s)	W	watt(s)
h	hour(s)	Ω	ohm(s)
L	liter(s)		

Read OWNER'S MANUAL before operating.

Motorcycle
Service Manual

The information in this manual is intended to assist you in the proper operation and maintenance of your motorcycle. It is not intended to be a substitute for the manufacturer's instructions. Always use the correct tools and techniques when working on your motorcycle. If you are unsure of any procedure, consult your dealer or a qualified mechanic.

© 2003 Harley-Davidson, Inc. 1573-1005-1003

Foreword

This manual is designed primarily for use by trained mechanics in a properly equipped shop. However, it contains enough detail and basic information to make it useful to the owner who desires to perform his own basic maintenance and repair work. A basic knowledge of mechanics, the proper use of tools, and workshop procedures must be understood in order to carry out maintenance and repair satisfactorily. Whenever the owner has insufficient experience or doubts his ability to do the work, all adjustments, maintenance, and repair should be carried out only by qualified mechanics.

In order to perform the work efficiently and to avoid costly mistakes, read the text, thoroughly familiarize yourself with the procedures before starting work, and then do the work carefully in a clean area. Whenever special tools or equipment are specified, do not use makeshift tools or equipment. Precision measurements can only be made if the proper instruments are used, and the use of substitute tools may adversely affect safe operation.

We recommend that all repairs and scheduled maintenance be performed in accordance with this service manual.

To get the longest life out of your Motorcycle:

- Follow the Periodic Maintenance Chart in the Service Manual.
- Be alert for problems and non-scheduled maintenance.
- Use proper tools and genuine Kawasaki Motorcycle parts. Special tools, gauges, and testers that are necessary when servicing Kawasaki Motorcycles are introduced by the Special Tool Manual. Genuine parts provided as spare parts are listed in the Parts Catalog.
- Follow the procedures in this manual carefully. Don't take shortcuts.
- Remember to keep complete records of maintenance and repair with dates and any new parts installed.

How to Use this Manual

In preparing this manual, we divided the product into its major systems. These systems became the manual's chapters. All information for a particular system from adjustment through disassembly and inspection is located in a single chapter.

The Quick Reference Guide shows you all of the product's system and assists in locating their chapters. Each chapter in turn has its own comprehensive Table of Contents.

The Periodic Maintenance Chart is located in the General Information chapter. The chart gives a time schedule for required maintenance operations.

If you want spark plug information, for example, go to the Periodic Maintenance Chart first. The chart tells you how frequently to clean and gap the plug. Next, use the Quick Reference Guide to locate the Electrical System chapter. Then, use the Table of Contents on the first page of the chapter to find the Spark Plug section.

Whenever you see these WARNING and CAUTION symbols, heed their instructions! Always follow safe operating and maintenance practices.

WARNING

This warning symbol identifies special instructions or procedures which, if not correctly followed, could result in personal injury, or loss of life.

CAUTION

This caution symbol identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of equipment.

This manual contains four more symbols (in addition to WARNING and CAUTION) which will help you distinguish different types of information.

NOTE


○ This note symbol indicates points of particular interest for more efficient and convenient operation.

● Indicates a procedural step or work to be done.

○ Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a WARNING, CAUTION, or NOTE.

★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.

In most chapters an exploded view illustration of the system components follows the Table of Contents. In these illustrations you will find the instructions indicating which parts require specified tightening torque, oil, grease or a locking agent during assembly.

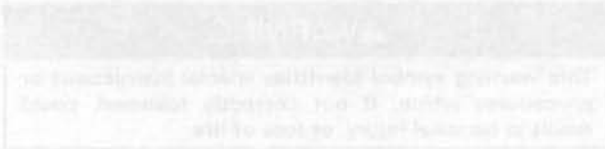

The manual contains two types of information: additional to WARNING and CAUTION, which will help you during all this type of information.

The manual is designed primarily for use by trained mechanics in a properly equipped shop. However, it contains enough theory and basic information to help a beginner to the point who wishes to perform his own basic maintenance and repair work. A basic knowledge of mechanical principles and the use of hand tools is essential for proper use of this and other related publications that are published in order to carry out instructions and other maintenance. Whenever the owner has difficulty and experience in doing his job to do the work of adjustment, maintenance, and repair should be carried out only by qualified mechanics. In order to perform the work efficiently and to avoid costly mistakes, read the instructions before beginning work with the procedure before starting work and provide the work carefully in a clean area. Whenever special tools or equipment are mentioned, do not use makeshift tools or equipment. Special measurements can only be made if the proper references are used and the use of suitable tools is necessary. Read the use of suitable tools for a more thorough understanding of the operation. The equipment that is tested and equipped maintenance be performed in accordance with the instructions. To get the longest life out of your motorcycle, follow the proper maintenance Chart in the Service Manual. Use the proper oil and use selection water. The proper tools and parts are listed in the Motor Cycle, Special Tools, and parts list. See the instructions by the Special Tool Manual. Damages are repaired at once and the best in the Service Manual. Follow the procedure in the manual. Don't get ahead. Be careful to keep engine, handle, and other parts and repair with care and any new parts should.

General Information

Table of Contents

Before Servicing	1-2
Model Identification	1-4
General Specifications	1-6
Periodic Maintenance Chart	1-10
Torque and Locking Agent	1-11
Special Tools, Sealant	1-14
Cable, Wire and Hose Routing	1-18

1-2 GENERAL INFORMATION

Before Servicing

Before starting to service a motorcycle, careful reading of the applicable section is recommended to eliminate unnecessary work. Photographs, diagrams, notes, cautions, warnings, and detailed descriptions have been included wherever necessary. Nevertheless, even a detailed account has limitations, a certain amount of basic knowledge is also required for successful work.

Especially note the following:

(1) Dirt

Before removal and disassembly, clean the motorcycle. Any dirt entering the engine or other parts will work as an abrasive and shorten the life of the motorcycle. For the same reason, before installing a new part, clean off any dust or metal filings.

(2) Tightening Sequence

Generally, when installing a part with several bolts, nuts, or screws, start them all in their holes and tighten them to a snug fit. Then tighten them evenly in a cross pattern. This is to avoid distortion of the part and/or causing gas or oil leakage. Conversely when loosening the bolts, nuts, or screws, first loosen all of them by about a quarter of turn and then remove them. Where there is a tightening sequence indication in this Service Manual, the bolts, nuts, or screws must be tightened in the order and method indicated.

(3) Torque

When torque values are given in this Service Manual, use them. Either too little or too much torque may lead to serious damage. Use a good quality, reliable torque wrench.

(4) Force

Common sense should dictate how much force is necessary in assembly and disassembly. If a part seems especially difficult to remove or install, stop and examine what may be causing the problem. Whenever tapping is necessary, tap lightly using a wooden or plastic-faced mallet. Use an impact driver for screws (particularly for the removal of screws held by a locking agent) in order to avoid damaging the screw heads.

(5) Edges

Watch for sharp edges, especially during major engine disassembly and assembly. Protect your hands with gloves or a piece of thick cloth when lifting the engine or turning it over.

(6) High-Flash Point Solvent

A high-flash point solvent is recommended to reduce fire danger. A commercial solvent commonly available in North America is Stoddard solvent (generic name). Always follow manufacturer and container directions regarding the use of any solvent.

(7) Gasket, O-Ring

Do not reuse a gasket or O-ring once it has been in service. The mating surfaces around the gasket should be free of foreign matter and perfectly smooth to avoid oil or compression leaks.

(8) Liquid Gasket, Non-Permanent Locking Agent

Follow manufacturer's directions for cleaning and preparing surfaces where these compounds will be used. Apply sparingly. Excessive amounts may block engine oil passages and cause serious damage. An example of a non-permanent locking agent commonly available in North America is Loctite Lock'n Seal (Blue).

(9) Press

A part installed using a press or driver, such as a wheel bearing, should first be coated with oil on its outer or inner circumference so that it will go into place smoothly.

(10) Ball Bearing and Needle Bearing

Do not remove any ball or needle bearings that are pressed in unless it is necessary. If they are removed, replace them with new ones.

When installing a bearing, press it in with the marked side facing out using a suitable driver until it is bottomed. Bearings should be pressed into place by pushing evenly the bearing race which is affected by friction.

(11) Oil Seal and Grease Seal

Replace any oil or grease seals that were removed with new ones, as removal generally damages seals.

When pressing in a seal which has manufacturer's marks, press it in with the marks facing out. Seals should be pressed into place using a suitable driver, which contacts evenly with the side of seal, until the face of the seal is even with the end of the hole.

(12) Seal Guide

A seal guide is required for certain oil or grease seals during installation to avoid damage to the seal lips. Before a shaft passes through a seal, apply a little high temperature grease on the lips to reduce rubber to metal friction.

(13) Circlip, Retaining Ring

Replace any circlips and retaining rings that were removed with new ones, as removal weakens and deforms them. When installing circlips and retaining rings, take care to compress or expand them only enough to install them and no more.

(14) Cotter Pin

Replace any cotter pins that were removed with new ones, as removal deforms and breaks them.


(15) Lubrication

Engine wear is generally at its maximum while the engine is warming up and before all the rubbing surfaces have an adequate lubricative film. During assembly, oil or grease (whichever is more suitable) should be applied to any rubbing surface which has lost its lubricative film. Old grease and dirty oil should be cleaned off. Deteriorated grease has lost its lubricative quality and may contain abrasive foreign particles.

Don't use just any oil or grease. Some oils and greases in particular should be used only in certain applications and may be harmful if used in an application for which they are not intended. This manual makes reference to molybdenum disulfide grease (MoS₂) in the assembly of certain engine and chassis parts. Always check manufacturer recommendations before using such special lubricants.

(16) Electrical Wires

All the electrical wires are either single-color or two-color and, with only a few exceptions, must be connected to wires of the same color. On any of the two-color wires there is a greater amount of one color and a lesser amount of a second color, so a two-color wire is identified by first the primary color and then the secondary color. For example, a yellow wire with thin red stripes is referred to as a "yellow/red" wire; it would be a "red/yellow" wire if the colors were reversed to make red the main color.

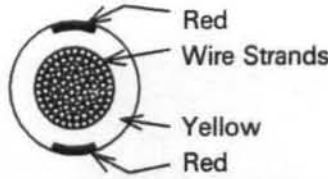Wire (cross-section)	Name of Wire Color
	Yellow/Red

(17) Replacement Parts

When there is a replacement instruction, replace these parts with new ones every time they are removed. These replacement parts will be damaged or lose their original function once removed.

(18) Inspection

When parts have been disassembled, visually inspect these parts for the following conditions or other damage. If there is any doubt as to the condition of them, replace them with new ones.

Abrasion	Crack	Hardening	Warp
Bent	Dent	Scratch	Wear
Color change	Deterioration	Seizure	

(19) Specifications

Specification terms are defined as follows:

"Standards": Show dimensions or performances which brand-new parts or systems have.

"Service Limits": Indicate the usable limits. If the measurement shows excessive wear or deteriorated performance, replace the damaged parts.

1-4 GENERAL INFORMATION

Model Identification

KX125-K1 Left Side View



KX125-K1 Right Side View



KX250-K1 Left Side View



KX250-K1 Right Side View



1-6 GENERAL INFORMATION

General Specifications

Items	KX125-K1
Dimensions:	
Overall length	2 150 mm
Overall width	815 mm
Overall height	1 215 mm
Wheelbase	1 455 mm
Road clearance	395 mm
Seat height	950 mm
Dry weight	86.5 kg
Curb weight: Front	45.5 kg
Rear	48.5 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, crankcase reed valve
Cooling system	Liquid-cooled
Bore and stroke	54.0 × 54.5 mm
Displacement	124 mL
Compression ratio	Low speed : 9.1 : 1 (E) 8.7 : 1 High speed : 8.1 : 1 (E) 7.7 : 1
Maximum horsepower	29.1 kW (39.6 PS) @11 250 r/min (rpm)
Maximum torque	25.0 N·m (2.55 kg·m, 18.4 ft·lb) @11 000 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK36
Starting system	Primary kick
Ignition system	CDI
Ignition timing	15° BTDC @10 000 r/min (rpm)
Spark plug	NGK B9EVX (A) (C) (E) NGK BR9EVX
Port timing: Inlet	Open Full open
	Close -
Scavenging	Open 65.5° BBDC
	Close 65.5° ABDC
Exhaust	Open 86.0° BBDC (low speed), 94.0° BBDC (high speed)
	Close 86.0° ABDC (low speed), 94.0° ABDC (high speed)
Lubrication system (Gasoline: oil)	Petrol mix (32:1)
Drive Train:	
Primary reduction system:	
Type	Gear
Reduction ratio	3.200 (64/20)
Clutch type	Wet, multi disc
Transmission: Type	6-speed, constant mesh, return shift
Gear ratios:	
1st	2.384 (31/13)
2nd	1.857 (26/14)
3rd	1.500 (24/16)
4th	1.272 (28/22)
5th	1.125 (27/24)
6th	1.000 (25/25)
Final drive system: Type	Chain drive
Reduction ratio	4.083 (49/12)
Overall drive ratio	13.066 @Top gear
Transmission oil: Grade	SE class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.7 L

(Continued on next page.)

Items	KX125-K1
Frame:	
Type	Tubular, semi-double cradle
Steering angle	45° to either side
Caster (rake angle)	26°
Trail	109 mm
Front tire:	Size 80/100-21 51M
	Make/Type DUNLOP K490 (E) DUNLOP D752, Tube type
Rear tire:	Size 100/90-19 57M
	Make/Type DUNLOP D737 (E) DUNLOP D752, Tube type
Front suspension:	Type Telescopic fork (upside down)
	Wheel travel 310 mm
Rear suspension:	Type Swingarm (Uni-trak)
	Wheel travel 330 mm
Brake type:	Front and Rear Single disc
Effective disc diameter:	Front 220 mm
	Rear 190 mm

Specifications are subject to change without notice, and may not apply to every country.

- (A) : Australian model
- (C) : Canadian model
- (E) : European model

1-8 GENERAL INFORMATION

Items	KX250-K1
Dimensions:	
Overall length	2 155 mm
Overall width	815 mm
Overall height	1 215 mm
Wheelbase	1 460 mm
Road clearance	385 mm
Seat height	955 mm
Dry weight	96.5 kg
Curb weight: Front	50 kg
Rear	52 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, piston reed valve
Cooling system	Liquid-cooled
Bore and stroke	66.4 × 72.0 mm
Displacement	249 mL
Compression ratio	10.3 : 1 (low speed), 8.8 : 1 (high speed)
Maximum horsepower	39.4 kW (53.6 PS) @8 000 r/min (rpm)
Maximum torque	49.0 N-m (5.0 kg-m, 36 ft-lb) @7 000 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK38
Starting system	Primary kick
Ignition system	CDI
Ignition timing	14° BTDC @6 000 r/min (rpm)
Spark plug	NGK B8EVX (A) (C) (E) NGK BR8EVX
Port timing: Inlet	Open Close
Scavenging	Open Close
Exhaust	Open Close
Lubrication system (Gasoline: oil)	Full open - 60° BBDC 60° ABDC 79.5° BBDC (low speed), 91.5° BBDC (high speed) 79.5° ABDC (low speed), 91.5° ABDC (high speed) Petrol mix (32:1)
Drive Train:	
Primary reduction system:	
Type	Gear
Reduction ratio	2.750 (55/20)
Clutch type	Wet, multi disc
Transmission:	
Type	5-speed, constant mesh, return shift
Gear ratios:	
1st	2.133 (32/15)
2nd	1.687 (27/16)
3rd	1.388 (25/18)
4th	1.136 (25/22)
5th	1.000 (24/24)
Final drive system:	
Type	Chain drive
Reduction ratio	3.500 (49/14)
Overall drive ratio	9.625 @Top gear
Transmission oil:	
Grade	SE class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.85 L

(Continued on next page.)

Items	KX250-K1
Frame:	
Type	Tubular, semi-double cradle
Steering angle	45° to either side
Caster (rake angle)	26°
Trail	109 mm
Front tire:	Size 80/100-21 51M
	Make/Type DUNLOP K490 (E) D752, Tube type
Rear tire:	Size 110/90-19 62M
	Make/Type DUNLOP D737 (E) D752, Tube type
Front suspension:	Type Telescopic fork (upside down)
	Wheel travel 310 mm
Rear suspension:	Type Swingarm (Uni-trak)
	Wheel travel 330 mm
Brake type:	Front and Rear Single disc
Effective disc diameter: Front	220 mm
	Rear 190 mm

Specifications are subject to change without notice, and may not apply to every country.

- (A) : Australian Model
- (C) : Canadian Model
- (E) : European Model

1-10 GENERAL INFORMATION

Periodic Maintenance Chart

The maintenance must be done in accordance with this chart to keep the motorcycle in good running condition.

FREQUENCY		Each	Every	Every	Every	As
		race	3 races	5 races	10 races	required
OPERATION						
ENGINE	Clutch - adjust	●				
	Clutch plates-check †		●	R		
	Throttle cable - adjust	●				
	Spark plug - clean, gap †	●	R			
	Air cleaner element - clean	●				
	Air cleaner element - replace			If damaged		
	Carburetor - inspect/adjust	●				
	Transmission oil - change		●			
	Piston and piston ring - clean/check †		●	R		
	Cylinder head, cylinder and exhaust valves - inspect		●			
	Muffler - clean/ check †	●				
	Silencer packing - change		●			
	Small end bearing - check †		●			
	Kick pedal and shift pedal - clean	●				
	Exhaust pipe O-ring - replace		●			
	Engine sprocket - check †	●				
	Coolant - check †	●				
	Radiator hoses, connections - check	●				
CHASSIS	Brake adjustment - check †	●				
	Brake wear - check †			●		
	Brake fluid level - check †		●			
	Brake fluid-change			Every 2 years		
	Brake master cylinder cup and dust seal - replace			Every 2 years		
	Brake caliper piston seal and dust seal - replace			Every 2 years		
	Brake hose - replace			Every 4 years		
	Spoke tightness and rim runout - check †	●				
	Drive chain - adjust	●				
	Drive chain - lubricate	●				
	Drive chain wear - check †			●		
	Chain slipper and guide - replace			If damaged		
	Front fork - inspect/clean	●				
	Front fork oil - change		1st time after 2 races, then every 5 races			
	Nuts, bolts, fasteners - check †	●				
	Fuel system - clean	●				
	Fuel hose-replace			Every 4 years		
	Steering play - check †	●				
	Steering stem bearing - grease			●		
	Rear sprocket - check †			●		
General lubrication - lubricate	●					
Wheel bearing - check †			●			
Swingarm and Uni-trak linkage pivots - grease			●			
Swingarm and Uni-trak linkage pivots - check †			●			
Rear shock oil - replace		1st time after 2 races, then every 5 races				

† : Replace, add, adjust, clean or torque if necessary.

R: Replace

Torque and Locking Agent

Tighten all bolts and nuts to the proper torque using an accurate torque wrench. If insufficiently tightened, a bolt or nut may become damaged, strip an internal thread, or break and then fall out. The following table lists the tightening torque for the major bolts and nuts, and the parts requiring use of a non-permanent locking agent or liquid gasket.

When checking the tightening torque of the bolts and nuts, first loosen the bolt or nut by half a turn and then tighten to specified torque.

Letter used in the "Remarks" column mean:

L : Apply a non-permanent locking agent to the threads.

S : Tighten the fasteners following the specified sequence.

Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
Fuel System:				
Rear Frame Mounting Bolts	29	3.0	22	
Carburetor Holder Mounting Bolts	8.8	0.9	78 in-lb	
Cooling System:				
Water Pump Impeller Bolt	6.9	0.7	61 in-lb	
Water Pump Cover Bolts	8.8	0.9	78 in-lb	
Coolant Drain Plug: (Water Pump Cover)	8.8	0.9	78 in-lb	
(Cylinder)	22	2.2	16.0	
Engine Top End:				
Cylinder Head Nuts	25	2.5	18.0	
Spark Plug	27	2.8	20.0	
Coolant Drain Plug (Cylinder, KX250)	22	2.2	16.0	
Cylinder Nuts: (KX125)	25	2.5	18.0	
(KX250)	34	3.5	25	
Engine Bracket Mounting Nus: (10 mm)	39	4.0	29	
(8 mm)	26	2.7	19.5	
Shaft Lever Cover Bolts	5.9	0.6	52 in-lb	
Shaft Lever Nut (KX125)	8.3	0.85	74 in-lb	
Operating Rod Left Side Plug	22	2.2	16.0	
Main Lever Mounting Allen Bolt	3.9	0.4	35 in-lb	
Main Shaft Cover Bolts	8.8	0.9	78 in-lb	
Main Shaft Nut	8.8	0.9	78 in-lb	Left-hand threads
Engine Right Side:				
External Shift Mechanism Return				
Spring Pin: (KX125)	29	3.0	22	L
(KX250)	37	3.8	27	L
Clutch Cover Bolts	8.8	0.9	78 in-lb	
Clutch Spring Bolts	8.8	0.9	78 in-lb	
Clutch Hub Nut	98	10	72	
Exhaust Valve Advancer				
Lever Mounting Allen Bolts	3.9	0.4	35 in-lb	
Right Engine Cover Bolts	8.8	0.9	78 in-lb	
Shaft Lever Nut	8.3	0.85	74 in-lb	
Water Pump Impeller Bolt	6.9	0.7	61 in-lb	
Kick Ratchet Guide Bolt	8.8	0.9	78 in-lb	
Kick Pedal Bolt (KX125)	9.8	1.0	87 in-lb	
Kick Pedal Allen Bolt (KX250)	8.8	0.9	78 in-lb	
Primary Gear Nut (KX125)	59	6.0	43	

1-12 GENERAL INFORMATION

Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
Engine Removal/Installation:				
Engine Mounting Nuts	39	4.0	29	
Engine Bracket Bolts: (10 mm)	39	4.0	29	
(8 mm)	26	2.7	19.5	
Swingarm Pivot Shaft Nut	98	10.0	72	
Engine Bottom End/Transmission:				
Crankcase Bolts	8.8	0.9	78 in-lb	
Crankshaft Cover Mounting Bolts	11	1.1	95 in-lb	
Transmission Oil Drain Plug	20	2.0	14.5	
Bearing Retaining Bolts	8.8	0.9	78 in-lb	
Shift Drum Operating Plate Bolt	22	2.2	16.0	
Flywheel Bolt (KX125)	22	2.2	16.0	
Flywheel Nut (KX250)	78	8.0	58	
Magneto Cover Bolts	8.8	0.9	78 in-lb	
Wheels/Tires:				
Front Axle	78	8.0	58	
Front Axle Clamp Nuts	9.3	0.95	82 in-lb	
Rear Axle Nut	98	10.0	72	
Rear Caliper Mounting Bolts	25	2.5	18.0	
Spoke Nipple	Not less than 1.5	Not less than 0.15	Not less than 13 in-lb	
Final Drive:				
Rear Axle Nut	98	10.0	72	
Rear Sprocket Nuts	29	3.0	22	
Brakes:				
Caliper Mounting Bolts (Front, Rear)	25	2.5	18.0	
Brake Hose Banjo Bolts	25	2.5	18.0	
Front Master Cylinder Clamp Bolts	8.8	0.9	78 in-lb	S
Rear Master Cylinder Mounting Bolt:	7.8	0.8	69 in-lb	
Brake Disc Mounting Screws (Front, Rear)	9.8	1.0	87 in-lb	
Caliper Bleed Valves (Front, Rear)	7.8	0.8	69 in-lb	
Brake Pedal Mounting Bolt	8.8	0.9	78 in-lb	
Brake Pad Bolts	18	1.8	13.0	
Suspension:				
Front Fork Clamp Bolts (Upper, Lower)	20	2.0	14.5	
Front Fork Cylinder Valve Assembly	54	5.5	40	L
Front Fork Top Plug	29	3.0	22	
Push Rod Nut	28	2.85	20.6	
Swingarm Pivot Shaft Nut	98	10.0	72	
Rear Shock Absorber Mounting Bolts	39	4.0	29	
Tie-Rod Mounting Nut (Front, Rear)	81	8.3	60	
Rocker Arm Pivot Nut	81	8.3	60	

Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
Steering:				
Steering Stem Head Nut	78	8.0	58	
Steering Stem Locknut	3.9	0.4	35 in-lb	
Handlebar Clamp Bolts	25	2.5	18.0	
Front Fork Clamp Bolts (Upper, Lower)	20	2.0	14.5	
Electrical System:				
Flywheel Bolt (KX125)	22	2.2	16.0	
Flywheel Nut (KX250)	78	8.0	58	
Magneto Cover Bolts	8.8	0.9	78 in-lb	
Spark Plug	27	2.8	20.0	

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.


General Fasteners

Threads dia. (mm)	Torque		
	N-m	kg-m	ft-lb
5	3.4-4.9	0.35-0.50	30-43 in-lb
6	5.9-7.8	0.60-0.80	52-69 in-lb
8	14-19	1.4-1.9	10.0-13.5
10	25-34	2.6-3.5	19.0-25
12	44-61	4.5-6.2	33-45
14	73-98	7.4-10.0	54-72
16	115-155	11.5-16.0	83-115
18	165-225	17-23	125-165
20	225-325	23-33	165-240


1-14 GENERAL INFORMATION

Special Tools, Sealant


Spark Plug Wrench, Hex 21: 57001-110

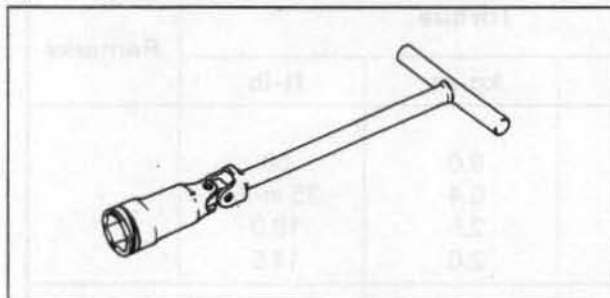


Inside Circlip Pliers: 57001-143

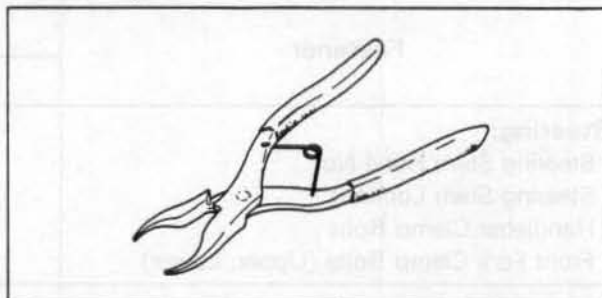


Piston Ring Pliers: 57001-115

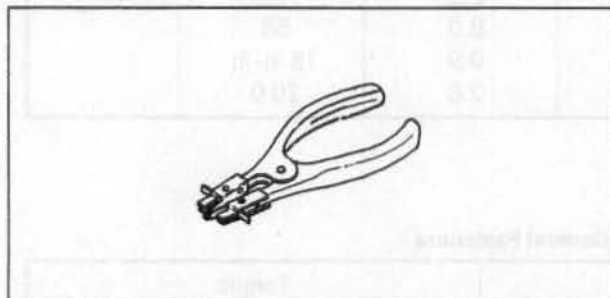


Outside Circlip Pliers: 57001-144

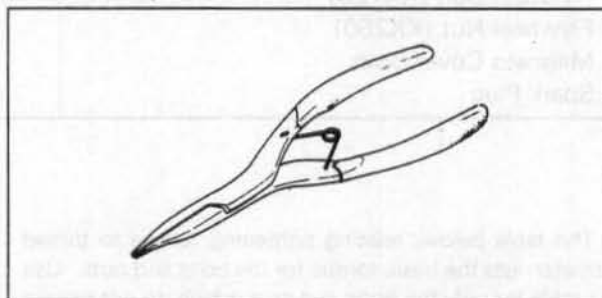


Fuel Level Gauge, M18 x 1.0: 57001-122

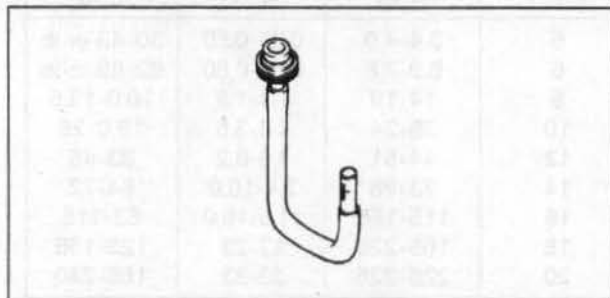

Bearing Puller: 57001-158

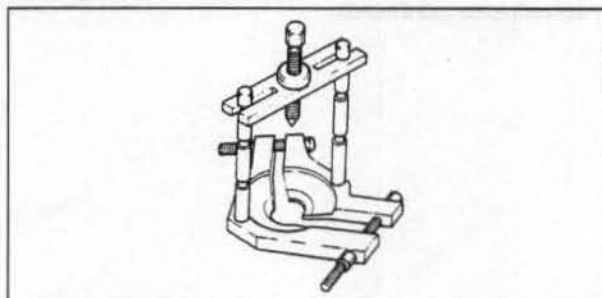


Bearing Puller Adapter: 57001-136

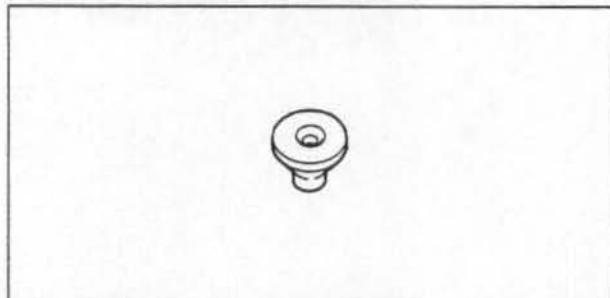


Compression Gauge: 57001-221



Steering Stem Bearing Driver: 57001-137

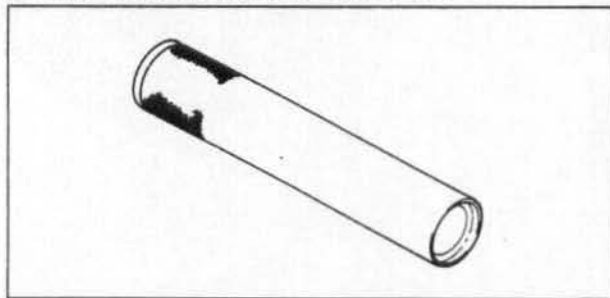


Flywheel Puller: 57001-252

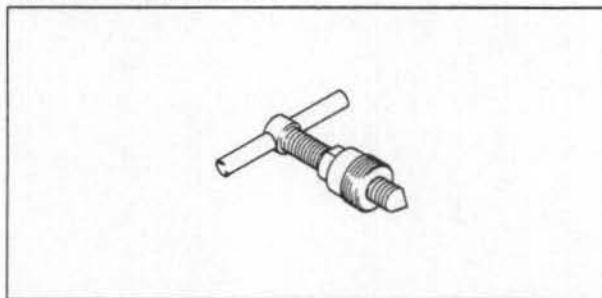


Shift Shaft Oil Seal Guide, $\phi 13$: 57001-264



Bead Breaker Assembly: 57001-1072

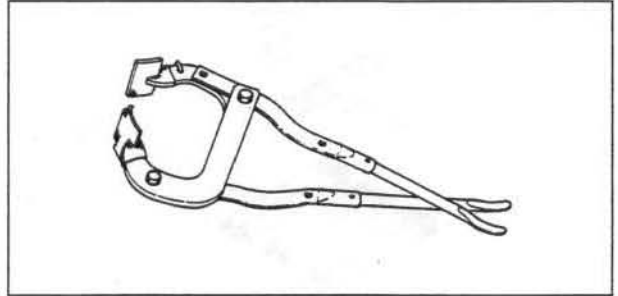


Kick Shaft Oil Seal Guide: 57001-267

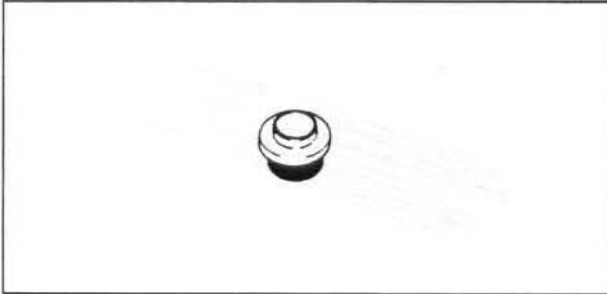


Steering Stem Bearing Driver Adapter: 57001-1074




Piston Pin Puller Assembly: 57001-910

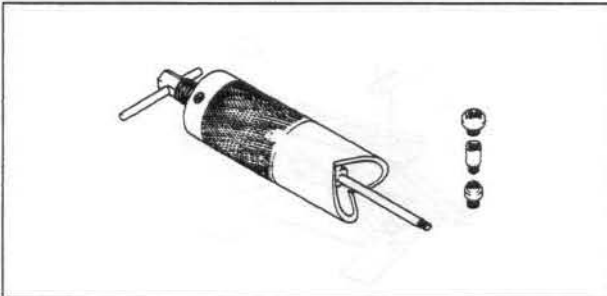


Head Pipe Outer Race Press Shaft: 57001-1075

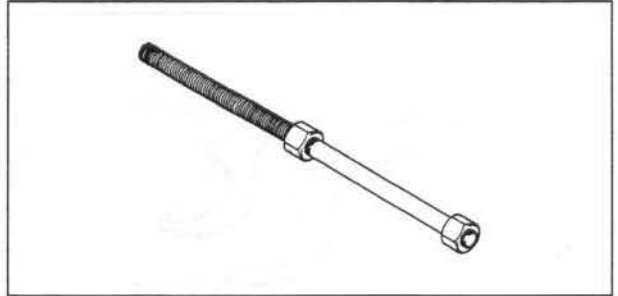


Hand Tester: 57001-983

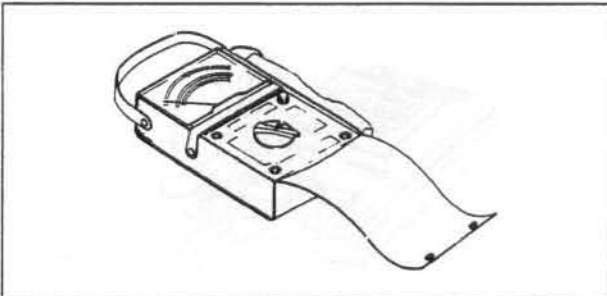


Head Pipe Outer Race Driver: 57001-1076

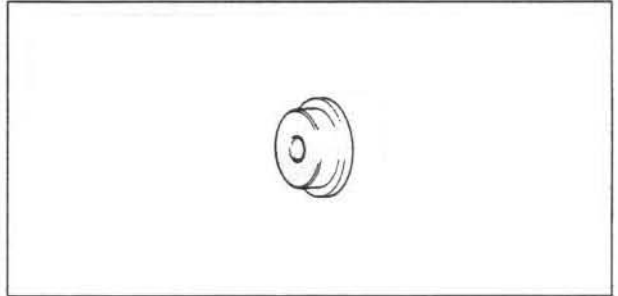

Rim Protector: 57001-1063

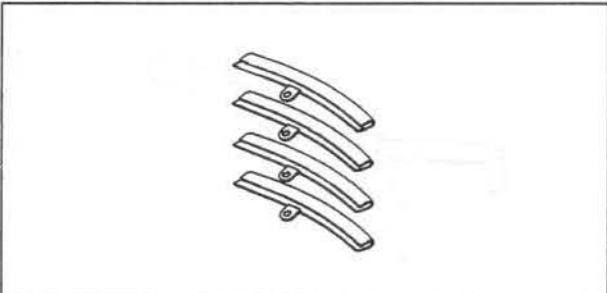


Head Pipe Outer Race Driver: 57001-1077

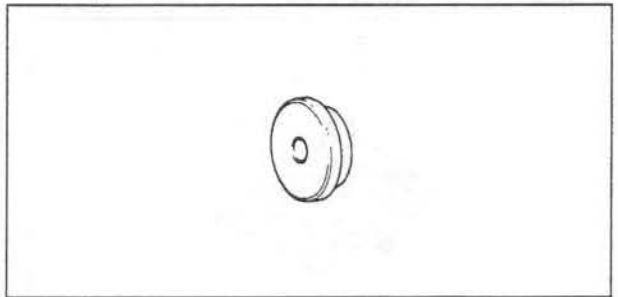


1-16 GENERAL INFORMATION


Crankcase Splitting Tool Assembly: 57001-1098

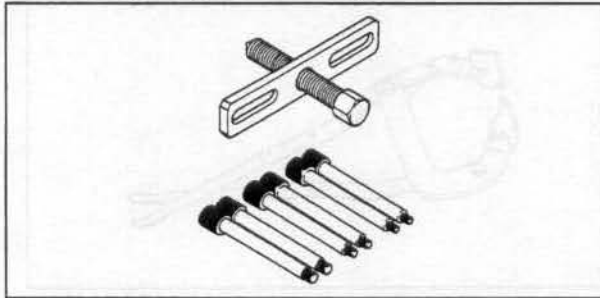


Compression Gauge Adapter, M14 x 1.25: 57001-1159

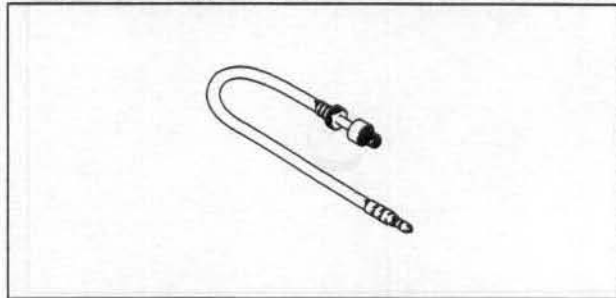


Steering Stem Nut Wrench: 57001-1100

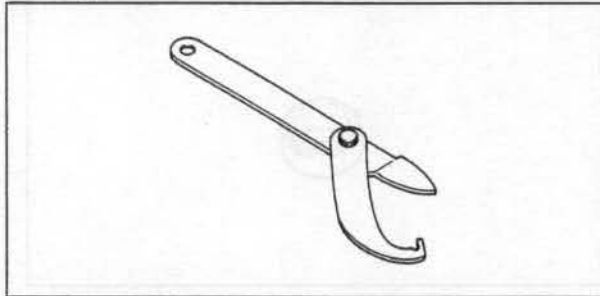


Crankshaft Jig: 57001-1174

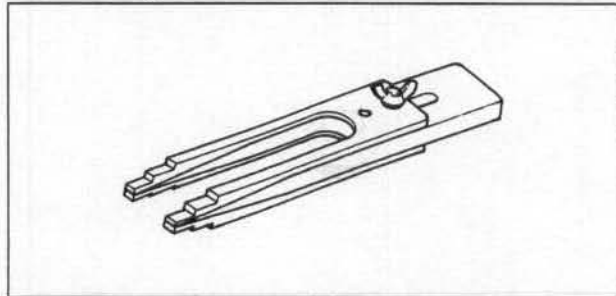


Hook Wrench: 57001-1101

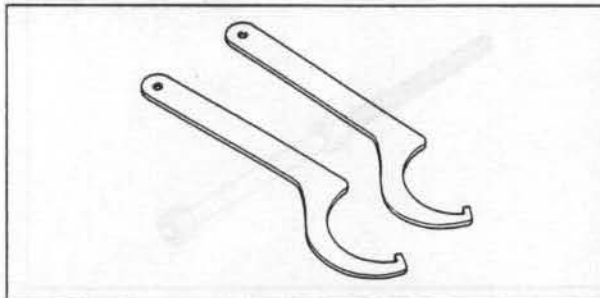


Jack: 57001-1238

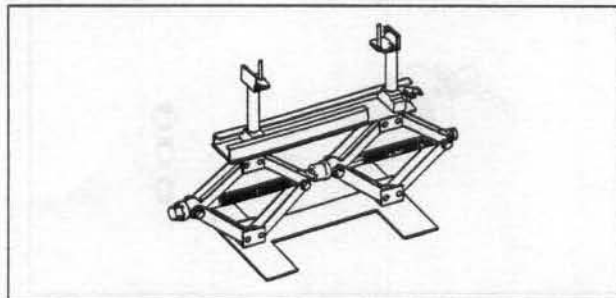


Head Pipe Outer Race Remover: 57001-1107

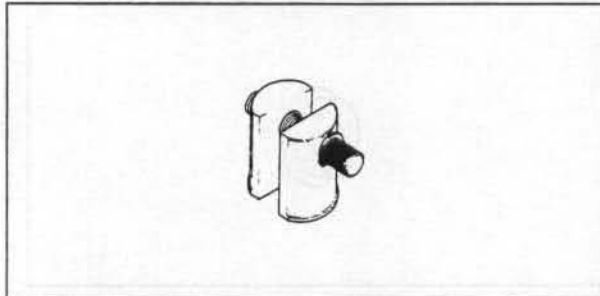


Coil Tester: 57001-1242

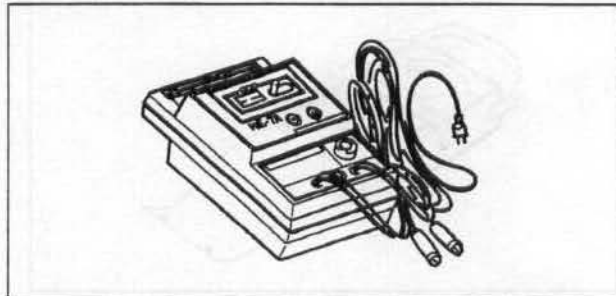


Bearing Driver Set: 57001-1129

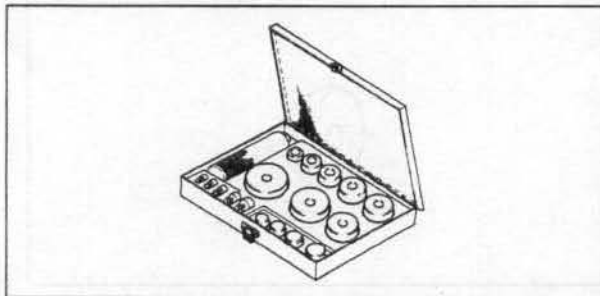


Clutch Holder: 57001-1243

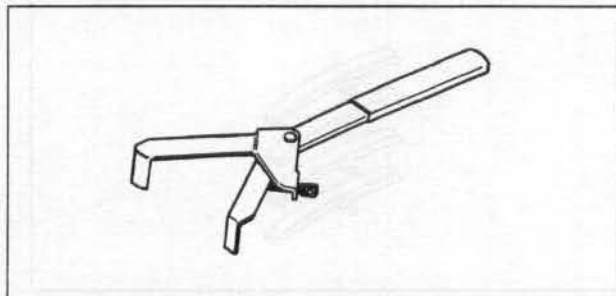


Fork Spring Holder: 57001-1286

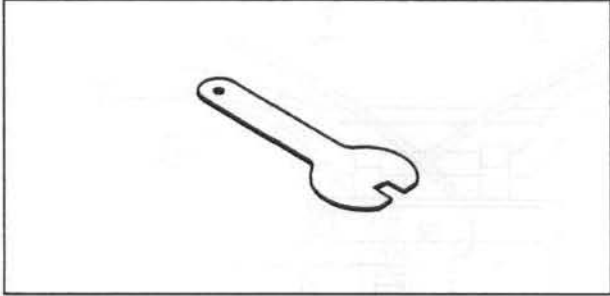


Fork Oil Seal Driver, $\phi 43$: 57001-1340

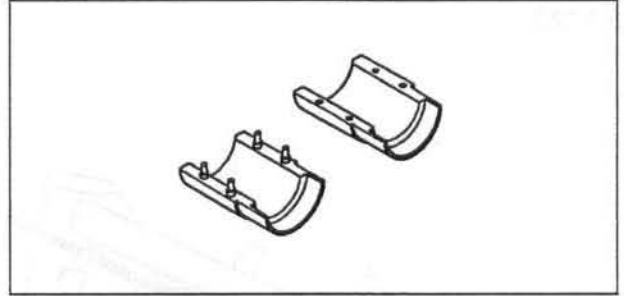

Fork Cylinder Holder: 57001-1287

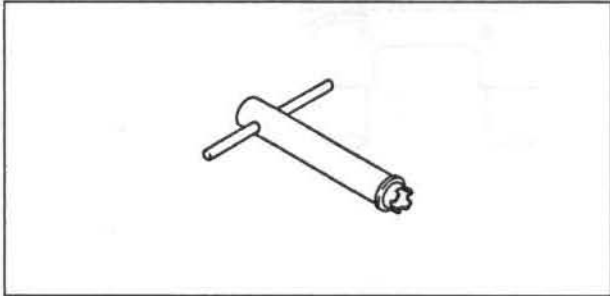


Pressure Cable Luber: K56019-021

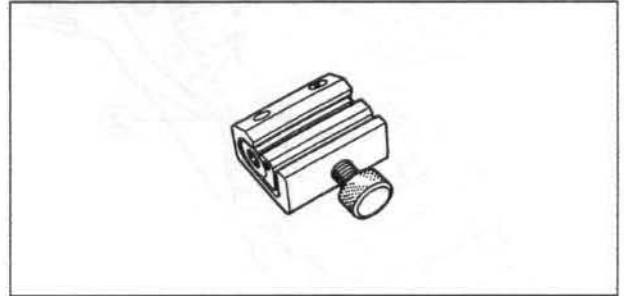


Fork Piston Rod Puller, M12 x 1.25: 57001-1289




Kawasaki Bond (Liquid Gasket - Silver): 92104-002

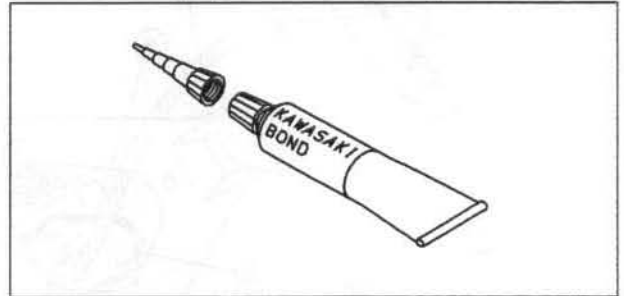

Fork Oil Level Gauge: 57001-1290

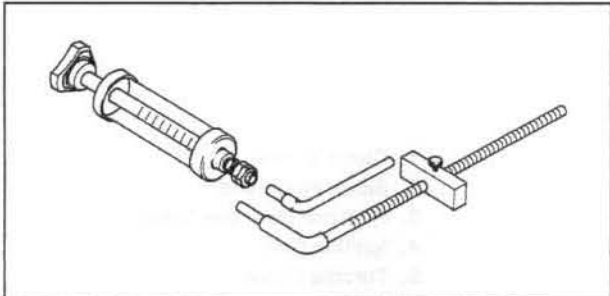


Flywheel Holder: 57001-1313

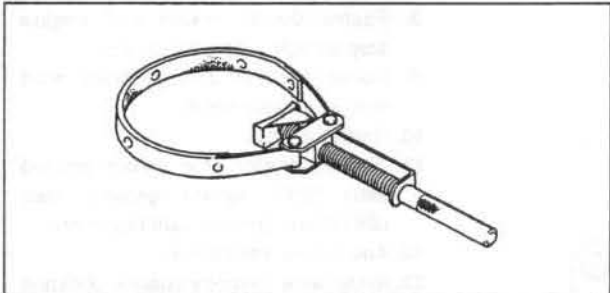

1-18 GENERAL INFORMATION


Cable, Wire and Hose Routing

KX125:

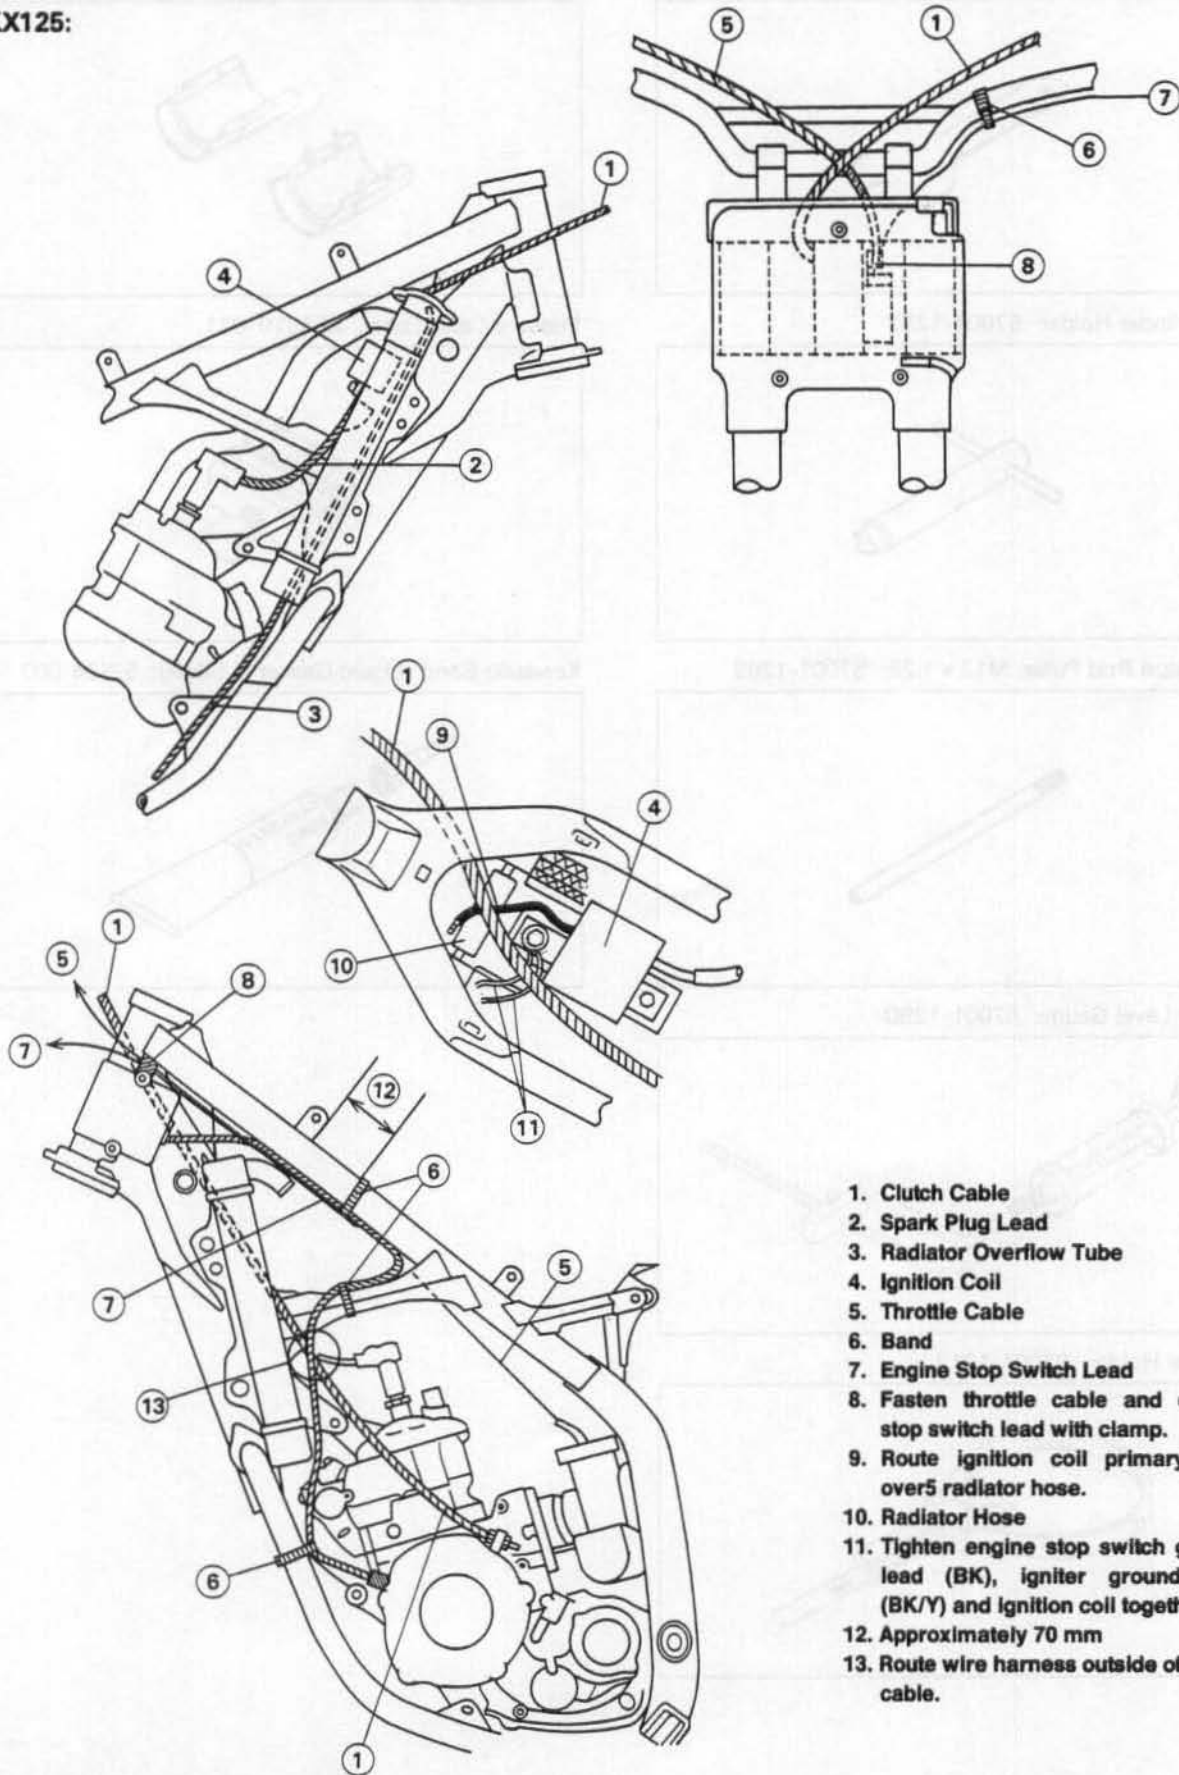

1. Clutch Cable
2. Spark Plug Lead
3. Radiator Overflow Tube
4. Ignition Coil
5. Throttle Cable
6. Band
7. Engine Stop Switch Lead
8. Fasten throttle cable and engine stop switch lead with clamp.
9. Route ignition coil primary lead over5 radiator hose.
10. Radiator Hose
11. Tighten engine stop switch ground lead (BK), igniter ground lead (BK/Y) and Ignition coil together.
12. Approximately 70 mm
13. Route wire harness outside of clutch cable.

KX250:

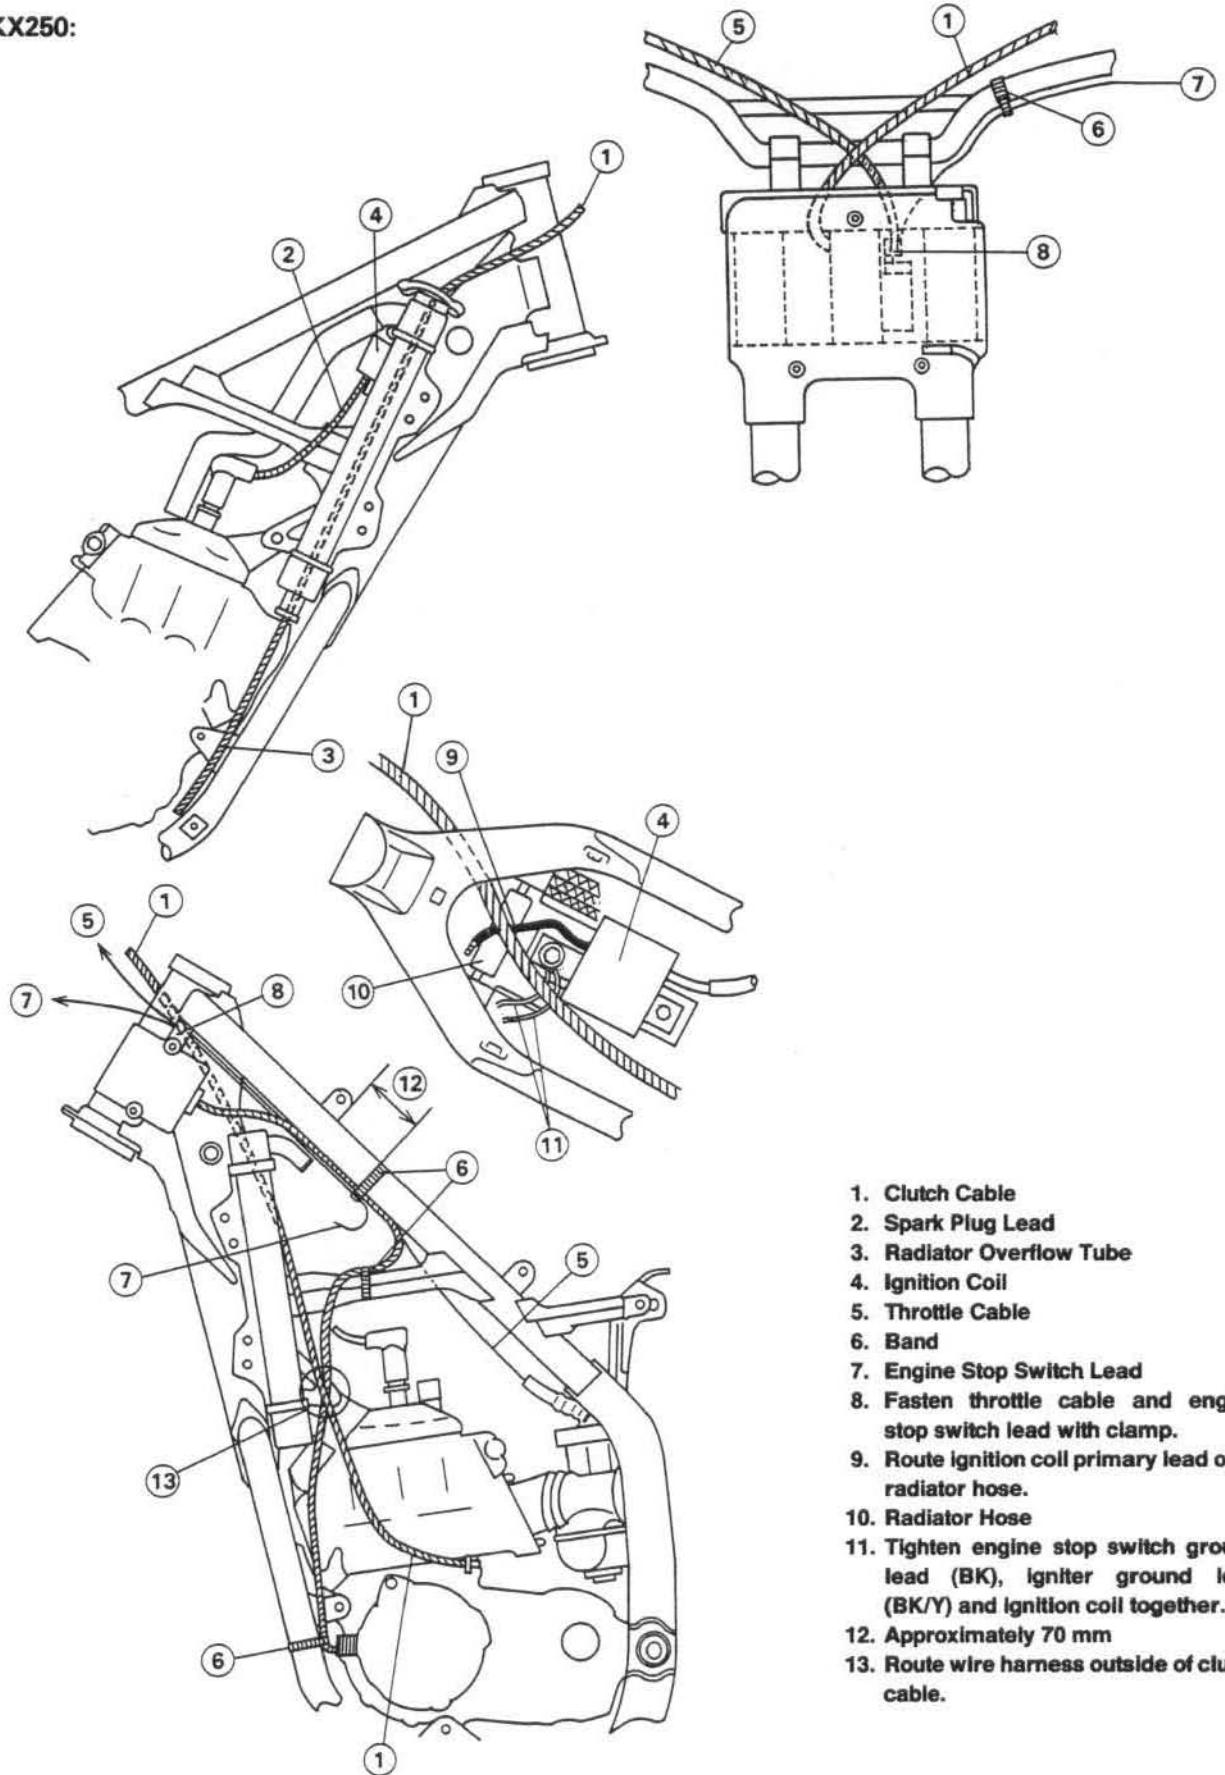

1. Clutch Cable
2. Spark Plug Lead
3. Radiator Overflow Tube
4. Ignition Coil
5. Throttle Cable
6. Band
7. Engine Stop Switch Lead
8. Fasten throttle cable and engine stop switch lead with clamp.
9. Route ignition coil primary lead over radiator hose.
10. Radiator Hose
11. Tighten engine stop switch ground lead (BK), igniter ground lead (BK/Y) and ignition coil together.
12. Approximately 70 mm
13. Route wire harness outside of clutch cable.


Fuel System


Table of Contents

Exploded View	2-2
Specifications	2-4
Throttle Grip and Cable.....	2-5
Free Play Inspection	2-5
Free Play Adjustment.....	2-5
Installation Notes	2-6
Cable Lubrication.....	2-6
Cable Inspection	2-6
Carburetor.....	2-7
Idle Speed Inspection	2-7
Idle Speed Adjustment	2-7
Service Fuel Level Inspection	2-7
Service Fuel Level Adjustment	2-8
Removal	2-9
Installation Notes	2-10
Fuel Inspection	2-10
Disassembly	2-11
Assembly Notes	2-12
Carburetor Cleaning.....	2-12
Carburetor Inspection	2-12
Air Cleaner.....	2-14
Housing Removal	2-14
Housing Installation Note.....	2-14
Element Removal	2-14
Element Installation Notes.....	2-14
Element Cleaning and Inspection	2-15
Fuel Tank.....	2-16
Removal	2-16
Installation Notes	2-16
Fuel Tap Removal.....	2-16
Fuel Tap Installation Notes.....	2-16
Fuel Tap Inspection	2-17
Fuel Tank and Tap Cleaning	2-17
Reed Valve	2-18
Removal	2-18
Installation Note.....	2-18
Inspection	2-18

2-2 FUEL SYSTEM

Exploded View

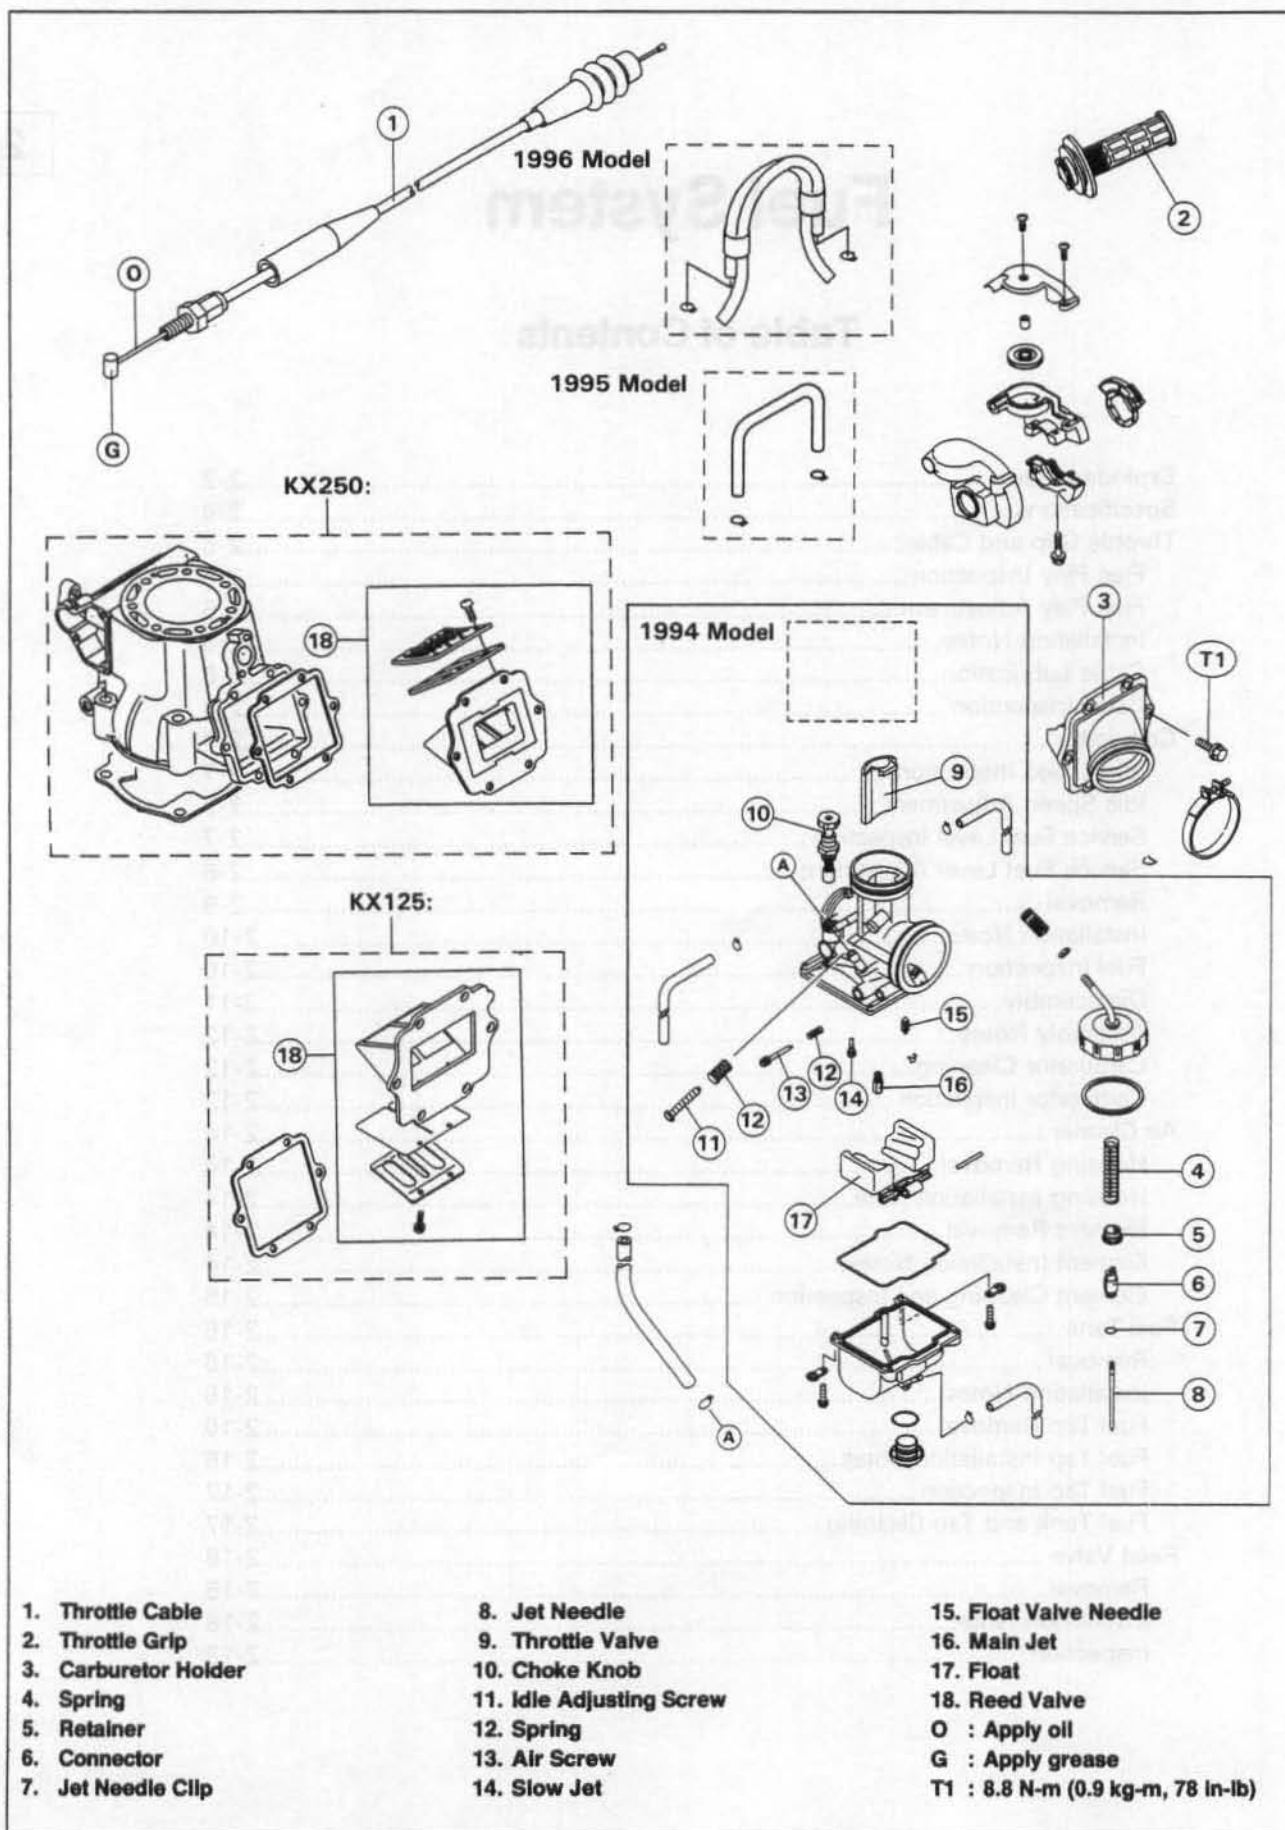

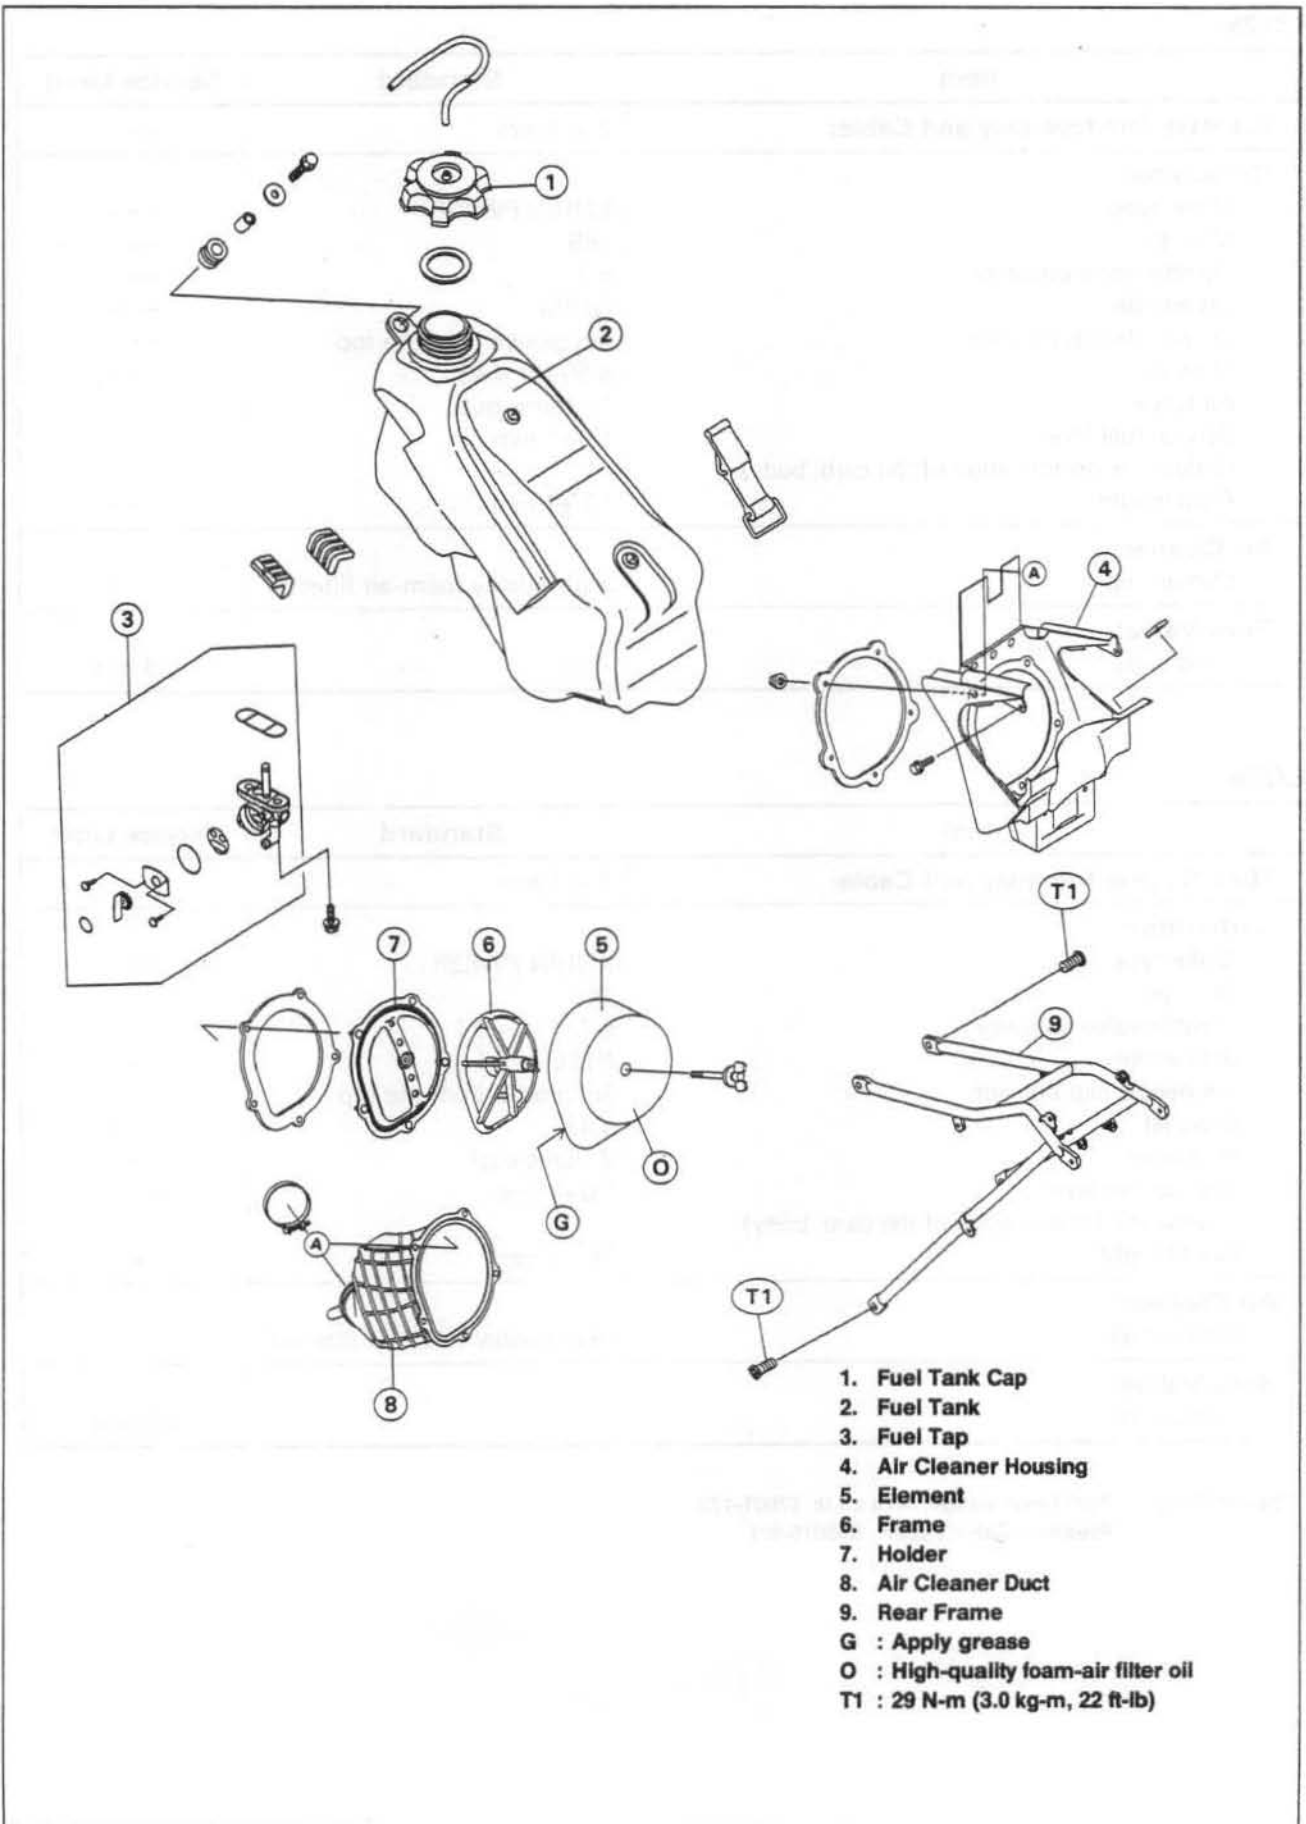

2-4 FUEL SYSTEM

Specifications

KX125:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK36	---
Main jet	165	---
Throttle valve cutaway	# 5	---
Jet needle	N1KM	---
Jet needle clip position	4th groove from the top	---
Slow jet	# 50 (E) # 48	---
Air screw	1½ (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

KX250:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK38	---
Main jet	165	---
Throttle valve cutaway	# 7	---
Jet needle	N1EE	---
Jet needle clip position	3rd groove from the top	---
Slow jet	# 45	---
Air screw	2 (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

Special Tools -- Fuel Level Gauge, M18 x 1.0: 57001-122
Pressure Cable Luber: K56019-021

Throttle Grip and Cable

If the throttle grip has excessive free play due to cable stretch or misadjustment, there will be a delay in throttle response. Also, the throttle valve may not open fully at full throttle. On the other hand, if the throttle grip has no play, the throttle will be hard to control, and the idle speed will be erratic. Check the throttle grip play periodically in accordance with the Periodic Maintenance Chart, and adjust the play if necessary.


The throttle cable routing is shown in Cable, Wire and Hose Routing in the General Information chapter.

Free Play Inspection

- Check the throttle grip free play [B] by lightly turning the throttle grip [A] back and forth.
- ★ If the free play is improper, adjust the throttle cable.


Throttle Grip Free Play

Standard: 2 ~ 3 mm

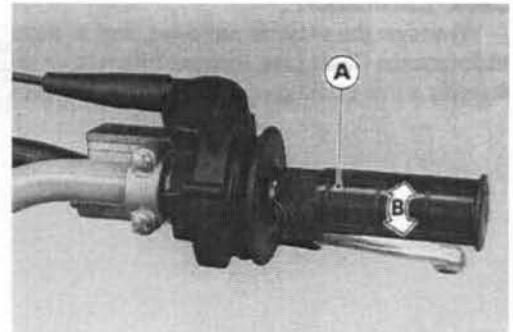


Free Play Adjustment

- Loosen the locknut [A].
- Turn the adjuster [B] until the proper amount of throttle grip free play is obtained.
- Tighten the locknut.

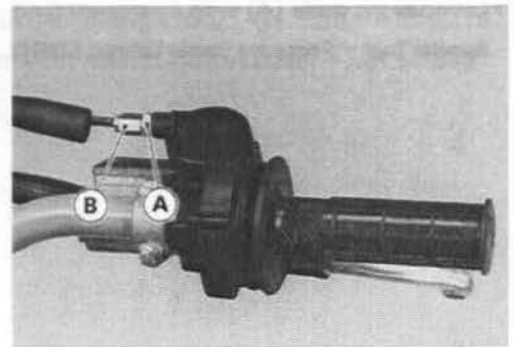

- ★ If the throttle grip free play cannot be adjusted with the adjuster at the upper end of the throttle cable, use the cable adjuster [A] at the carburetor.
- Pull the boot off of the carburetor top. Make the necessary free play adjustment at the lower cable adjuster, tighten the locknut [B], and install the boot.
- Turn the handlebar from side to side while idling the engine. If the idle speed varies, the throttle cable may be poorly routed or it may be damaged.

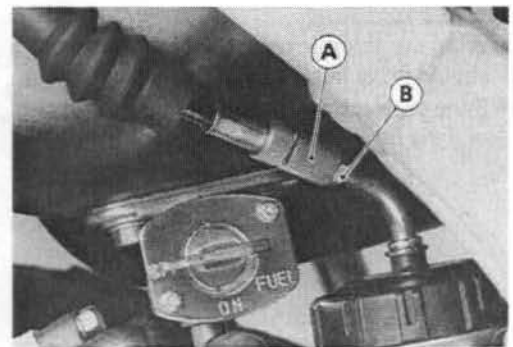

⚠WARNING

Operation with an improperly adjusted, incorrectly routed, or damaged cable could result in an unsafe riding condition.

Installation Notes

- Install the throttle cable in accordance with the Cable, Wire and Hose Routing section in the General Information chapter.
- After the installation, adjust each cable properly.


⚠ WARNING

Operation with an incorrectly routed or improperly adjusted cable could result in an unsafe riding condition.

Cable Lubrication


Whenever the cable is removed, and in accordance with the Periodic Maintenance Chart (see General Information chapter), do the following.

- Apply a thin coating of grease [A] to the cable upper end.

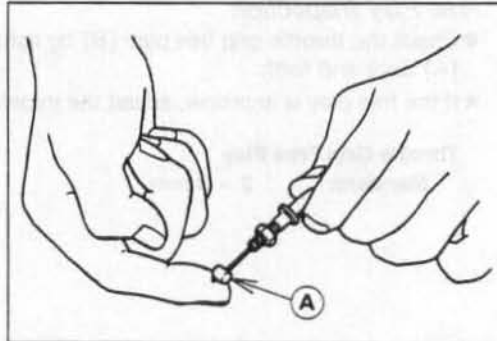


- Lubricate the cable [A] with a penetrating rust inhibitor.

Special Tool – Pressure Cable Lubrer: K56019-012 [B]

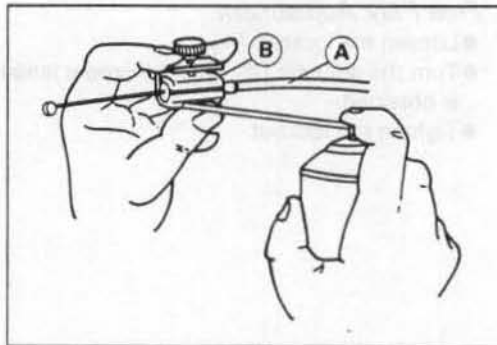

Cable Inspection

- With the throttle cable [A] disconnected at both ends, the cable should move freely within the cable housing.
- ★ If the cable movement is not free after lubricating, if the cable is frayed, or if the housing is kinked, replace the cable.

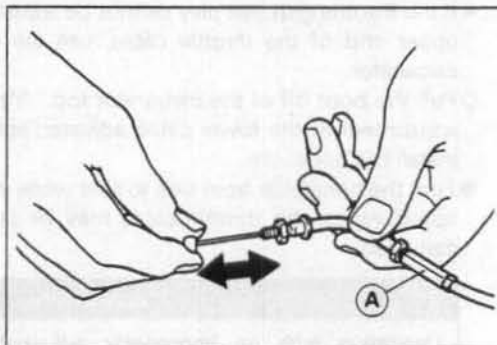

Carburetor

Since the carburetor regulates and mixes the fuel and air going to the engine, there are two general types of carburetor trouble: too rich a mixture (too much fuel), and too lean a mixture (too little fuel). Such trouble can be caused by dirt, wear, maladjustment, or improper fuel level in the float chamber. A dirty or damaged air cleaner can also alter the fuel to air ratio.

Idle Speed Inspection

- Start the engine and warm it up thoroughly.
- With the engine idling, turn the handlebar to both sides.
- ★ If handlebar movement changes the idle speed, the throttle cable may be improperly adjusted or incorrectly routed, or it may be damaged. Be sure to correct any of these conditions before riding (see Cable, Wire and Hose Routing in the General Information chapter).


⚠ WARNING

Operation with an improperly adjusted, incorrectly routed, or damaged cable could result in an unsafe riding condition.

- Check the idle speed.
- ★ Adjust it as needed.

Idle Speed Adjustment

- First turn in the air screw [A] until it seats lightly, and back it out 1½ (KX250 : 2) turns.
- Start the engine and warm it up thoroughly.
- Turn the idle adjusting screw [B] to obtain desired idle speed. If no idle is preferred, turn out the screw until the engine stops.
- Open and close the throttle a few times to make sure that the idle speed is as desired. Readjust if necessary.

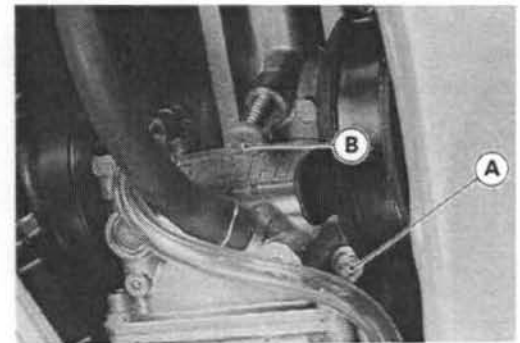


Service Fuel Level Inspection

⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Turn the fuel tap to the OFF position.
- Remove the fuel tank.
- Remove the carburetor, and hold it in true vertical position on a stand. The fuel hose and carburetor cable do not have to be removed to inspect the fuel level [A].
- Put the fuel tank on a bench, and connect the fuel tap to the carburetor using a suitable hose.
- Remove the drain plug from the bottom of the float bowl, and screw a fuel level gauge [B] into the plug hole.

Special Tool – Fuel Level Gauge, M18 x 1.0: 57001-122 [B]

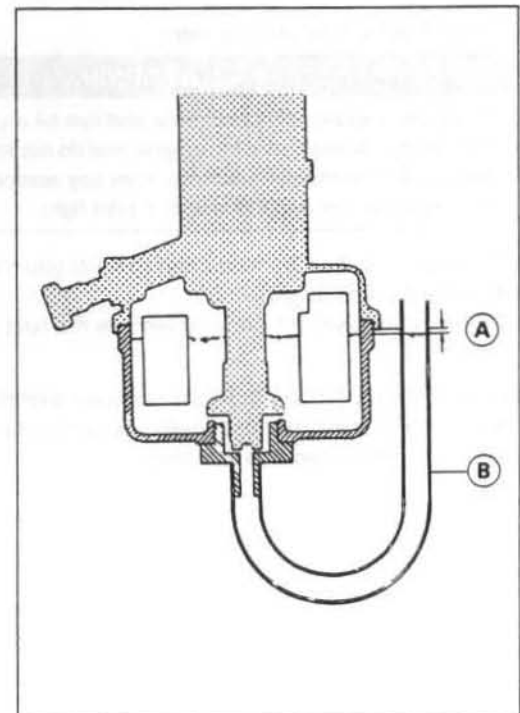

2-8 FUEL SYSTEM

- Hold the gauge vertically against the side of the carburetor body so that the "zero" line is several millimeters higher than the bottom edge of the carburetor body.
- Turn the fuel tap to the ON position to feed fuel to the carburetor.
- Wait until the fuel level in the gauge settles.
- Keeping the gauge vertical, slowly lower the gauge until the "zero" line (middle line of the gauge) is even with the bottom edge of the carburetor body.

NOTE

○ Do not lower the "zero" line below the bottom edge of the carburetor body. If the gauge is lowered and then raised again, the fuel level measure shows somewhat higher than the actual fuel level. If the gauge is lowered too far, dump the fuel out of it into a suitable container and start the procedure over again.

- Read the fuel level in the gauge and compare it to the specification.

Service Fuel Level

(below the bottom edge of the carb. body)

Standard: 1.0 ± 1 mm


- ★ If the fuel level is incorrect, adjust it.
- Turn the fuel tap to the OFF position and remove the fuel level gauge.
- Install the drain plug on the bottom of the float bowl.

Service Fuel Level Adjustment

⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove the carburetor, and drain the fuel into a suitable container.
- Remove the float bowl.
- Drive out the pivot pin [A] and remove the float [B].
- Bend the tang [A] on the float arm very slightly to change the float height. Increasing the float height lowers the fuel level and decreasing the float height raises the fuel level.

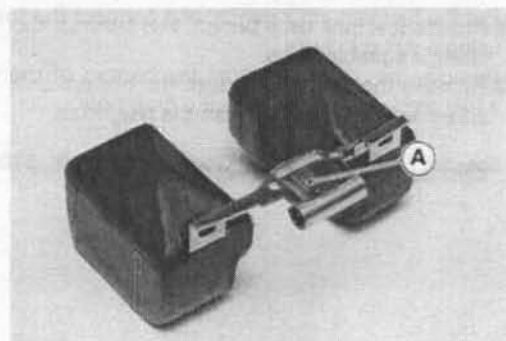


Float Height

Standard: 16 ±1 mm

NOTE

○ Float height [A] is the distance from the float bowl mating surface [B] of the carburetor body (except the gasket) to the top of the float [C]. Measure the height with the carburetor upside down.

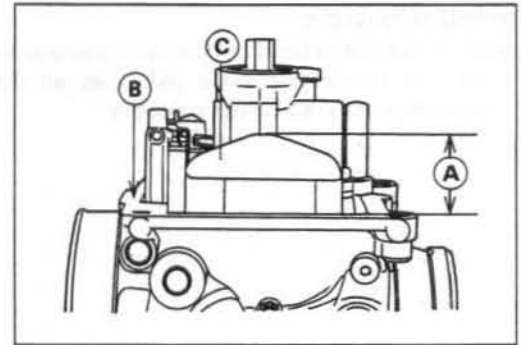



- Assemble the carburetor, and recheck the fuel level.
- ★ If the fuel level cannot be adjusted by this method, the float or the float valve is damaged.

Removal

▲ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Turn the fuel tap to the OFF position and pull the fuel hose off the tap.
- Loosen the clamps [A], and remove the carburetor from the end of the air cleaner duct, and then pull it out of the carburetor holder.
- Drain the fuel from the float bowl by removing the drain plug. After draining, install the drain plug securely.
- Unscrew the carburetor cap [A], and pull out the throttle valve assembly [B].

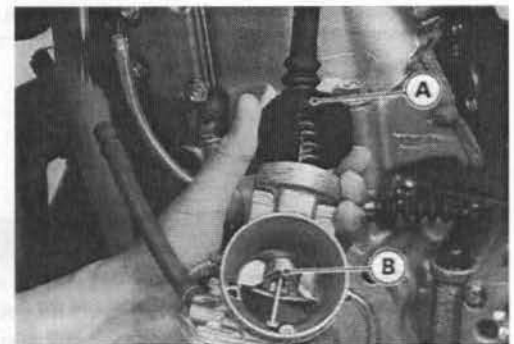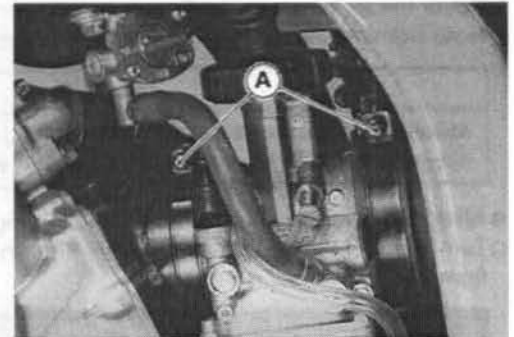

CAUTION

If the throttle valve is not removed from the cable, wrap it in a clean cloth to avoid damage.

- After removing the carburetor, push a clean, lint-free towel into the carburetor holder and the air cleaner duct to keep dirt or other foreign material from entering.

▲ WARNING

If dirt or dust is allowed to pass through into the carburetor, the throttle may become stuck, possibly causing an accident.


CAUTION

If dirt gets through into the engine, excessive engine wear and possibly engine damage will occur.


2-10 FUEL SYSTEM

Installation Notes

- Be careful not to bend or otherwise damage the jet needle. Check to see that the throttle valve [A] goes all the way down into the carburetor body, and slides smoothly.

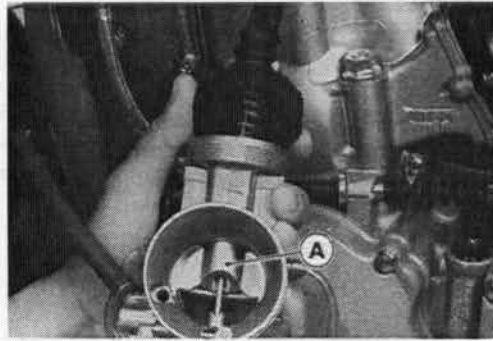

- When installing the carburetor into the carburetor holder, align the projection [A] of the carburetor with the groove [B] on the holder.

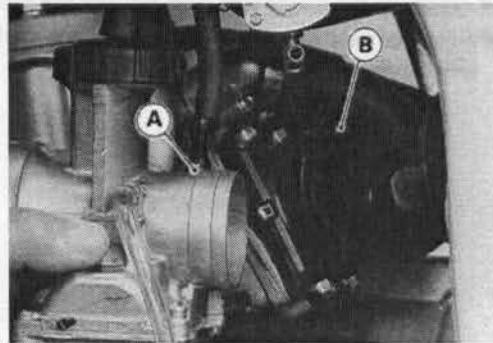

- Route the air vent and overflow hoses properly (see Cable, Wire and Hose Routing Section in the General Information chapter).

CAUTION

Always keep the hoses free from obstruction, and make sure they do not get pinched by the chain or shock absorber.

- After installing the carburetor, do the following.
 - Turn the fuel tap to the ON position, and check on the fuel leakage from the carburetor.

▲WARNING

Fuel spilled from the carburetor is hazardous.


- Adjust the following items if necessary:
 - Throttle Cable
 - Idle Speed

Fuel Inspection

▲WARNING


Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Turn the fuel tap to the OFF position.
- Remove the carburetor.
- Remove the drain plug [A] from the bottom of the float bowl and check on water or dirt in the fuel.
- ★ If any water or dirt comes out, clean the carburetor, fuel tap and fuel tank (see Fuel Tank).
- Install the drain plug on the float bowl, and tighten it securely.
- Install the carburetor.

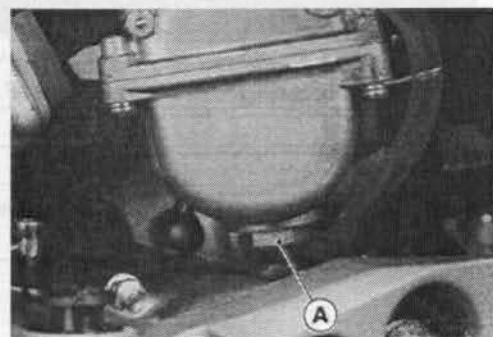


Disassembly


- Remove the carburetor.
- Remove the throttle valve assembly [A], spring [B], retainer [C] and carburetor cap from the carburetor cable lower end.

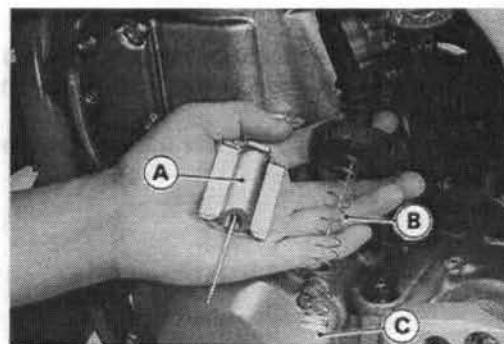

- Disassemble the throttle valve assembly; connector [A], jet needle with circlip [B] and throttle valve [C].

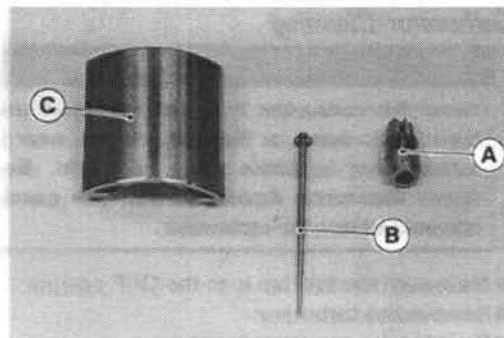


- Remove the choke knob/starter plunger assembly [A] from the carburetor.

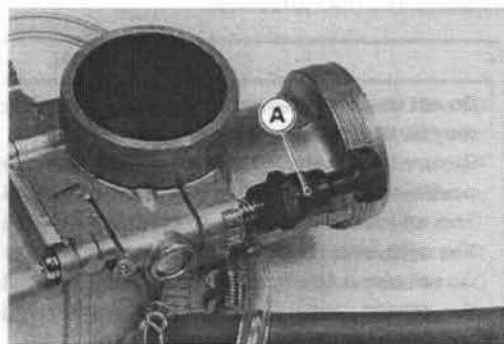

- Remove the following parts from the carburetor body.


- A. Idle Adjusting Screw
- B. Spring
- C. Air Screw
- D. Spring
- E. Slow Jet
- F. Main Jet
- G. Float Valve Needle
- H. Float
- I. Pin
- J. O-ring
- K. Float Bowl

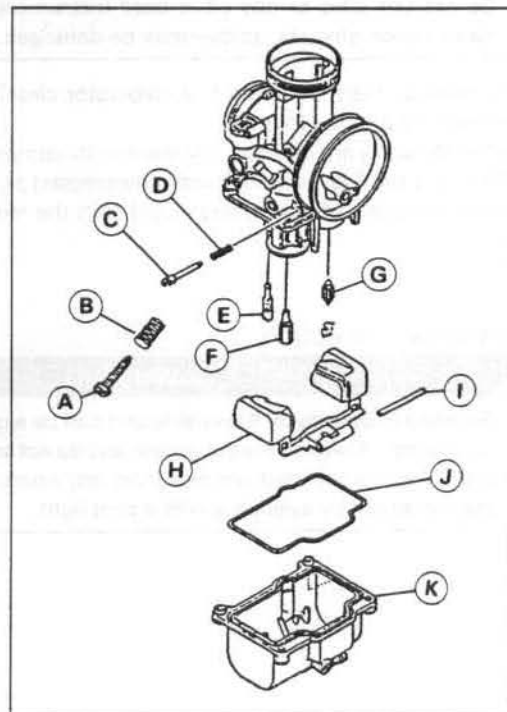

2-12 FUEL SYSTEM

Assembly Notes

- Clean the disassembly parts before assembling.
- Replace the float bowl O-ring with a new one if it is deteriorated or damaged.
- Turn in the air screw [A] fully but not tightly, and then back it out 1½ (KX250 : 2) turns.

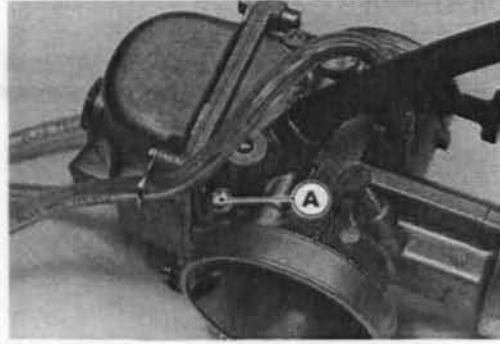

Carburetor Cleaning

⚠ WARNING

Clean the carburetor in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvent to clean the carburetor.

- Make sure the fuel tap is to the OFF position.
- Remove the carburetor.
- Drain the fuel in the carburetor.
- Disassemble the carburetor.

CAUTION

Do not use compressed air on an assembled carburetor, or the float may be deformed by the pressure.

Remove as many rubber or plastic parts from the carburetor as possible before cleaning the carburetor with a cleaning solution. This will prevent damage or deterioration of the parts.

The carburetor body has plastic parts that can not be removed.

Do not use a strong carburetor cleaning solution which could attack the plastic parts; instead, use a mild high flash-point cleaning solution safe for plastic parts.

Do not use wire or any other hard instrument to clean carburetor parts, especially jets, as they may be damaged.

- Immerse all the metal parts in a carburetor cleaning solution.
- Rinse the parts in water.
- After the parts are cleaned, dry them with compressed air.
- Blow out the fuel passages with compressed air.
- Assemble the carburetor, and install it on the motorcycle.


Carburetor Inspection

⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove the carburetor.
- Before disassembling the carburetor, check the fuel level (see Fuel Level Inspection).
- ★ If the fuel level is incorrect, inspect the rest of the carburetor before correcting it.
- Pull the carburetor cable to check that the throttle valve moves smoothly and returns by spring pressure.
- ★ If the throttle valve does not move smoothly. Replace the carburetor.
- Disassemble the carburetor (see Carburetor Disassembly in this chapter).
- Clean the carburetor.

- Check the float valve needle [A] for wear.
- ★ If the needle is worn as shown right [B], replace the valve needle.
- Push the rod [C] in the valve needle, then release it.
- ★ If the rod does not come out fully by spring tension, replace the valve needle.

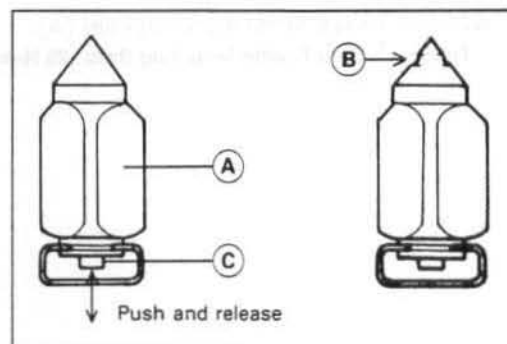

- Check the slow jet for any damage.
- ★ If the slow jet is damaged, replace it with a new one.
- Inspect the outside of the throttle valve for scratches and abnormal wear.
- ★ If it is badly scratched or worn, replace the throttle valve.
- Inspect the inside of the carburetor body for these same faults.
- ★ If it is badly scratched or worn, replace the entire carburetor.
- Check the jet needle for wear.
- ★ A worn jet needle should be replaced.
- Clean the fuel and air passages with a high flash-point solvent and compressed air.

2-14 FUEL SYSTEM



Air Cleaner

Housing Removal

- Loosen the air cleaner duct clamp.
- Remove:
 - Side Covers
 - Seat
 - Silencer
 - Rear Fender
 - Rear Flap
 - Rear Frame
- Remove the air cleaner housing.


Housing Installation Note

- Torque the rear frame mounting bolts [A].
Torque – Rear Frame Mounting Bolts: 29 N-m (3.0 kg-m, 22 ft-lb)

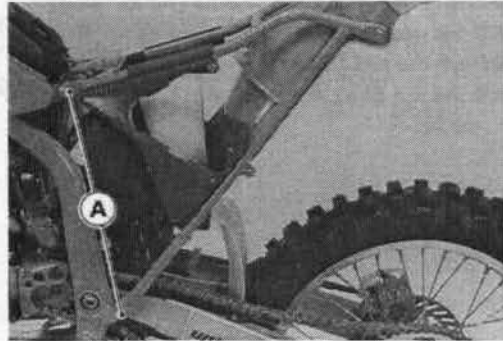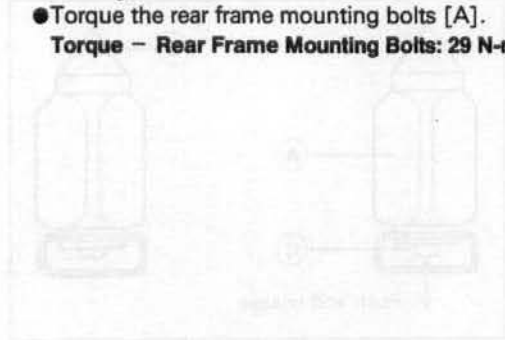

Element Removal

- Remove the seat.
- Remove the wing bolt [A] and pull out the element [B].
- Stuff a piece of clean, lint-free towel into the carburetor to keep any dirt out of the carburetor.
- Wipe out the inside of the air cleaner housing with a clean damp towel.

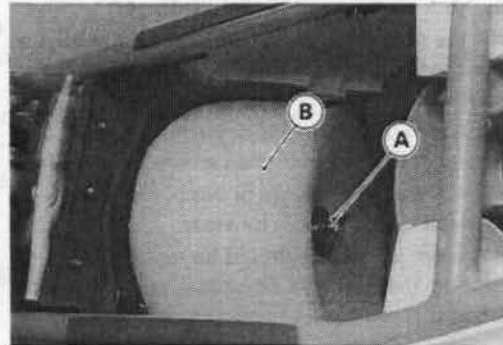


CAUTION

Check the inside of the inlet tract and carburetor for dirt. If dirt is present, clean the intake tract and carburetor thoroughly. You may also need to replace the element and seal of the housing and inlet tract.

Element Installation Notes

- When installing the element, coat the lip [A] of the element with a thick layer of all purpose grease to assure a complete seal against the air cleaner element base. Also, coat the base where the lip of the element fits.
- Apply grease to all connections and screw holes in the air cleaner housing and intake tract.
- Take out the towel from the carburetor securely.

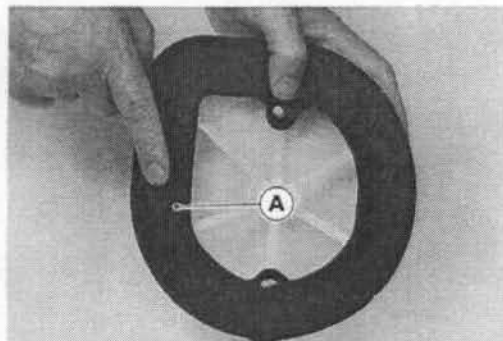


*Element Cleaning and Inspection***NOTE**

- *In dusty areas, the element should be cleaned more frequently than recommended interval.*
- *After riding through rain or on muddy roads, the element should be cleaned immediately.*
- *Since repeated cleaning opens the pores of the element, replace it with a new one in accordance with the Periodic Maintenance Chart. Also, if there is a break in the element material or any other damage to the element, replace the element with a new one.*

▲ WARNING

Clean the element in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light.
Because of the danger of highly flammable liquids, do not use gasoline or a low flash-point solvent to clean the element.

- Remove the air cleaner element, and separate the element [A] from the frame [B].

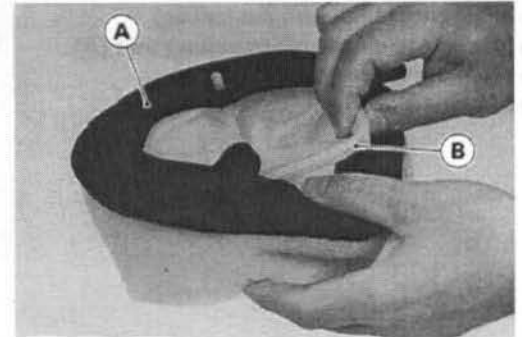

- Clean the element in a bath of a high flash-point solvent using a soft bristle brush. Squeeze it dry in a clean towel. Do not wring the element or blow it dry; the element can be damaged.
- Check all the parts of the element for visible damage.
- ★ If any part of the element is damaged, replace it.
- After cleaning, saturate the element with a high-quality foam-air-filter oil, squeeze out the excess, then wrap it in a clean rag and squeeze it as dry as possible. Be careful not to tear the sponge filter.
- Assemble the element.
- Install the element.

2-16 FUEL SYSTEM


Fuel Tank

Removal

⚠WARNING


Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove:
 - Side Covers
 - Seat
 - Radiator Covers
- Turn the fuel tap to the OFF position.
- Pull the fuel hose off the fuel tap.
- Remove the fuel tank mounting bolt [A].
- Remove the fuel tank [B].
- Drain the fuel tank.

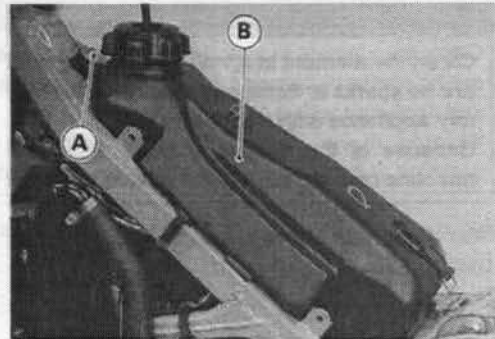


Installation Notes

- Check the rubber dampers [A] on the frame and fuel tank.
- ★ If the dampers are damaged or deteriorated, replace them.
- Be sure the fuel hose is clamped to the fuel tap to prevent leaks.

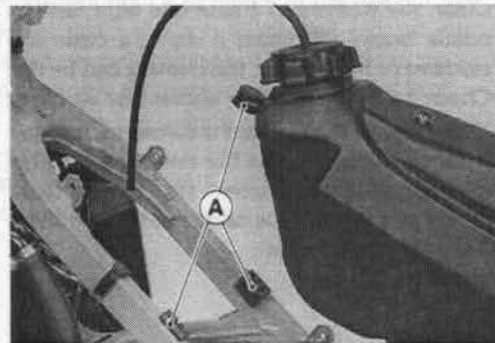

Fuel Tap Removal

- Remove the fuel tank and drain it (see Fuel Tank Removal).
- Remove the mounting bolts [A] and take out the fuel tap [B].

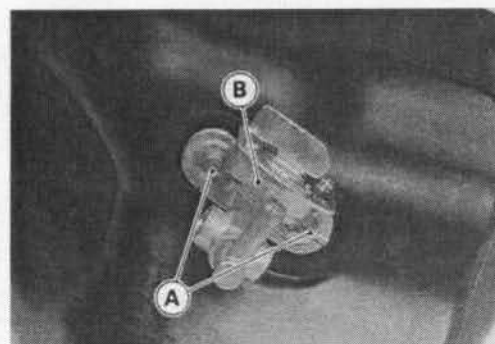


Fuel Tap Installation Notes

- Be sure the O-ring is in good condition to prevent leaks.
- Be sure to clamp the fuel hose to the tap to prevent leaks.

Fuel Tap Inspection

- Remove the fuel tap.
- Check the fuel tap filter screen [A] for any breaks or deterioration.
- ★ If the fuel tap screen have any break or deterioration, it may allow dirt to reach the carburetor, causing poor running. Replace the fuel tap.
- ★ If the fuel tap leaks, or allows fuel to flow when it is at OFF position, replace the damaged O-rings [B].

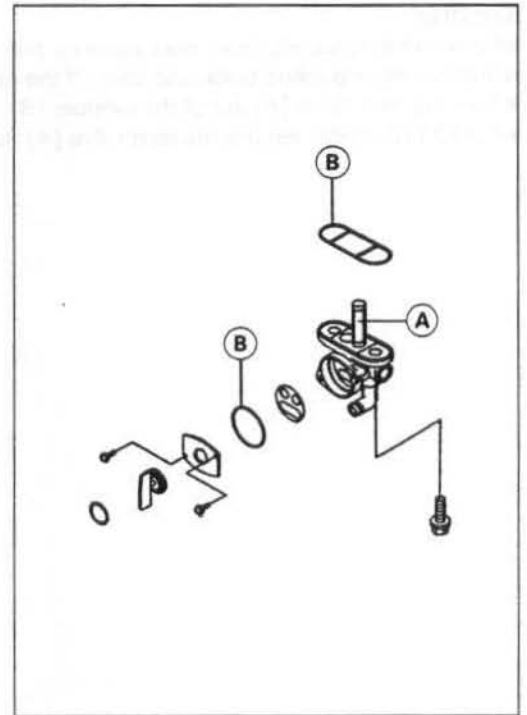**Fuel Tank and Tap Cleaning****▲WARNING**

Clean the tank in a well-ventilated area, and take care that there is no sparks or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvent to clean the tank.



- Remove the fuel tank and drain it.
- Pour some high flash-point solvent into the fuel tank and shake the tank to remove dirt and fuel deposits.
- Pour the solvent out of the tank.
- Remove the fuel tap from the tank by taking out the bolts.
- Clean the fuel tap filter screen in a high flash-point solvent.
- Pour a high flash-point solvent through the tap in all lever positions.
- Dry the tank and tap with compressed air.
- Install the tap in the tank.
- Install the fuel tank.

2-18 FUEL SYSTEM

Reed Valve

Removal


- Remove the carburetor from the carburetor holder and air cleaner duct.
- Remove the mounting bolts, and take off the carburetor holder.
- Take the reed valve [A] out of the cylinder [B].
- For KX125 model; remove the reed valve [A] from the crankcase [C].

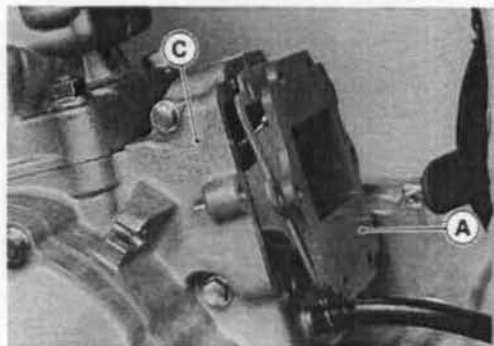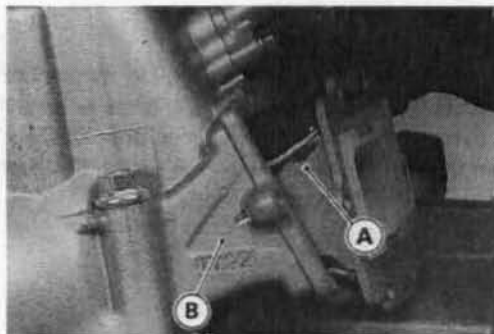

Installation Note

- Torque the carburetor holder mounting bolts [A].

Torque – Carburetor Holder Mounting Bolts: 8.8 N-m (0.9 kg-m, 78 in-lb)

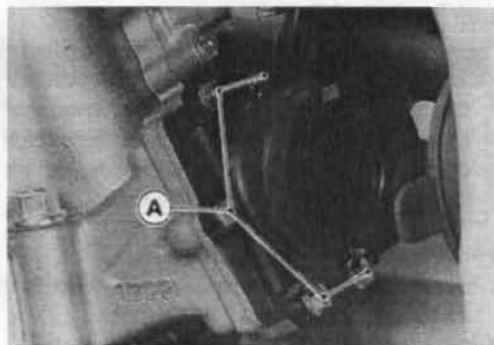


Inspection

- Inspect the reeds [A] for cracks, folds, or other visible damage.
- ★ If there is any doubt as to the condition of a reed, replace the reed valve part with a new one.
- ★ If a reed becomes wavy, replace the valve part with a new one even if its warp is less than the service limit.
- Measure the clearance between the reed and holder [B], and check the reed warp as shown.
- ★ If any one of the clearance measurements exceeds the service limit, replace the valve part with a new one.

Reed Warp

Service Limit: 0.5 mm

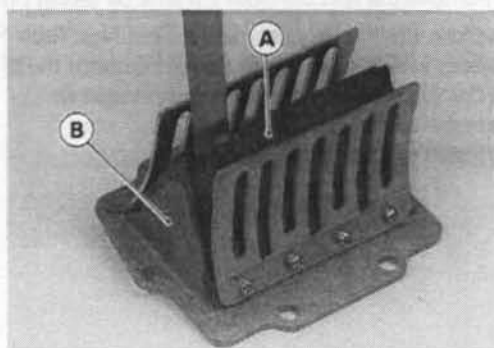

Cooling System


Table of Contents

Exploded View	3-2
Specifications	3-4
Coolant	3-5
Coolant Inspection.....	3-5
Coolant Level.....	3-5
Coolant Deterioration	3-5
Coolant Change.....	3-6
Coolant Draining	3-6
Coolant Filling	3-6
Air Bleeding	3-7
Cooling System Pressure Testing.....	3-7
Cooling System Flushing	3-8
Disassembly and Assembly Precautions	3-9
Water Pump	3-10
Cover Removal.....	3-10
Cover Installation Notes	3-10
Impeller Removal	3-10
Impeller Installation Note	3-10
Impeller Inspection	3-11
Shaft Removal.....	3-11
Shaft Installation Note.....	3-11
Oil Seal Removal	3-11
Oil Seal Installation.....	3-11
Radiator	3-13
Removal	3-13
Installation Note.....	3-13
Inspection	3-13
Cap Inspection.....	3-13
Filler Neck Inspection	3-14
Cooling Hoses, Breather Hose Inspection	3-14
Cooling Hoses, Breather Hose Installation Notes	3-14

3-2 COOLING SYSTEM

Exploded View

KX125:

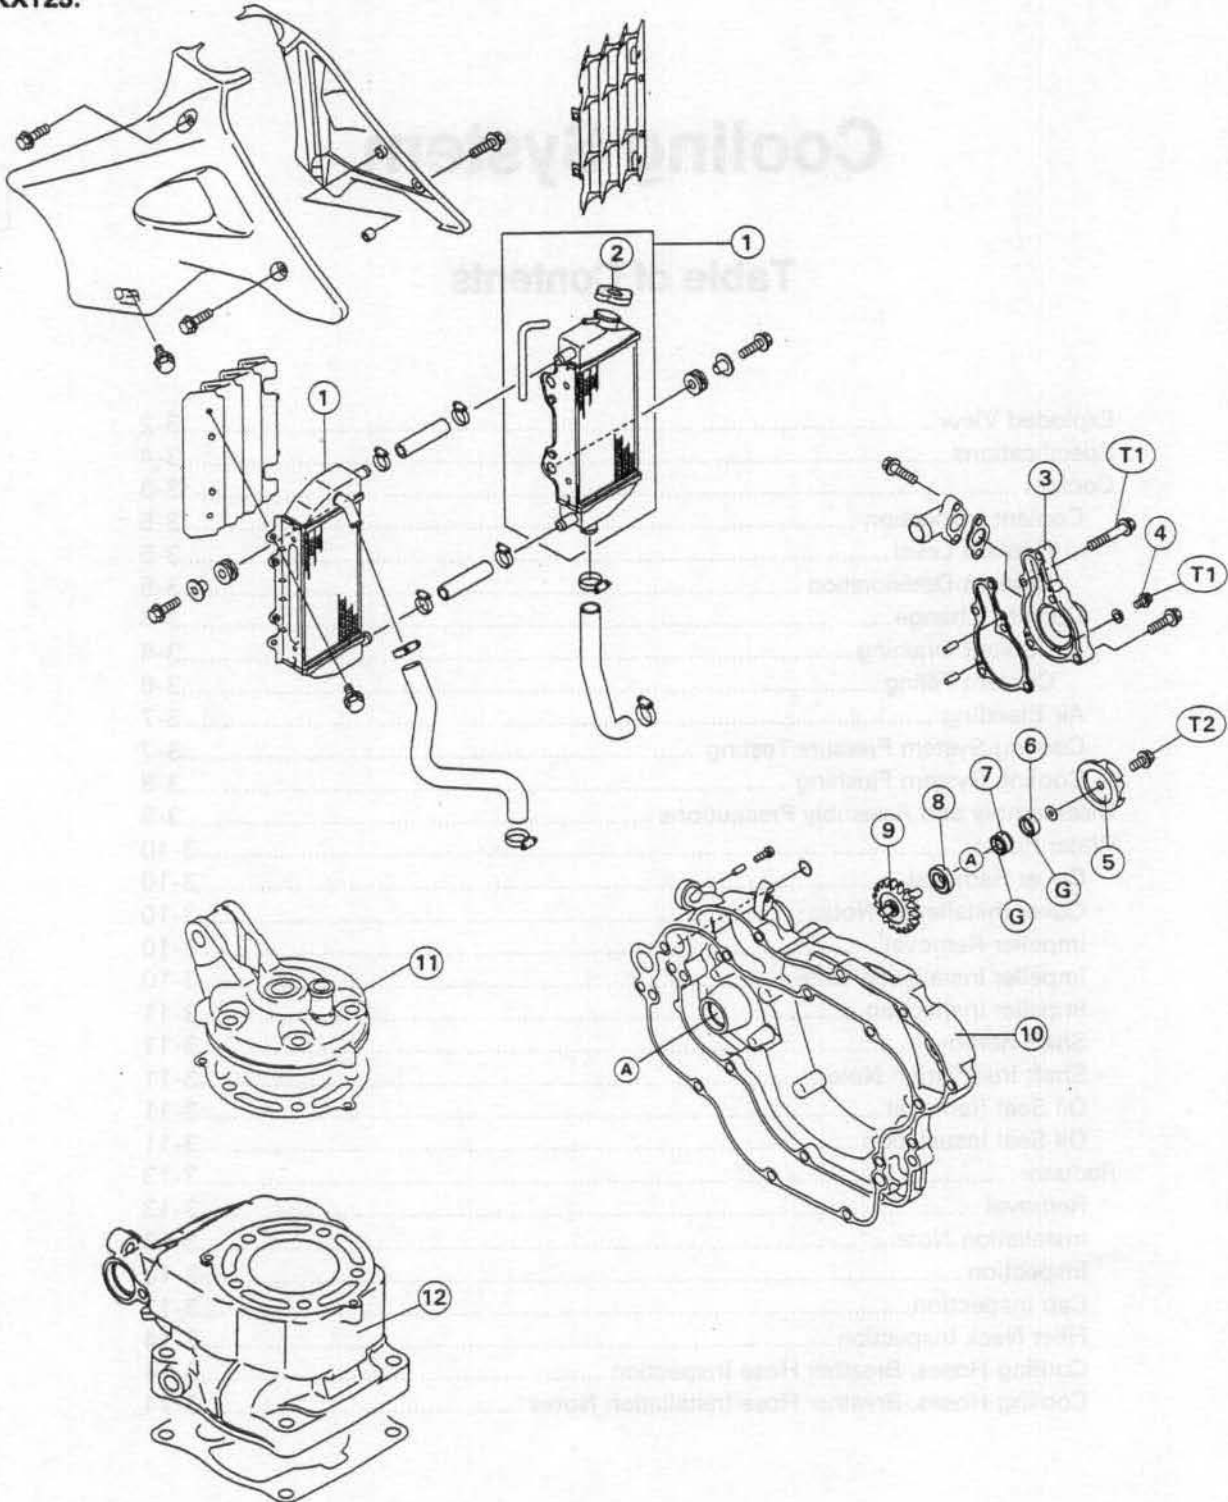


1. Radiator
2. Radiator Cap
3. Water Pump Cover
4. Drain Plug
5. Impeller

6. Oil Seal (Short)
7. Oil Seal (Long)
8. Bearing
9. Water Pump Gear
10. Right Engine Cover

11. Cylinder Head
 12. Cylinder
- G : Apply grease
 T1 : 8.8 N-m (0.9 kg-m, 78 in-lb)
 T2 : 6.9 N-m (0.7 kg-m, 61 in-lb)

KX250:

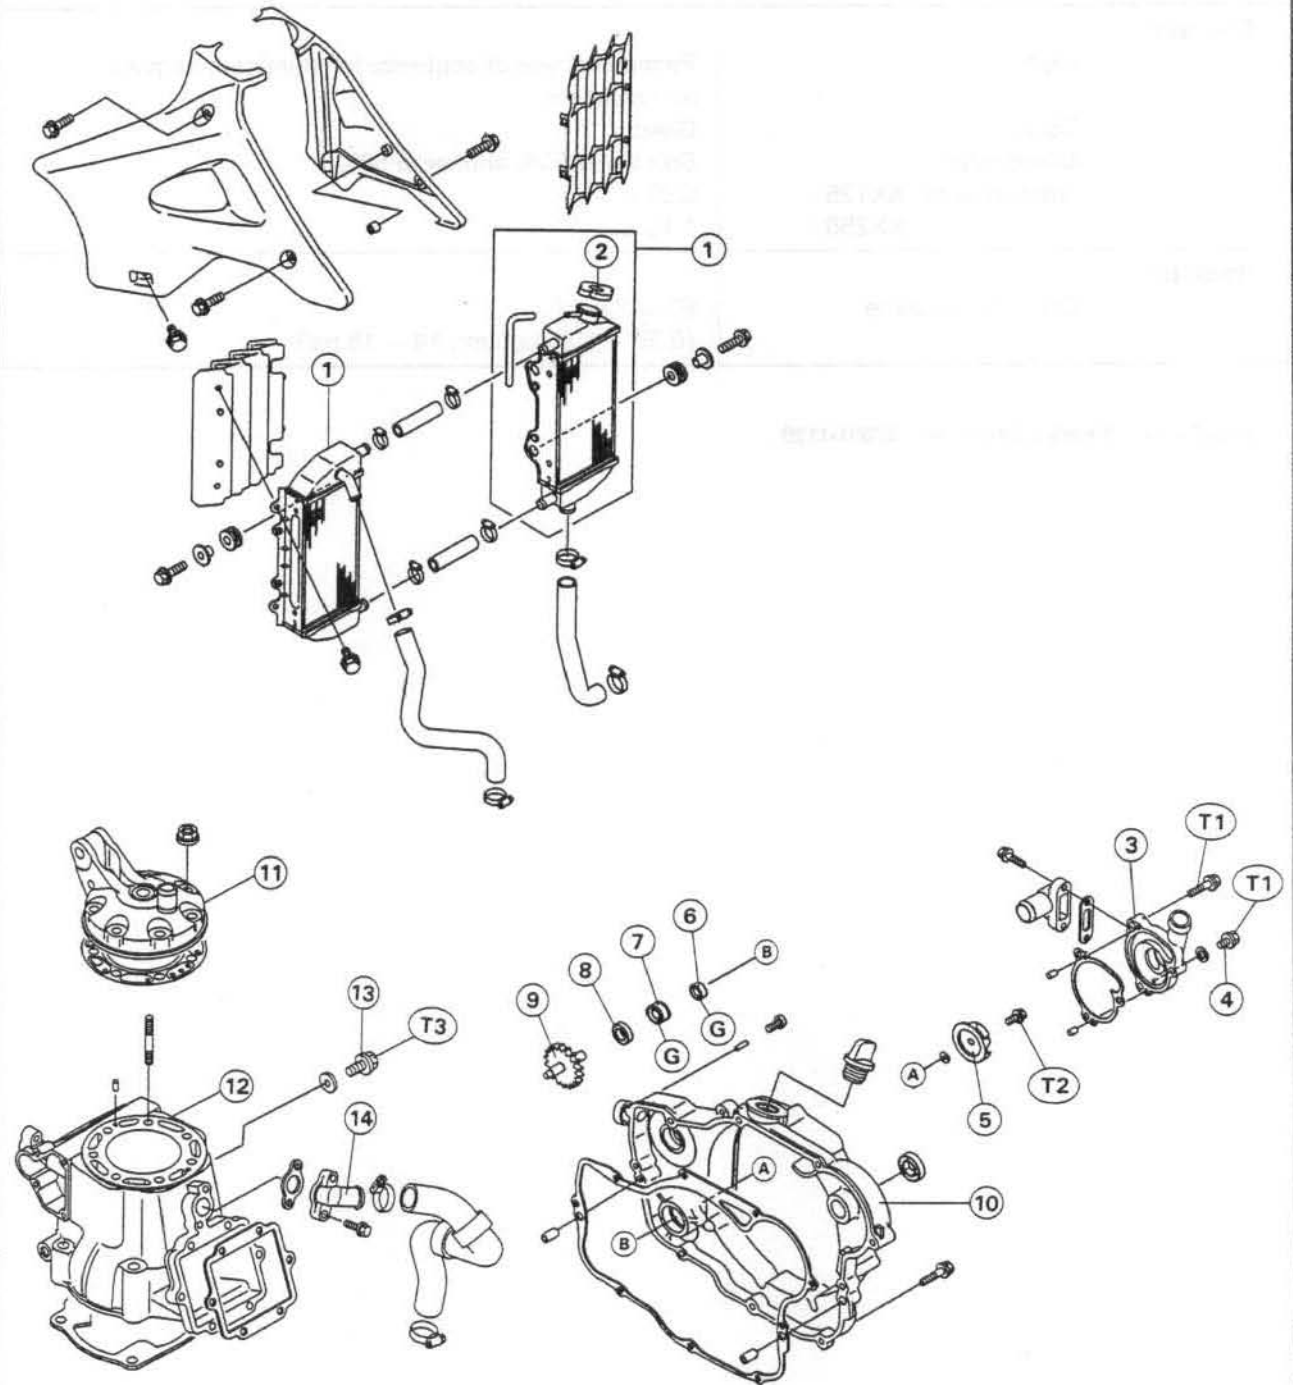

- 1. Radiator
- 2. Radiator Cap
- 3. Water Pump Cover
- 4. Drain Plug
- 5. Impeller
- 6. Oil Seal (Short)

- 7. Oil Seal (Long)
- 8. Bearing
- 9. Water Pump Gear
- 10. Right Engine Cover
- 11. Cylinder Head
- 12. Cylinder

- 13. Cylinder Drain Plug
- 14. Elbow Fitting
- G : Apply grease
- T1 : 8.8 N-m (0.9 kg-m, 78 in-lb)
- T2 : 6.9 N-m (0.7 kg-m, 61 in-lb)
- T3 : 22 N-m (2.2 kg-m, 16.0 ft-lb)

3-4 COOLING SYSTEM

Specifications

Item	Standard
Coolant: Type Color Mixed ratio Total amount : KX125 KX250	Permanent type of antifreeze for aluminum engines and radiators Green Soft water 50%, antifreeze 50% 0.95 L 1.18 L
Radiator: Cap relief pressure	95 ~ 125 kPa (0.95 ~ 1.25 kg/cm ² , 14 ~ 18 psi)

Special Tool – Bearing Driver Set: 57001-1129



Coolant

Check the coolant level each day before riding the motorcycle, and replenish coolant if the level is low. Change the coolant in accordance with the Periodic Maintenance Chart (see the General Information chapter).

▲WARNING

To avoid burns, do not remove the radiator cap or try to inspect the coolant level or change the coolant when the engine is still hot. Wait until it cools down.

Coolant Inspection

Coolant Level:

NOTE

- Check the level when the engine is cold (room or ambient temperature).
- Situate the motorcycle so that it is perpendicular to the ground.
- Remove the right radiator cover.
- Remove the radiator cap [A].

NOTE

- Remove the radiator cap in two steps. First turn the cap counter-clockwise to the first stop and wait there for a few seconds. Then push down and turn it further in the same direction and remove the cap.
- Check the coolant level. The coolant level [A] should be at the bottom of the filler neck.
- ★ If the coolant level is low, add coolant through the filler opening to the bottom of the filler neck. Install the cap.

Recommended antifreeze:

Permanent type of antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators)



Coolant mixture ratio:

1:1 (Soft water 50%, Coolant 50%)

Total amount:

KX125 : 0.95 L

KX250 : 1.18 L

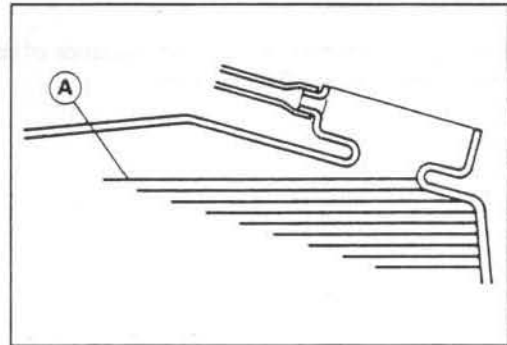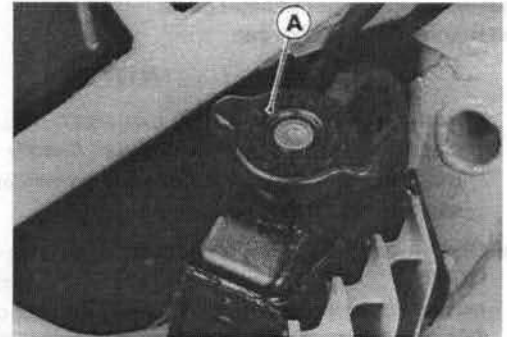

Coolant Deterioration:

- Visually inspect the old coolant.
- ★ If whitish cotton-like wafts are observed, aluminum parts in the cooling system are corroded. If the coolant is brown, iron or steel parts are rusting. In either case, flush the cooling system.
- ★ If the coolant gives off an abnormal smell, check for a cooling system leak. It may be caused by exhaust gas leaking into the cooling system.

3-6 COOLING SYSTEM

Coolant Change

The coolant should be changed periodically to ensure long engine life.

Coolant Draining:

⚠ WARNING



Coolant on tires will make them slippery and can cause an accident and injury. Immediately wash away any coolant that spills on the frame, engine or other painted parts. Since coolant is harmful to the human body, do not use for drinking.

- Remove the right radiator cover.
- Remove the radiator cap.

NOTE

○ Remove the radiator cap in two steps. First turn the cap counter-clockwise to the first stop and wait there for a few seconds. Then push down and turn it further in the same direction and remove the cap.

- Place a container under the coolant drain plug (KX125) [A] or plugs (KX250) [B], and drain the coolant from the radiator and engine by removing the drain plug on the water pump cover and the cylinder (KX250). Immediately wash out any coolant that spills on the frame, engine, or wheel.
- Inspect the old coolant for visual evidence of corrosion and abnormal smell (see Coolant Deterioration).

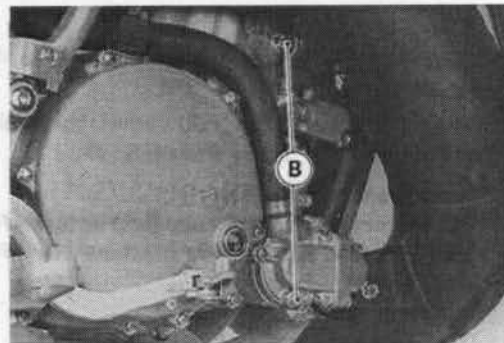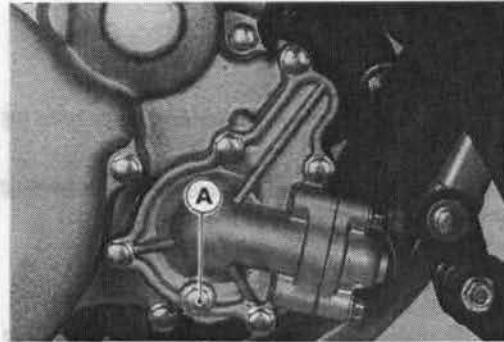

Coolant Filling:

CAUTION

Use coolant containing corrosion inhibitors made specifically for aluminum engines and radiators in accordance with the instruction of the manufacturer's. Soft or distilled water must be used with the antifreeze (see below for antifreeze) in the cooling system. If hard water is used in the system, it causes scale accumulation in the water passages, and considerably reduces the efficiency of the cooling system.

Coolant

Type	: Permanent type antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engine and radiators)
Color	: Green
Mixed ratio	: Soft water 50%, Antifreeze 50%
Freezing point	: -35°C (-31°F)
Total amount	: KX125 : 0.95 L KX250 : 1.18 L

- Install the drain plug.
- Replace the gasket with a new one.

Torque – Coolant Drain Plug on Water Pump Cover:

8.8 N-m (0.9 kg-m, 78 in-lb)

Coolant Drain Plug on Cylinder (KX250):


22 N-m (2.2 kg-m, 16.0 ft-lb)

- Fill the radiator up to the bottom of the radiator filler neck with coolant [A], and install the cap, turning it clockwise about ¼ turn.

NOTE

○ Pour in the coolant slowly so that it can expel the air from the engine and radiator. The radiator cap must be installed in two steps. First turn the cap clockwise to the first stop. Then push down on it and turn it the rest of the way.

- Check the cooling system for leaks.
- Install the right radiator cover.

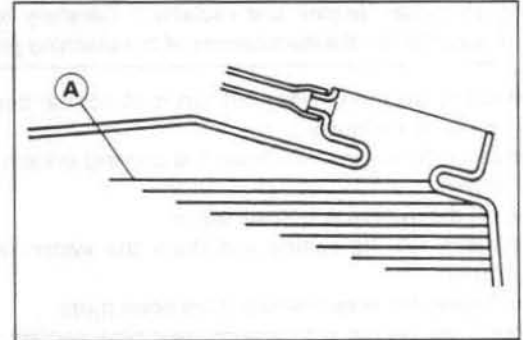

Air Bleeding

Before putting the motorcycle into operation, any air trapped in the cooling system must be removed as follows.

- Start the engine, warm up the engine thoroughly, and then stop the engine. Wait until the engine cools down.
- Remove the right radiator cover and radiator cap.
- Check the coolant level.
- ★ If the coolant level is low, add the coolant up to the bottom of the radiator filler neck.
- Install the radiator cap.
- Check the cooling system for leaks.
- Install the right radiator cover.

Cooling System Pressure Testing


CAUTION

During pressure testing, do not exceed the pressure for which the system is designed to work. The maximum pressure is 125 kPa (1.25 kg/cm², 18 psi).

- Remove the right radiator cover.
- Remove the radiator cap, and install a cooling system pressure tester [A] and adapter [B] on the radiator filler neck.

NOTE

- Wet the adapter cap sealing surfaces with water or coolant to prevent pressure leaks.
- Build up pressure in the system carefully until the pressure reaches 125 kPa (1.25 kg/cm², 18 psi).
- Watch the gauge for at least 6 seconds. If the pressure holds steady, the cooling system is all right.
- Remove the pressure tester, replenish the coolant, and install the radiator cap and right radiator cover.
- ★ If the pressure drops and no external source is found, check for internal leaks. Check the cylinder head gasket for leaks.

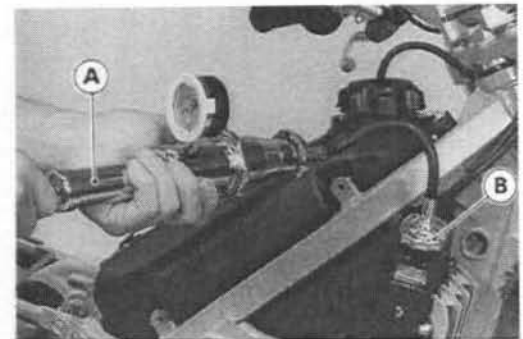

3-8 COOLING SYSTEM

Cooling System Flushing

Over a period of time, the cooling system accumulates rust, scale, and lime in the water jacket and radiator. When this accumulation is suspected or observed, flush the cooling system. If this accumulation is not removed, it will clog up the water passages and considerably reduce the efficiency of the cooling system.

- Drain the cooling system.
- Fill the cooling system with fresh water mixed with a flushing compound.

CAUTION

Avoid the use of a flushing compound which is harmful to the aluminum engine and radiator. Carefully follow the instructions supplied by the manufacture of the cleaning product.

- Warm up the engine, and run it at normal operating temperature for about ten minutes.
- Stop the engine, and drain the cooling system after the coolant cools down.
- Fill the system with fresh water.
- Warm up the engine and drain the system after the coolant cools down.
- Repeat the previous two steps once more.
- Fill the system with a permanent type coolant, and bleed the air from the system (see Air Bleeding).



CAUTION



Avoid the use of a flushing compound which is harmful to the aluminum engine and radiator. Carefully follow the instructions supplied by the manufacture of the cleaning product.

NOTE

Warm up the engine, and run it at normal operating temperature for about ten minutes. Stop the engine, and drain the cooling system after the coolant cools down. Fill the system with fresh water. Warm up the engine and drain the system after the coolant cools down. Repeat the previous two steps once more. Fill the system with a permanent type coolant, and bleed the air from the system (see Air Bleeding).

Disassembly and Assembly Precautions

- Prior to disassembly of cooling system parts (radiator, pump, etc), wait until the coolant cools down, and then drain the coolant.
- After assembling and filling the system with coolant, bleed any air from the system.

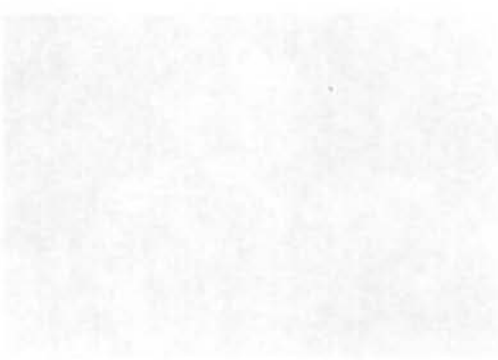
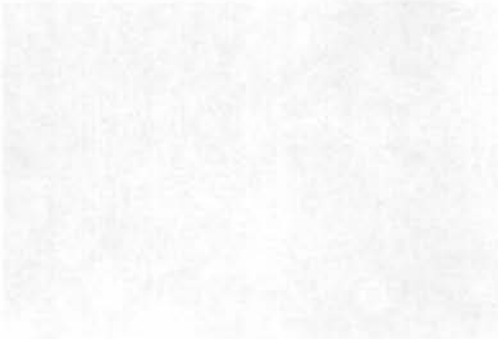


3-10 COOLING SYSTEM

Water Pump

Cover Removal

- Drain the coolant (see Coolant Draining).
- Loosen the cooling hose clamps, and disconnect the cooling hoses on the water pump cover.
- Remove the cover bolts [A], and remove the water pump cover [B].

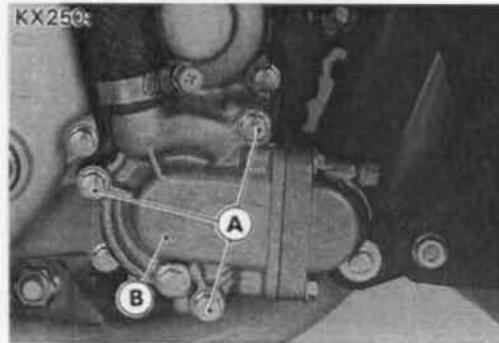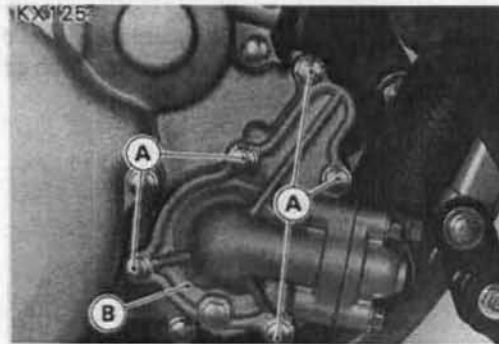


Cover Installation Notes

- Replace the pump cover gasket with a new one.
- Torque the water pump cover bolts.
Torque – Water Pump Cover Bolts:
8.8 N-m (0.9 kg-m, 78 in-lb)
- Fill the cooling system (see Coolant Filling).
- Bleed the air from the cooling system.

Impeller Removal

- Drain the coolant (see Coolant Draining).
- Remove the cover bolts and take out the water pump cover from the right engine cover with the cooling hoses attached.
- Remove the impeller bolt [A], and take out the impeller [B] and washer.

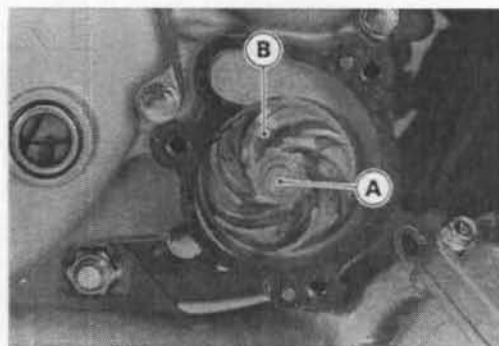


Impeller Installation Note

- Torque the impeller bolt.
Torque – Impeller Bolt: 6.9 N-m (0.7 kg-m, 61 in-lb)


Impeller Inspection

- Visually check the impeller [A].
- ★ If the surface is corroded, or if the blades [B] are damaged, replace the impeller.

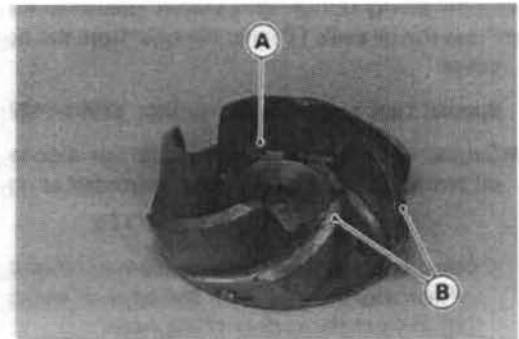

Shaft Removal

- Remove:
 - Impeller
 - Right Engine Cover
- Pull out the water pump shaft [A] toward inside of the right engine cover.

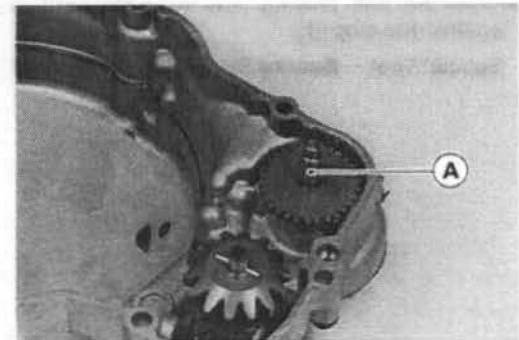


Shaft Installation Note

- To prevent the oil seal lips from peeling, apply molybdenum disulfide grease to the water pump shaft [A] and insert it into the oil seals [B] from the inside of the right engine cover [C].

CAUTION

Be sure to apply molybdenum disulfide grease to the water pump shaft when installing. If it is installed dry, the seals may wear excessively.

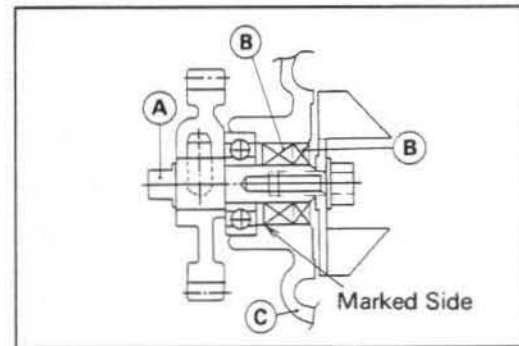

Oil Seal Removal

- Remove:
 - Impeller
 - Right Engine Cover
 - Water Pump Shaft
- Insert a bar into the water pump shaft hole from the outside of the right engine cover, and remove the ball bearing by tapping evenly around the bearing inner race.
- Insert a bar into the water pump shaft hole from the inside of the right engine cover, and remove the oil seal by tapping evenly around the seal lips.

Oil Seal Installation

CAUTION

If the oil seals or ball bearing are removed, replace all of them with new ones at the same time.

- Be sure to replace the oil seals.

3-12 COOLING SYSTEM

- Apply plenty of high temperature grease to the oil seal lips [A].
- Press the oil seals [B] into the hole from the outside of the right engine cover.

Special Tool – Bearing Driver Set: 57001-1129 [C]



- Set the oil seal (thick) so that dual lips side faces outward and set the oil seal (thin) so that a lip faces outward as shown.

NOTE

○ Use a bearing driver larger in diameter than the oil seal, and press the oil seal into the hole until the edge of the oil seal is located 0.5 mm [D] in from the surface of the hole.

- Press the ball bearing into the hole until the bearing is bottomed against the step [E].

Special Tool – Bearing Driver Set: 57001-1129

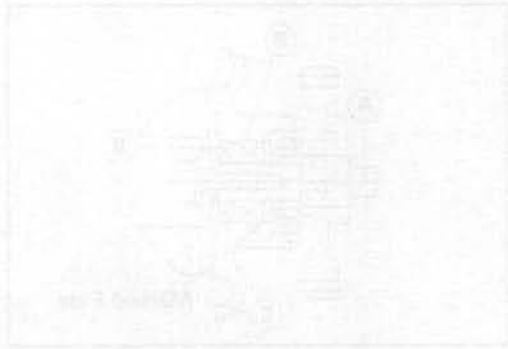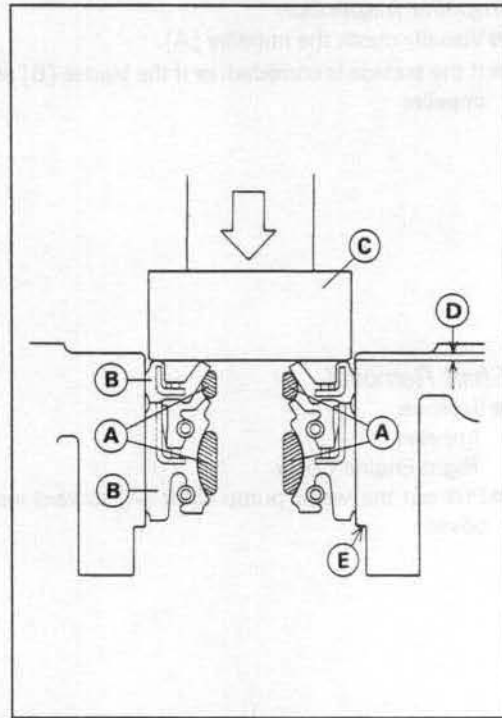



CAUTION
If the oil seal or ball bearing is damaged, replace it with a new one.

CAUTION
If the oil seal or ball bearing is damaged, replace it with a new one.

Radiator

Removal

- Remove the radiator cover(s).
- Drain the coolant (see Coolant Draining).
- Loosen the hose clamps, and pull off the cooling and breather hoses.
- Remove the mounting bolts [A], and take out the radiator [B].

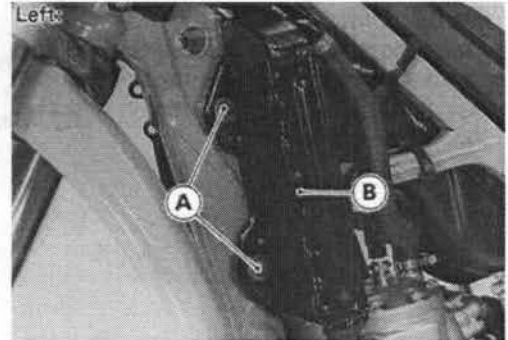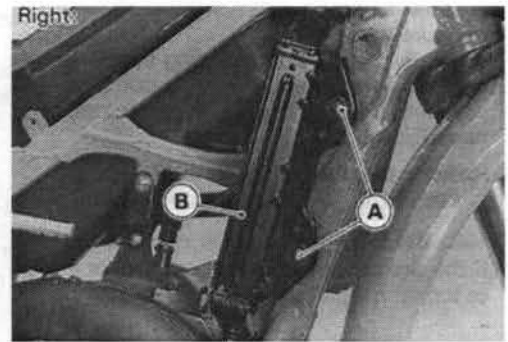


Installation Note

- Route the cooling and breather hoses correctly.

Inspection

- Check the radiator core.
- ★ If there are obstructions to air flow, remove them.
- ★ If the corrugated fins are deformed, carefully straighten them with the thin blade of a screwdriver [A].

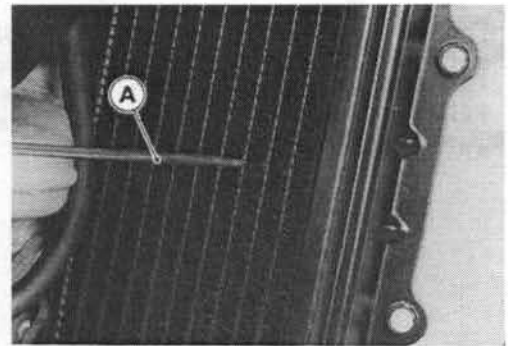

CAUTION

Do not tear the radiator tubes while straightening the fins.

- ★ If the air passages of the radiator core are blocked more than 20% by unremovable obstructions or irreparably deformed fins, replace the radiator with a new one.

CAUTION


When cleaning the radiator with compressed air, be careful of the following to avoid damage to the fins.

Keep the air nozzle over 0.5 m (20 in.) away from the radiator.

Blow air perpendicularly to the radiator core.


Never blow air at an angle against the fins but straight through them in the direction of natural air flow.

Never shake the air nozzle at a right angle against the fins, be sure to move it at a level with the fins.

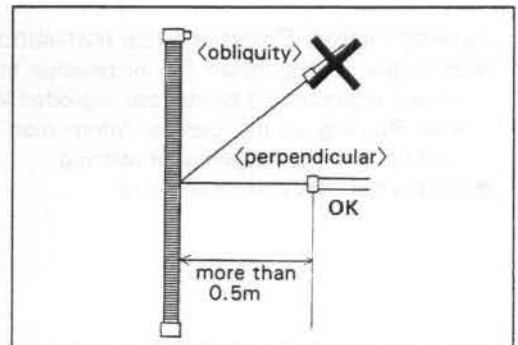

Cap Inspection

- Check the condition of the valve spring [A], and the top and bottom valve seals [B] of the radiator cap.
- ★ If any one of them shows visible damage, replace the cap.

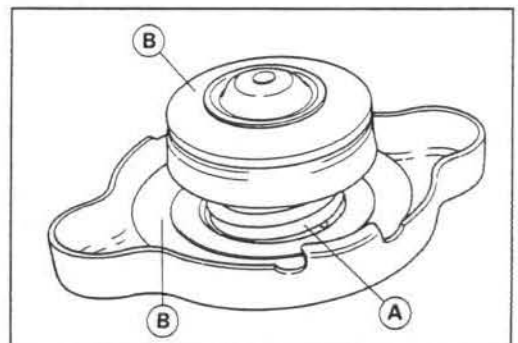


3-14 COOLING SYSTEM

- Wet the top and bottom valve seals with water or coolant to prevent pressure leaks.
- Install the cap [A] on a cooling system pressure tester [B].
- Watching the pressure gauge, pump the tester to build up the test pressure. The cap must open at the specified relief pressure (the gauge hand flicks down).

Radiator Cap Relief Pressure:


Standard: 95 ~ 125 kPa (0.95 ~ 1.25 kg/cm², 14 ~ 18 psi)

- Also, the cap must hold the relief pressure for at least 6 seconds.
- ★ If the cap cannot hold the pressure, or if the relief pressure is too high or too low, replace the cap with a new one.

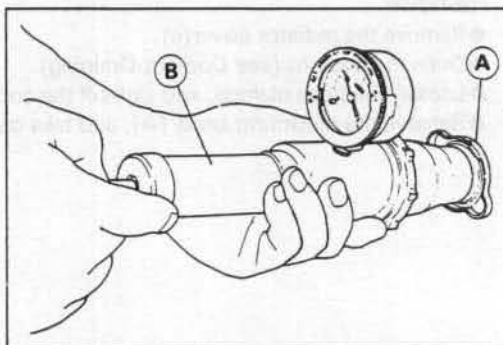

Filler Neck Inspection

- Check the radiator filler neck for signs of damage.
- Check the condition of the top and bottom sealing seats [A] in the filler neck. They must be smooth and clean for the radiator cap to function properly.

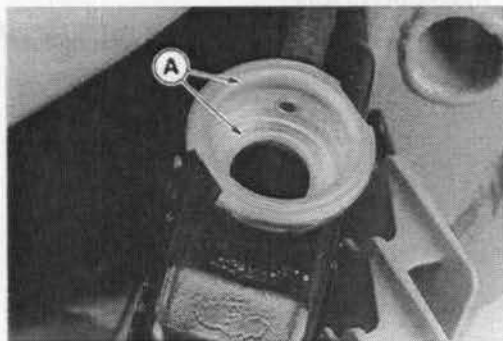

Cooling Hoses, Breather Hose Inspection

- In accordance with the Periodic Maintenance Chart, visually inspect the hoses for signs of deterioration. Squeeze the hose. A hose should not be hard and brittle, nor should it be soft or swollen.
- Replace any damaged hose.

Cooling Hoses, Breather Hose Installation Notes

- Install the cooling hoses [A] or breather hose [B] being careful to follow the preformed bends (see Exploded View and Cable, Wire and Hose Routing in the General Information chapter). Avoid sharp bending, kinking, flattening, or twisting.
- Tighten the hose clamps securely.



Engine Top End

Table of Contents


4

Exploded View	4-2
Specifications	4-4
Cylinder Head	4-5
Cylinder Compression Measurement	4-5
Removal	4-5
Installation Notes	4-6
Warp Inspection	4-6
Cylinder, Piston	4-7
Cylinder Removal	4-7
Cylinder Installation Notes	4-8
Piston Removal	4-9
Piston Installation Notes	4-9
Cylinder Wear Inspection	4-10
Piston Diameter Measurement	4-11
Piston/Cylinder Clearance	4-11
Piston Ring, Piston Ring Groove Inspection	4-12
Piston Ring End Gap Inspection	4-12
Piston, Piston Pin, Connecting Rod Wear Inspection	4-13
Exhaust Valve (KIPS)	4-14
Removal	4-14
Installation Notes	4-16
Muffler (Expansion Chamber, Silencer)	4-20
Removal	4-20
Installation Notes	4-20
Silencer Packing Change	4-20

4-2 ENGINE TOP END

Exploded View


KX125:

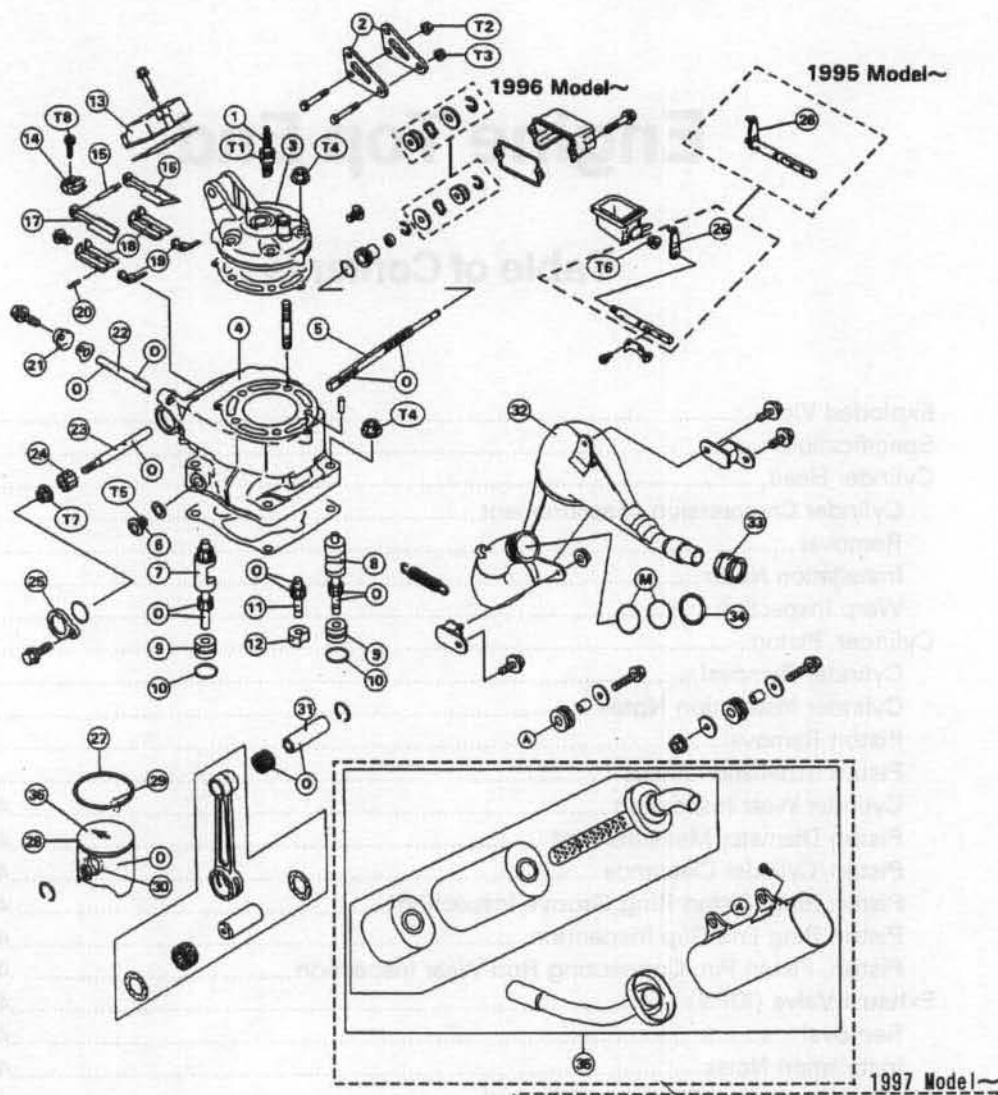

- | | |
|--------------------------------|--|
| 1. Spark Plug | 20. Pin |
| 2. Engine Bracket | 21. Main Valve Rod Cover |
| 3. Cylinder Head | 22. Main Valve Rod |
| 4. Cylinder | 23. Main Shaft |
| 5. Operating Rod | 24. Main Valve Gear |
| 6. Plug | 25. Main Shaft Cover |
| 7. Exhaust Valve (Left) | 26. Shaft Lever |
| 8. Exhaust Valve (Right) | 27. Piston Ring |
| 9. Guide | 28. Piston |
| 10. O-Ring | 29. "R" Mark |
| 11. Idel Gear | 30. "IN" Mark |
| 12. Guide | (1994 Model) |
| 13. Main Valve Cover | 31. Piston Pin |
| 14. Main Lever | 32. Expansion Chamber |
| 15. Pin | 33. Rubber Seal |
| 16. Main Exhaust Valve (Right) | 34. Gasket |
| 17. Main Exhaust Valve (Left) | 35. Silencer |
| 18. Valve Holder | 36. Arrow must point toward the front (1995 Model~). |
| 19. Main Exhaust Valve (small) | |

- O: Apply 2-stroke engine oil.
M: Apply molybdenum disulfide grease.
- T1: 27 N-m(2.8 kg-m, 20 ft-lb)
T2: 26 N-m(2.7 kg-m, 19.5 ft-lb)
T3: 39 N-m(4.0 kg-m, 29 ft-lb)
T4: 25 N-m(2.5 kg-m, 18.0 ft-lb)
T5: 22 N-m(2.2 kg-m, 16.0 ft-lb)
T6: 8.3 N-m(0.85 kg-m, 74 in-lb)
T7: 8.8 N-m(0.9 kg-m, 78 in-lb)
T8: 3.9 N-m(0.4 kg-m, 35 in-lb)

KX250:

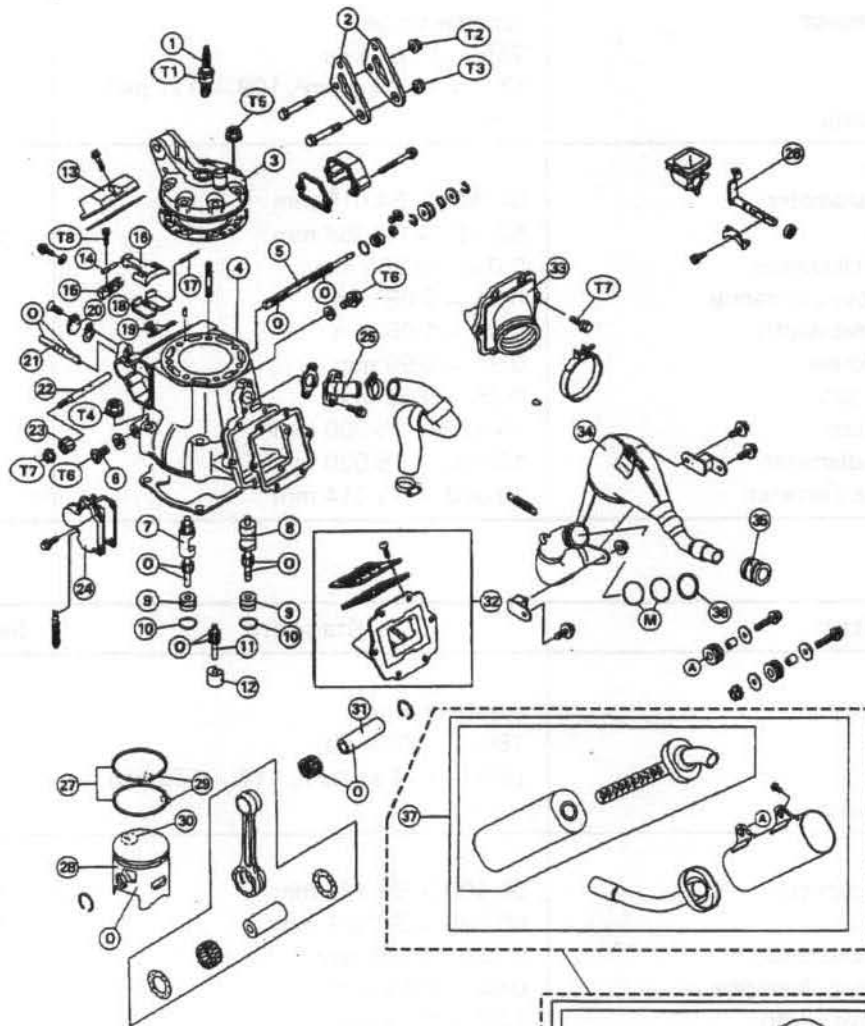

- 1. Spark Plug
- 2. Engine Bracket
- 3. Cylinder Head
- 4. Cylinder
- 5. Operating Rod
- 6. Plug
- 7. Exhaust Valve (Left)
- 8. Exhaust Valve (Right)
- 9. Guide
- 10. O-Ring
- 11. Idle Gear
- 12. Guide
- 13. Main Valve Cover
- 14. Pin
- 15. Main Lever
- 16. Main Exhaust Valve
- 17. Pin
- 18. Valve Holder
- 19. Main Exhaust Valve (Small)

- 20. Main Valve Rod Cover
- 21. Main Valve Rod
- 22. Main Shaft
- 23. Main Valve Gear
- 24. Main Shaft Cover
- 25. Elbow Fitting
- 26. Shaft Lever
- 27. Piston Ring
- 28. Piston
- 29. "R" Mark
- 30. Arrow must point toward the front
- 31. Piston Pin
- 32. Reed Valve
- 33. Carburetor Holder
- 34. Expansion Chamber
- 35. Rubber Seal
- 36. Gasket
- 37. Silencer

- M : Apply molybdenum disulfide grease.
- O : Apply 2-stroke engine oil.
- T1 : 27 N-m (2.8 kg-m, 20 ft-lb)
- T2 : 26 N-m (2.7 kg-m, 19.5 ft-lb)
- T3 : 39 N-m (4.0 kg-m, 29 ft-lb)
- T4 : 34 N-m (3.5 kg-m, 25 ft-lb)
- T5 : 25 N-m (2.5 kg-m, 18 ft-lb)
- T6 : 22 N-m (2.2 kg-m, 16.0 ft-lb)
- T7 : 8.8 N-m (0.9 kg-m, 78 in-lb)
- T8 : 3.9 N-m (0.4 kg-m, 35 in-lb)

1997 Model ~

4-4 ENGINE TOP END

Specifications

KX125:

Item	Standard	Service Limit
Cylinder Head:		
Cylinder compression	(usable range) 755 ~ 1 180 kPa (7.7 ~ 12.0 kg/cm ² , 109 ~ 171 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston:		
Cylinder inside diameter	54.000 ~ 54.015 mm	54.08 mm
Piston diameter	53.943 ~ 53.958 mm	53.82 mm
Piston/cylinder clearance	0.052~0.062 mm	---
Piston ring/groove clearance	0.04 ~ 0.08 mm	0.18 mm
Piston ring groove width	1.03 ~ 1.05 mm	1.10 mm
Piston ring thickness	0.97 ~ 0.99 mm	0.90 mm
Piston ring end gap	0.35 ~ 0.55 mm	0.90 mm
Piston pin diameter	14.995 ~ 15.000 mm	14.96mm
Piston pin hole diameter	15.000 ~ 15.020 mm	15.07 mm
Small end inside diameter	19.003 ~ 19.014 mm	19.05 mm

KX250:

Item	Standard	Service Limit
Cylinder Head:		
Cylinder compression	(usable range) 780 ~ 1 220 kPa (8.0 ~ 12.4 kg/cm ² , 114 ~ 176 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston:		
Cylinder inside diameter	66.400 ~ 66.415 mm	66.48 mm
Piston diameter	66.336 ~ 66.351 mm	66.23 mm
Piston/cylinder clearance	0.059~0.069 mm	---
Piston ring/groove clearance	0.04 ~ 0.08 mm	0.18 mm
Piston ring groove width	1.23 ~ 1.25 mm	1.30 mm
Piston ring thickness	1.17 ~ 1.19 mm	1.10 mm
Piston ring end gap	0.25 ~ 0.45 mm	0.80 mm
Piston pin diameter	17.995 ~ 18.000 mm	17.96mm
Piston pin hole diameter	18.000 ~ 18.020 mm	18.07 mm
Small end inside diameter	22.003 ~ 22.012 mm	22.05 mm


Special Tools – **Piston Ring Pliers: 57001-115**
Compression Gauge: 57001-221
Piston Pin Puller Assembly: 57001-910
Compression Gauge Adapter, M14 x 1.25: 57001-1159

Cylinder Head

Cylinder Compression Measurement

- Start the engine.
- Thoroughly warm up the engine so that the engine oil between the piston and cylinder wall will help seal compression as it does during normal running.
- Stop the engine.
- Turn the fuel tap lever to the OFF position.
- Remove the fuel tank.
- Remove the spark plug, and screw a compression gauge firmly into the spark plug hole.

Special Tools – **Compression Gauge: 57001-221 [A]**
Compression Gauge Adapter, M14 x 1.25:
57001-1159 [B]

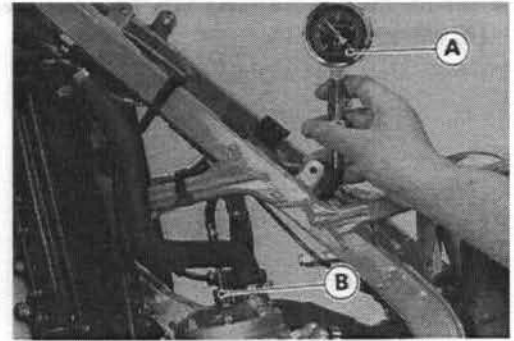

- With the throttle fully open, turn the engine over sharply with the kickstarter several times until the compression gauge stops rising; the compression is the highest reading obtainable.

Cylinder Compression

Usable Range:


KX125: 755 ~ 1 180kPa (7.7 ~ 12.0 kg/cm², 109 ~ 171 psi)

KX250: 780 ~ 1 220 kPa (8.0 ~ 12.4 kg/cm², 114 ~ 176 psi)

- ★ If cylinder compression is higher than the usable range, check the following:
 1. Carbon build-up on the piston head and cylinder head – clean off any carbon on the piston head and cylinder head.
 2. Cylinder head gasket, cylinder base gasket – use only the proper gaskets for the cylinder head and base. The use of gasket of the incorrect thickness will change the compression.
- ★ If cylinder compression is lower than the usable range, check the following:
 1. Piston/cylinder clearance, piston seizure.
 2. Gas leakage around the cylinder head – replace the damaged gasket and check the cylinder head for warping.
 3. Piston ring, piston ring groove.


Removal

- Drain the coolant (see Coolant Change in the Cooling System chapter).
- Remove:
 - Side Covers
 - Seat
 - Radiator Covers
 - Fuel Tank
 - Radiators
 - Muffler
 - Water Hoses
 - Spark Plug [A]
 - Engine Mounting Brackets [B]

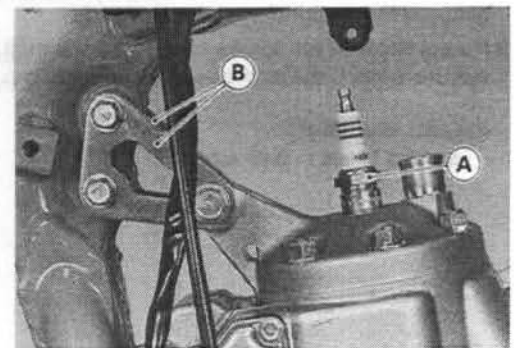

4-6 ENGINE TOP END

- Remove the cylinder head nuts [A], and take off the cylinder head [B] and gasket.

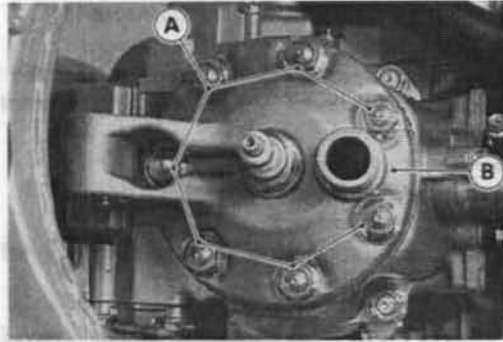

Installation Notes

- Replace the head gasket with a new one.
- Scrape out any carbon and clean the head with a high flash-point solvent.
- Check on a crust of minerals and rust in the head water jacket, and remove them if necessary.
- Torque the cylinder head nuts.
- Tighten the head nuts in a crisscross pattern.

Torque – Cylinder Head Nuts: 25 N-m (2.5 kg-m, 18 ft-lb)

- Torque the engine mounting bracket bolts.

Torque – Engine Mounting Bracket Bolts:
8 mm : 26 N-m (2.7 kg-m, 19.5 ft-lb)
10 mm : 39 N-m (4.0 kg-m, 29 ft-lb)

- Torque the spark plug.


Torque – Spark Plug: 27 N-m (2.8 kg-m, 20 ft-lb)

Warp Inspection

- Lay a straightedge [A] across the lower surface of the head at several different points, and measure warp by inserting a thickness gauge [B] between the straightedge and the head.
- ★ If warp exceeds the service limit, repair the mating surface. Replace the cylinder head if the mating surface is badly damaged.

Cylinder Head Warp

Service Limit: 0.03 mm

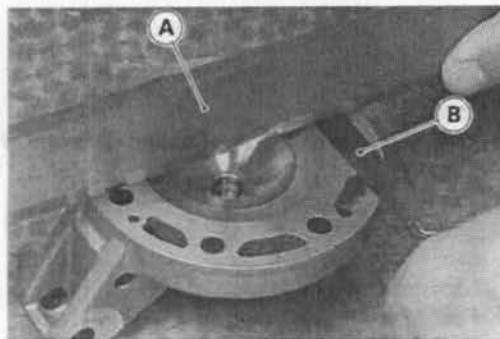

Cylinder, Piston


Cylinder Removal

- Drain the coolant.
- Remove the cylinder head (see Cylinder Head Removal).
- Loosen the clamps, and pull the carburetor out of the holder and the air cleaner duct.
- Remove the carburetor holder mounting bolts, and take out the holder and reed valve.
- Remove the water hoses.
- Remove the KIPS cover at the cylinder.

- Remove the shaft lever in accordance with the following procedure.


KX125:

- Remove the shaft lever nut [B] and take off the shaft lever [A].

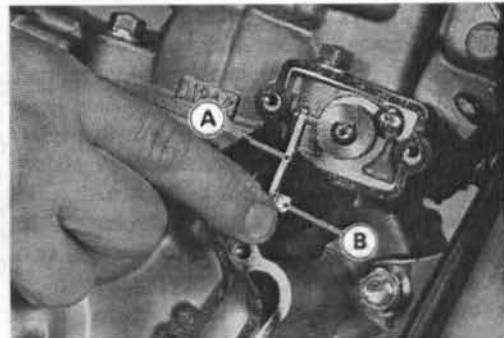


KX250:


- Remove the E-clip [A], flat washer [B] and wave washer [C] from the operating rod.

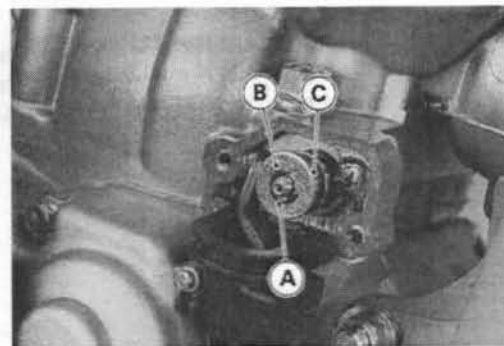

- Put a 9 mm spanner wrench [A] on the shaft lever upper end.
- Turn the shaft lever [B] counterclockwise with the wrench, and take off the operating rod collar [C] by pushing the operating rod into the cylinder.

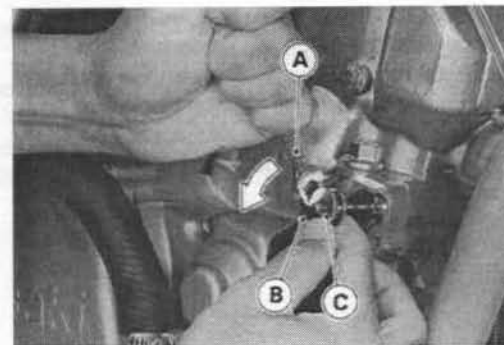


- Before pulling the shaft lever [A] free, turn the remaining E-clip [C] to a suitable position as shown in the figure to prevent the shaft lever boss [B] and the E-clip from hitting.

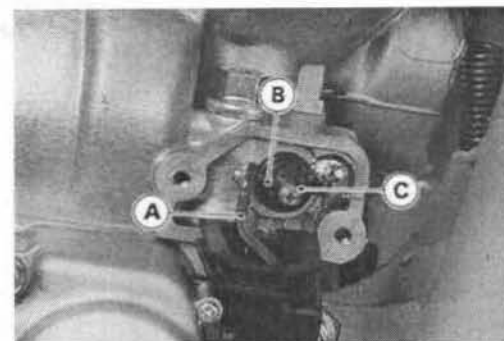

4-8 ENGINE TOP END

- Free the magneto output leads from the clamp at the left side of the cylinder.
- Remove the cylinder nuts.
- Lift off the cylinder, and remove the cylinder base gasket. If necessary, tap lightly around the base of the cylinder with a plastic mallet [A], taking care not to damage the cylinder.
- Remove the exhaust valves from the cylinder (see Exhaust Valve Removal).

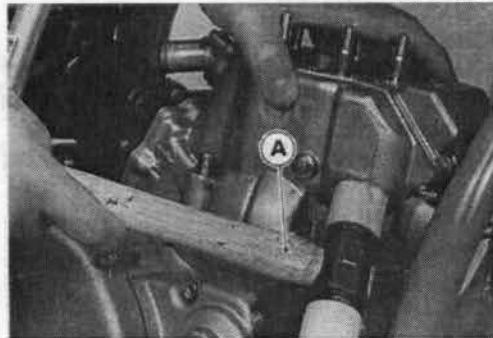

Cylinder Installation Notes

- Scrape any carbon out of the exhaust port.
- Check on a crust of minerals and rust in the cylinder water jacket, and remove them if necessary.
- Replace the cylinder base gasket with a new one.
- Apply engine oil to the piston surface, piston rings and cylinder bore.
- Check to see that the pin in each piston ring groove is between the ends of the piston ring, and fit the base of the cylinder over each ring, pressing in on opposite sides of the ring as necessary. Be certain that the rings do not slip out of the position.
- Torque the following:


Torque – Cylinder Nut:

KX125 : 25 N-m (2.5 kg-m, 18 ft-lb)


KX250 : 34 N-m (3.5 kg-m, 25 ft-lb)

Shaft Lever Nut (KX125) : 8.3 N-m (0.85 kg-m, 74 in-lb)

- For KX250, install the shaft lever and operating rod collar in accordance with the following procedure.
- Put a 9 mm spanner wrench on the shaft lever upper end.
- Turn the shaft lever counterclockwise with the wrench and fit the groove of the operating rod collar [A] to the boss of the shaft lever, and install the collar on the operating rod while holding the shaft lever clockwise.

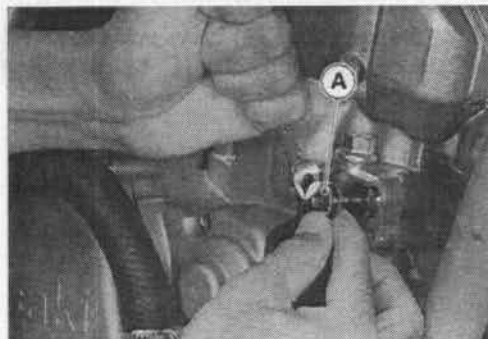


- After the collar installed, install the wave washer [B], flat washer [C], and E-clip [D] on the operating rod [A].

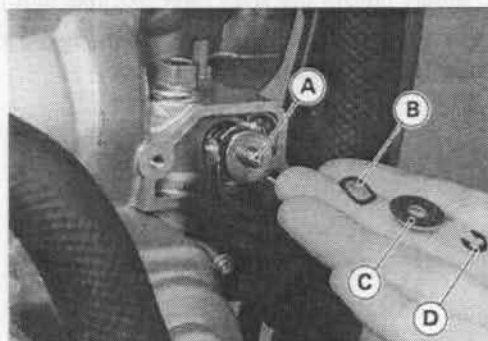

Piston Removal


- Remove the cylinder.
- Stuff a clean cloth into the crankcase opening around the connecting rod so that no parts will fall into the crankcase.
- Remove one of the piston pin snap rings with needle nose pliers.
- Remove the piston by pushing the piston pin out the side from which the snap ring was removed.

Special Tool – Piston Pin Puller Assembly: 57001-910 [A]

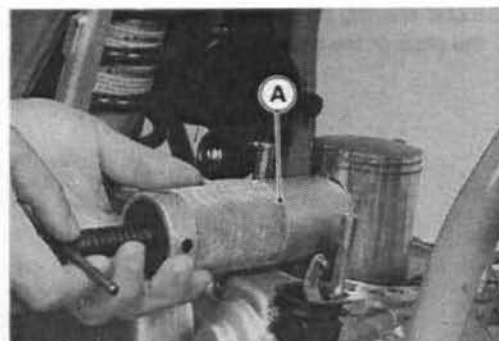

- Remove the piston ring (s).

Special Tool – Piston Ring Pliers: 57001-115 [A]

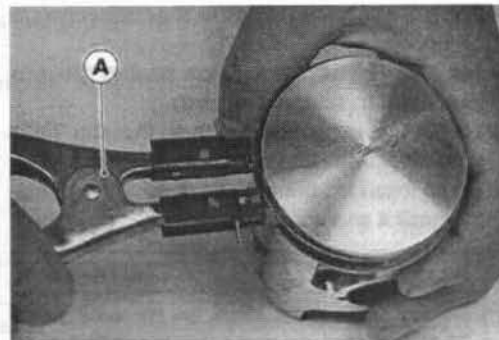

- If the special tool is not available, carefully spread the ring opening with your thumbs and then push up on the opposite side of the ring to remove it.




Piston Installation Notes

- Stuff a clean cloth into the crankcase opening around the connecting rod so that no parts will fall into the crankcase.
- Scrape off any carbon of the piston, then lightly polish the piston with fine emery cloth.
- Clean carbon and dirt out of the piston ring groove using a suitable tool.

CAUTION


<p>Carbon particles can be very abrasive to piston rings. Don't allow such particles to fall onto the cylinder walls.</p>
--

- When installing the piston ring on the piston, note the following:
 - If installing the piston ring by hand, first fit one end of the piston ring against the pin in the ring groove, spread the ring opening with the other hand and then slip the ring into the groove.
 - The piston ring has an "R" mark [A] on its upper surface.

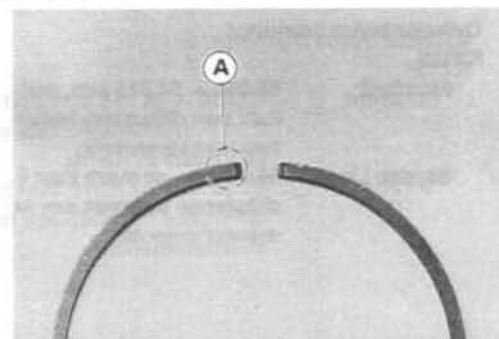

4-10 ENGINE TOP END


- Install the ring so that the pin [A] in the piston ring groove is between the ends of the piston ring.

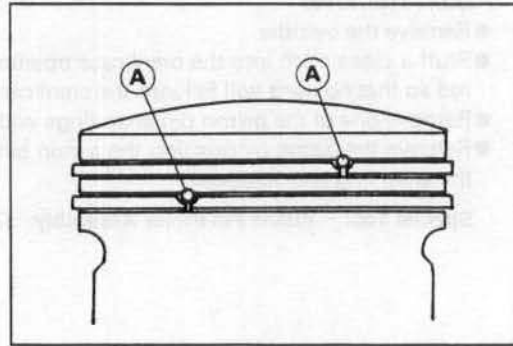


- Apply 2-stroke engine oil to the connecting rod needle bearing and the piston pin.
- For KX250, install the piston so that the arrow [A] on the top of the piston points toward the front.
- For KX125, install the piston so that the "IN" marked side [E] faces the right side of the engine.
- When installing the piston pin snap ring [B], compress it only enough to install it and no more.

CAUTION

Do not reuse snap rings, as removal weakens and deforms them. They could fall out and score the cylinder wall.

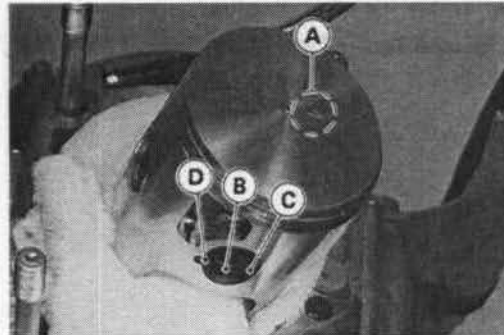


- Fit a new piston pin snap ring into the side of the piston so that the ring opening [C] does not coincide with the notch [D] in the edge of the piston pin hole.

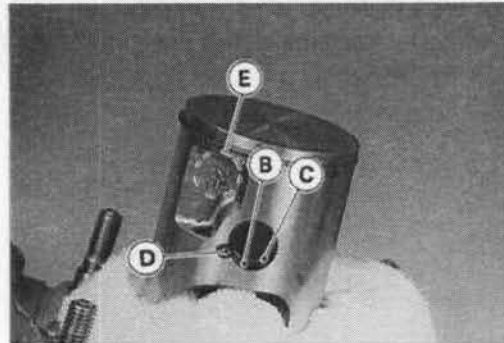

Cylinder Wear Inspection

NOTE

- Measure the cylinder inside diameter when the cylinder is cold (room or ambient temperature).
- Inspect the inside of the cylinder for scratches and abnormal wear.
- ★ If the cylinder is damaged or badly worn, replace it with a new one.
- Since there is a difference in cylinder wear in different directions, take a side-to-side and a front-to-back measurement shown in the figure.
- ★ If any of the cylinder inside diameter measurements exceeds the service limit, the cylinder must be replaced with a new one since the ELECTRO FUSION cylinder cannot be bored or honed.

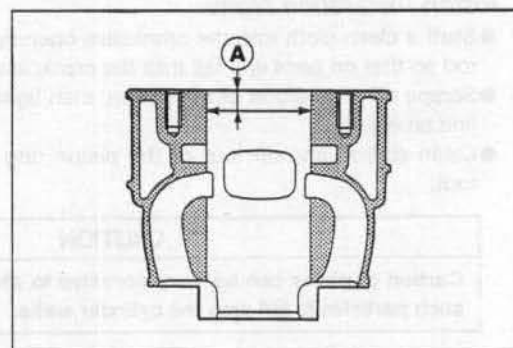

Cylinder Inside Diameter

KX125

Standard: 54.000 ~ 54.015 mm, and less than 0.01 mm difference between any two measurements.

Service Limit: 54.08 mm, or more than 0.05 mm difference between any two measurements.

KX250

Standard: 66.400 ~ 66.415mm, and less than 0.01 mm difference between any two measurements.

Service Limit: 66.48 mm, or more than 0.05mm difference between any two measurements.

(A): KX125 - 15 mm
KX250 - 30 mm

Piston Diameter Measurement

● Measure the outside diameter of the piston 10 mm (KX125) or 20.5 mm (KX250) [A] up from the bottom of the piston at a right angle to the direction of the piston pin.

★ If the measurement is under the service limit, replace the piston.

Piston Diameter**KX125**

Standard: 53.943 ~ 53.958 mm


Service Limit: 53.82 mm

KX250

Standard: 66.336 ~ 66.351 mm

Service Limit: 66.23 mm

(A): KX125 - 10 mm
KX250 - 20.5 mm

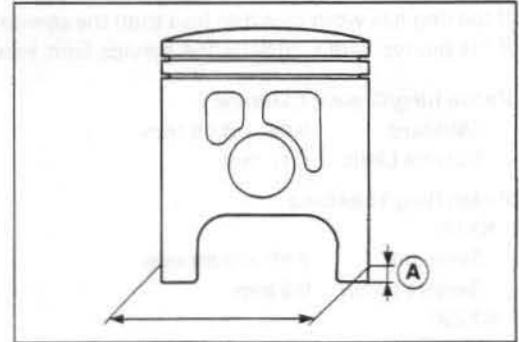**Piston/Cylinder Clearance**

The piston-to-cylinder clearance is measured whenever a piston or cylinder is replaced with a new one. The standard piston-to-cylinder clearance must be adhered to whenever the cylinder is replaced.

If only a piston is replaced, the clearance may exceed the standard slightly. But it must not be less than the minimum, in order to avoid piston seizure.

The most accurate way to find the piston clearance is by making separate piston and cylinder diameter measurements and then computing the difference between the two values. Measure the piston diameter as just described, and measure the cylinder diameter at the very bottom of the cylinder.


Piston/Cylinder Clearance**Standard:**

KX125: 0.052~0.062 mm

KX250: 0.059~0.069 mm

Piston Ring, Piston Ring Groove Inspection

- Visually inspect the piston rings and the piston ring grooves.
- ★ If the rings are worn unevenly or damaged, they must be replaced.
- ★ If the piston ring grooves are worn unevenly or damaged, the piston must be replaced and fitted with new rings.
- Check for uneven groove wear by inspecting the ring seating.
- ★ The rings should fit perfectly parallel to the groove surfaces. If not, the piston must be replaced.
- With the piston ring in its groove, make several measurements with a thickness gauge [A] to determine piston ring/groove clearance.
- ★ If the clearance exceeds the service limit, measure the thickness of the piston ring.
- ★ If the ring has worn down to less than the service limit, replace the ring; if the groove width exceeds the service limit, replace the piston.

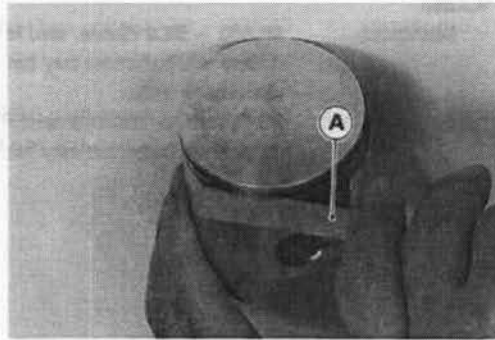

Piston Ring/Groove Clearance

Standard: 0.04 ~ 0.08 mm
Service Limit: 0.18 mm

Piston Ring Thickness

KX125

Standard: 0.97 ~ 0.99 mm
Service Limit: 0.9 mm

KX250

Standard: 1.17 ~ 1.19 mm
Service Limit: 1.10 mm

Piston Ring Groove Width

KX125

Standard: 1.03 ~ 1.05 mm
Service Limit: 1.10 mm

KX250

Standard: 1.23 ~ 1.25 mm
Service Limit: 1.30 mm

Piston Ring End Gap Inspection

- Place the piston ring [A] inside the cylinder [B], using the piston to locate the ring squarely in place.
- Set it close to the bottom of the cylinder, where cylinder wear is low.
- Measure the gap between the ends of the ring with a thickness gauge [C].
- ★ If the gap is wider than the service limit, the ring is overworn and must be replaced.


Piston Ring End Gap

KX125

Standard 0.35 ~ 0.55 mm
Service Limit: 0.90 mm


KX250

Standard: 0.25 ~ 0.45 mm
Service Limit: 0.80 mm

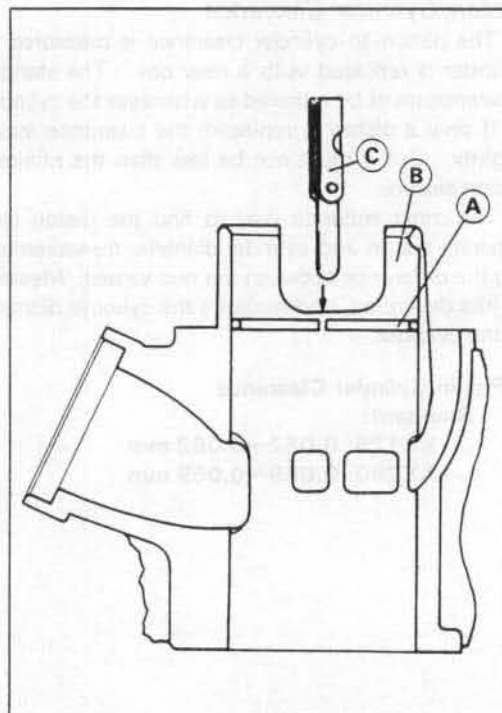

Piston, Piston Pin, Connecting Rod Wear Inspection

- Visually inspect the snap ring [A] still fitted in place.
- ★ If the ring shows weakness or deformation, replace the ring. Also if the pin hole groove shows excessive wear, replace the piston.
- Measure the diameter of the piston pin [B] with a micrometer.
- ★ If the piston pin diameter is less than the service limit at any point, replace the piston pin.
- Using a cylinder gauge, measure the diameter of both of piston pin holes in the piston and the inside diameter of the connecting rod small end.
- ★ If either piston pin hole diameter exceeds the service limit, replace the piston.
- ★ If the connecting rod small end inside diameter exceeds the service limit, replace the crankshaft assembly.

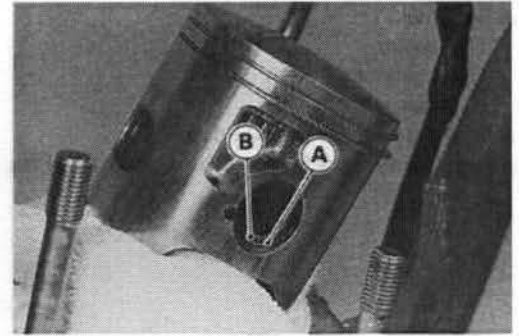**Piston Pin Diameter****KX125**

Standard:	14.995 ~ 15.000 mm
Service Limit:	14.96 mm

KX250

Standard:	17.995 ~ 18.000 mm
Service Limit:	17.96 mm

Piston Pin Hole Diameter**KX125**

Standard:	15.000 ~ 15.020 mm
Service Limit:	15.07 mm

KX250

Standard:	18.000 ~ 18.020 mm
Service Limit:	18.07 mm

Small End Inside Diameter**KX125**

Standard:	19.003 ~ 19.014 mm
Service Limit:	19.05 mm

KX250


Standard:	22.003 ~ 22.012 mm
Service Limit:	22.05 mm

4-14 ENGINE TOP END


Exhaust Valve (KIPS)

Removal

- Remove:
 - Carburetor
 - Cylinder Head
 - Cylinder
- Turn the cylinder up side down.
- Remove the plug [A] and the gasket [B] at the left side of the cylinder.

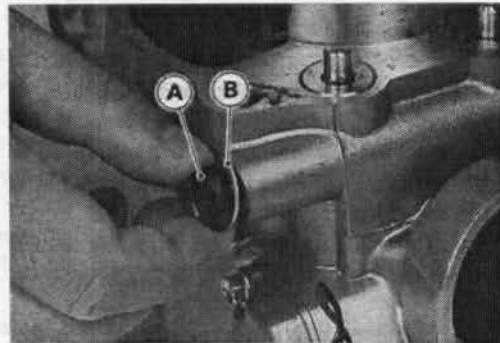


- Pull out the operating rod [A] as far as it goes.
- Remove the operating rod retaining screw [B].

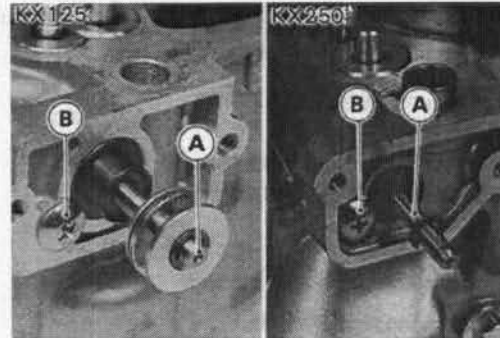

- Remove the exhaust valve in accordance with the following procedure.


KX125:

- Lift up and remove the right exhaust valve [A] with idle gear [B] and remove the valve guides [C].
- Lift up the left exhaust valve [D], and pull out the operating rod [F].
- Take out the left exhaust valve with valve guide [E].

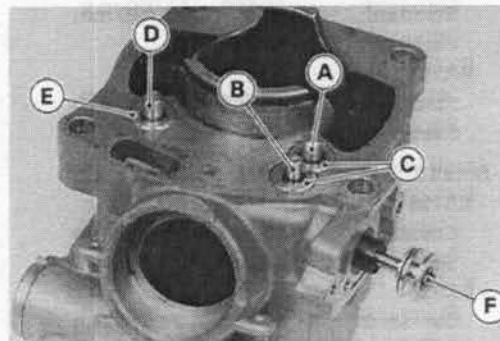


KX250:

- Remove the idle gear [B].
- Lift up the exhaust valves [A], and remove the valve guides [C].
- Lift up the exhaust valves, and pull out the operating rod [D]. Then take out the exhaust valves.

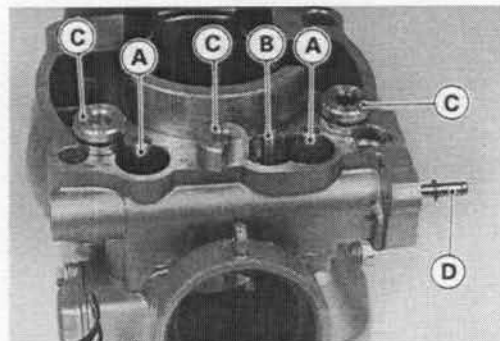


- Remove the main exhaust valve in accordance with the following procedure.

- Remove the main valve cover [A], main valve rod cover [B] and main shaft cover [C] from the cylinder.

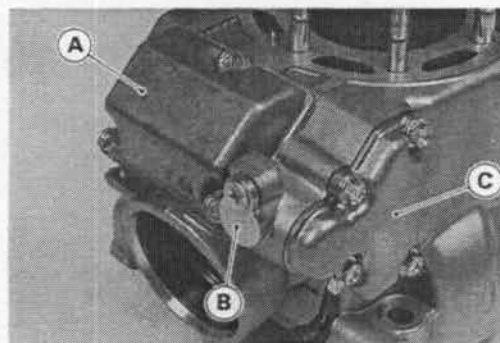


- Remove the main shaft nut [B] from the main shaft [A], and pull out the main valve gear [C].



CAUTION
Main shaft nut has left-hand threads.

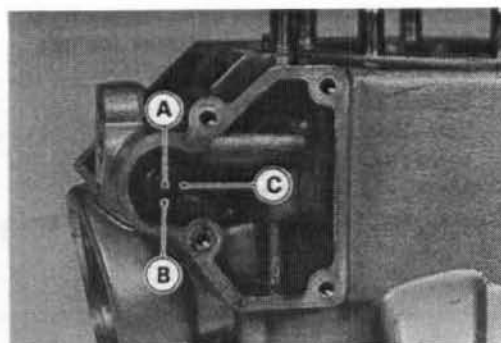

- Unbolt the Allen bolt [B] from the main lever [A].
- Position the main exhaust valve(s) full open, and pull out the main shaft [C].
- Set the main exhaust valve(s) full closed position, and remove the main lever.

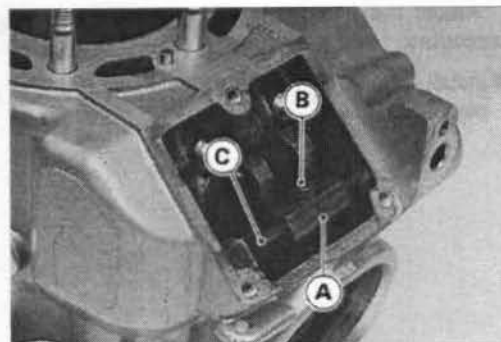

- Unscrew the two main exhaust valve retaining screws [A].
- Take out the pin [C] from the main exhaust valve(s) [B].
- Pull out the main exhaust valve(s) and main valve rod [D] from the cylinder.

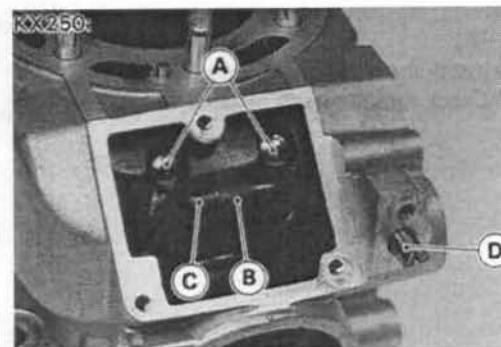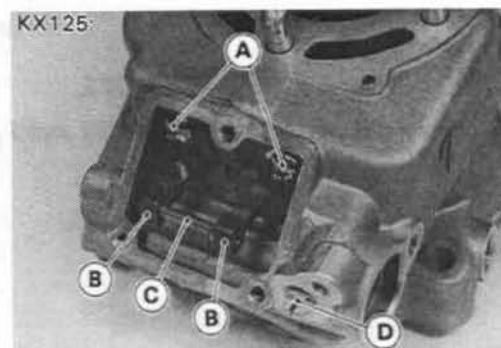

Installation Notes


- Scrape out any carbon and clean the valves with a high flash-point solvent.
- Check the following for signs of damage:
 - Exhaust Valves and Valve Operating Rod
 - Oil Seal on Rod Seal Plug
 - O-rings
 - Gaskets
- ★ If necessary, replace them with new ones.

4-16 ENGINE TOP END

- Apply a 2-stroke engine oil to the following:


- Exhaust Valve Upper and Lower Journals
- Exhaust Valve Pinions [A]
- Valve Guides (inside)
- Valve Operating Rod Journals
- Valve Operating Rod Rack
- Main Exhaust Valve Parts

- Apply high temperature grease to the oil seal lip on the operating rod.

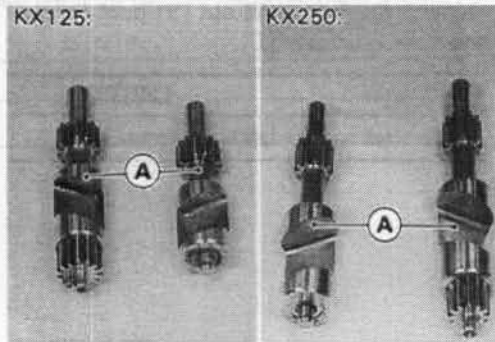

Adjust the exhaust valve position in accordance with the following procedure.

- Install each small main exhaust valve [A] on the valve holder [B] with pin [C].

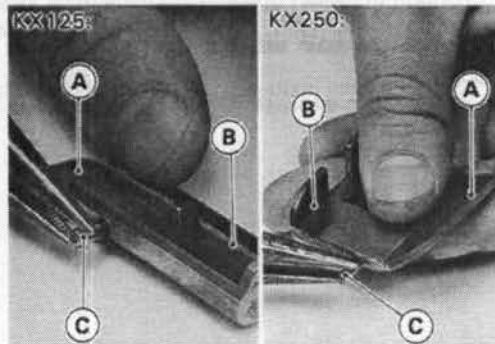


- Put the main exhaust valve(s) [B] on the groove of the valve holder [A].

NOTE


○ Be careful not to mix up the right and left main exhaust valves (KX125).

- C. Left Main Exhaust Valve
- D. Right Main Exhaust Valve

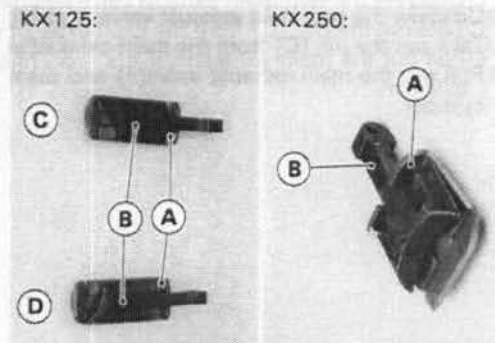


- Insert the main exhaust valve sets [B] into their holes in the cylinder [A].


- Install the retaining screws [C] securely.
- Check that the main exhaust valve(s) slide smoothly.

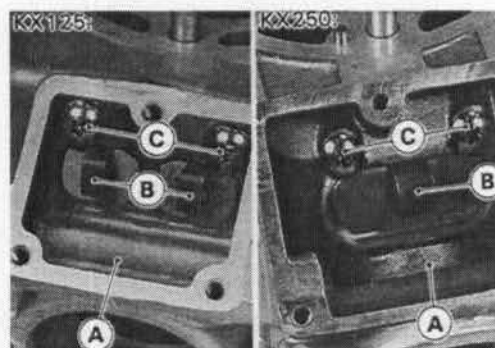

- Put the pin [A] in the main exhaust valve hole(s).
- Fit the main lever [B] to the pin.

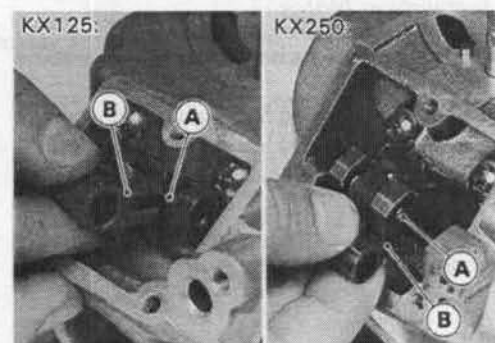


- Insert the main shaft [A] in the hole of the left upper end at the cylinder and through the hole in the main lever [B]. Then put the main shaft into the cylinder hole.

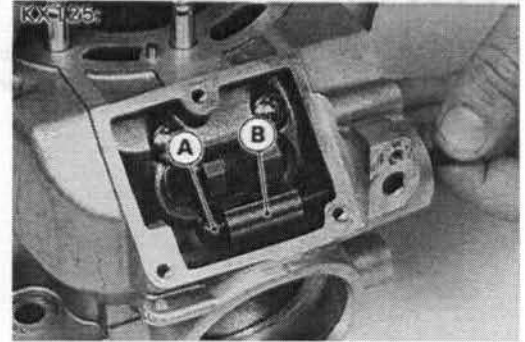


- Fix the main lever [B] to the main shaft [A] with the Allen bolt [C].

Torque – Allen Bolt : 3.9 N-m (0.4 kg-m, 35 in-lb)


- Check that the main exhaust valves slide smoothly.

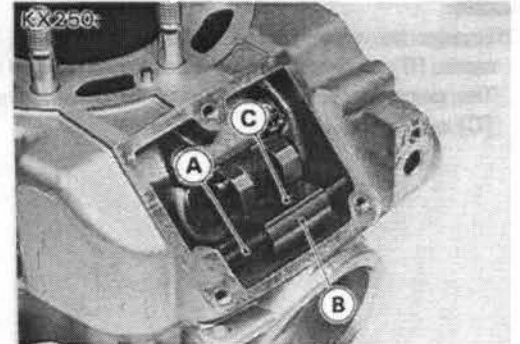

- Install the main valve rod [A] in the cylinder so that the grooved side [B] faces outward.

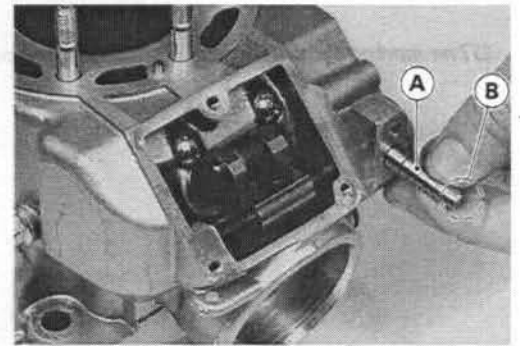


- Turn the cylinder upside down.
- Push the main valve rod as far as it will go.
- Insert the exhaust valves in the cylinder. The right exhaust valve [A] is smaller than left exhaust valve, and it has two marked teeth [B] (KX125).
- Engage the left exhaust valve pinion with the main valve rod rack so that the marked tooth on the pinion is positioned toward the front of the engine.

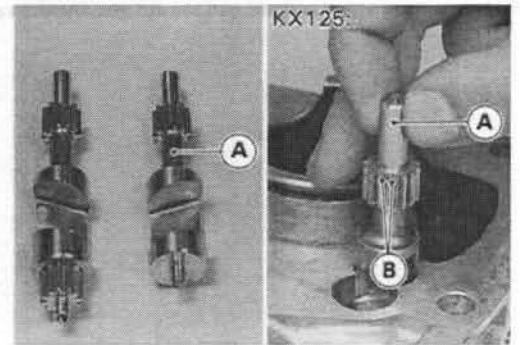


KX125:

- Lifting the left exhaust valve, insert the operating rod and engage the left exhaust valve pinion with the operating rod rack so that the marked tooth [A] on the pinion aligns with the groove [B] on the rod.

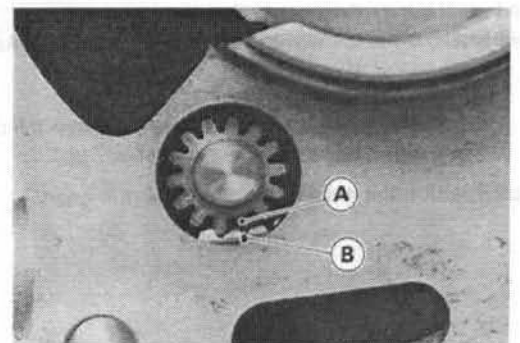


4-18 ENGINE TOP END

- Install the right exhaust valve and idle gear so that the marked tooth [A] on the idle gear pinion is between the marked teeth [B] on the right exhaust valve pinion. At this time, the marked tooth [C] on the opposite side of the idle gear pinion should align with the groove [D] on the rod.

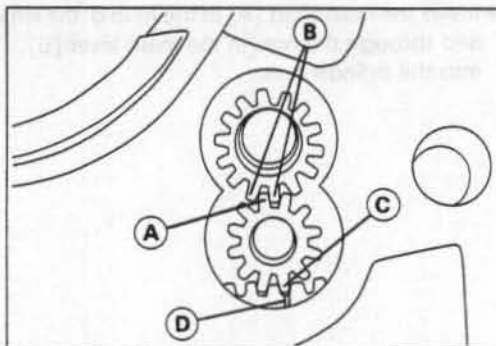


KX250:

- Engage the valve pinions with the rod rack [A] so that the punch marks [B] on the pinions are positioned toward the front of the engine. The punch mark on the valve pinions should align with the grooves [C] on the rod.

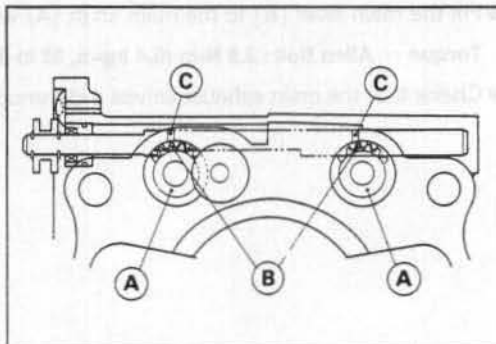


NOTE

- The marked tooth [A] is identified by its shape also.

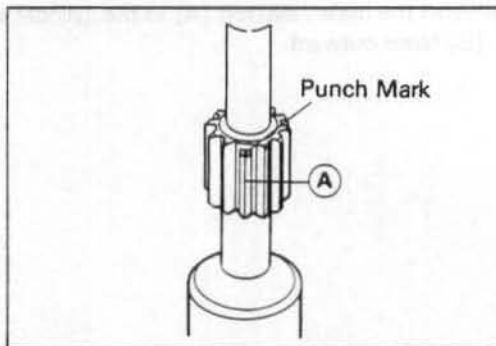


- Mount the valve guides [B, D] on the exhaust valves [A] and idle gear [C].

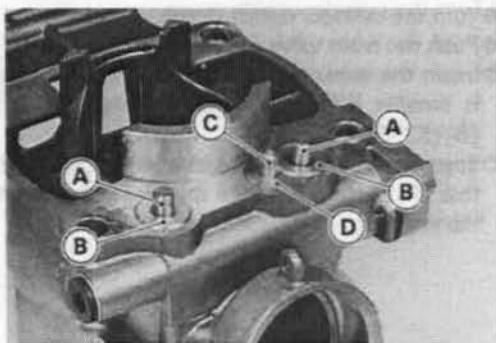

- Turn the cylinder upside down.
- Install the main valve rod cover [A] except gasket.

NOTE

- Install the main valve rod cover to prevent the main valve rod moving out when tightening the main shaft nut.
- Position the main exhaust valve(s) full open.

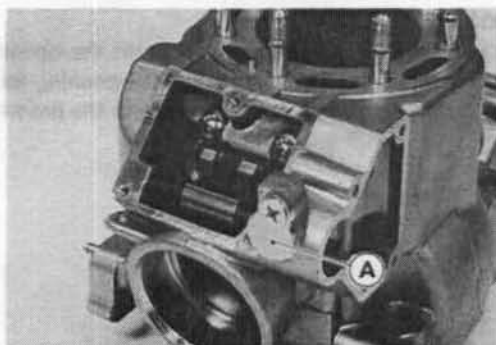


- Check the exhaust valves are in the full open position.
- Install the main valve gear [B] and nut [C] on the main shaft [A], and tighten the nut.


CAUTION

Main shaft nut has left-hand threads.
--

Torque – Main Shaft Nut : 8.8 N-m (0.9 kg-m, 78 in-lb)

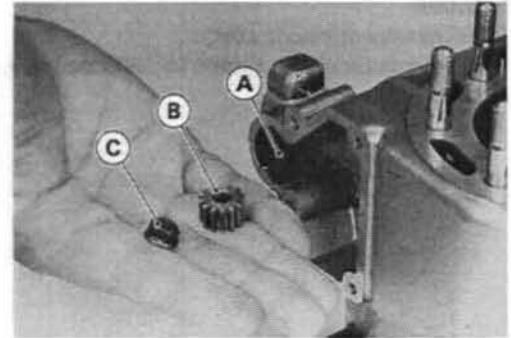

- Remove the main valve rod cover.
- With the main exhaust valve(s) full open, check that the end of the main valve rod and cylinder are aligned with [A].

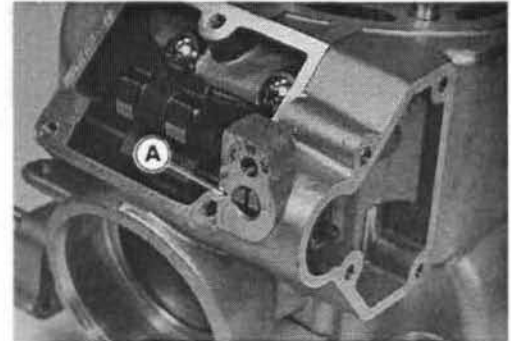

- Check the gasket on the left plug for signs of damaged.
- ★ If necessary replace it with a new one.
- Install the left plug on the cylinder.

Torque – Operating Rod Left Side Plug : 22 N-m (2.2 kg-m, 16.0 ft-lb)

- Install the retaining screw securely.
- Install the main valve cover, main valve rod cover and main shaft cover on the cylinder.


Torque – Cover Bolts : 8.8 N-m (0.9 kg-m, 78 in-lb)

4-20 ENGINE TOP END


Muffler (Expansion Chamber, Silencer)

Removal


- Remove the right side cover.
- Remove the mounting bolts [B] and pull the silencer [A] off toward the rear.

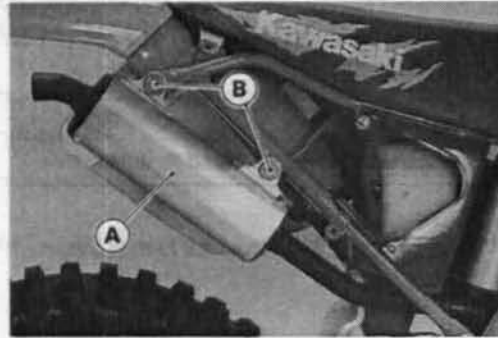

- Remove the exhaust pipe holding springs [A].

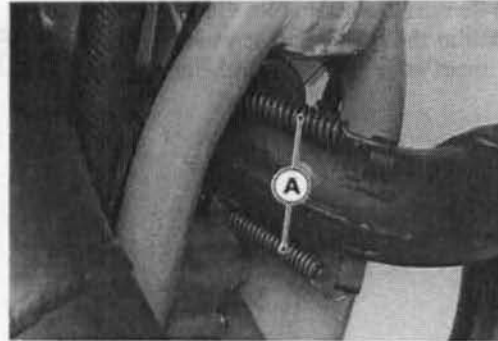

- Remove the muffler damper mounting bolts [A], and pull off the expansion chamber toward the front.
- Remove the exhaust gasket.

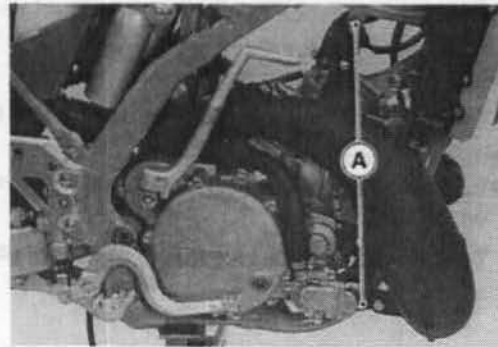


Installation Notes

- Scrape any carbon out of the expansion chamber.
- Check the exhaust O-rings for signs of damage.
- ★ If necessary, replace them with new ones.


Silencer Packing Change

Replace the silencer packing if the exhaust noise becomes too loud or the engine performance drops.

- Remove the silencer.
- Remove the inner pipe mounting bolts [A], and pull the inner pipe [B] out toward the rear.

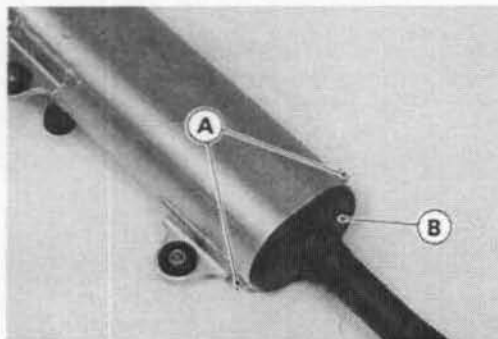

- Pull off the old silencer packing, and install the new silencer packing [A] into the silencer.
- Install the inner pipe into the silencer.
- Install the silencer.

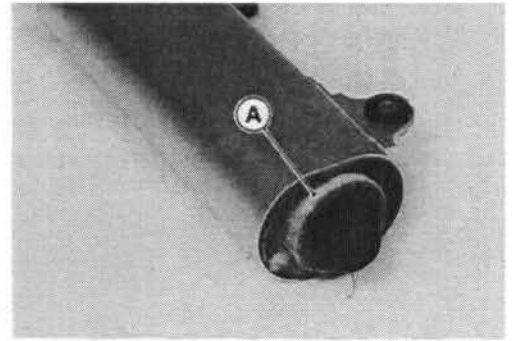

Engine Right Side


Table of Contents

Exploded View	5-2
Specifications	5-4
Clutch Cable	5-5
Free Play Check	5-5
Free Play Adjustment	5-5
Removal	5-5
Installation	5-6
Lubrication and Inspection	5-6
Clutch Cover	5-7
Clutch Cover Removal	5-7
Clutch Cover Installation Notes	5-7
Right Engine Cover	5-8
Removal	5-8
Installation Notes	5-9
Disassembly	5-11
Exhaust Advancer Disassembly/Assembly Notes	5-11
Assembly Notes	5-12
Clutch	5-13
Removal	5-13
Installation Notes	5-14
Friction and Steel Plates Wear, Damage Inspection	5-15
Friction and Steel Plate Warp Inspection	5-15
Spring Free Length Measurement	5-15
Friction Plate/Clutch Housing Clearance	5-15
Clutch Hub Spline Inspection	5-16
External Shift Mechanism	5-17
Removal	5-17
Installation Notes	5-17
Inspection	5-17
Primary Gear	5-19
Removal	5-19
Installation Notes	5-19
Kickstarter	5-20
Removal	5-20
Disassembly/Assembly Notes	5-20
Idle Gear Removal	5-21
Idle Gear Installation Notes	5-21

5-2 ENGINE RIGHT SIDE

Exploded View

KX125:

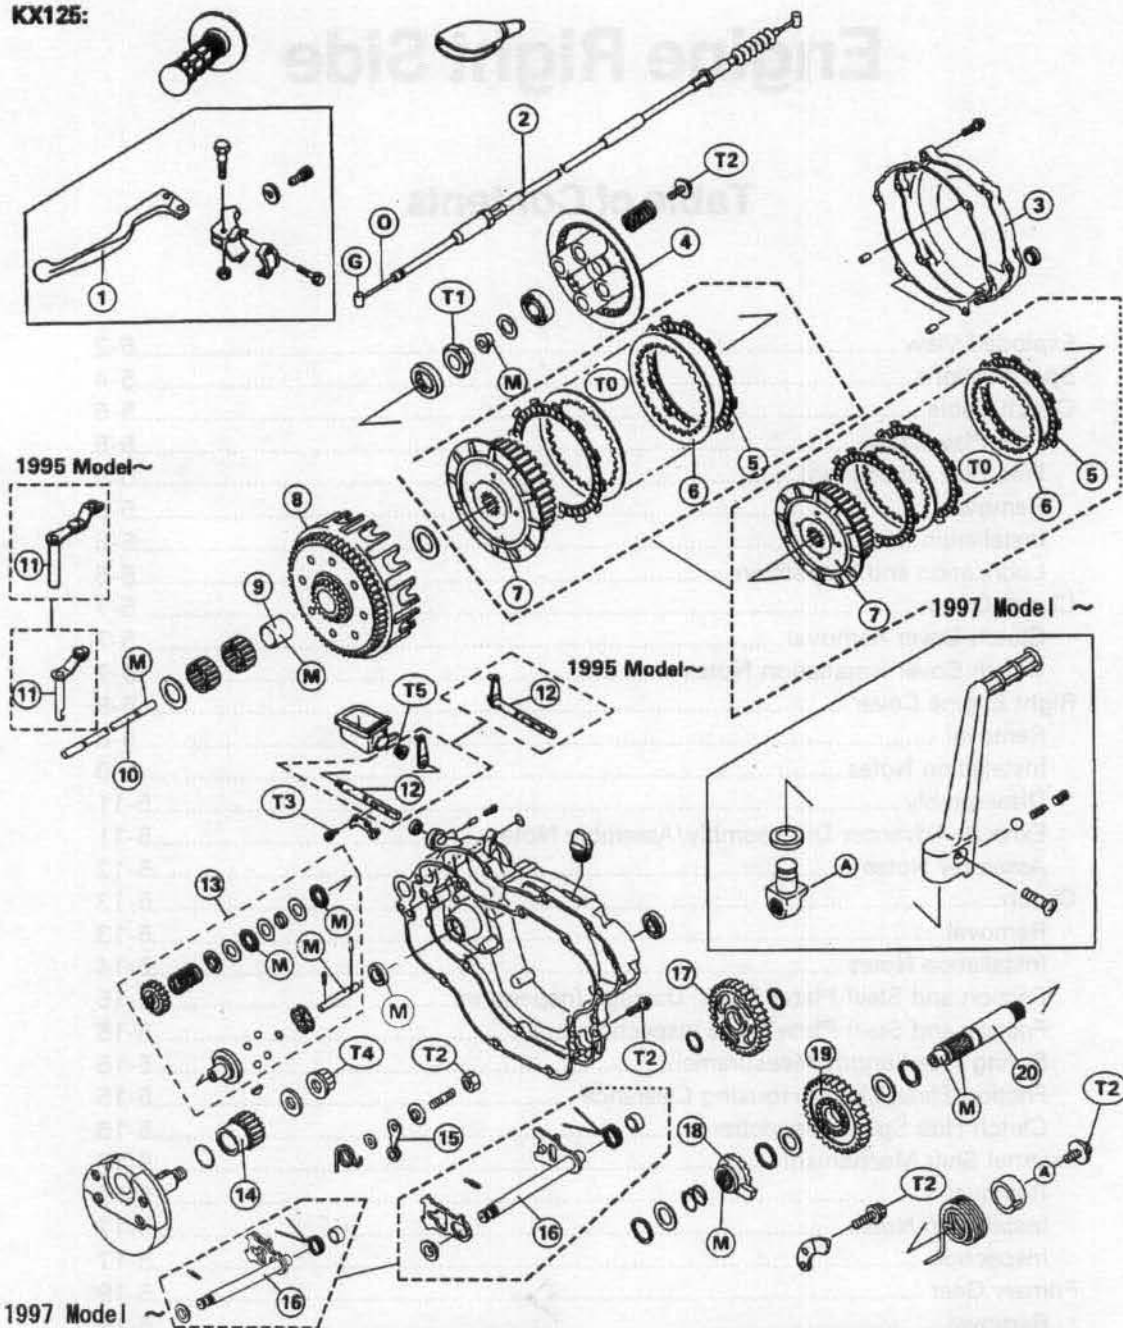


1997 Model

- 1. Clutch Lever
- 2. Clutch Cable
- 3. Clutch Cover
- 4. Operating Plate
- 5. Friction Plate
- 6. Steel Plate
- 7. Clutch Hub
- 8. Clutch Housing
- 9. Sleeve
- 10. Push Rod

- 11. Release Lever Shaft
- 12. Lever Shaft
- 13. Exhaust Advancer
- 14. Primary Gear
- 15. Gear Set Lever
- 16. Shift Shaft
- 17. Kickstarter Idle Gear
- 18. Ratchet Gear
- 19. Kick Gear
- 20. Kick Shaft

- M : Apply molybdenum disulfide grease.
- G : Apply high temperature grease.
- O : Apply Oil
- T0 : Apply transmission oil
- T1 : 98 N-m (10.0 kg-m, 72 ft-lb)
- T2 : 8.8 N-m (0.9 kg-m, 78 in-lb)
- T3 : 3.9 N-m (0.4 kg-m, 35 in-lb)
- T4 : 59 N-m (6.0 kg-m, 43 ft-lb)
- T5 : 8.3 N-m (0.85 kg-m, 74 in-lb)

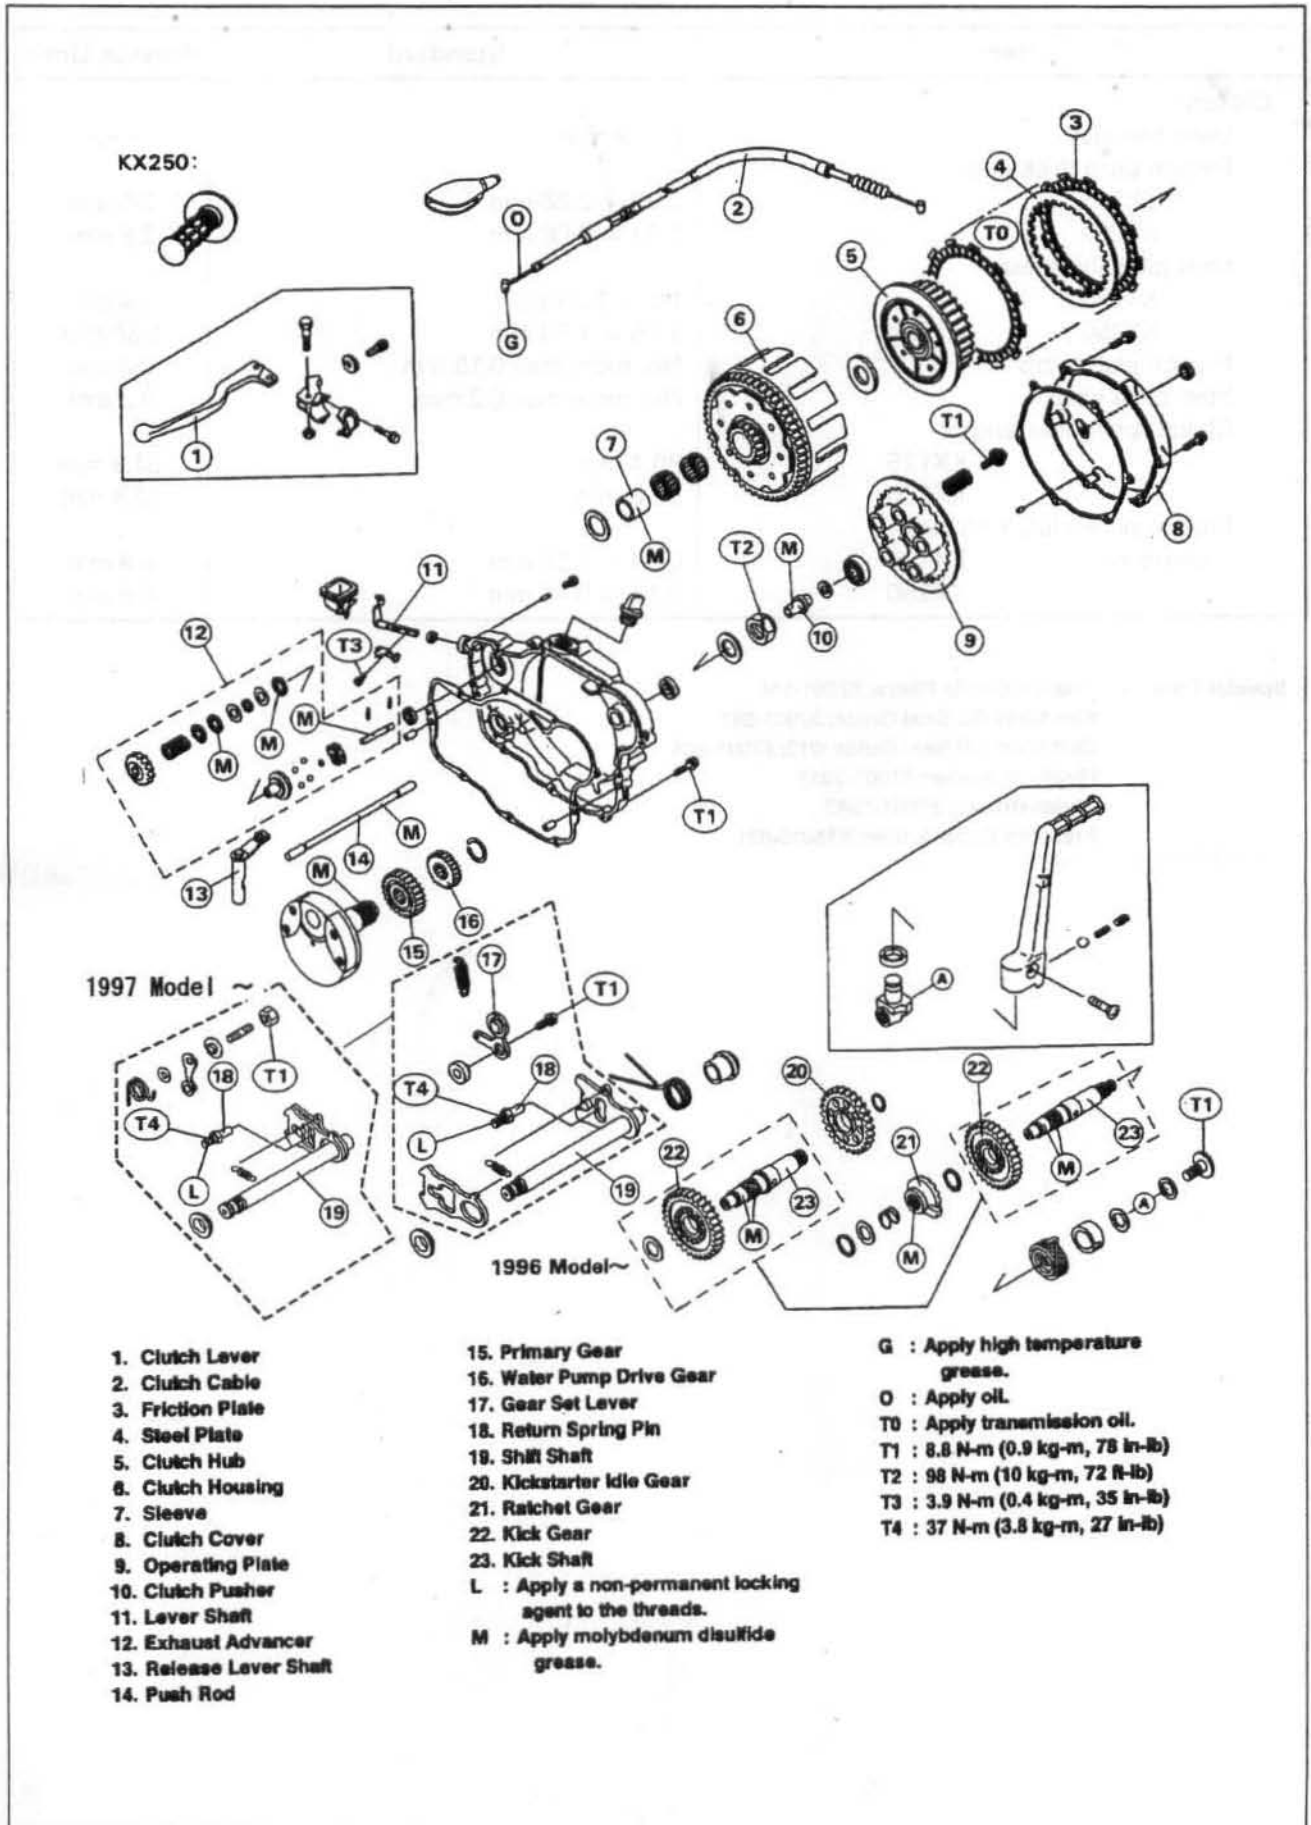

5-4 ENGINE RIGHT SIDE

Specifications

Item	Standard	Service Limit
Clutch:		
Lever free play	2 ~ 3 mm	---
Friction plate thickness:		
KX125	2.72 ~ 2.88 mm	2.6 mm
KX250	2.92 ~ 3.08 mm	2.8 mm
Steel plate thickness:		
KX125	1.5 ~ 1.7 mm	1.4 mm
KX250	1.46 ~ 1.74 mm	1.36 mm
Friction plate warp	Not more than 0.15 mm	0.3 mm
Steel plate warp	Not more than 0.2 mm	0.3 mm
Clutch spring free length:		
KX125	36.4 mm	34.9 mm
KX250	35.0 mm	33.6 mm
Friction plate/clutch housing clearance:		
KX125	0.04 ~ 0.55 mm	0.9 mm
KX250	0.15 ~ 0.45 mm	0.8 mm

Special Tools –

- Outside Circlip Pliers: 57001-144
- Kick Shaft Oil Seal Guide: 57001-267
- Shift Shaft Oil Seal Guide $\phi 13$: 57001-264
- Flywheel Holder: 57001-1313
- Clutch Holder: 57001-1243
- Pressure Cable Luber: K56019-021



Clutch Cable


Due to friction plate wear and clutch cable stretch over a long period of use, the clutch must be adjusted in accordance with the Periodic Maintenance Chart.

⚠ WARNING

To avoid a serious burn, never touch the hot engine or exhaust chamber during clutch adjustment.

Free Play Check

- Slide the clutch lever dust cover [B] out of place.
- Check that the clutch cable upper end is fully seated in the adjuster [D].
- Check that the clutch lever [A] has 2 ~ 3 mm of play [E].
- ★ If it does not, adjust the lever play

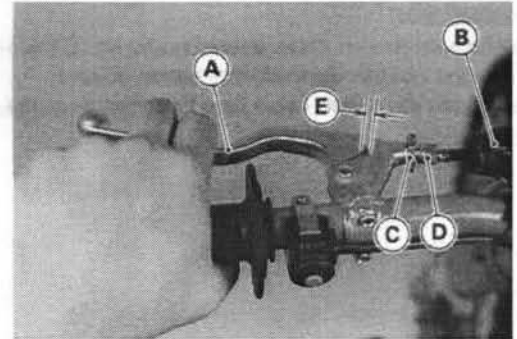


Free Play Adjustment

- Slide the clutch lever dust cover out of place.
- Loosen the knurled locknut [C].
- Turn the adjuster so that the clutch lever will have 2 ~ 3 mm of play.

NOTE


○ Be sure that the outer cable end at the clutch lever is fully seated in the adjuster at the clutch lever, or it could slip into the place later, creating enough cable play to prevent clutch disengagement.

- Tighten the locknut.
- If it cannot be done, loosen the locknut [B] at the upper part of the clutch cable, and turn the adjusting nut [A] so that clutch lever has 2 ~ 3 mm of play.
- After the adjustment is made, tighten the locknut, and start the engine and check that the clutch does not slip and that it releases properly.

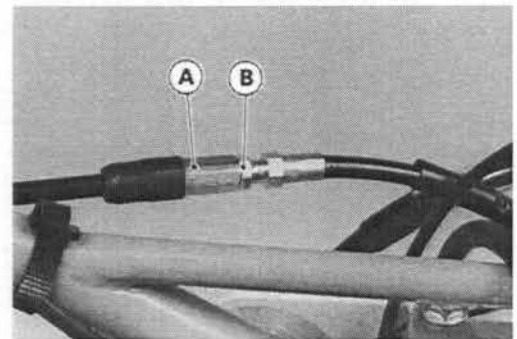

Removal

- Slide the dust cover out of place.
- Loosen the locknut at the upper part of the cable, and turn the adjusting nut to give the cable plenty of play.
- Loosen the knurled locknut [B] at the clutch lever, and screw in the adjuster [A].
- Line up the slots [C] in the clutch lever, knurled locknut, and adjuster, and then free the cable from the clutch lever.

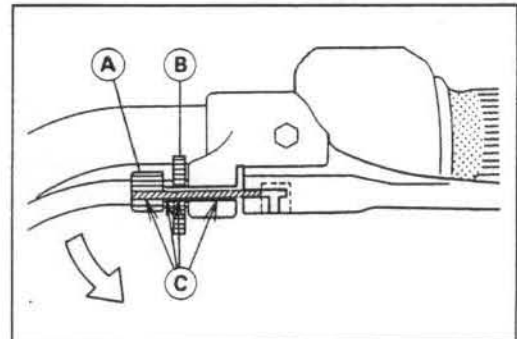

5-6 ENGINE RIGHT SIDE

- Free the clutch inner cable tip from the clutch release lever.

CAUTION

Do not remove the clutch release shaft unless it is absolutely necessary. If removed, release shaft oil seal must be replaced with a new one.



- Pull the clutch cable out of the frame.

Installation

- Run the clutch cable according to the Cable, Harness, Hose Routing section of the General Information chapter.
- Adjust the clutch cable (see Free Play Adjustment).


Lubrication and Inspection

- Lubricate the clutch cable using the pressure cable luber (special tool: K56019-021) [A] in accordance with the Periodic Maintenance Chart.
- With the cable disconnected at both ends, the cable should move freely within the cable housing (see General Lubrication in the Appendix chapter).


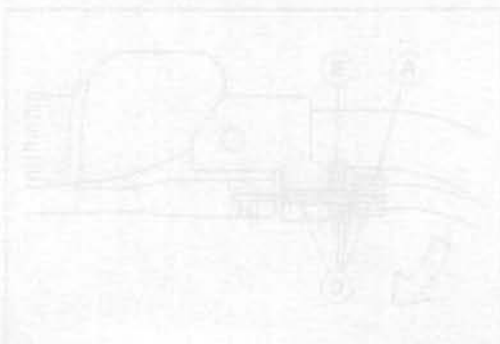
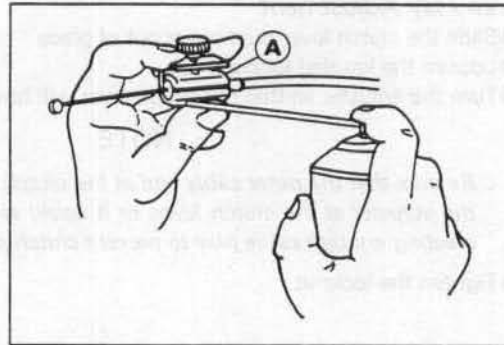


Clutch Cover**Clutch Cover Removal**

- Drain the transmission oil (see Transmission Oil Change in the Engine Bottom End/Transmission chapter).
- Remove the brake pedal (see Brake Pedal Removal in the Brake chapter).
- Unbolt the clutch cover bolts [A], and take off the clutch cover [B].

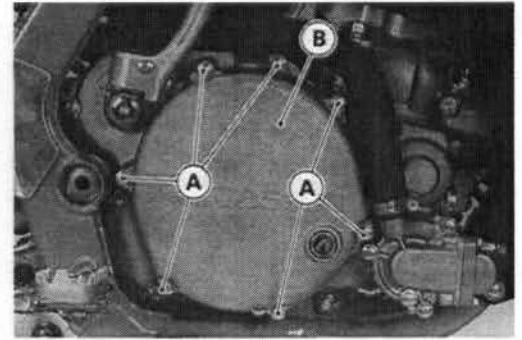**Clutch Cover Installation Notes**

- There are two knock pins on the mating surfaces of the right engine cover and clutch cover.
- Replace the clutch cover gasket with a new one.

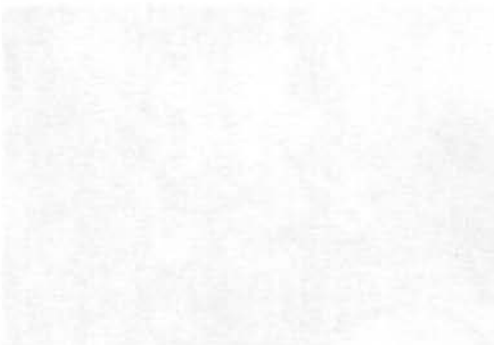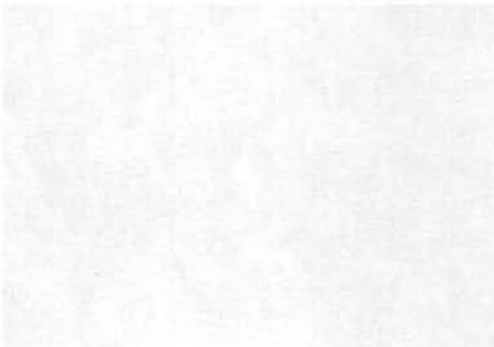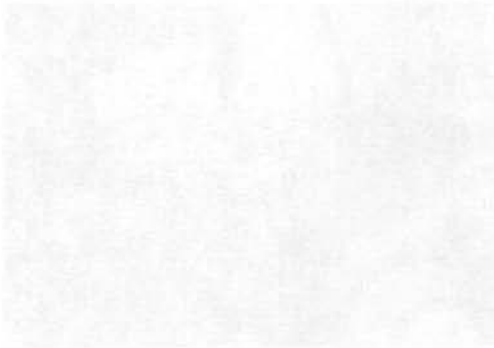

5-8 ENGINE RIGHT SIDE

Right Engine Cover


Removal

- Remove:
 - Transmission Oil (drain)
 - Coolant (drain)
 - Cooling Hose Lower End
 - Kick Pedal
 - Brake Pedal
 - Water Pump Cover
 - Impeller
 - Muffler (KX250)

- Remove the KIPS cover from the right side of the cylinder.
- Remove the shaft lever in accordance with the following procedure.


KX125:

- Remove the shaft lever nut [B] and take off the shaft lever [A].

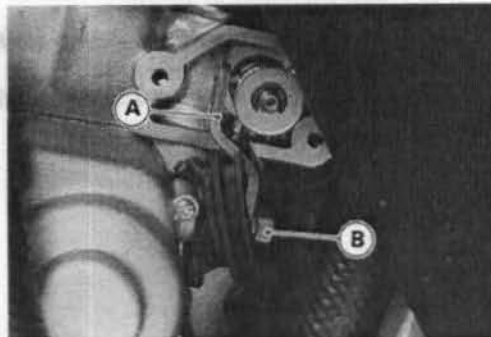


KX250:


- Remove the E-clip [A], flat washer [B] and wave washer [C] from the operating rod.

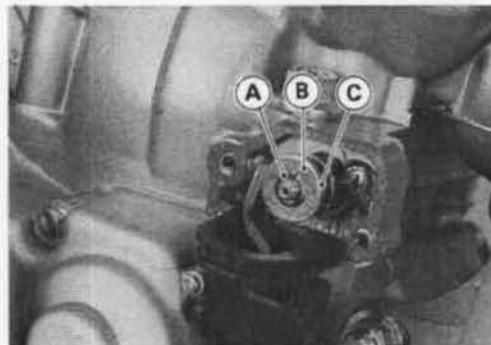


- Put a 9 mm spanner wrench [A] on the shaft lever upper end.
- Turn the shaft lever [B] counterclockwise with the wrench, and take off the operating rod collar [C] by pushing the operating rod into the cylinder.

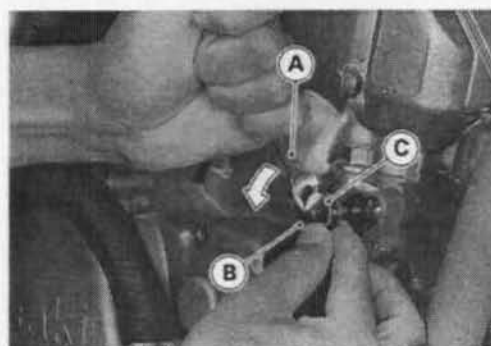

- Before pulling the shaft lever [A] free, turn the remaining E-clip [C] to a suitable position as shown in the figure to prevent the shaft lever boss [B] and the E-clip from hitting.

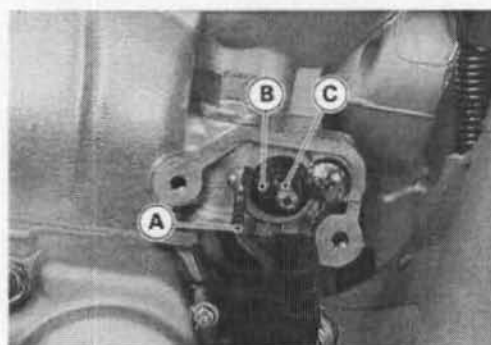

- Remove the right engine cover bolts and take off the right engine cover [A] and gasket.

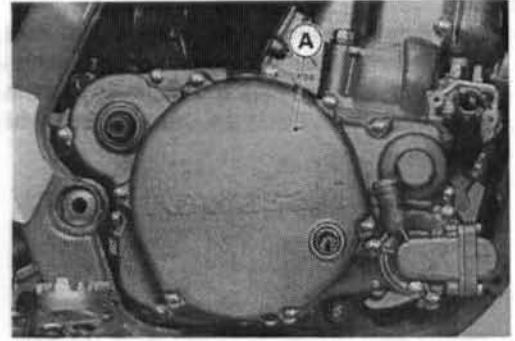


Installation Notes

- There are two knock pins on the mating surfaces of the crankcase and right engine cover.
- In case the exhaust advancer assembly has been removed, install it and turn the gear so as to level the gear drive pin [A].


CAUTION

If the gear drive pin is not positioned level, it may fall out when installing the right engine cover.

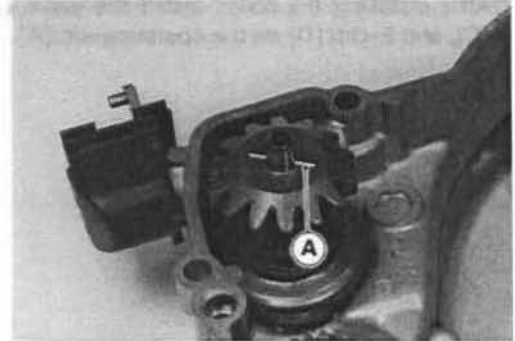

- Install the right engine cover using the kick shaft oil seal guide [A] to protect the cover oil seal.

Special Tool – Kick Shaft Oil Seal Guide: 57001-267

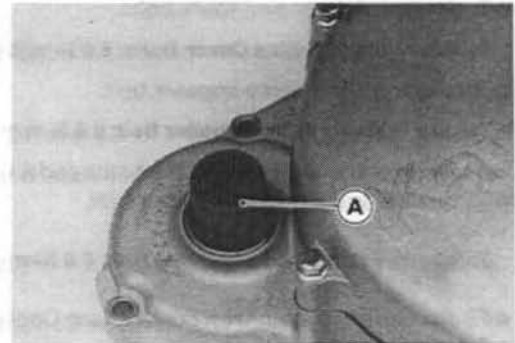


- Install the shaft lever and operating rod collar in accordance with the following procedures.

KX125:

- Fit the shaft lever boss [A] in the groove of the valve operating rod collar [B], and install the shaft lever [C] on the lever shaft.
- Torque the shaft lever nut [D].

NOTE

- Tighten the shaft lever nut while holding the valve operating rod all the way in.

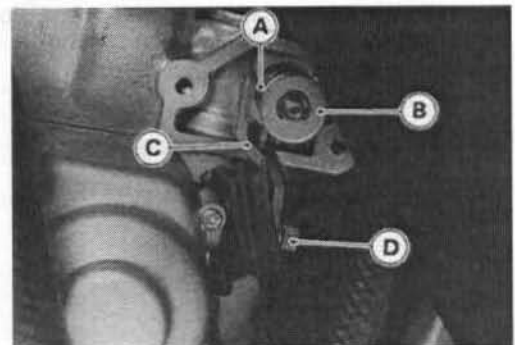


Torque – Shaft Lever Nut: 8.3 N-m (0.85 kg-m, 74 in-lb)


5-10 ENGINE RIGHT SIDE

KX250:

- Put a 9 mm spanner wrench on the shaft lever upper end.
- Turn the shaft lever counterclockwise with the wrench and fit the groove of the operating rod collar [A] to the boss of the shaft lever, and install the collar on the operating rod while turning the shaft lever clockwise.

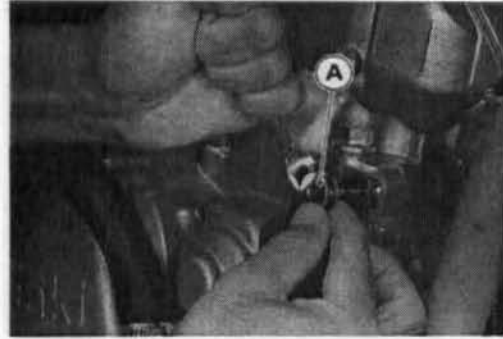

- After installing the collar, install the wave washer [B], flat washer [C], and E-clip [D] on the operating rod [A].


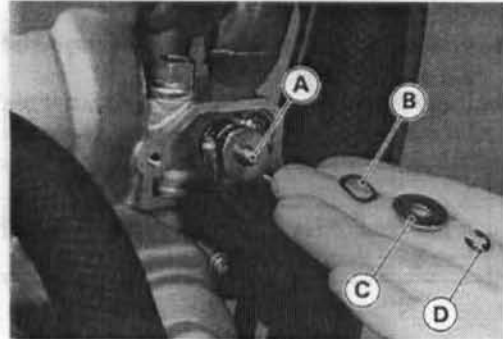


- Torque the right engine cover bolts.
Torque – Right Engine Cover Bolts: 8.8 N-m (0.9 kg-m, 78 in-lb)
- Torque the water pump impeller bolt.
Torque – Water Pump Impeller Bolt: 6.9 N-m (0.7 kg-m, 61 in-lb)
- Apply grease to the inside of the brake pedal boss.
- Torque the brake pedal mounting bolt.
Torque – Brake Pedal Mounting Bolt: 8.8 N-m (0.9 kg-m, 78 in-lb)
- Fill the cooling system with coolant (see Coolant Filling in the Cooling System chapter).
- Fill the transmission with oil (see Transmission Oil Change in the Engine Bottom End/Transmission chapter).
- Check the rear brake.


NOTE

Disassembly

- Remove the right engine cover.
- Turn the lever shaft [A] to the right, and remove the exhaust advancer [B].
- Remove the Allen bolts [C], and take off the advancer lever.

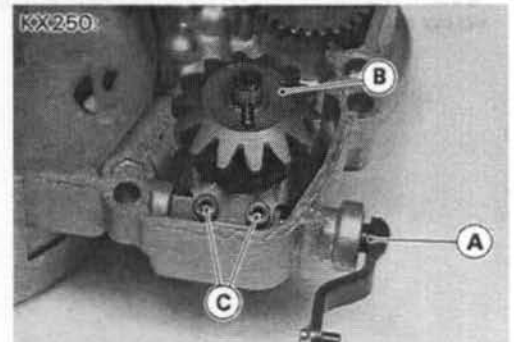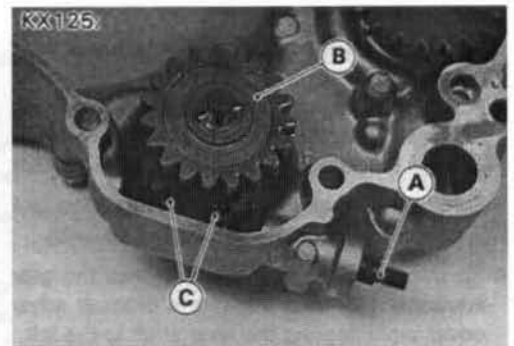


- Remove the plug screw [A] and take out the positioning pin [B].
- Pull the lever shaft [C] out of the right engine cover.
- Pull off the water pump shaft (see Water pump Shaft Removal in the Cooling System chapter).

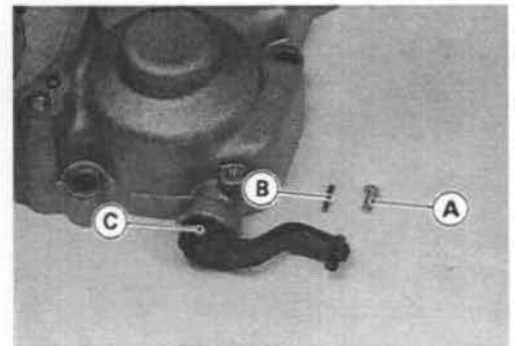
**Exhaust Advancer Disassembly/Assembly Notes**

- The exhaust advancer [A] consists of the following parts.

A. Pins	G. Needle Bearing
B. Rod	H. Spacer
C. Guide	I. Collar
D. O-ring	J. Spring
E. Steel Balls	K. Gear
F. Holder	

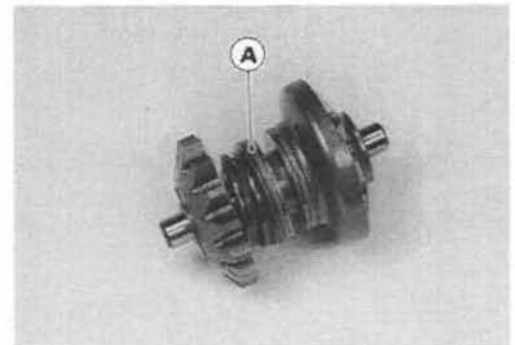

- Check the exhaust advancer parts for damage.
- ★ Any damaged parts should be replaced with new ones.
- When assembling, apply molybdenum disulfide grease between the rod and holder.

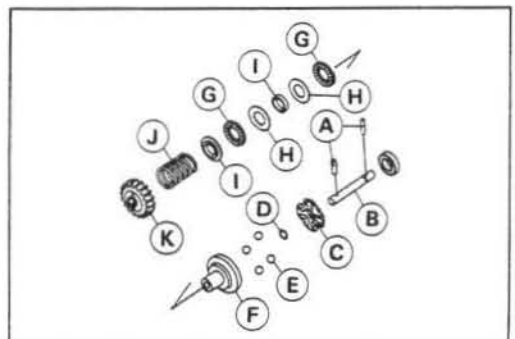



5-12 ENGINE RIGHT SIDE

Assembly Notes

- Apply high temperature grease to the oil seal lips before inserting the lever shaft.
- Apply molybdenum disulfide grease to the surface of the lever shaft, and insert the lever shaft into the right engine cover hole.
- Torque the advancer lever mounting Allen bolts [D].

Torque – Advancer Lever Mounting Allen Bolts:
3.9 N-m (0.4 kg-m, 35 in-lb)

- Fit the advancer lever pin [A] into the groove [B] on the exhaust advancer [C], and install the exhaust advancer in the right engine cover while turning the lever shaft to the left.
- Insert the positioning pin into the plug screw hole and tighten the plug screw securely.

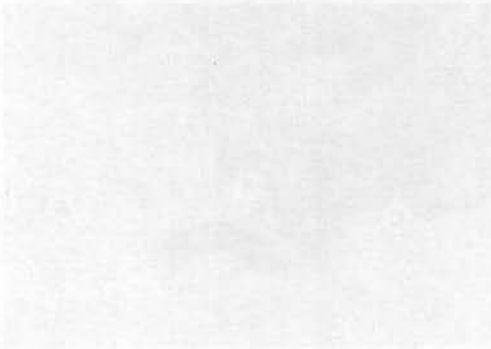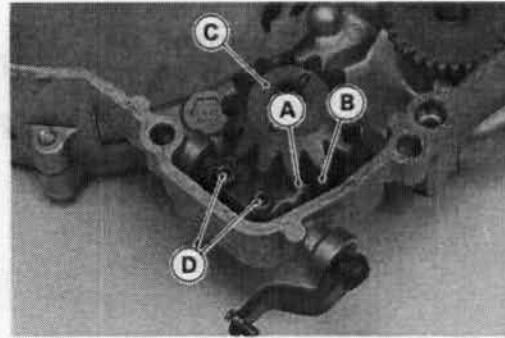

Remove the plug screw [A] and lock out the positioning pin [B].
Remove the lever shaft [C] out of the right engine cover.
Remove the exhaust advancer [D] from the right engine cover.
Remove the system cover.

Remove the exhaust advancer [A] from the right engine cover.
Remove the lever shaft [C] out of the right engine cover.

- A Pin
- B Groove
- C Exhaust Advancer
- D Allen Bolt

Check the clearance between the lever shaft and the exhaust advancer.
The clearance should be 0.15 mm (0.006 in).
If the clearance is not 0.15 mm (0.006 in), adjust the clearance between the lever shaft and the exhaust advancer.

Clutch

Removal



- Remove the clutch cover.
- Remove the magneto cover.
- Unscrew the pickup coil mounting screws and remove the pickup coil [B] from the stator.
- Install the flywheel holder [A] on the magneto flywheel.

NOTE


- Use the flywheel holder to prevent the clutch from rotating.

Special Tool – Flywheel Holder: 57001-1313 [A]

- Remove the clutch spring bolts [A], spring, and clutch pressure plate [B].

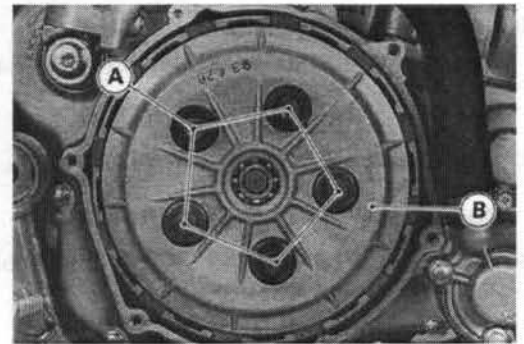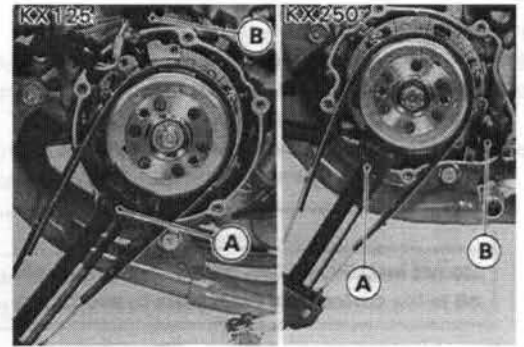

- Remove the push rod holder [A], flat washer [B] (if provided), friction plates, steel plates, and push rod [C].

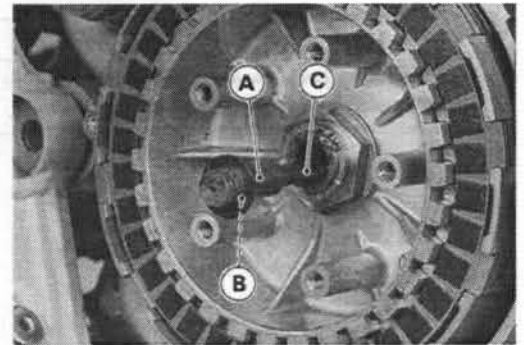


- Remove the clutch hub nut [A] and washer.


NOTE

- Use the clutch holder [B] to prevent the clutch hub from rotating.

Special Tool – Clutch Holder: 57001-1243 [B]

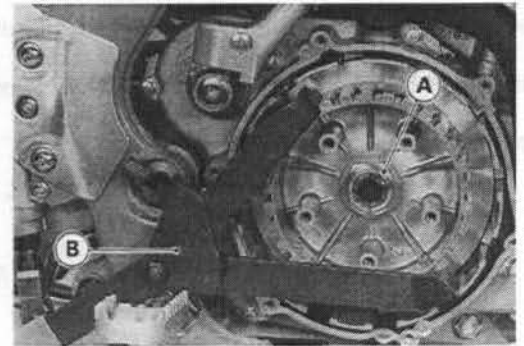

- Remove the clutch assembly, needle bearings [A], sleeve [B], and thrust washer [C].

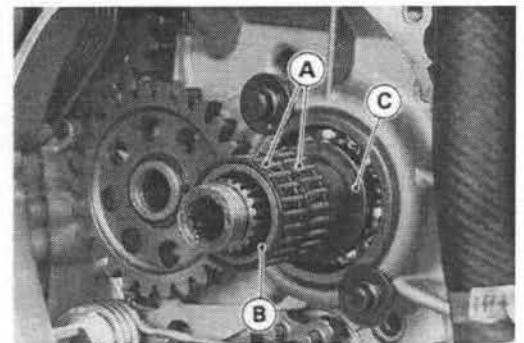

5-14 ENGINE RIGHT SIDE

Installation Notes

- Apply molybdenum disulfide grease to the outside of the sleeve.
- Apply transmission oil to the inside of the clutch housing gear and kickstarter driven gear.
- Install the friction plates and steel plates, starting with a friction plate and alternating them. Finish with a friction plate.

CAUTION

Do not install dry steel plates and friction plates; apply transmission oil to the surfaces of each plate to avoid clutch plate seizure.

- Torque the clutch hub nut.


Torque – Clutch Hub Nut: 98 N-m (10 kg-m, 72 ft-lb)

NOTE

- Use the clutch holder to prevent the clutch hub from rotating.

Special Tool – Clutch Holder: 57001-1243

- Then stake the clutch hub nut [A] in three points [B] to the spline grooves to secure it in place.

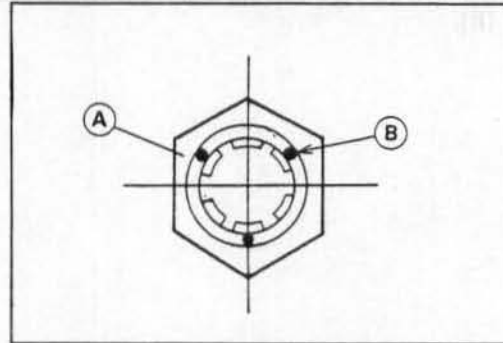

CAUTION

When staking the nut, be careful not to hit the shaft itself. Such a shock could damage the shaft and/or bearings.


- Apply molybdenum disulfide grease to the rubbing portion of the clutch spring plate pusher.
- For KX125, align the punch mark [A] on the pressure plate with the punch mark [B] on the clutch hub.
- Torque the clutch spring bolts.

Torque – Clutch Spring Bolts: 8.8 N-m (0.9 kg-m, 78 in-lb)

NOTE

- Use the flywheel holder to prevent the clutch from rotating.

Special Tool – Flywheel Holder: 57001-1313

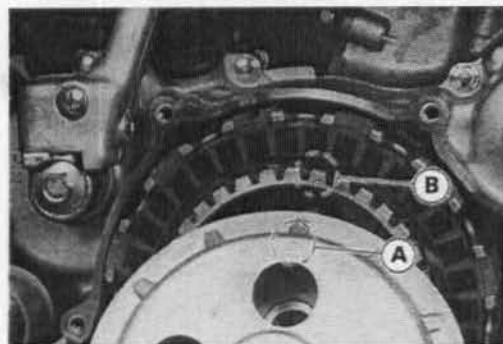

Friction and Steel Plates Wear, Damage Inspection

- Visually inspect the friction and steel plates to see if they show any signs of seizure, or uneven wear.
- ★ If any plates show signs of damage, replace the friction plates and steel plates as a set.
- Measure the thickness [A] of the friction plates [B] and steel plates with vernier calipers.
- ★ If they have worn past the service limit, replace them with new ones.

Friction Plate Thickness**KX125**

Standard: 2.72 ~ 2.88 mm
Service Limit: 2.6 mm

KX250


Standard: 2.92 ~ 3.08 mm
Service Limit: 2.8 mm

Steel Plate Thickness**KX125**

Standard: 1.5 ~ 1.7 mm
Service Limit: 1.4 mm

KX250


Standard: 1.46 ~ 1.74 mm
Service Limit: 1.36 mm

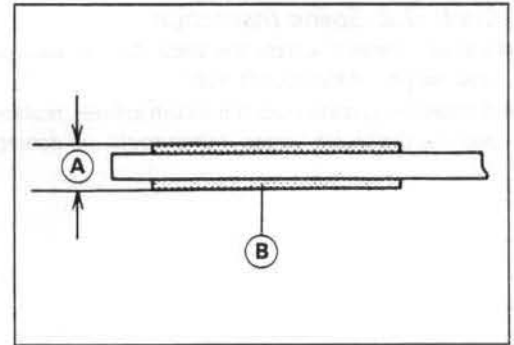**Friction and Steel Plate Warp Inspection**

- Place each friction plate or steel plate on a surface plate, and measure the gap between the surface plate [A] and each friction plate or steel plate [B] with a thickness gauge [C]. The gap is the amount of friction or steel plate warp.
- ★ If any plate is warped over the service limit, replace it with a new one.

Friction and Steel Plates Warp

	Friction Plate	Steel Plate
Standard:	Not more than 0.15 mm	Not more than 0.2 mm
Service Limit:	0.3 mm	0.3 mm

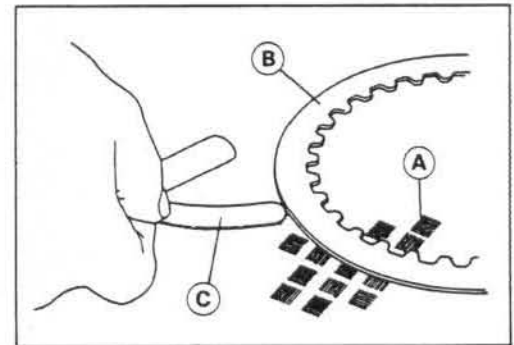**Spring Free Length Measurement**


- Since the spring [A] becomes shorter as it weakens, check its free length to determine its condition.
- ★ If any of the springs is shorter than the service limit, it must be replaced.

Clutch Spring Free Length**KX125**

Standard: 36.4 mm
Service Limit: 34.9 mm

KX250

Standard: 35 mm
Service Limit: 33.6 mm

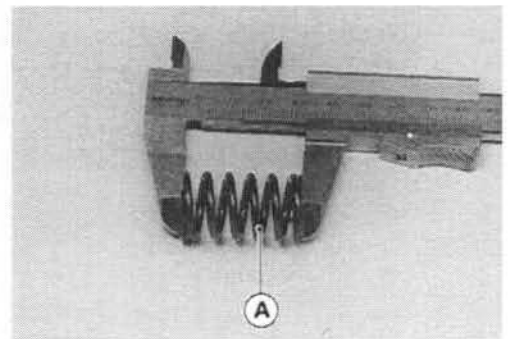**Friction Plate/Clutch Housing Clearance**


- Measure the clearance between the tangs [A] on the friction plate and the fingers [B] of the clutch housing.
- ★ If this clearance is excessive, the clutch will be noisy.
- ★ If the clearance exceeds the service limit, replace the friction plates.

Friction Plate/Clutch Housing Clearance**KX125**

Standard: 0.04 ~ 0.55 mm
Service Limit: 0.9 mm

KX250

Standard: 0.15 ~ 0.45 mm
Service Limit: 0.8 mm

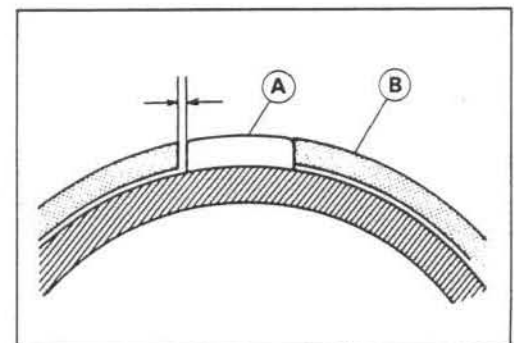

Clutch Hub Spline Inspection

- Visually inspect where the teeth on the steel plates wear against the splines [A] of the clutch hub.
- ★ If there are notches worn into the splines, replace the clutch hub. Also, replace the clutch plates if their tooth are damaged.

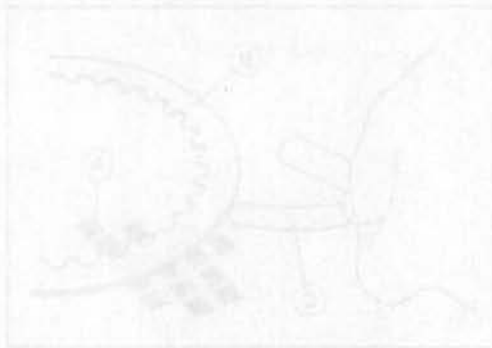
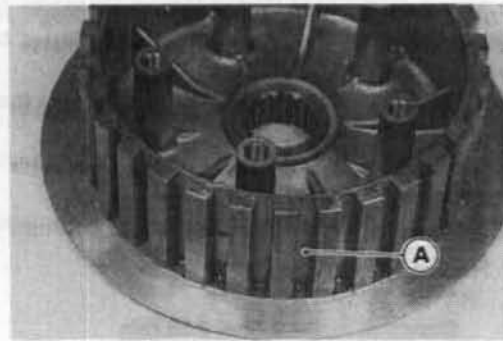


FIG. 10-10 Clutch Hub Spline Inspection

FIG. 10-11 Clutch Plate Spline Inspection



FIG. 10-12 Clutch Plate Spline Inspection

FIG. 10-13 Clutch Plate Spline Inspection

External Shift Mechanism

Removal

- Remove:
 - Shift Pedal
 - Right Engine Cover
 - Clutch Housing
 - Idle Gear
- Pull out the external shift mechanism [A].
- For KX125, remove the nut [B], and take off the gear set lever [C].
- For KX250, remove the bolt [D], and take off the gear set lever [C].

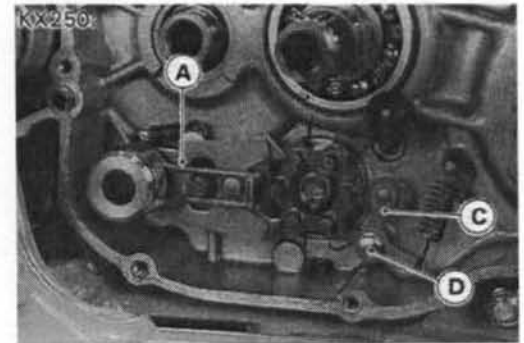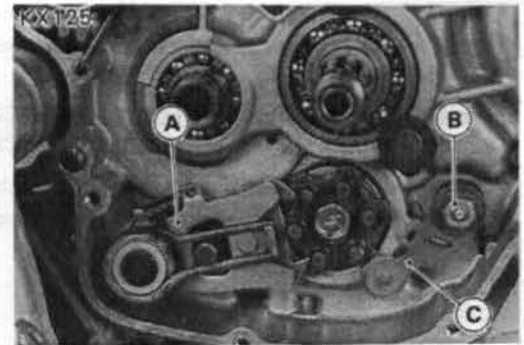

Installation Notes

- Insert the shift shaft into the crankcase using the shift shaft oil seal guide [A] on the oil seal in the left crankcase half to protect the seal.
- Before installing the shift shaft, apply high temperature grease to the oil seal lips.

Special Tool – Oil Seal Guide, $\Phi 13$: 57001-264 [A]


- Torque the gear set lever bolt (KX250) or nut (KX125).

Torque – Gear Set Lever Bolt or Nut: 8.8 N-m (0.9 kg-m, 78 in-lb)




Inspection

- Check the shift shaft [A] for bending or damage to the splines.
- ★ If the shaft is bent, straighten or replace it. If the splines are damaged, replace the external shift mechanism.
- Check the return spring [D] and arm spring [C] for cracks or distortion.
- ★ If the springs are damaged in any way, replace them.
- Check the shift mechanism arm [B] for distortion.
- ★ If the shift mechanism arm is damaged in any way, replace the shift mechanism.

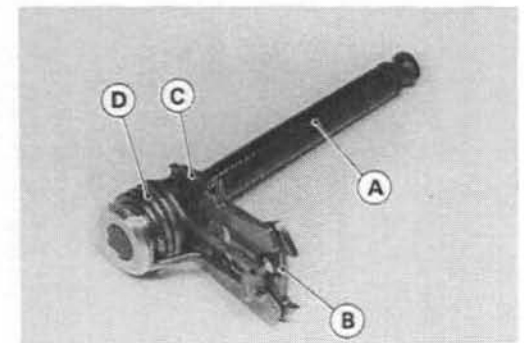

NOTE

- Install the arm spring [A] as shown in the figure.

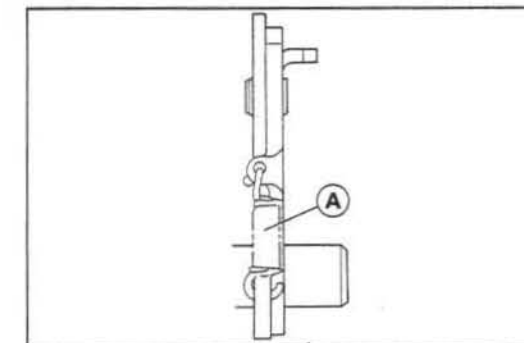


5-18 ENGINE RIGHT SIDE

- Check that the return spring pin [A] is not loose.
- ★ If it is loose, unscrew it, apply a non-permanent locking agent to the threads, and torque it.

Torque – Return Spring Pin: (KX125) 29 N-m (3.0 kg-m, 22 ft-lb)
(KX250) 37 N-m (3.8 kg-m, 27 ft-lb)

- Check the gear set lever and its spring for cracks or distortion.
- ★ If the lever or spring is damaged in any way, replace them.

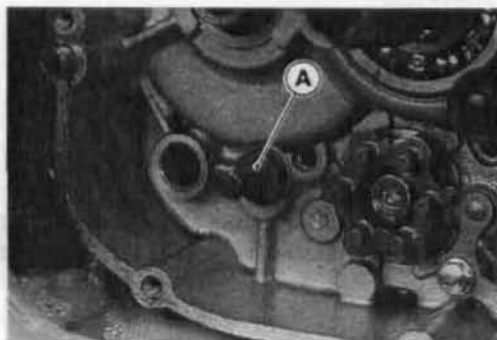

NOTE

1. Before the work starts, be sure to read the following.

Primary Gear


Removal

- Remove the right engine cover (see Right Engine Cover Removal).
- Remove the clutch (see Clutch Removal).
- For KX125 model; remove the primary gear nut [A], spring washer, woodruff key, primary gear [B], and O-ring.

NOTE


- Use the flywheel holder to prevent the crankshaft from the rotating.

Special Tool – Flywheel Holder: 57001-1313

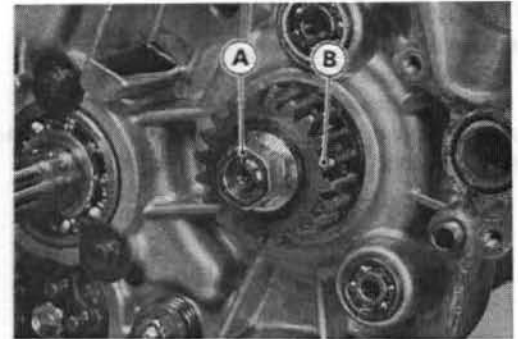

- For KX250 model; remove the circlip [A], and take off the water pump drive gear [B] and primary gear [C].

Special Tool – Outside Circlip Pliers: 57001-144

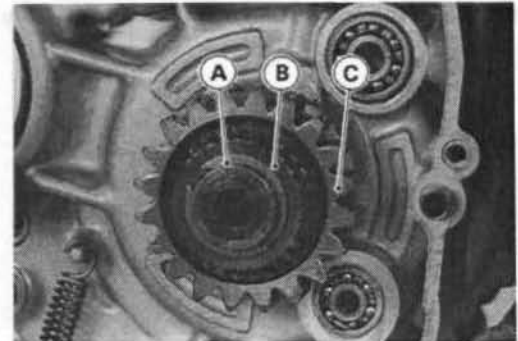

Installation Notes

KX125:


- Fit the woodruff key [B] on the crankshaft groove.
- Install the spring washer so that concave side [A] faces inward.
- Torque the primary gear nut.

Torque – Primary Gear Nut: 59 N-m (6.0 kg-m, 43 ft-lb)

NOTE

- Use the flywheel holder to prevent the crankshaft from the rotating.


Special Tool – Flywheel Holder: 57001-1313

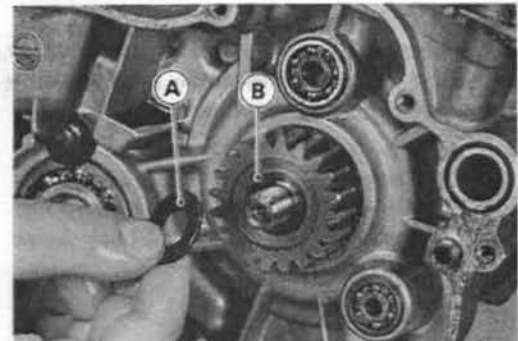

KX250:

- Install the primary gear [A] so that chamfered side [B] faces outward.
- Replace the old circlip with a new one.

Special Tool – Outside Circlip Pliers: 57001-144

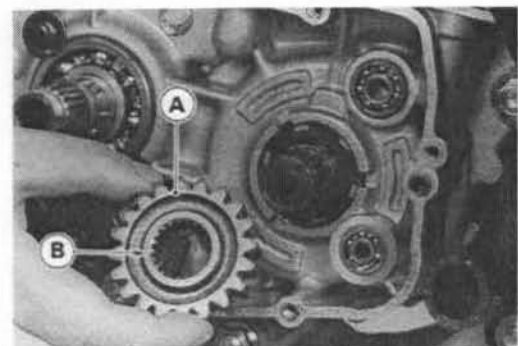


5-20 ENGINE RIGHT SIDE


Kickstarter

Removal

- Remove:
 - Right Engine Cover
 - Clutch Housing
- Pull the end of the kick spring [A] out of the hole in the crankcase.
- Remove the kickstarter assembly [B].

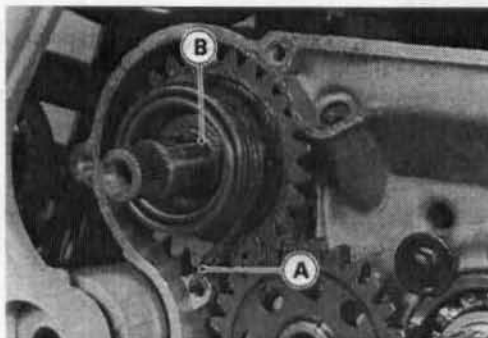



- Remove the bolt [A], take off the ratchet guide [B].

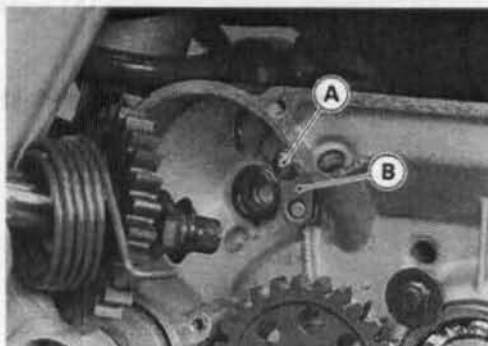

Disassembly/Assembly Notes

- The kickstarter assembly consists of the following parts.
- Check the kickstarter assembly parts for damage. Any damaged parts should be replaced with new ones.

- | | |
|-----------------|-----------------|
| A. Idle Gear | F. Kick Gear |
| B. Circlip | G. Kick Shaft |
| C. Washer | H. Kick Spring |
| D. Spring | I. Spring Guide |
| E. Ratchet Gear | |

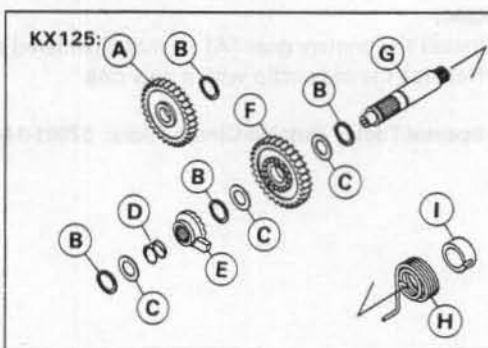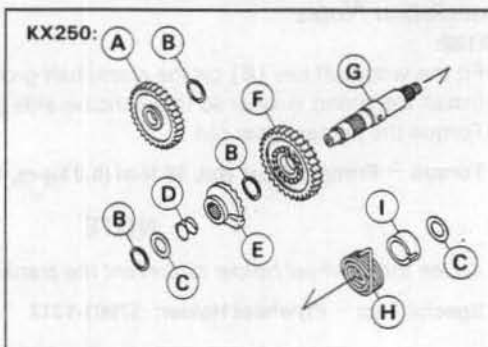


CAUTION

When assembling the ratchet gear [A] onto the kick shaft [B], align the punch mark [C] on the ratchet gear with the punch mark [C] on the kick shaft.

- Apply molybdenum disulfide grease to the inside of the kick gear and ratchet gear.
- Replace the circlips that were removed with new ones.


Special Tool – Outside Circlip Pliers: 57001-144

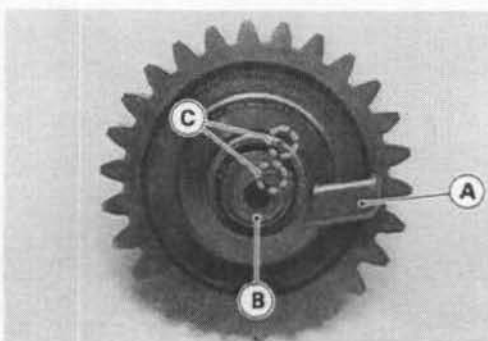

Idle Gear Removal

- Remove the right engine cover and clutch housing before idle gear removal (see Right Engine Cover Removal and Clutch Removal).
- Remove the circlip [A] and pull off the idle gear [B].

Special Tool – Outside Circlip Pliers: 57001-144

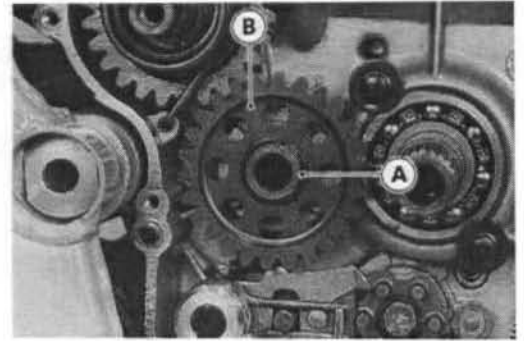*Idle Gear Installation Notes*

- Apply molybdenum disulfide grease to the inside of the idle gear.
- Replace the circlip that was removed with a new one.

Special Tool – Outside Circlip Pliers: 57001-144


Engine Removal/Installation

Table of Contents

Exploded View	6-2
Engine Removal/Installation.....	6-3
Removal	6-3
Installation Notes	6-3

6-2 ENGINE REMOVAL/INSTALLATION

Exploded View

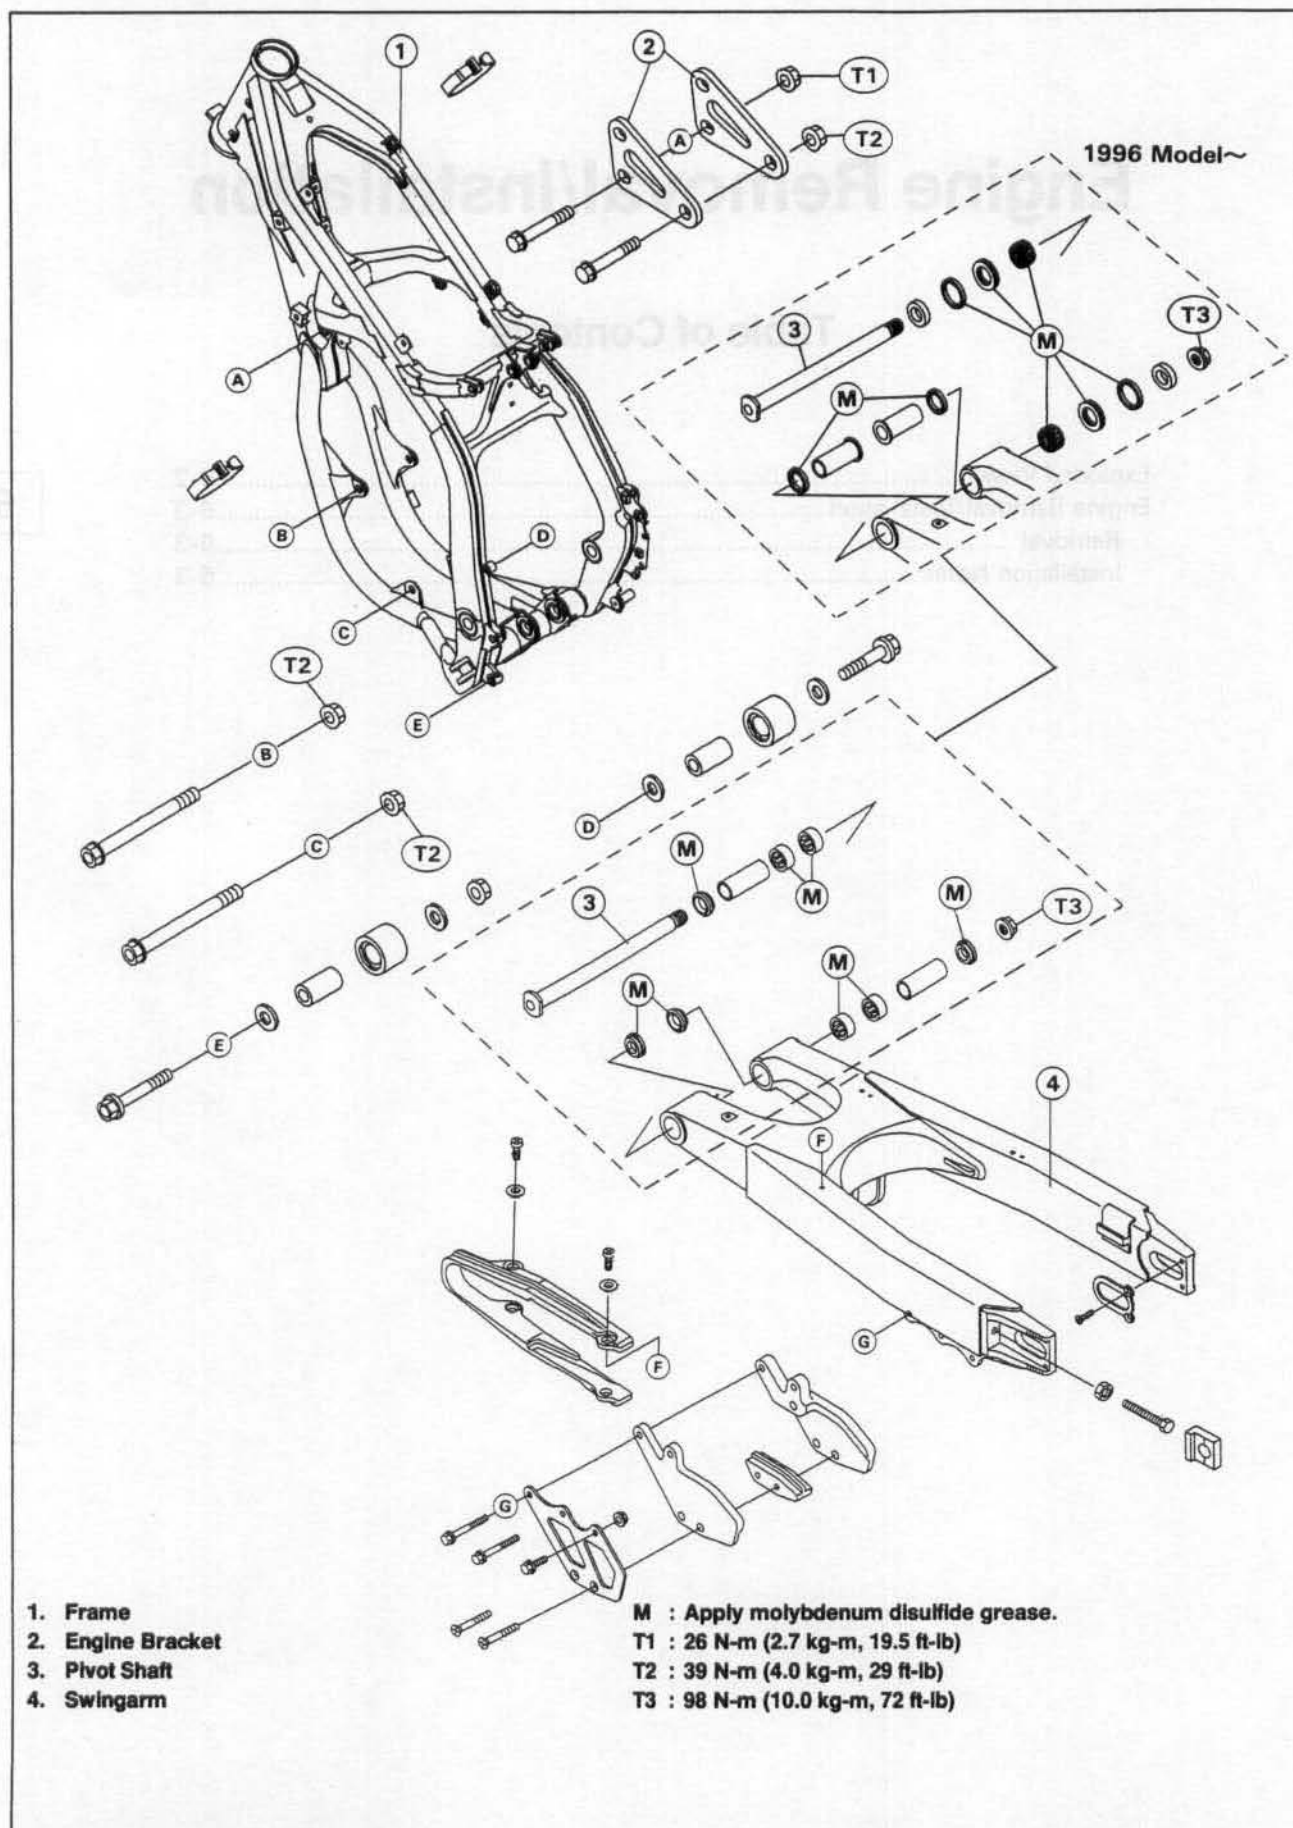

Engine Removal/Installation

Removal

- Drain the transmission oil (see Transmission Oil Change in the Engine Bottom End/Transmission chapter).
- Drain the coolant (see Coolant Change in the Cooling System chapter).
- Remove:
 - Side Covers
 - Radiator Covers
 - Cooling Hoses
 - Radiators
 - Seat
 - Fuel Tank
 - Expansion Chamber
 - Spark Plug
 - Carburetor (with Cables and Hoses)
 - Clutch Cable Lower End
 - Drive Chain
 - Engine Sprocket
 - Shift Pedal
 - Brake Pedal
- Disconnect the magneto output lead, and free the leads from the clamp at the left side of the cylinder.
- Remove the engine brackets [A] and mounting bolts [B].
- Place a jack [C] under the frame to lift the motorcycle off the ground, and put blocks under the front and rear tires to steady the motorcycle.

▲ WARNING

The swing arm pivot shaft also serves as the engine mounting bolt. Take precautions to insure the frame is well supported, and that the motorcycle will not fall over when the pivot shaft is removed.

Special Tool – Jack: 57001-1238

- Remove the engine mounting bolts [A].
- Pull out the swingarm pivot shaft [B].
- Lift the engine out to the right.

Installation Notes

- Torque the following nuts or bolts.

Torque – Engine Mounting Nuts: 39 N-m (4.0 kg-m, 29 ft-lb)



Engine Bracket Bolts:

10 mm: 39 N-m (4.0 kg-m, 29 ft-lb)

8 mm: 26 N-m (2.7 kg-m, 19.5 ft-lb)

Pivot Shaft Nut: 98 N-m (10.0 kg-m, 72 ft-lb)

- To route the leads, cables and hoses, refer to the General Information chapter.
- To install the parts removed, refer to the appropriate chapters.
- Fill the cooling system with coolant (see Coolant Change in the Cooling System chapter).
- Fill the engine with transmission oil (see Transmission Oil Change in the Engine Bottom End/Transmission chapter).
- Adjust:
 - Throttle Cable
 - Clutch Cable
 - Drive Chain
 - Rear Brake

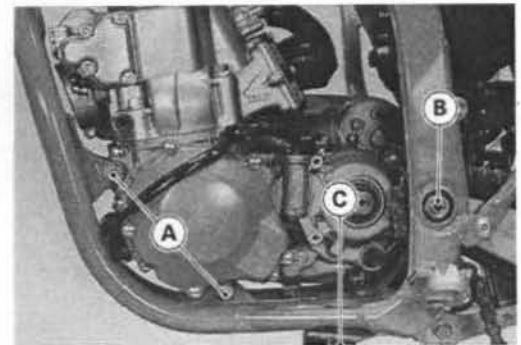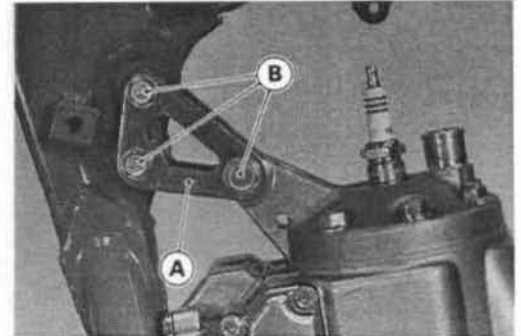

Engine Bottom End/Transmission


Table of Contents

Exploded View	7-2
Specifications	7-4
Transmission Oil	7-5
Level Inspection	7-5
Change	7-5
Crankcase	7-6
Splitting	7-6
Assembly	7-6
Crankshaft, Connecting Rod.....	7-9
Removal	7-9
Installation Notes	7-9
Disassembly Note	7-9
Assembly Notes	7-10
Connecting Rod Big End Radial Clearance.....	7-10
Connecting Rod Big End Seizure	7-10
Connecting Rod Big End Side Clearance.....	7-10
Crankshaft Runout.....	7-11
Crankshaft Alignment	7-11
Transmission.....	7-12
Shaft Removal.....	7-12
Shaft Installation Notes	7-12
Shaft Disassembly Note	7-12
Shaft Assembly Notes	7-12
Shift Drum and Fork Installation Notes	7-14
Shift Fork Bending.....	7-14
Shift Fork/Gear Groove Wear.....	7-15
Shift Fork Guide Pin/Shift Drum Groove Wear.....	7-15
Gear Damage	7-15
Gear Dog/Gear Dog Hole and/or Recess Damage.....	7-16
Ball Bearing Wear.....	7-16

7-2 ENGINE BOTTOM END/TRANSMISSION

Exploded View

KX125:

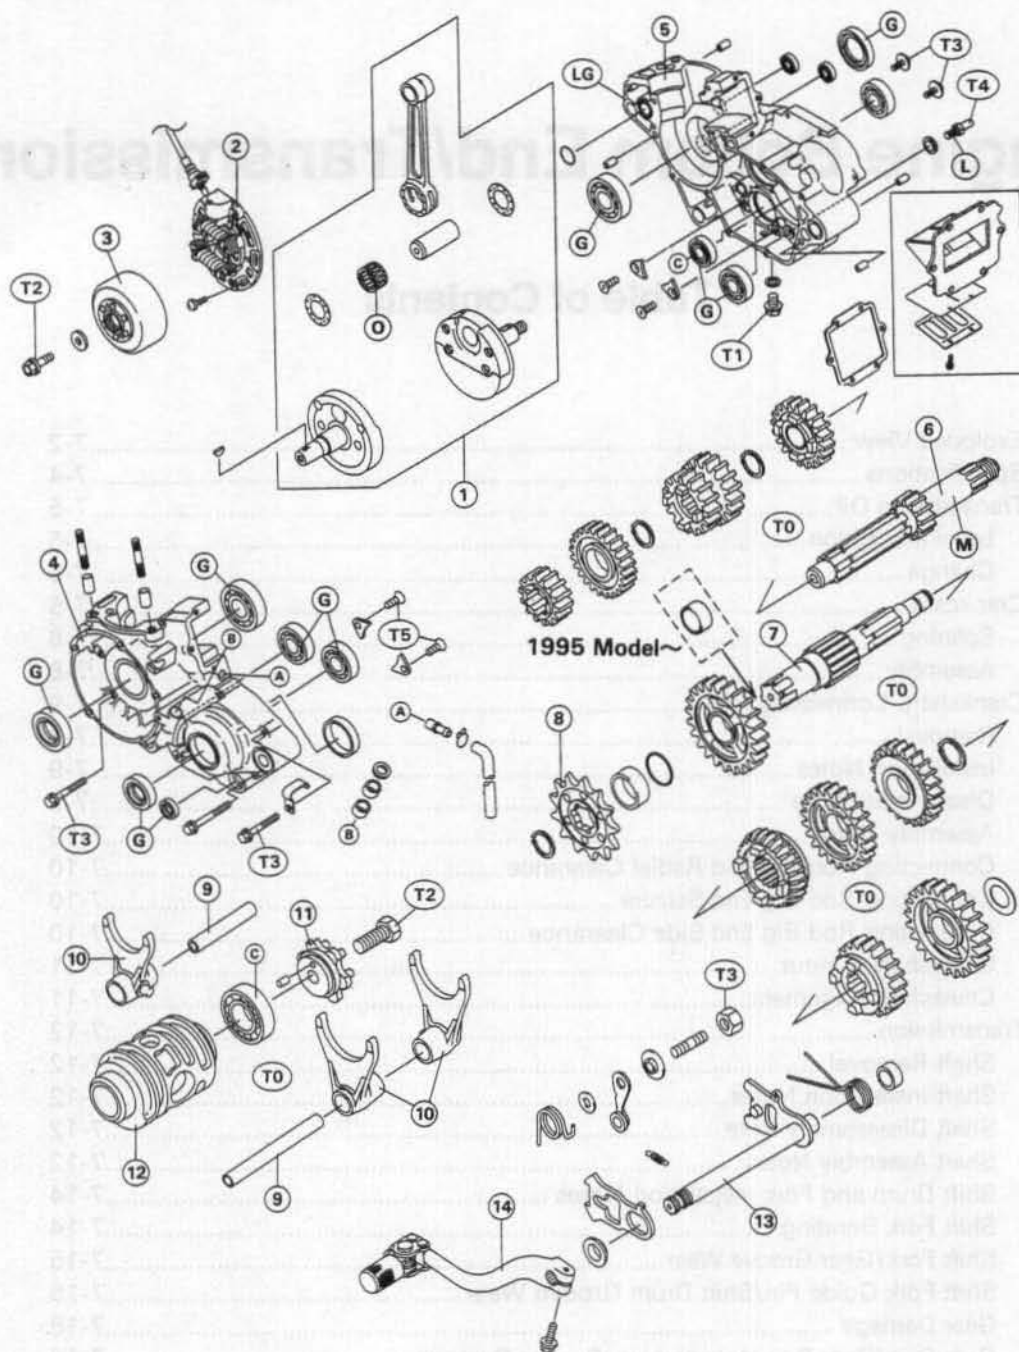


- 1. Crankshaft Assembly
- 2. Stator
- 3. Magneto Flywheel
- 4. Left Crankcase
- 5. Right Crankcase
- 6. Drive Shaft
- 7. Output Shaft
- 8. Engine Sprocket
- 9. Shift Rod
- 10. Shift Fork

- 11. Operating Plate
- 12. Shift Drum
- 13. Shift Shaft
- 14. Shift Pedal
- L: Apply a non-permanent locking agent to the threads.
- M: Apply molybdenum disulfide grease.
- O: Apply 2-stroke engine oil.
- TO: Apply transmission oil to the transmission gears and shift forks, etc.

- G: Apply high temperature grease.
- LG: Apply liquid gasket to the left and right case mating surface.
- T1: 20 N-m (2.0 kg-m, 14.5 ft-lb)
- T2: 22 N-m (2.2 kg-m, 16.0 ft-lb)
- T3: 8.8 N-m (0.9kg-m, 78 in-lb)
- T4: 29 N-m (3.0 kg-m, 22 ft-lb)
- T5: 5.4 N-m (0.55 kg-m, 48 in-lb)

KX250:

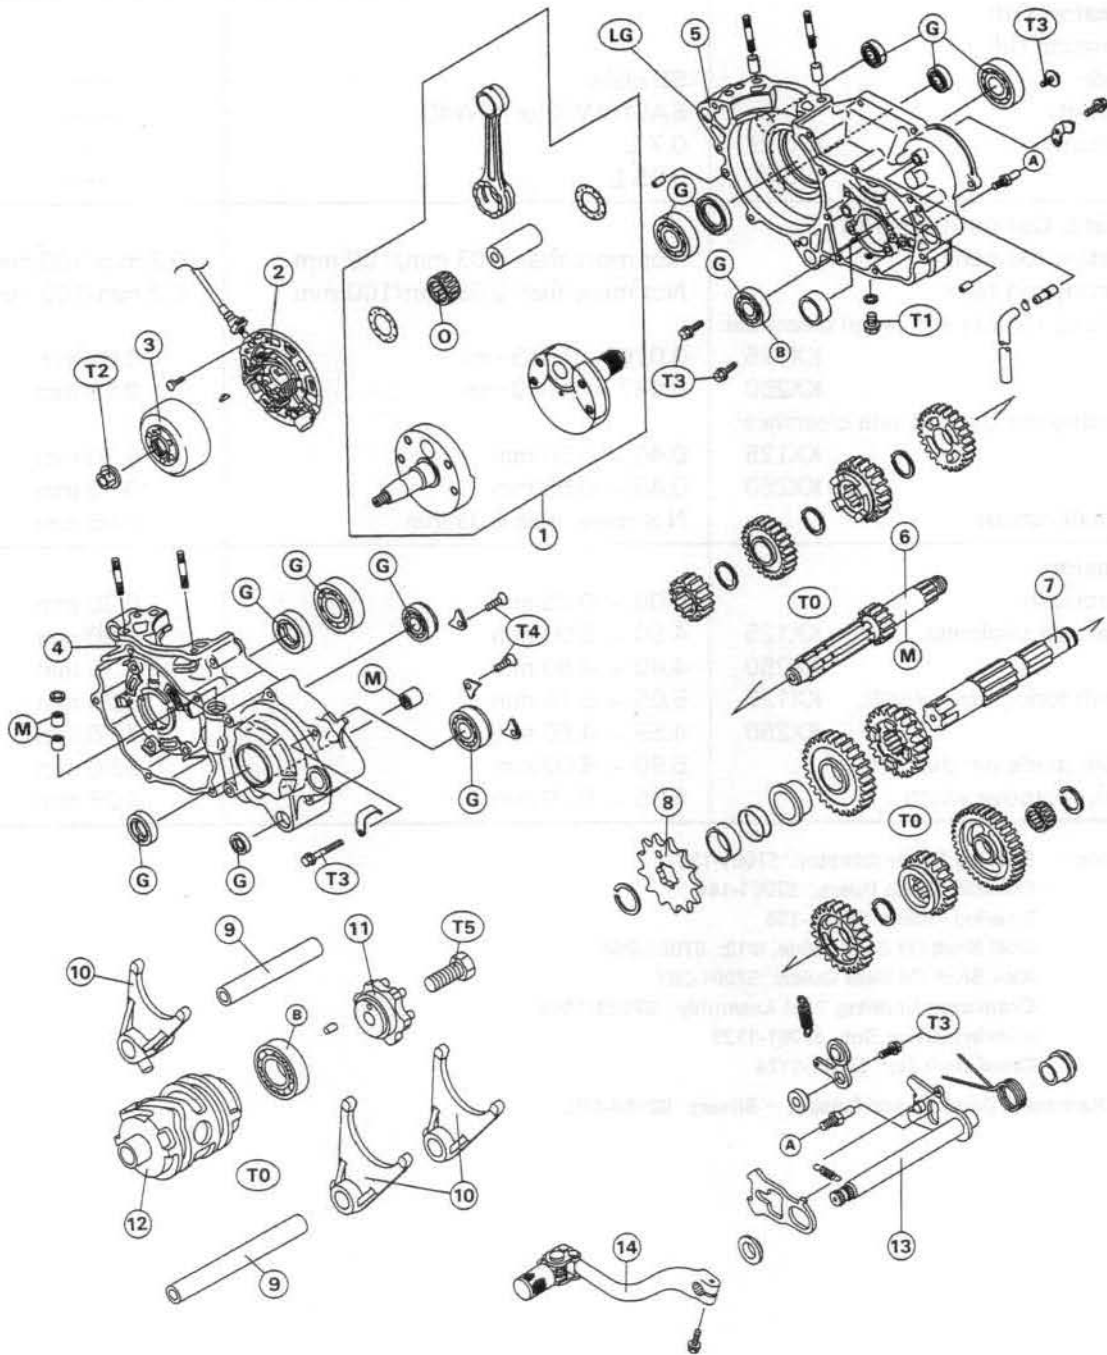

- 1. Crankshaft Assembly
- 2. Stator
- 3. Magneto Flywheel
- 4. Left Crankcase
- 5. Right Crankcase
- 6. Drive Shaft
- 7. Output Shaft
- 8. Engine Sprocket
- 9. Shift Rod
- 10. Shift Fork

- 11. Operating Plate
- 12. Shift Drum
- 13. Shift Shaft
- 14. Shift Pedal
- M : Apply molybdenum disulfide grease.
- O : Apply 2-stroke engine oil.
- T0 : Apply transmission oil to the transmission gears and shift forks, etc.

- G : Apply high temperature grease.
- LG : Apply liquid gasket to the left and right case mating surface.
- T1 : 20 N-m(2.0 kg-m, 58 ft-lb)
- T2 : 78 N-m (8.0 kg-m, 58 ft-lb)
- T3 : 8.8 N-m (0.9 kg-m, 78 in-lb)
- T4 : 5.4 N-m (0.55 kg-m, 48 in-lb)
- T5 : 22 N-m (2.2 kg-m, 16.0 ft-lb)

7-4 ENGINE BOTTOM END/TRANSMISSION

Specifications

Item	Standard	Service Limit
Transmission Oil: Transmission Oil: Grade Viscosity Amount	SE class SAE10W30 or 10W40 0.7 L 0.85 L	--- --- --- ---
Crankshaft, Connecting Rod: Connecting rod bend Connecting rod twist Connecting rod big end radial clearance: KX125 KX250 Connecting rod big end side clearance: KX125 KX250 Crankshaft runout	Not more than 0.03 mm/100 mm Not more than 0.03 mm/100 mm 0.026 ~ 0.043 mm 0.037 ~ 0.049 mm 0.40 ~ 0.50 mm 0.45 ~ 0.55 mm Not more than 0.03 mm	0.2 mm/100 mm 0.2 mm/100 mm 0.09 mm 0.10 mm 0.70 mm 0.70 mm 0.05 mm
Transmission: Gear backlash: Shift fork ear thickness: KX125 KX250 Gear shift fork groove width: KX125 KX250 Shift fork guide pin diameter Shift drum groove width	0.06 ~ 0.23 mm 4.90 ~ 5.00 mm 4.40 ~ 4.50 mm 5.05 ~ 5.15 mm 4.55 ~ 4.65 mm 5.90 ~ 6.00 mm 6.05 ~ 6.20 mm	0.30 mm 4.80 mm 4.30 mm 5.25 mm 4.75 mm 5.80 mm 6.25 mm

Special Tools – Bearing Puller Adapter: 57001-136
 Outside Circlip Pliers: 57001-144
 Bearing Puller: 57001-158
 Shift Shaft Oil Seal Guide, ϕ 13: 57001-264
 Kick Shaft Oil Seal Guide: 57001-267
 Crankcase Splitting Tool Assembly: 57001-1098
 Bearing Driver Set: 57001-1129
 Crankshaft Jlg: 57001-1174

Sealant – Kawasaki Bond (Liquid Gasket – Silver): 92104-002

Transmission Oil


In order for the transmission and clutch to function properly, always maintain the transmission oil at the proper level and change the oil periodically.

⚠ WARNING

Motorcycle operation with insufficient, deteriorated, or contaminated transmission oil will cause accelerated wear and may result in transmission seizure, accident, and injury.

Level Inspection

- Situate the motorcycle so that it is perpendicular to the ground.
- If the motorcycle has just been used, wait several minutes until the oil settles.
- Check that the oil level comes up between the upper level [A] and lower level [B] through the oil level gauge [C] on the clutch cover.
- ★ If the oil level is too high, remove the excess oil using a syringe or some other suitable device.
- ★ If the oil level is too low, add the correct amount of oil through the oil filler opening. Use the same type and make of oil that is already in the engine.

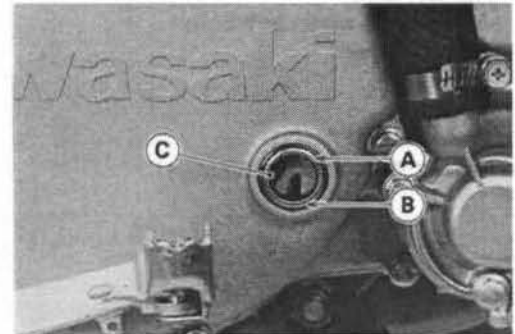

NOTE

- If the transmission oil type and make are unknown, use any brand of the specified oil to top up the level in preference to running the engine with the oil level low. Then at your earliest convenience, change the oil completely.

Change

- Warm up the engine thoroughly so that the oil will pick up any sediment and drain easily. Then stop the engine.
- Place an oil pan beneath the engine.
- Remove the transmission oil drain plug [A] on the bottom of the engine, and let the oil drain completely.

NOTE


- Hold the motorcycle upright so that the oil may drain completely.
- Check the gasket at the drain plug for damage.
- ★ Replace the gasket with a new one if it is damaged.
- After the oil has completely drained out, install the drain plug with the gasket, and torque it.

Torque – Transmission Oil Drain Plug: 20 N-m (2.0 kg-m, 14.5 ft-lb)

- Fill the engine with a good quality motor oil specified as is instructed below.
- Check the oil level.

Transmission Oil

Grade:	SE class
Viscosity:	SAE 10W30 or 10W40
Amount:	KX125 0.7 L
	KX250 0.85 L


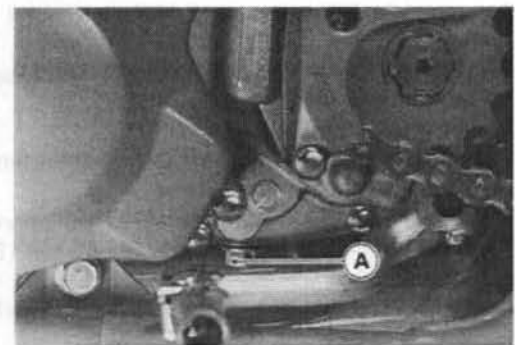


7-6 ENGINE BOTTOM END/TRANSMISSION

Crankcase


Splitting

- Remove the engine (see the Engine Removal/Installation chapter).
- Set the engine on a clean surface while parts are being removed.
- Remove:
 - Magneto Cover
 - Output Shaft Sleeve and O-ring
 - Right Engine Cover
 - Clutch
 - Primary Gear
 - Kickstarter Assembly
 - Kickstarter Idle Gear
 - Shift Drum Operating Plate Bolt
 - Gear Set Lever
 - Magneto Flywheel and Stator
 - Cylinder Head
 - Cylinder
 - Piston
 - Reed Valve (KX125)
- Remove the crankcase bolts [A].

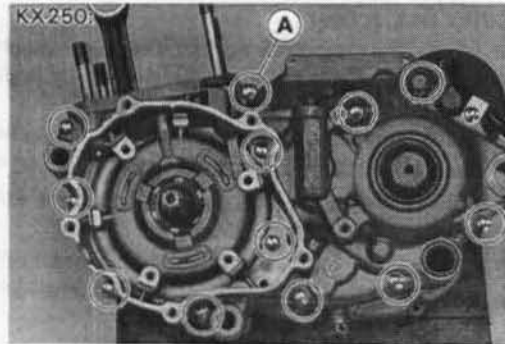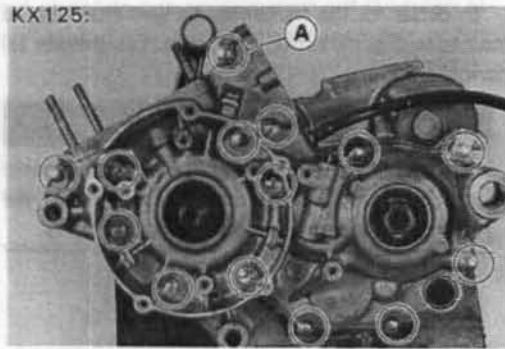


- Install the crankcase splitting tool [A] and bearing puller adapter [B] into the left side of the crankcase. Be certain to screw the tool in all the way.

Special Tool – Crankcase Splitting Tool Assembly: 57001-1098 [A]
Bearing Puller Adapter: 57001-136 [B]

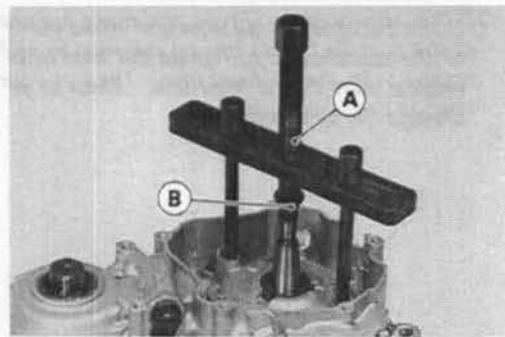

- Tighten the bolt on the crankcase splitting tool to split the crankcase halves.
- Once the crankcase is split, remove the crankcase splitting tool, and lift off the left crankcase half.
- Pull out the shift rods [A].
- Disengage the shift fork guide pins from the shift drum grooves.
- Take out the shift drum [B].
- Remove the shift forks [C] from the transmission gears.
- Take out the drive shaft [D] and output shaft [E] together with their gears meshed.
- Remove the crankshaft from the right crankcase half using a press.

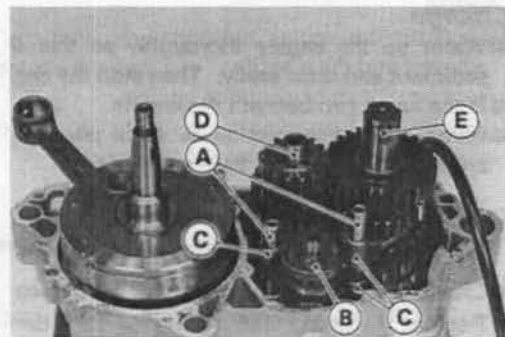

Assembly


- Before fitting the left case on the right case, note the following:
 - Chip off the old gasket from the mating surfaces of the crankcase halves, and clean off the crankcase with a high flash-point solvent. After cleaning, apply transmission oil to the transmission gears, shift drum, shift forks and so on.
 - Be sure to replace any oil seal removed with a new one. Press in the new oil seal using a press and suitable tools so that the seal surface is flush with the surface of the crankcase.
 - Apply high temperature grease to the oil seal lips.
 - Press in the ball bearings using the bearing driver set until the bearing is bottomed.

Special Tool – Bearing Driver Set: 57001-1129

- Install the bearing for the output shaft into the left crankcase half so that the stepped side [A] faces inside.

CAUTION

Do not remove the bearings unless it is necessary. Removal may damage them.
Install the bearings for the crankshaft in the right and left crankcase so that their sealed sides face toward the oil seal side.

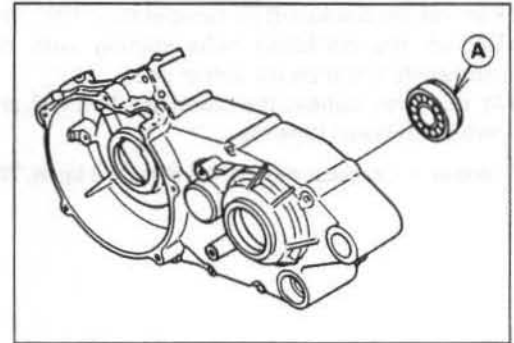


- Tighten the output and drive shaft bearing retaining bolts.

Torque – Bearing Retaining Bolt: 8.8 N-m (0.9 kg-m, 78 in-lb)

- If the crankshaft bearings stay on the crankshaft when splitting the crankcase, remove the bearings from the crankshaft and reinstall them in the crankcase, and then assemble the crankcase (see Crankshaft Removal and Installation Notes).


- Turn the crankshaft to BDC, and install the crankshaft jig [A] between the flywheels opposite the connecting rod big end to protect flywheel alignment as shown.
- If the crankshaft has been removed from the crankcase, install the jig between the crankshaft flywheels before pressing the crankshaft into the right crankcase half.

Special Tool – Crankshaft Jig: 57001-1174 [A]

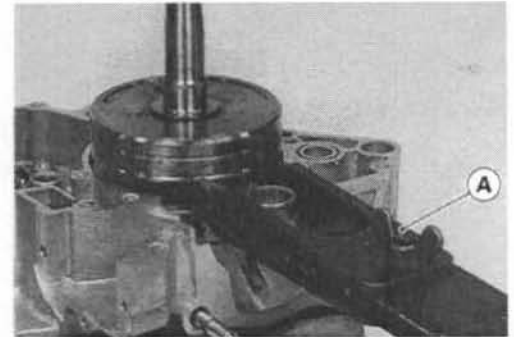

- Check to see that the crankcase knock pins [A] and O-ring [B] are in place on the right crankcase half. If any of them has been removed, replace it with a new one.
- Apply liquid gasket to the mating surface of the left crankcase half.


Sealant – Kawasaki Bond (Liquid Gasket – Silver): 92104-002

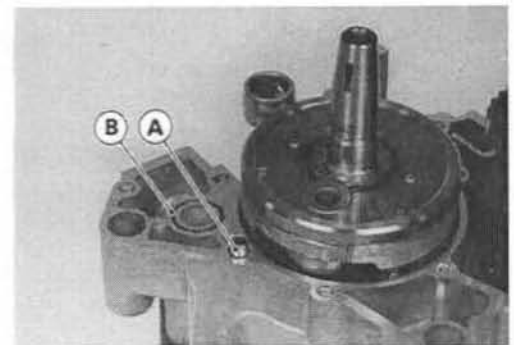

- Using a suitable tool on the left crankcase to press [A] around the hole for the crankshaft, fit the crankcase halves together with a press on the tool.

NOTE


- Constantly check the alignment of the two crankcase halves, and the position of the transmission shafts, and shift drum. The front and rear of the crankcase must be pushed together evenly.

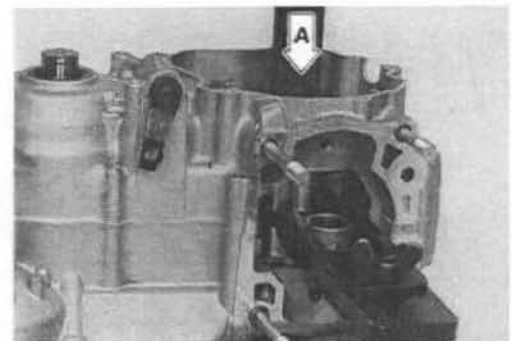

7-8 ENGINE BOTTOM END/TRANSMISSION

- Remove the crankshaft jig (special tool) from the flywheels.
- Tighten the crankcase bolts starting with the ones around the crankshaft, and then the farther ones.
- At this time, tighten the crankcase bolt [A] and clamp [B] for the carburetor hoses together.

Torque - Crankcase Bolts: 8.8 N-m (0.9 kg-m, 78 in-lb)

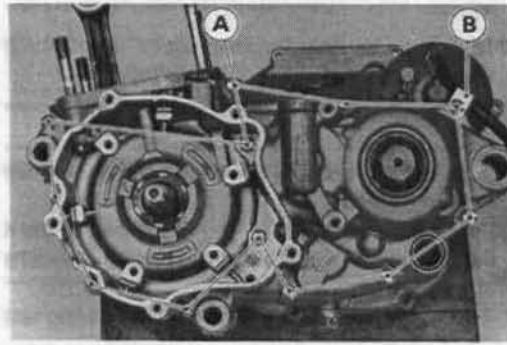


- Check to see that the crankshaft, drive shaft, and output shaft all turn freely (in the neutral position).
- ★ If the crankshaft will not turn, probably the crankshaft is not centered; tap the appropriate end of the crankshaft with a mallet to reposition it.
- Spinning the output shaft, shift the transmission through all the gears to make certain there is no binding and that all the gears shift properly.
- Install the parts removed in the reverse order of removal, and refer to the appropriate chapters.
- Replace the O-rings on the output shaft with new ones.

Crankshaft, Connecting Rod

Removal

- Split the crankcase (see Crankcase Splitting).
- Remove the transmission shafts (see Transmission Shaft Removal).
- Using a press, remove the crankshaft from the right crankcase.
- If the bearings stay on the crankshaft when splitting the crankcase or removing the crankshaft from the right crankcase, remove the bearings from the crankshaft with a bearing puller [A] and adapter [B].



Special Tool – Bearing Puller: 57001-158 [A]
Bearing Puller Adapter: 57001-136 [B]

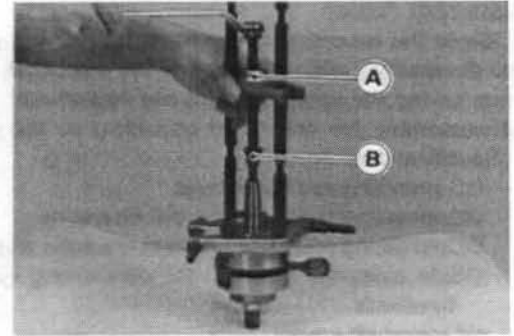

Installation Notes

- When installing the crankshaft bearings, apply high temperature grease to the outer sides of the bearings, and then press them into the crankcase using the bearing driver [A] until the bearing bottoms against the step.


Special Tool – Bearing Driver Set: 57001-1129 [A]

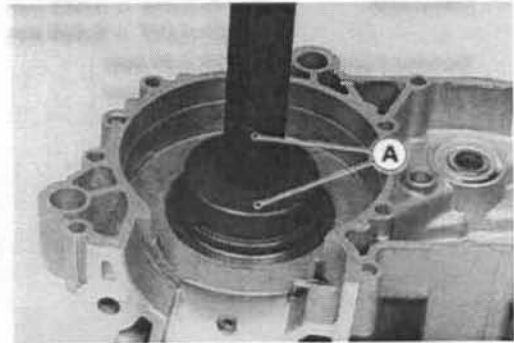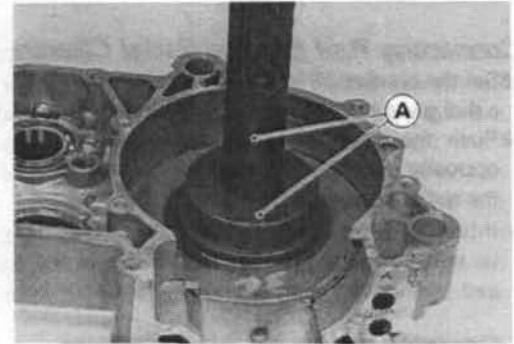

- Insert the crankshaft jig [A] between the crankshaft flywheels opposite the connecting rod big end to protect flywheel alignment as shown, and press the crankshaft into the right crankcase.
- When pressing, position the jig in the crankcase opening so the jig does not hit the crankcase.

Special Tool – Crankshaft Jig: 57001-1174 [A]

- Apply 2-stroke oil to the connecting rod big end bearing.

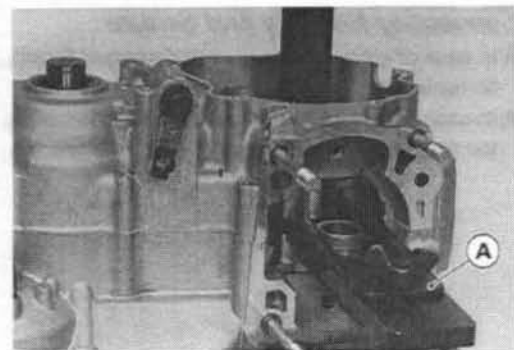

Disassembly Note

Since assembly of the crankshaft demands exacting tolerances, the disassembly and reassembly of the crankshaft can only be done by a shop having the necessary tools and equipment.

- If it should be necessary to disassemble the crankshaft, use a press to remove the crankpin.

7-10 ENGINE BOTTOM END/TRANSMISSION

Assembly Notes

Since the assembly of the crankshaft demands exacting tolerances, the disassembly and reassembly of the crankshaft can only be done by a shop having the necessary tools and equipment.


- Reassemble the crankshaft according to the standard tolerances in Specifications.
 - Connecting rod bend, twist
 - Connecting rod big end radial clearance.
 - Cold-fitting tolerance between crankpin and flywheels.
 - Side clearance between the connecting rod big end and one of flywheels.
 - Crankshaft runout.

Connecting Rod Big End Radial Clearance

- Set the crankshaft in a flywheel alignment jig or on V blocks, and place a dial gauge against the connecting rod big end.
- Push the connecting rod first towards the gauge and then in the opposite direction. The difference between the two gauge readings is the radial clearance.
- ★ If the radial clearance exceeds the service limit, the crankshaft should be either replaced or disassembled and the crankpin, needle bearing, and connecting rod big end examined for wear.

Connecting Rod Big End Radial Clearance

Standard:	KX125: 0.026 ~ 0.043 mm KX250: 0.037 ~ 0.049 mm
Service Limit:	KX125: 0.09 mm KX250: 0.10 mm

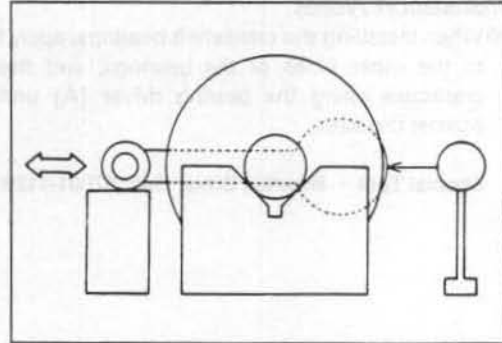

Connecting Rod Big End Seizure


- ★ In case of serious seizure with damaged flywheels, the crankshaft must be replaced.
- ★ In case of less serious damage, disassemble the crankshaft and replace the crankpin, needle bearing, side washers, and connecting rod.

Connecting Rod Big End Side Clearance

- Measure the side clearance [A] of the connecting rod with a thickness gauge.
- ★ If the clearance exceeds the service limit, replace the crankshaft.

Connecting Rod Big End Side Clearance

Standard:	KX125 - 0.40 ~ 0.50 mm KX250 - 0.45 ~ 0.55 mm
Service Limit:	0.70 mm

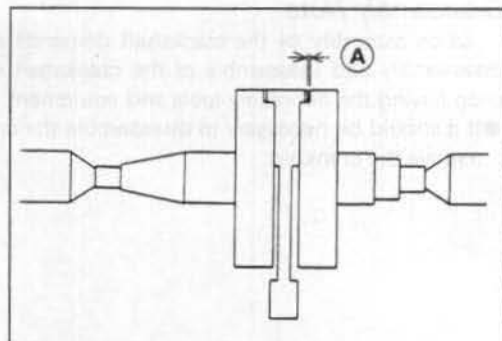


Crankshaft Runout

- Set the crankshaft in a flywheel alignment jig or on V blocks, and place a dial gauge against the points indicated.
- Turn the crankshaft slowly. The maximum difference in gauge readings is the crankshaft runout.
- ★ If the runout at either point exceeds the service limit, align the flywheels so that the runout falls within the service limit.

Crankshaft Runout


Standard: Not more than 0.03 mm
Service Limit: 0.05 mm

(A) : KX125 – 8.0 mm
 KX250 – 8.5 mm

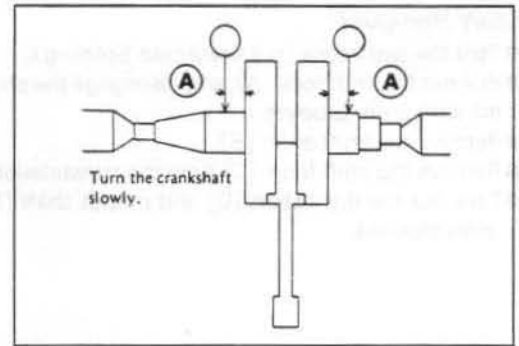

Crankshaft Alignment


- In the case of horizontal misalignment, which is the most common, strike the projecting rim of the flywheel with a plastic, soft lead, or brass hammer as indicated in the figure.
- Recheck the runout with a dial gauge, repeating the process until the runout falls within the service limit.
- Vertical misalignment is corrected either by driving a wedge in between the flywheels or by squeezing the flywheel rims in a vise, depending on the nature of the misalignment. In cases of both horizontal and vertical misalignment, correct the horizontal misalignment first.

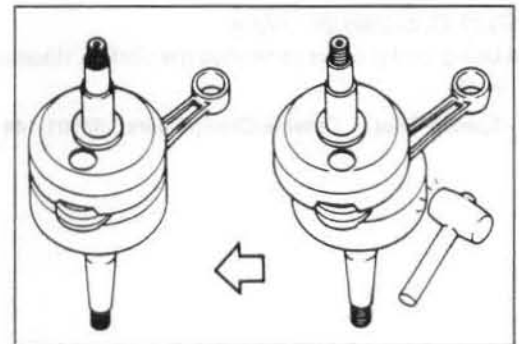

CAUTION

Don't hammer the flywheel at point "A".

- ★ If flywheel misalignment cannot be corrected by the above method, replace the crankpin or the crankshaft itself.

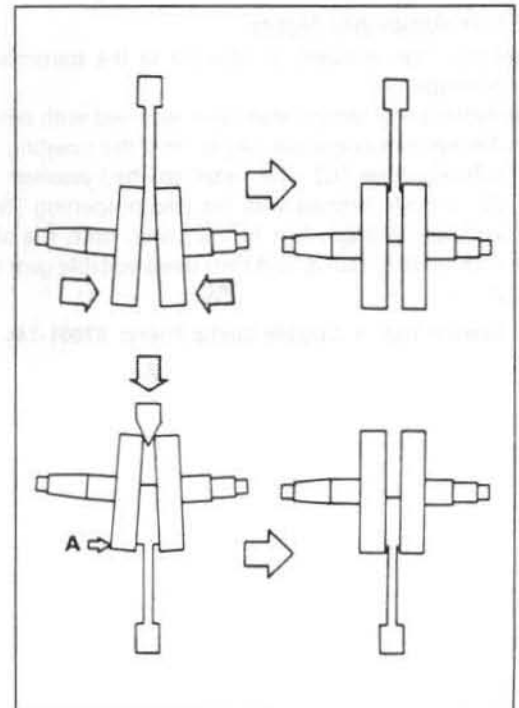


7-12 ENGINE BOTTOM END/TRANSMISSION

Transmission


Shaft Removal

- Split the crankcase (see Crankcase Splitting).
- Pull out the shift rods [A], and disengage the shift fork guide pins from the shift drum grooves.
- Remove the shift drum [B].
- Remove the shift forks [C] from the transmission gears.
- Take out the drive shaft [D] and output shaft [E] together, with their gears meshed.

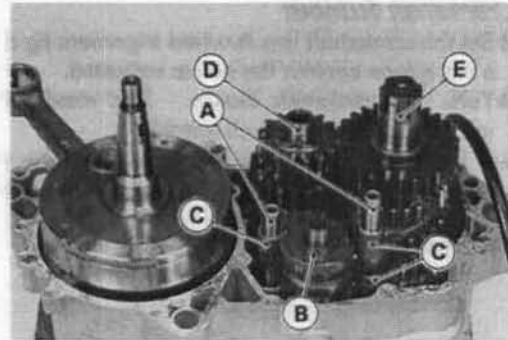

Shaft Installation Notes

- Hold the drive shaft [A] and output shaft [B] together, with their gears meshed, and fit them into the right crankcase half.
- To install the shift forks and shift drum, see the Shift Drum and Fork Installation Notes.

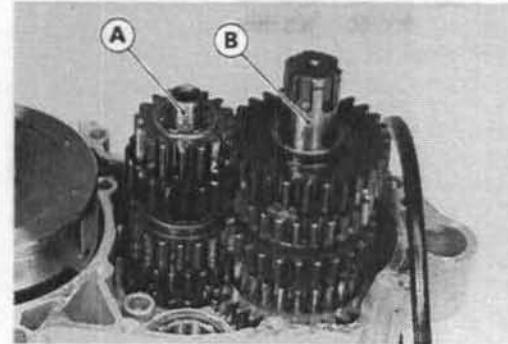

Shaft Disassembly Note


- Using circlip pliers to remove the circlips, disassemble the transmission shaft.

Special Tool – Outside Circlip Pliers: 57001-144

Shaft Assembly Notes

- Apply transmission oil liberally to the transmission shaft, gears and bearings.
- Replace any circlips that were removed with new ones.
- Always install circlips [A] so that the opening [B] is aligned with a spline groove [C], and install toothed washers [D] so that the teeth [E] are not aligned with the circlip opening [B]. To install a circlip without damage, first fit the circlip onto the shaft expanding it just enough to install it, and then use a suitable gear to push the circlip into place.

Special Tool – Outside Circlip Pliers: 57001-144

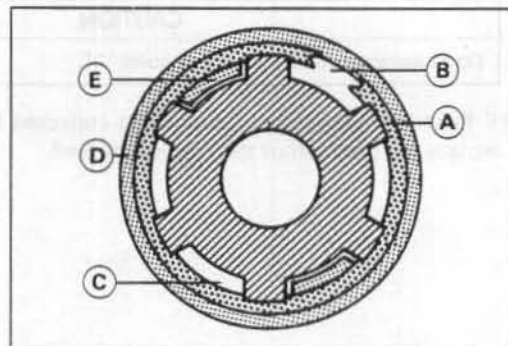


● The drive shaft gears can be identified by size; the smallest diameter gear is 1st gear, and the largest is 5th (KX250) or 6th (KX125). Be sure that all parts are put back in the correct sequence, and facing the proper direction, and that all circlips and the washers are properly in place.

KX125:

- A. 1st gear (13T; part of drive shaft)
- B. 5th gear (25T; plain side faces right)
- C. 3rd/4th gear (16T/22T; larger gear faces right)
- D. 6th gear (24T; plain side faces left)
- E. 2nd gear (14T; chamfered side faces left)


KX125:

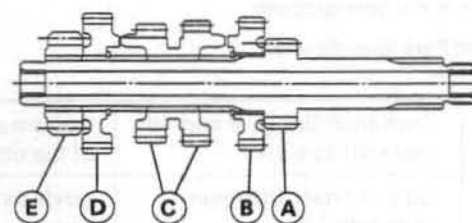

KX250:

- A. 1st gear (15T; part of drive shaft)
- B. 5th gear (24T; dog recesses face left)
- C. 3rd gear (18T; fork groove goes to the left side of the gear teeth)
- D. 4th gear (22T; dog recesses face right)
- E. 2nd gear (16T; chamfered side faces right)

KX250:

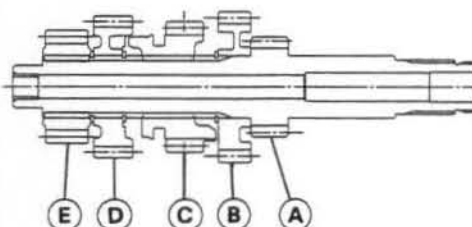


● The output shaft gears can be identified by size; the largest diameter gear is 1st gear, and the smallest is 5th (KX250) or 6th (KX125). Be sure that all parts are put back in the correct sequence and facing the proper direction, and that all circlips and washers are properly in place.

KX125:

- A. 2nd gear (26T; dog recesses face right)
- B. 6th gear (27T; fork groove goes to the right side of the gear teeth)
- C. 3rd gear (24T; dog recesses face left)
- D. 4th gear (28T; dog recesses face right)
- E. 5th gear (25T; fork groove goes to the left side of the gear teeth)
- F. 1st gear (31T; plain side faces right)


KX125:

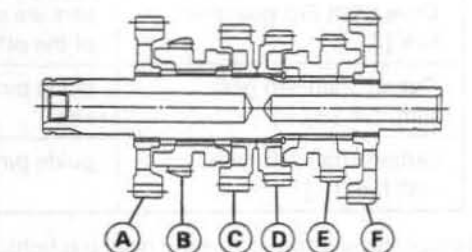

KX250:

- A. 2nd gear (27T; plain side faces left)
- B. 4th gear (25T; fork groove goes to the right side of the gear teeth)
- C. 3rd gear (25T; dog recesses face left)
- D. 5th gear (24T; dog recesses face right)
- E. 1st gear (32T; dog recesses face left)

KX250:

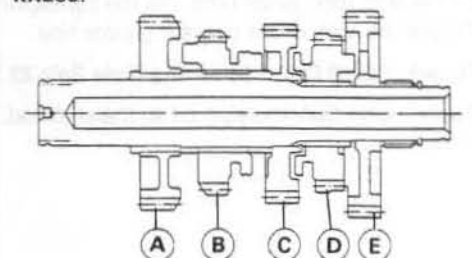

● Check that each gear spins or slides freely on the transmission shaft without binding after assembly.

7-14 ENGINE BOTTOM END/TRANSMISSION


Shift Drum and Fork Installation Notes

- Apply a little transmission oil to the shift fork ears, and fit the shift forks into the gear grooves.

Shift Fork Identification


KX125:

Drive shaft 3rd gear and 4th gear shift fork [A]	ears are shorter than those of the other two shift forks
Output shaft 6th gear shift fork [B]	guide pin goes to left side of the ears
Output shaft 5th gear shift fork [C]	guide pin goes to right side of the ears

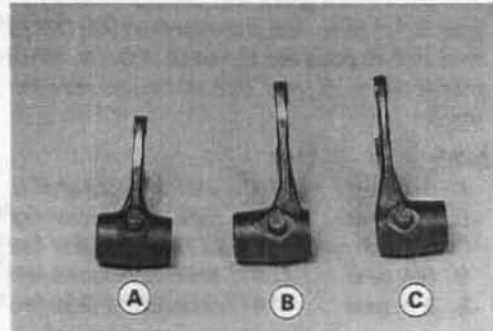

KX250:

Drive shaft 3rd gear shift fork [A]	ears are shorter than those of the other two shift forks
Output shaft 4th gear shift fork [B]	guide pin goes to left side of the ears
Output shaft 5th gear shift fork [C]	guide pin goes to center

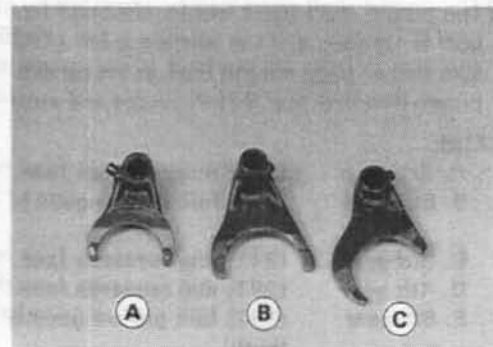


- Torque the shift drum bearing retaining bolts.

Torque – Shift Drum Bearing Retaining Bolts:
8.8 N-m (0.9 kg-m, 78 in-lb) (KX250)

- Fit the shift fork guide pins into the corresponding shift drum grooves.
- Torque the shift drum operating plate bolt.

Torque – Shift Drum Operating Plate Bolt: 22 N-m (2.2 kg-m, 16 ft-lb)


- Apply a little transmission oil to the shift rod, and slide it into the shift forks.

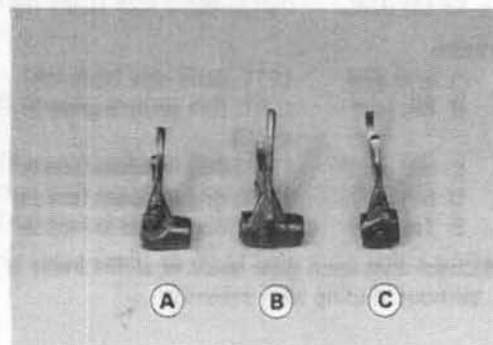

Shift Fork Bending

- Visually inspect the shift forks, and replace any fork that is bent. A bent fork could cause difficulty in shifting, or allow the transmission to jump out of gear when under power.

A. 90°

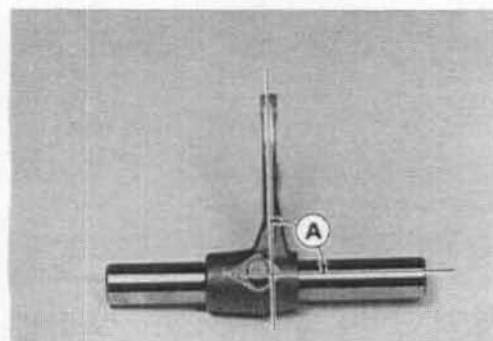

Shift Fork/Gear Groove Wear

- Measure the thickness of the shift fork ears [A], and measure the width [B] of the shift fork grooves in the transmission gears.
- ★ If the thickness of a shift fork ear is less than the service limit, the shift fork must be replaced.



Shift Fork Ear thickness

Standard:	KX125 - 4.9 ~ 5.0 mm
	KX250 - 4.4 ~ 4.5 mm
Service Limit:	KX125 - 4.8 mm
	KX250 - 4.3 mm

- ★ If a gear shift fork groove is worn over the service limit, the gear must be replaced.

Gear Shift Fork Groove Width

Standard:	KX125 - 5.05 ~ 5.15 mm
	KX250 - 4.55 ~ 4.65 mm
Service Limit:	KX125 - 5.25mm
	KX250 - 4.75 mm

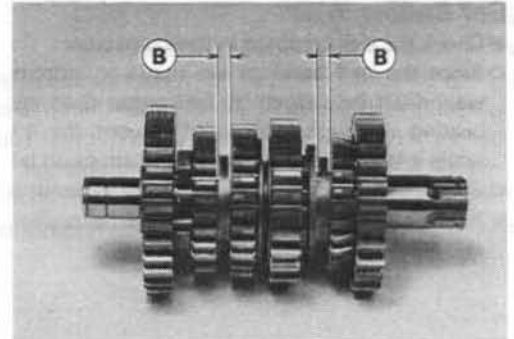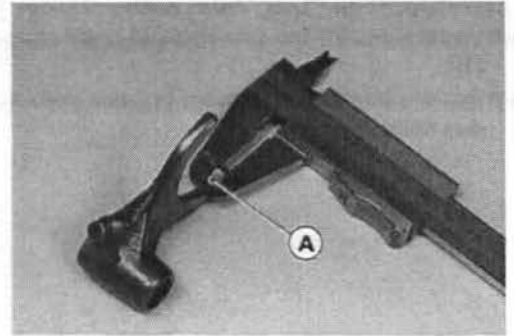

Shift Fork Guide Pin/Shift Drum Groove Wear

- Measure the diameter of each shift fork guide pin [A], and measure the width [B] of each shift drum groove.
- ★ If the guide pin on any shift fork is less than the service limit, the fork must be replaced.



Shift Fork Guide Pin Diameter

Standard:	5.90 ~ 6.00 mm
Service Limit:	5.80 mm

- ★ If any shift drum groove is worn over the service limit, the drum must be replaced.

Shift Drum Groove Width

Standard:	6.05 ~ 6.20 mm
Service Limit:	6.25 mm

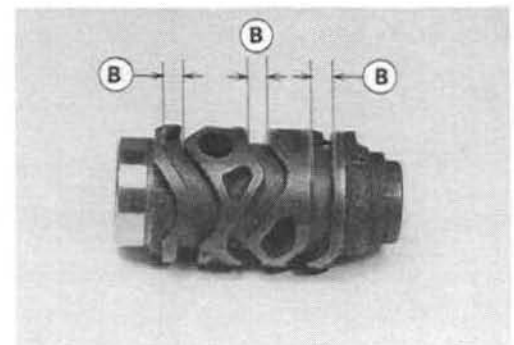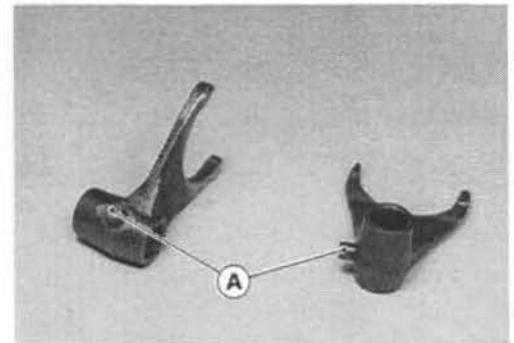


Gear Damage

- Visually inspect the gear teeth on the transmission gears.
- ★ Repair lightly damaged gear teeth with an oilstone. The gear must be replaced if the teeth are badly damaged.
- ★ When the gear is repaired or replaced, the driving gear should also be inspected and repaired or replaced if necessary.

7-16 ENGINE BOTTOM END/TRANSMISSION

Gear Dog/Gear Dog Hole and/or Recess Damage

- Visually inspect the gear dogs [A], gear dog holes and /or recesses [B].
- ★ Replace any damaged gears or gears with excessively worn dogs or dog holes.

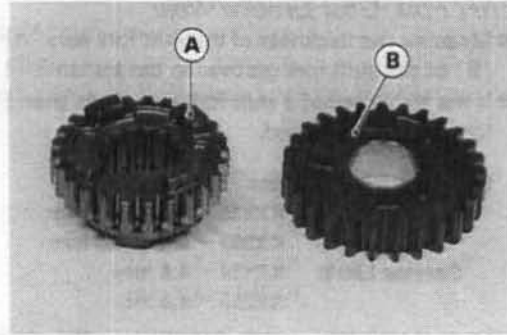

Ball Bearing Wear

- Check the ball bearings in the crankcase.
- Since the ball bearings are made to extremely close tolerances, the wear must be judged by feel rather than measurement. Clean each bearing in a high flash-point solvent, dry it (do not spin the bearing while it is dry), and oil it with transmission oil.
- Spin the bearing by hand to check its condition.
- ★ If the bearing is noisy, does not spin smoothly, or has any rough spots, replace it.


Wheels/Tires

Table of Contents

Exploded View	8-2
Specifications	8-3
Wheels (Rims)	8-4
Front Wheel Removal	8-4
Front Wheel Installation Notes	8-4
Rear Wheel Removal	8-5
Rear Wheel Installation Notes	8-5
Inspection	8-6
Spoke Inspection	8-7
Rim Inspection	8-7
Axle Inspection	8-7
Tires	8-8
Air Pressure Inspection/Adjustment	8-8
Inspection	8-8
Removal	8-9
Installation Notes	8-9
Hub Bearings	8-10
Removal Notes	8-10
Installation Notes	8-10
Inspection	8-10

8-2 WHEELS/TIRES

Exploded View

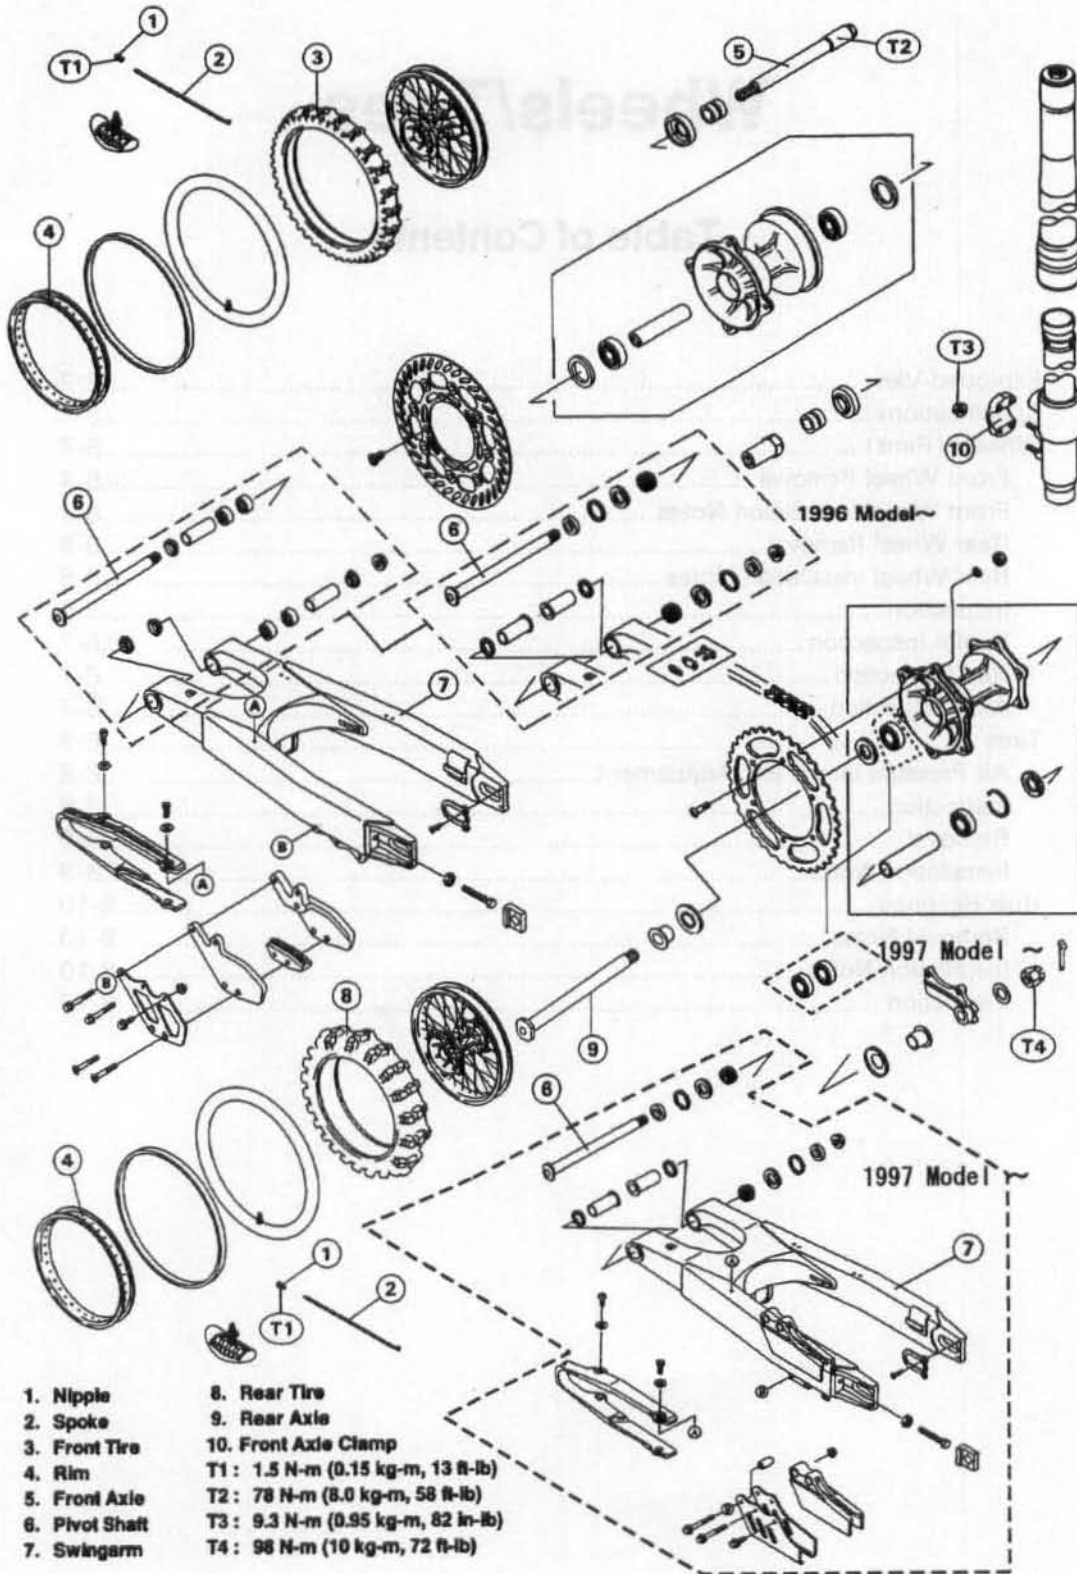

Specifications

Item	Standard	Service Limit
Wheels (Rims):		
Rim runout: Axial	Under 0.5 mm	2 mm
Radial	Under 0.8 mm	2 mm
Axle runout/100 mm	Under 0.10 mm	0.2 mm
Tires:		
Standard tire: KX125		
Front: Size	80/100-21 51M	---
Make	DUNLOP	
Type	K490, Tube (E) D752, Tube	
Rear: Size	100/90-19 57M	---
Make	DUNLOP	
Type	D737, Tube (E) D752, Tube	
KX250		
Front: Size	80/100-21 51M	---
Make	DUNLOP	
Type	K490, Tube (E) D752, Tube	
Rear: Size	110/90-19 62M	---
Make	DUNLOP	
Type	D737, Tube (E) D752, Tube	

(E) : European Model

- Special Tool – Inside Circlip Pliers: 57001-143
- Rim Protector: 57001-1063
- Bead Breaker Assembly: 57001-1072
- Bearing Driver Set: 57001-1129
- Jack: 57001-1238

8-4 WHEELS/TIRES

Wheels (Rims)

Front Wheel Removal


- Using the jack [A] under the frame, and stabilize the motorcycle.

Special Tool – Jack: 57001-1238 [A]

- Place a stand under the engine to raise the front wheel off the ground.



- Loosen the right axle clamp nuts [B], remove the axle [A], and pull out the wheel.
- Take off the collar [C] and cap [D] from each side of the front hub.

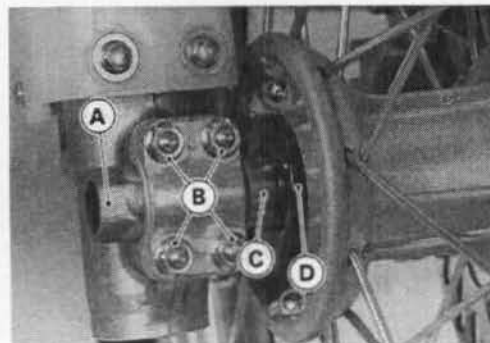


CAUTION

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so the disc does not touch the ground.

- Insert a wood wedge between the disc brake pads. This prevents them from being moved out of their proper position, should the brake lever be squeezed accidentally.

Front Wheel Installation Notes

- Fit the projection [A] on the cap to the groove [B] on the collar.
- Install the collars on the left and right side of the hub.

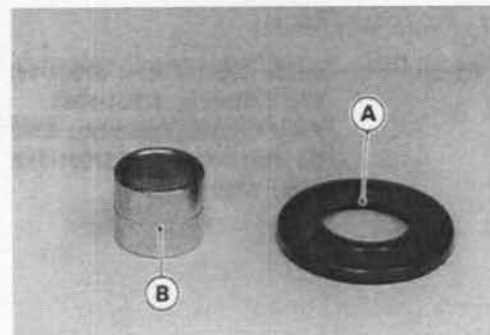


- Torque the axle [A].

Torque – Front Axle: 78 N-m (8.0 kg-m, 58 ft-lb)

- Tighten the upper clamp nuts [B] first, and then tighten the lower clamp nuts [C].

Torque – Clamp Nut: 9.3 N-m (0.95 kg-m, 82 in-lb)

- Check the front brake for good braking power and no brake drag.

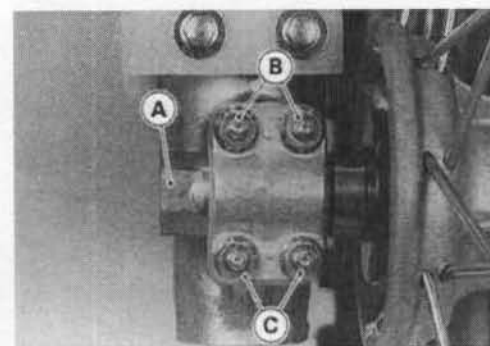

⚠ WARNING


Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.

Rear Wheel Removal


- Use the jack under the frame so that the rear wheel is raised off the ground.

Special Tool – Jack: 57001-1238


- Remove the caliper cover, unscrew the caliper mounting bolts [B], and take out the caliper [A] from the disc.
- Insert a wood wedge between the brake pad. This prevents them from being moved out of their proper position, should the brake pedal be squeezed accidentally.

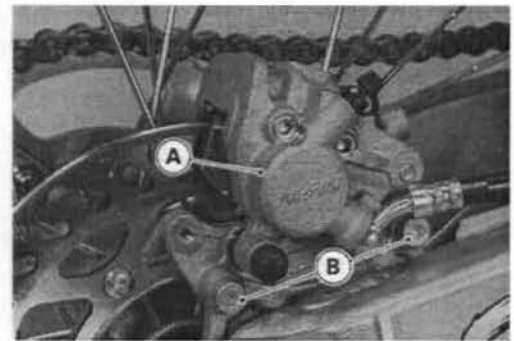

- Remove the clip [B] from the master link using pliers, and free the drive chain [A] from the rear sprocket.

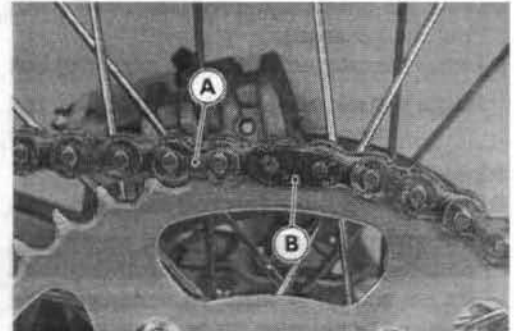

- Remove the cotter pin [A].
- Remove the axle nut [B].
- Pull out the axle [C], and remove the chain adjuster, brake holder, and rear wheel.
- Take off the collar and cap from each side of the rear hub.

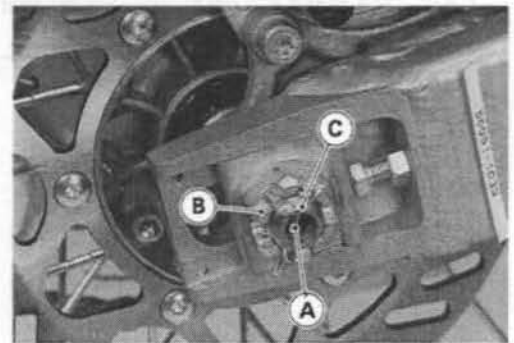


CAUTION


Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so the disc does not touch the ground.

Rear Wheel Installation Notes

- Fit the brake holder stop [A] against the swingarm stop [B].

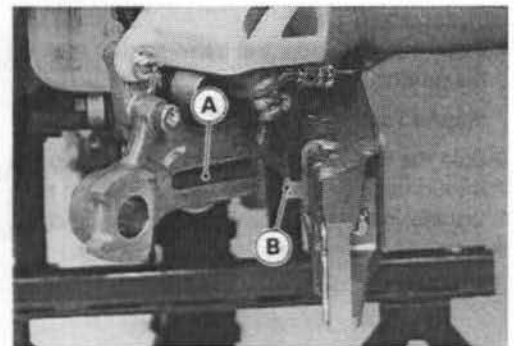


- Fit the projection on the cap to the groove on the collar.
- Install the collars [A] on the left and right side of the hub.

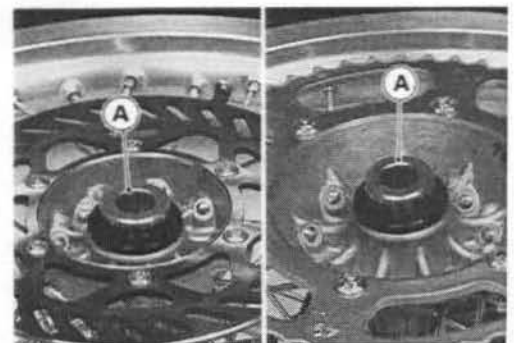

8-6 WHEELS/TIRES

- Install the drive chain. Install the master link clip [A] so that the closed end of the "U" points in the direction of the chain rotation [B].

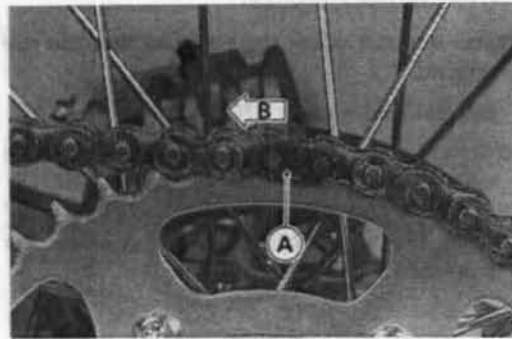

- Check the drive chain slack (see Drive Chain Slack Inspection in the Final Drive chapter).
- Torque the axle nut and caliper mounting bolts.
Torque – Rear Axle Nut: 98 N-m (10 kg-m, 72 ft-lb)
Rear Callper Mounting Bolts: 25 N-m (2.5 kg-m, 18 ft-lb)
- Install the new cotter pin.
- Check the rear brake for good braking power and no brake drag.

⚠WARNING

Do not attempt to drive the motorcycle until a full brake pedal is obtained by pumping the brake pedal until the pads are against the disc. The brake will not function on the first application of the pedal if this is not done.

Inspection

- Place the jack under the frame so that the front/rear wheel is raised off the ground.
Special Tool – Jack: 57001-1238
- Spin the wheel lightly, and check for roughness or binding.
- ★ If roughness or binding is found, replace the hub bearings.
- Visually inspect the front and rear axles for damage.
- ★ If an axle is damaged or bent, replace it.

Spoke Inspection

- Check that all the spokes are tightened evenly.
- ★ If spoke tightness is uneven or loose, torque the spoke nipples evenly.

Torque – Spoke Nipples: 1.5 N-m (0.15 kg-m, 13 in-lb)

- Check the rim runout.

▲WARNING

If any spoke breaks, it should be replaced immediately. A missing spoke places an additional load on the other spokes, which will eventually cause other spokes to break.

Rim Inspection

- Place the jack under the frame so that the front/rear wheel is raised off the ground.



Special Tool – Jack: 57001-1238

- Inspect the rim for small cracks, dents, bending, or warping.
- ★ If there is any damage to the rim, it must be replaced.
- Set a dial gauge against the side of the rim, and rotate the rim to measure the axial runout [A]. The difference between the highest and lowest dial readings is the amount of runout.
- Set a dial gauge against the outer circumference of the rim, and rotate the rim to measure radial runout [B]. The difference between the highest and lowest dial readings is the amount of runout.

- ★ If rim runout exceeds the service limit, check the wheel bearings first. Replace them if they are damaged. If the problem is not due to the bearings, correct the rim warp (runout). A certain amount of rim warp can be corrected by recentering the rim. Loosen some spokes and tighten others within the standard torque to change the position of different parts of the rim. If the rim is badly bent, however, it must be replaced.

Rim Runout (with tire installed)

	Standard	Service Limit
Axial	under 0.5 mm	2 mm
Radial	under 0.8 mm	2 mm

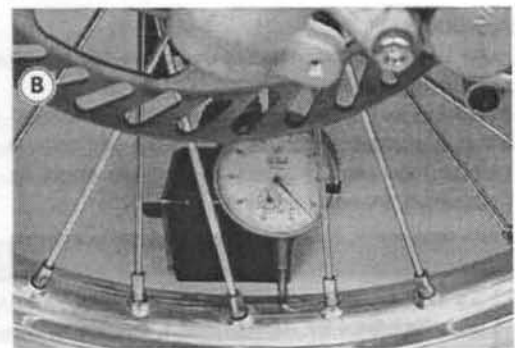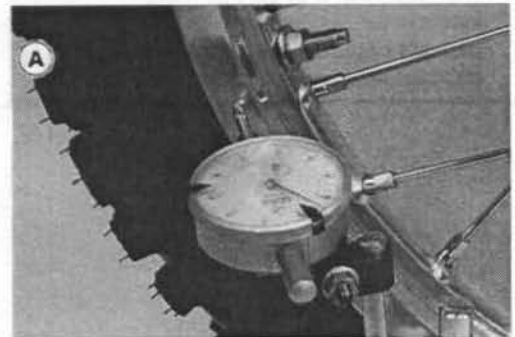


Axle Inspection

- Place the axle in V blocks that are 100 mm [A] apart, and set a dial gauge on the axle at a point halfway between the blocks. Turn the axle to measure the runout. The difference between the highest and lowest dial readings is the amount of runout.
- ★ If runout exceeds the service limit, replace the axle.

Axle Runout/100 mm

Standard: Under 0.10 mm
Service Limit: 0.2 mm

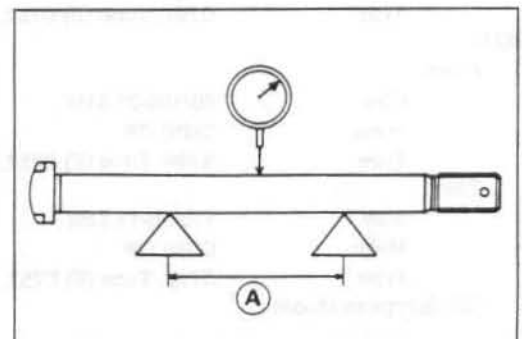


8-8 WHEELS/TIRES

Tires

Air Pressure Inspection/Adjustment

- Using a tire air pressure gauge [A], measure the tire pressure when the tires are cold.
- ★ Adjust the tire air pressure to suit track conditions and rider preference, but do not stray too far from the recommended pressure.


Track Condition	Tire Pressure
○ When the track is wet, muddy, sandy or slippery, reduce the tire pressure to increase the tire tread surface on the ground.	80 kPa (0.8 kg/cm ² , 11 psi)
	↑
○ When the track is pebbly or hard, increase the tire pressure to prevent damage or punctures, though the tires will skid more easily.	100 kPa (1.0 kg/cm ² , 14 psi)

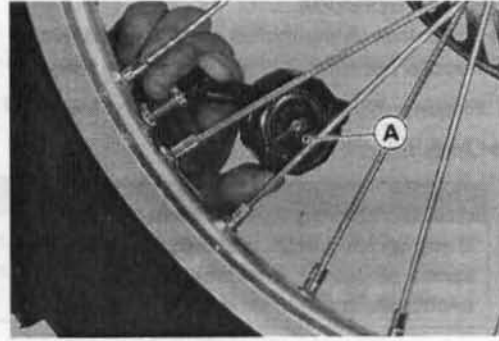

Inspection

As the tire tread wears down, the tire becomes more susceptible to puncture and failure.

- Remove any imbedded stones or other foreign particles from the tread.
- Visually inspect the tire for cracks and cuts, replacing the tire in case of bad damage. Swelling or high spots indicate internal damage, requiring tire replacement.

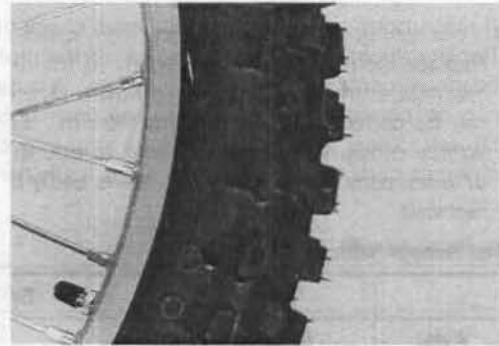

⚠ WARNING

To ensure safe handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure.

NOTE

- Check and balance the wheel when a tire is replaced with a new one.

Standard Tire

KX125

Front:

Size 80/100-21 51M
 Make DUNLOP
 Type K490, Tube (E) D752, Tube

Rear:

Size 100/90-19 57M
 Make DUNLOP
 Type D737, Tube (E) D752, Tube

KX250

Front:

Size 80/100-21 51M
 Make DUNLOP
 Type K490, Tube (E) D752, Tube

Rear

Size 110/90-19 62M
 Make DUNLOP
 Type D737, Tube (E) D752, Tube

(E): European Model


*Removal***CAUTION**

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.

- Remove the wheel from the motorcycle (see Wheels).
- To maintain wheel balance, mark [A] the valve stem position on the tire with chalk so that the tire can be reinstalled in the same position.
- Take out the valve core [B] to let out the air.
- When handling the rim, be careful not to damage the rim flanges.
- Loosen the bead protector nut.
- Lubricate the tire beads and rim flanges on both sides with a soap and water solution or rubber lubricant. This helps the tire beads slip off the rim flanges.


CAUTION

Never lubricate with mineral oil (engine oil) or gasoline because they will cause deterioration of the tire.

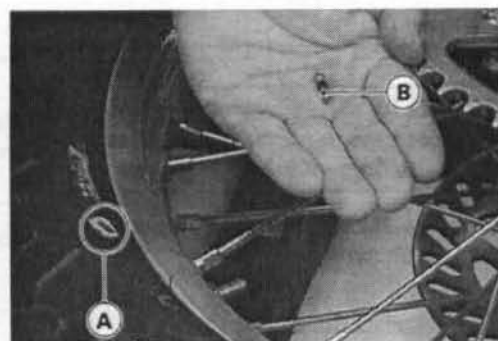

- Break the beads away from both sides of the rim with the bead breaker [A].

Special Tool – Bead Breaker Assembly: 57001-1072 [A]

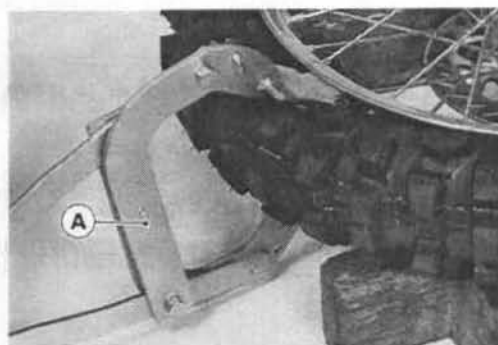


- Pry the tire off the rim with the tire iron portion of the bead breaker [B] protecting the rim with rim protectors [A].


Special Tool – Rim Protector: 57001-1063 [A]

Tire Iron Portion of the Bead

Breaker Assembly: 57001-1072 [B]

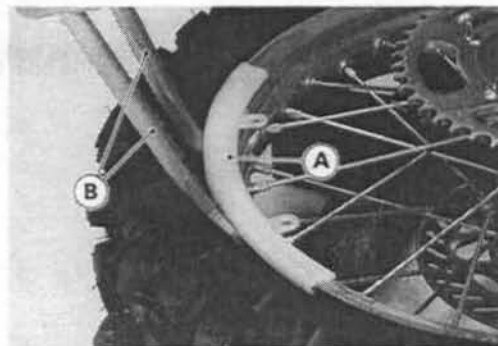*Installation Notes*

- Position the tire on the rim so that the valve is at the tire balance mark [A] (the chalk mark made during removal or the yellow paint mark on a new tire).
- Tighten the bead protector nut securely.
- Check and adjust the air pressure after installing.

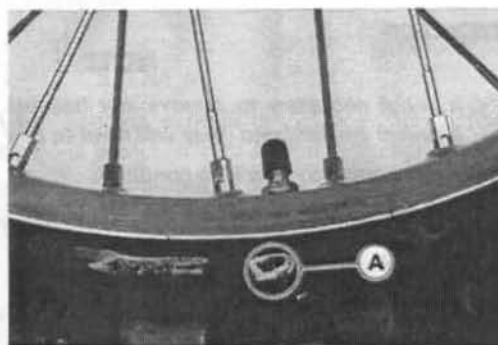

8-10 WHEELS/TIRES

Hub Bearings


Removal Notes

CAUTION

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.

- Remove the hub bearing by tapping evenly around the bearing inner race as shown.

- A. Bar
- B. Distance Collar
- C. Hub Bearing

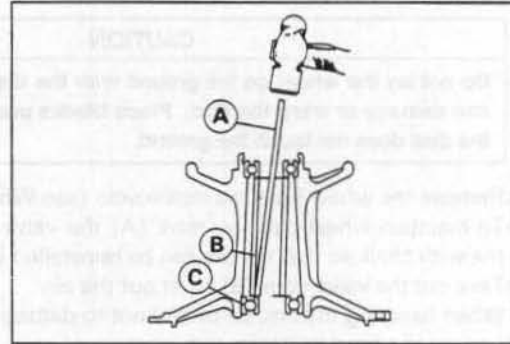

Installation Notes

- Before installing the wheel bearings, blow any dirt or foreign particles out of the hub with compressed air to prevent contamination of the bearings.
- Replace the bearings with new ones.
- Lubricate them and install them using the bearing driver set [A] so that the marked or shielded sides face out.

Special Tool – Bearing Driver Set: 57001-1129 [A]



- Replace the oil seals with new ones.
- Press it in until it stops at the circlip in the hole using the same special tools used for bearing installation.



Inspection

NOTE

○ It is not necessary to remove any bearings for inspection. If any bearings are removed, they will need to be replaced with new ones.

- Spin it by hand to check its condition.
- ★ If it is noisy, does not spin smoothly, or has any rough spots, it must be replaced.
- Examine the bearing seal for tears or leakage.
- ★ If the seal is torn or is leaking, replace the bearing.


Final Drive

Table of Contents

Exploded View	9-2
Specifications	9-3
Drive Chain	9-4
Slack Inspection	9-4
Slack Adjustment	9-4
Wheel Alignment Inspection	9-5
Wheel Alignment Adjustment	9-5
Wear Inspection	9-5
Lubrication	9-6
Removal	9-6
Installation Notes	9-6
Sprockets	9-7
Engine Sprocket Removal	9-7
Engine Sprocket Installation Note	9-7
Rear Sprocket Removal	9-7
Rear Sprocket Installation Notes	9-7
Wear Inspection	9-7
Warp Inspection	9-8

9-2 FINAL DRIVE

Exploded View

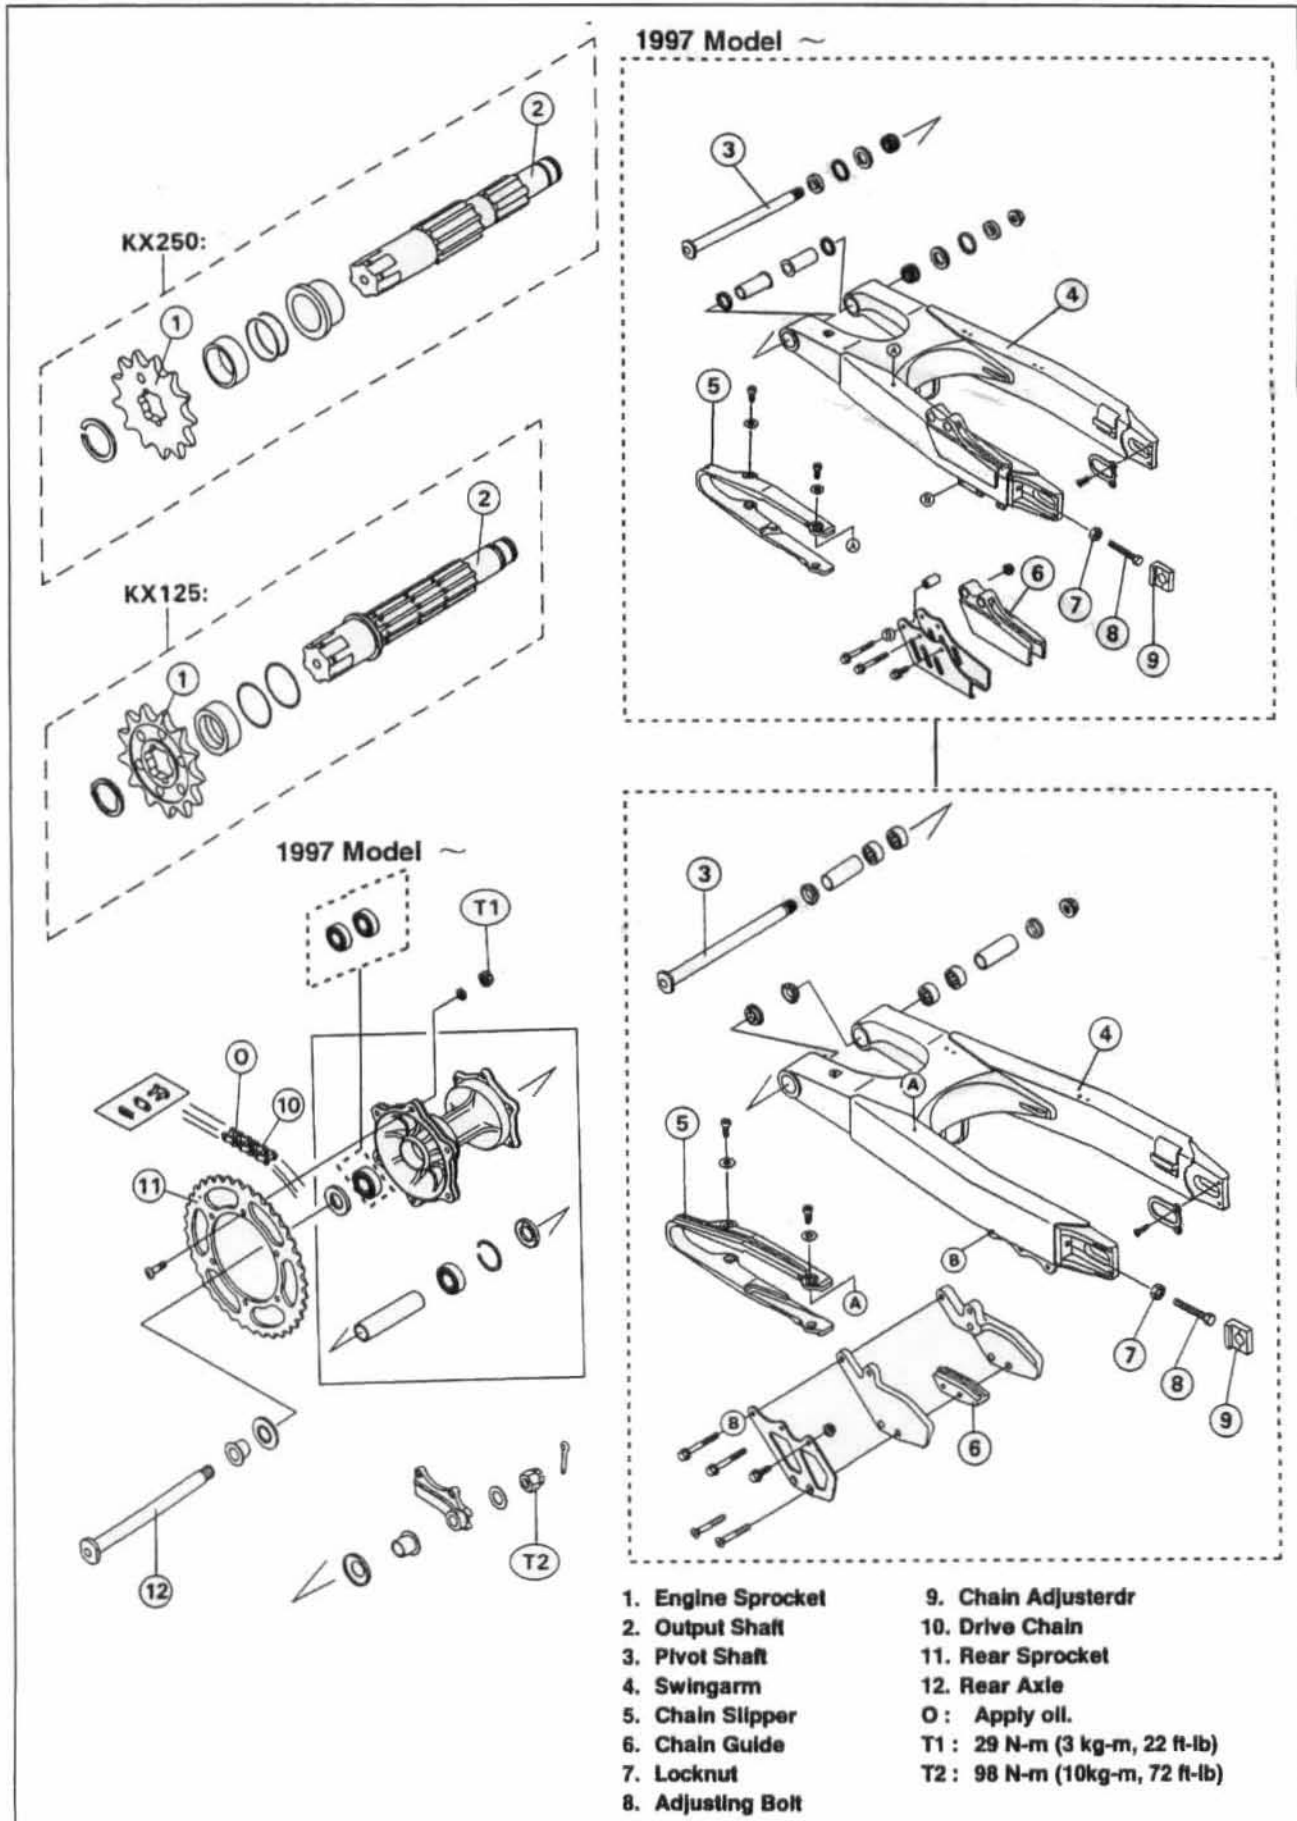

- | | |
|--------------------|-------------------------------|
| 1. Engine Sprocket | 9. Chain Adjuster |
| 2. Output Shaft | 10. Drive Chain |
| 3. Pivot Shaft | 11. Rear Sprocket |
| 4. Swingarm | 12. Rear Axle |
| 5. Chain Slipper | O: Apply oil. |
| 6. Chain Guide | T1: 29 N-m (3 kg-m, 22 ft-lb) |
| 7. Locknut | T2: 98 N-m (10kg-m, 72 ft-lb) |
| 8. Adjusting Bolt | |

Specifications

Item	Standard	Service Limit
Drive Chain:		
Chain slack	60 ~ 70 mm	Less than 60 mm, or more than 75 mm
Chain 20-link length	317.5 ~ 318.2 mm	323 mm
Standard chain:		
Make:	DAIDO	---
Type:	D.I.D 520DS-5	---
	D.I.D 520DS	---
Length:	110 Links	---
	112 Links	---
Sprockets:		
Engine sprocket diameter	KX125 50.98 ~ 51.18 mm/12T	50.7 mm
	KX250 60.99 ~ 61.19 mm/14 T	60.7 mm
Rear sprocket diameter	237.54 ~ 238.04 mm/49T	237.0 mm
Rear sprocket warp	Under 0.4 mm	0.5 mm

Special Tool – Outside Circlip Pliers: 57001-144

Bearing Driver Set: 57001-1129

Jack: 57001-1238

9-4 FINAL DRIVE

Drive Chain


Slack Inspection

- Support the motorcycle on its side stand.
- Check the wheel alignment (see Wheel Alignment Inspection), and adjust it if necessary (see Wheel Alignment Adjustment).

NOTE

○ Clean the drive chain if it is dirty, and lubricate it if it appears dry.

- Rotate the rear wheel to find the position where the chain is tightest.
 - Measure the space (chain slack) [A] between the chain and the swingarm at the rear of the chain slipper as shown.
- ★ If the drive chain slack exceeds the standard, adjust it.

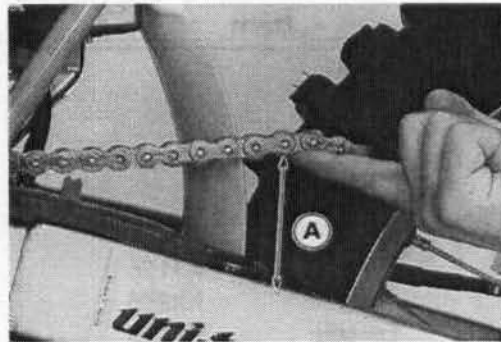

Chain Slack


Standard:	60 ~ 70 mm
Too Tight:	Less than 60 mm
Too Loose:	More than 75 mm

Slack Adjustment

- Loosen the left and right chain adjuster locknuts [C].
 - Remove the cotter pin [F] and loosen the axle nut [A].
- ★ If the chain is too tight, back out the left and right chain adjusting bolts [B] evenly, and kick the wheel forward until the chain is too loose.
- ★ If the chain is too loose, turn both chain adjusting bolts evenly until the drive chain has the correct amount of slack. To keep the chain and wheel properly aligned, the notch [E] on the right chain adjuster should align with the same swingarm mark [D] as the left chain adjuster notch aligned with.
- Check the wheel alignment.
 - Tighten both chain adjuster locknuts securely.
 - Tighten the axle nut.

Torque – Rear Axle Nut: 98 N-m (10.0 kg-m, 72 ft-lb)

- Rotate the wheel, measure the chain slack again at the tightest position, and readjust if necessary.
- Install a new cotter pin through the axle nut and axle, and spread its ends.

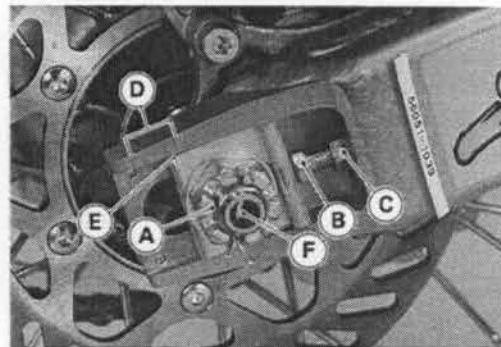

⚠ WARNING

If the axle nut is not securely tightened, or the cotter pin is not installed, and unsafe riding condition may result.

- Check the rear brake (see the Brakes chapter).

NOTE

○ In wet and muddy conditions, mud sticks to the chain and sprockets resulting in an overly tight chain, and the chain may break. To prevent this, adjust the chain to 70 ~ 80 mm of slack whenever necessary.

Wheel Alignment Inspection


- Check that the notch [A] on the left chain adjuster [B] aligns with the same swingarm mark [C] as the right chain adjuster aligned with.

NOTE

- Wheel alignment can also be checked using the straightedge or string method.

⚠ WARNING

Misalignment of the wheel will result in abnormal wear, and may result in an unsafe riding condition.

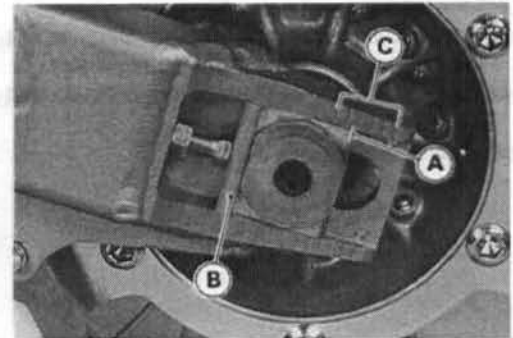


Wheel Alignment Adjustment

This procedure is the same as Drive Chain Slack Adjustment.

Wear Inspection

- Rotate the rear wheel to inspect the drive chain for damaged rollers, and loose pins and links.
- ★ If there is any irregularity, replace the drive chain.
- ★ Lubricate the drive chain if it appears dry.
- Stretch the chain taut by hanging a 98 N (10 kg, 20 lb) weight [A] on the chain.
- Measure [B] the length of 20 links on the straight part of the chain from the pin center of the 1st pin to the pin center of the 21st pin. Since the chain may wear unevenly, take measurements at several places.
- ★ If any measurements exceed the service limit, replace the chain. Also, replace the front and rear sprockets when the drive chain is replaced.

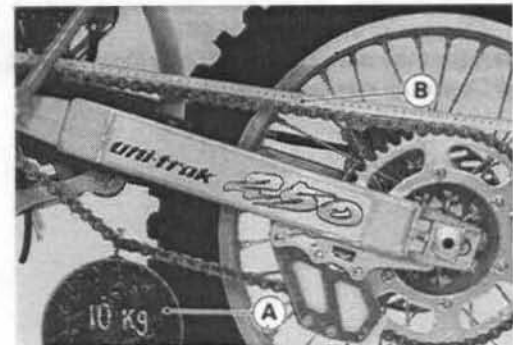


Chain 20-Link Length

Standard: 317.5 ~ 318.2 mm
Service Limit: 323 mm

⚠ WARNING

If the drive chain wear exceeds the service limit, replace the chain or an unsafe riding condition may result. A chain that breaks or jumps off the sprockets could snag on the engine sprocket or lock the rear wheel, severely damaging the motorcycle and causing it to go out of control.

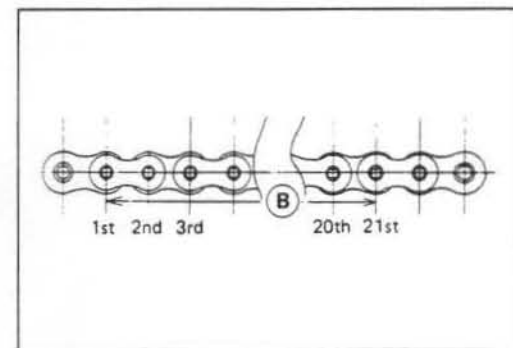


Standard Chain

Make: DAIDO
Type: KX125 - D.I.D 520DS-5
KX250 - D.I.D 520DS
Link: KX125 - 110 Links
KX250 - 112 Links


Lubrication

- If the chain appears especially dirty, it should be cleaned before lubrication with a high flash-point solvent.
- Apply oil [A] to the sides of the rollers so that oil will penetrate to the rollers and bushings.
- Wipe off any excess oil.

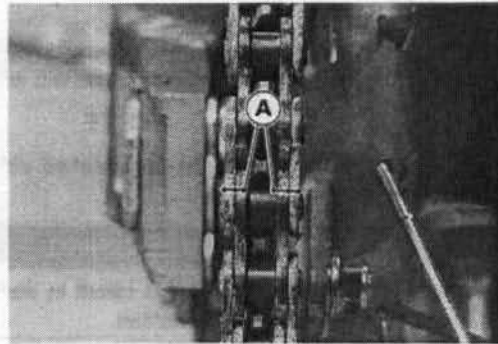

Removal

- Remove the engine sprocket cover.
- Remove the clip [A] from the master link using pliers, and free the drive chain from the rear sprocket.
- Remove the drive chain from the chassis.

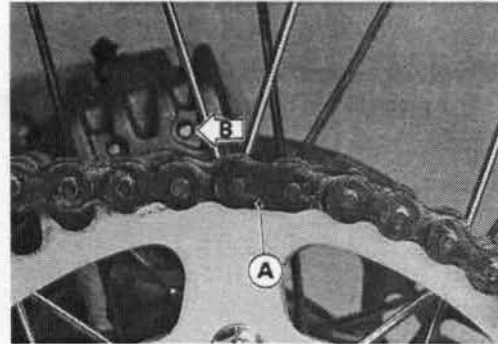

Installation Notes

- Fit the drive chain back onto the sprockets with the ends at the rear sprocket.
- Install the master link from the frame side.
- Install the clip [A] so that the closed end of the "U" points in the direction of chain rotation [B].
- Adjust the drive chain slack (see Drive Chain Slack Adjustment).
- Check the rear brake (see the Brakes chapter).



Faded text block, likely a technical note or warning, but the content is illegible due to low contrast.


Part No.	Description
111-11111	Drive Chain
111-11112	Master Link
111-11113	Clip
111-11114	Roller
111-11115	Bushing

Sprockets

Engine Sprocket Removal

- Remove:
 - Engine Sprocket Cover
 - Drive Chain (free from engine sprocket)
- Remove the circlip [A], and pull off the engine sprocket [B].

Special Tool – Outside Circlip Pliers: 57001-144

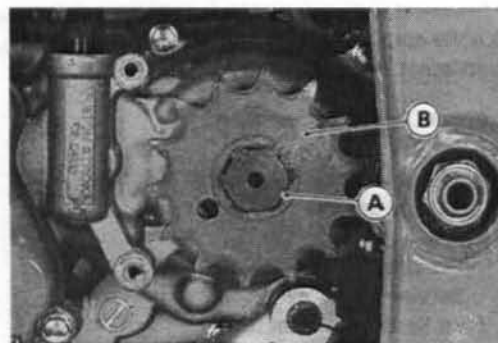

Engine Sprocket Installation Note

- Replace the circlip with a new one.

Special Tool – Outside Circlip Pliers: 57001-144


Rear Sprocket Removal

- Remove the rear wheel (see Rear Wheel Removal in Wheels/Tires chapter).

CAUTION

<p>Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.</p>
--

- Unscrew the rear sprocket bolts [A], and remove the rear sprocket [B].

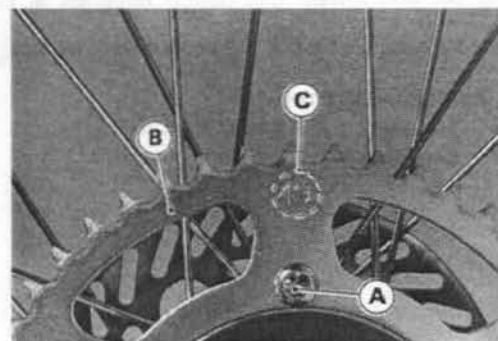

Rear Sprocket Installation Notes


- Install the rear sprocket bolts [A] so that the marked side [C] faces out.
- Tighten the rear sprocket bolts.

Torque – Rear Sprocket Bolts: 29 N-m (3.0 kg-m, 22 ft-lb)

Wear Inspection

- Visually inspect the front and rear sprocket teeth for wear and damage.
- ★ If they are worn as illustrated or damaged, replace the sprocket.

- A. Worn Tooth (Engine Sprocket)
- B. Worn Tooth (Rear Sprocket)
- C. Direction of Rotation

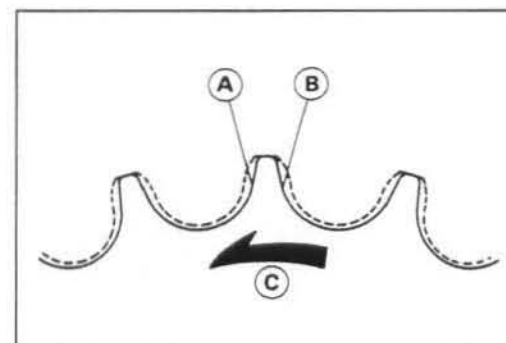

9-8 FINAL DRIVE

- Measure the diameter of the sprocket at the base of the teeth.
- ★ If the sprocket is worn down to less than the service limit, replace the sprocket.

Engine Sprocket Diameter

KX125

Standard: 50.98 ~ 51.18 mm/12T
Service Limit: 50.7 mm

KX250

Standard: 60.99 ~ 61.19 mm/14T
Service Limit: 60.7 mm

Rear Sprocket Diameter

Standard: 237.54 ~ 238.04 mm/49T
Service Limit: 237.0 mm

NOTE

- If a sprocket requires replacement, the chain is probably worn also. Upon replacing a sprocket, inspect the chain.

Warp Inspection

- Using the jack, raise the rear wheel off the ground.


Special Tool – Jack: 57001-1238

- Set a dial gauge [A] against the rear sprocket [B] near the teeth as shown and rotate [C] the rear wheel. The difference between the highest and lowest dial gauge readings is the amount of runout (warp).

- ★ If the runout exceeds the service limit, replace the rear sprocket.

Rear Sprocket Warp

Standard: Under 0.4 mm
Service Limit: 0.5 mm

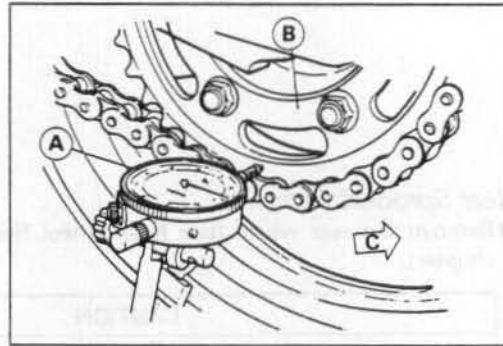


Brakes

Table of Contents


Exploded View	10-2
Specifications	10-4
Brake Lever, Brake Pedal	10-5
Lever Play Adjustment	10-5
Pedal Position/Pedal Play Adjustment	10-5
Pedal Removal	10-5
Pedal Installation Notes	10-6
Brake Fluid	10-7
Level Inspection	10-7
Change	10-8
Bleeding the Brake Line	10-9
Caliper	10-10
Removal	10-10
Installation Notes	10-10
Disassembly	10-11
Assembly Notes	10-11
Brake Pads	10-13
Removal	10-13
Installation Notes	10-13
Inspection	10-13
Master Cylinder	10-14
Front Master Cylinder Removal	10-14
Front Master Cylinder Installation Notes	10-14
Rear Master Cylinder Removal	10-14
Rear Master Cylinder Installation Notes	10-15
Front Master Cylinder Disassembly	10-15
Rear Master Cylinder Disassembly	10-15
Assembly Notes	10-16
Inspection (Visual Inspection)	10-16
Brake Disc	10-17
Inspection	10-17
Brake Hose	10-18
Removal/Installation Notes	10-18
Inspection	10-18

10-2 BRAKES

Exploded View

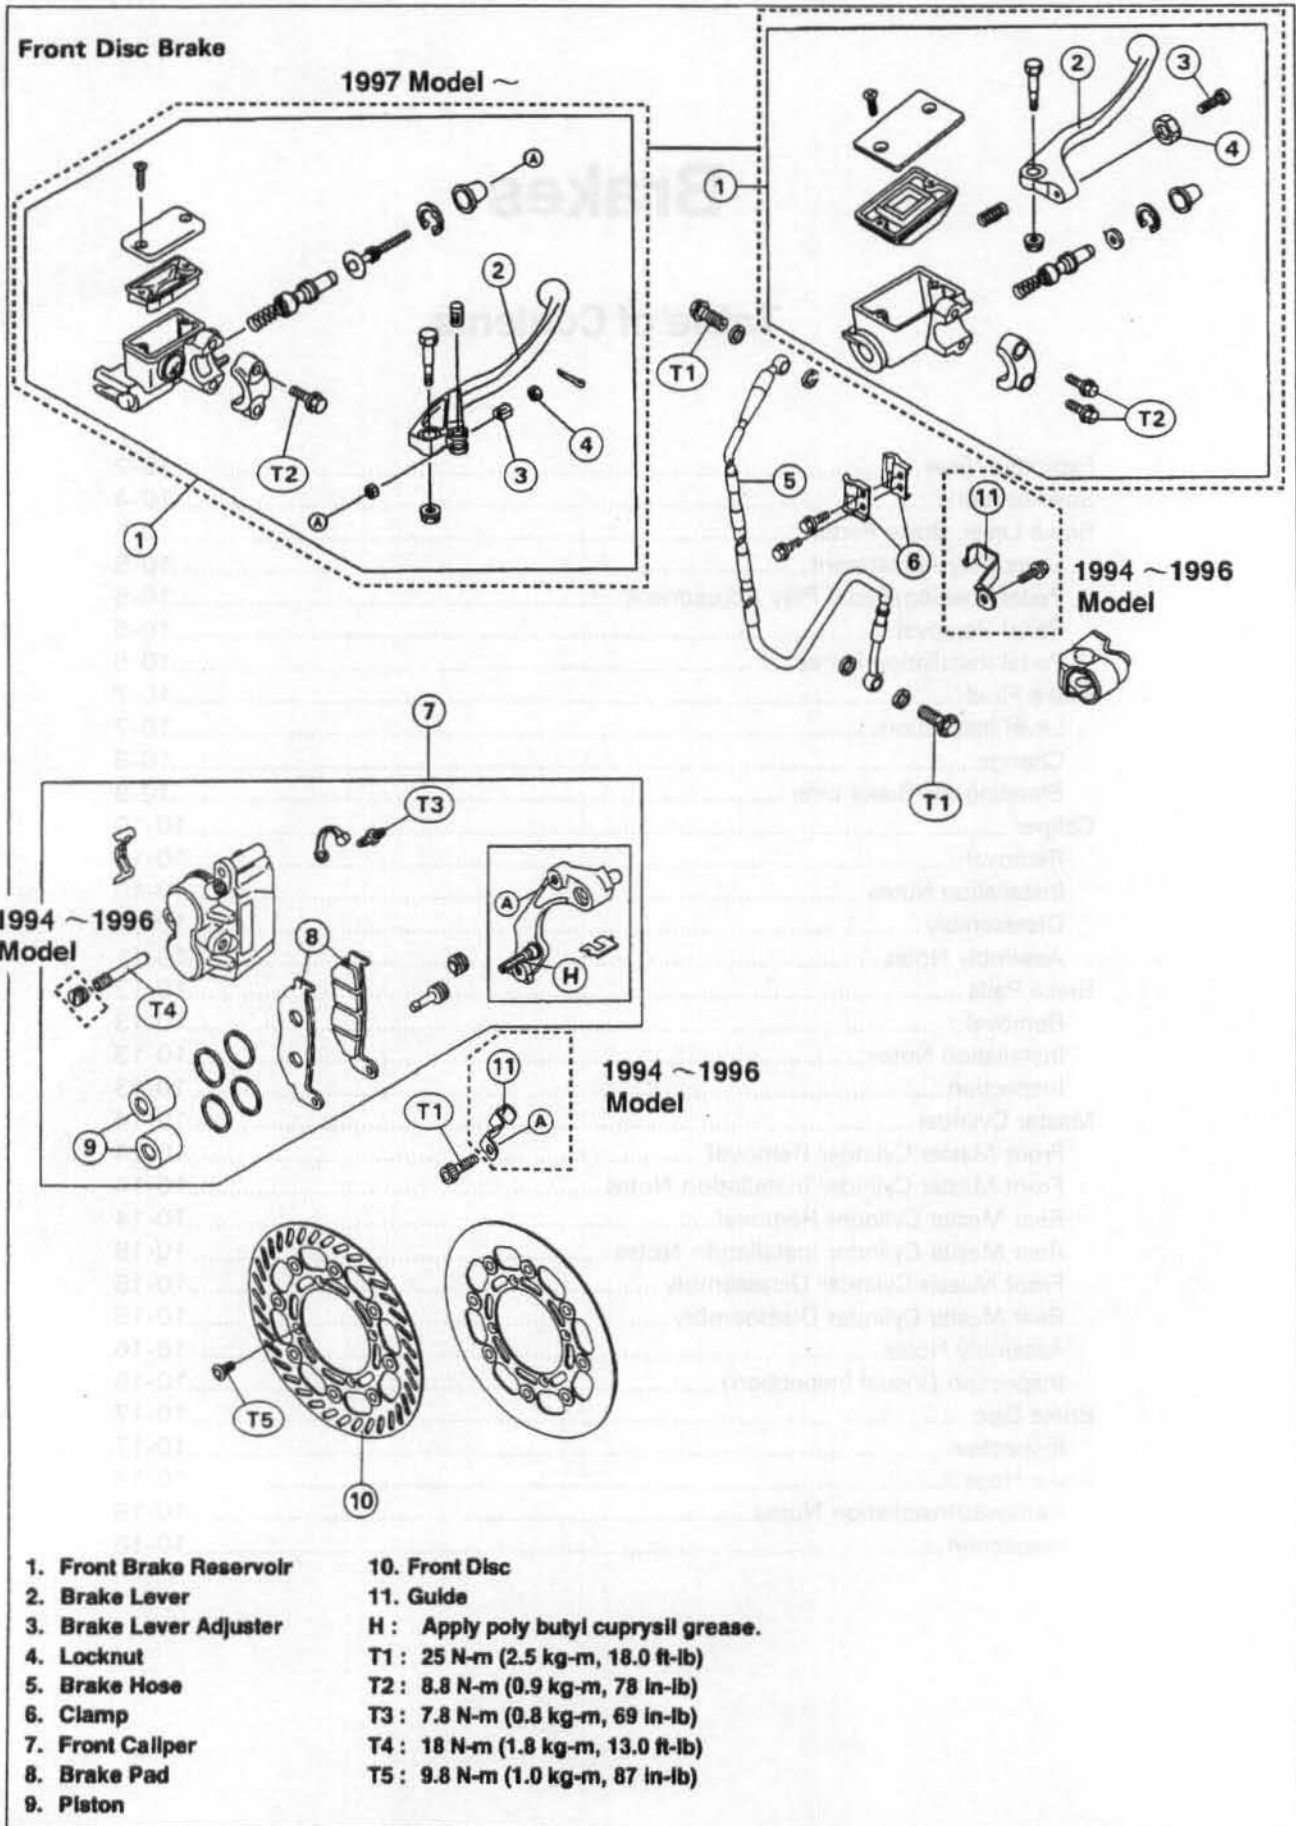

Rear Disc Brake

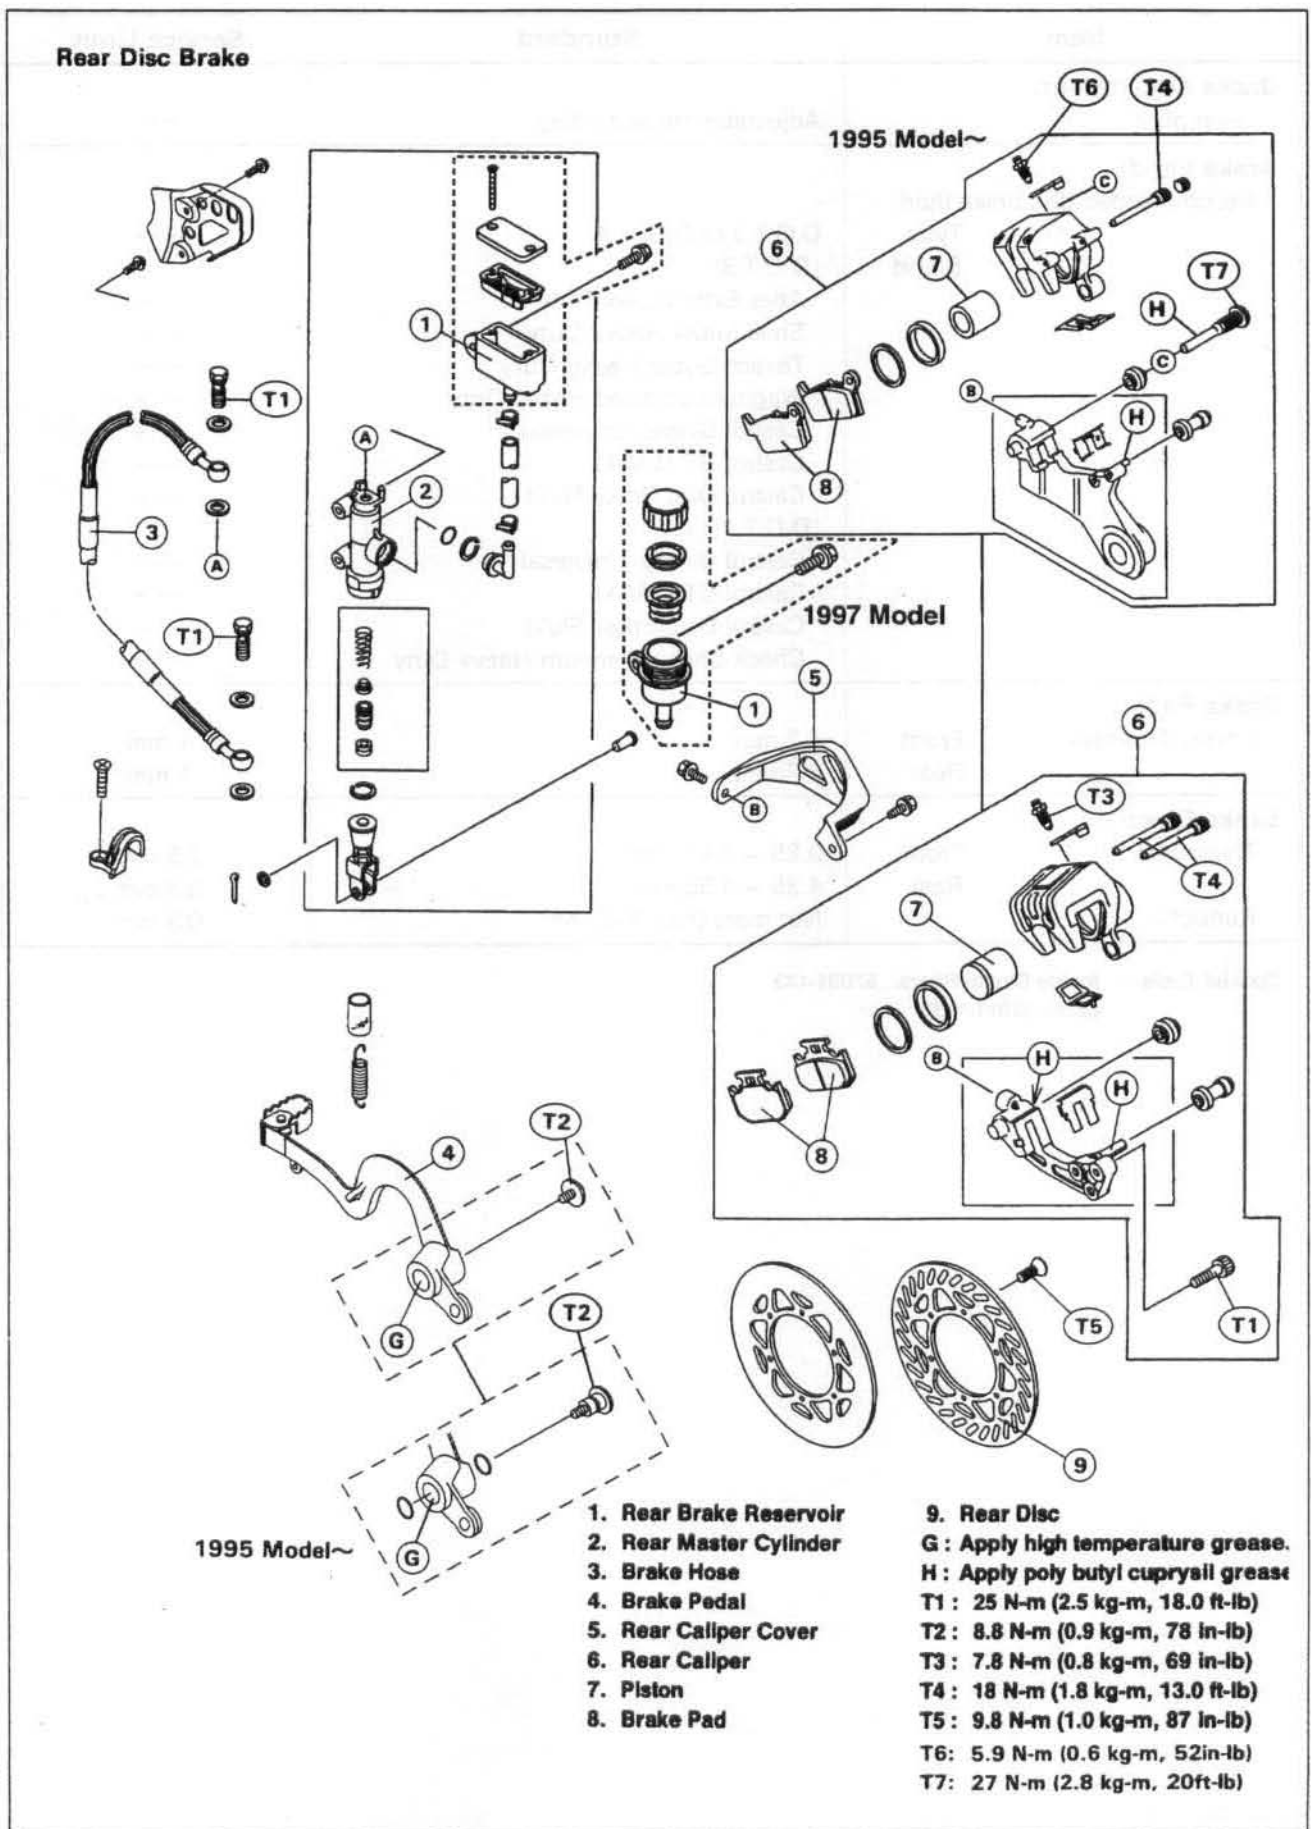

1995 Model~

1995 Model~

1997 Model

- 1. Rear Brake Reservoir
- 2. Rear Master Cylinder
- 3. Brake Hose
- 4. Brake Pedal
- 5. Rear Caliper Cover
- 6. Rear Caliper
- 7. Piston
- 8. Brake Pad


- 9. Rear Disc
- G : Apply high temperature grease.
- H : Apply poly butyl cuprysil grease
- T1 : 25 N-m (2.5 kg-m, 18.0 ft-lb)
- T2 : 8.8 N-m (0.9 kg-m, 78 in-lb)
- T3 : 7.8 N-m (0.8 kg-m, 69 in-lb)
- T4 : 18 N-m (1.8 kg-m, 13.0 ft-lb)
- T5 : 9.8 N-m (1.0 kg-m, 87 in-lb)
- T6 : 5.9 N-m (0.6 kg-m, 52in-lb)
- T7 : 27 N-m (2.8 kg-m, 20ft-lb)

10-4 BRAKES

Specifications

Item	Standard	Service Limit
Brake Adjustment: Lever play	Adjustable (to suit rider)	---
Brake Fluid: Recommended disc brake fluid: Type Brand	D.O.T.3 or D.O.T. 4 [D.O.T.3] Atlas Extra Heavy Duty Shell Super Heavy Duty Texaco Super Heavy Duty Wagner Lockheed Heavy Duty Castrol Girling-Universal Castrol GT (LMA) Castrol Disc Brake Fluid [D.O.T.4] Castrol Girling-Universal Castrol GT (LMA) Castrol Disc Brake Fluid Check Shock Premium Heavy Duty	--- --- --- --- --- --- --- --- --- ---
Brake Pads: Lining thickness:	Front Rear	4.2 mm 4.7 mm
		1 mm 1 mm
Brake Disc: Thickness:	Front Rear	2.85 ~ 3.15 mm 4.35 ~ 4.65 mm
Runout		2.5 mm 3.8 mm 0.3 mm

Special Tools – Inside Circlip Pliers: 57001-143
Jack: 57001-1238

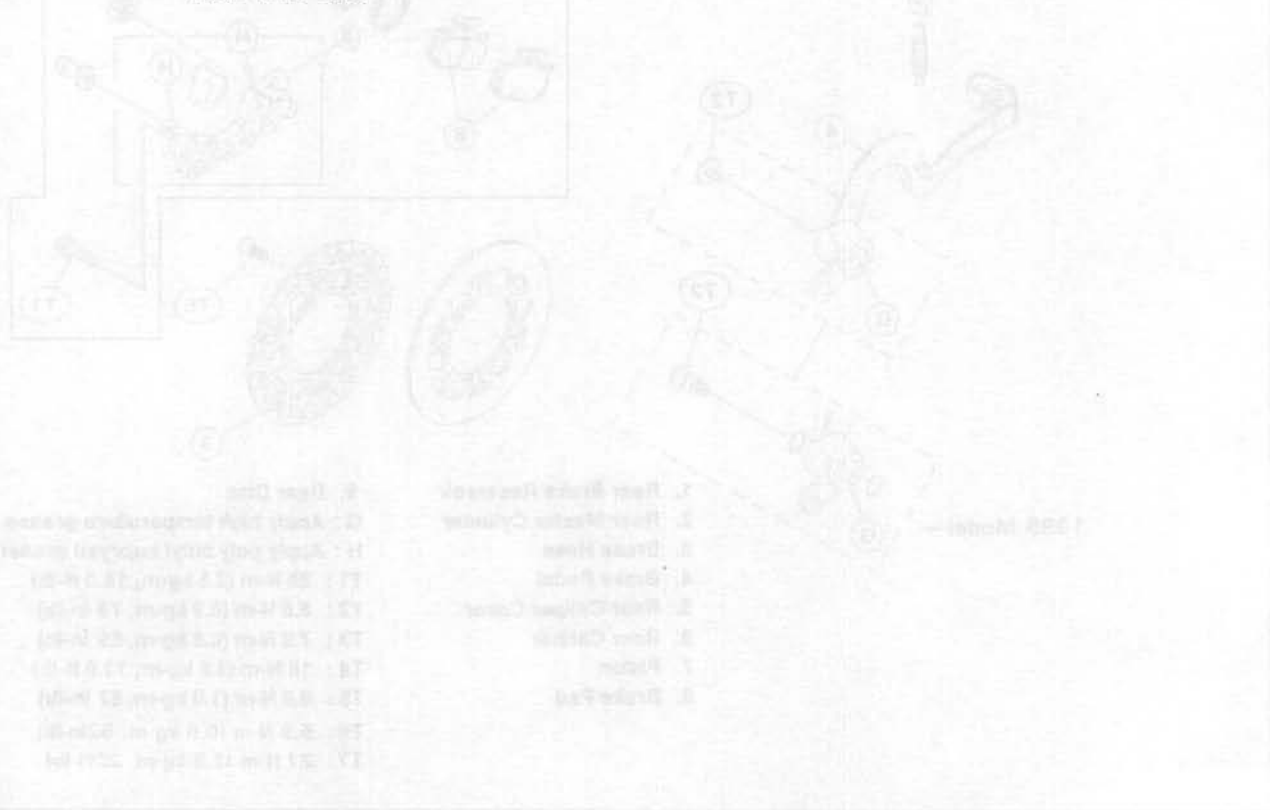


Brake Lever, Brake Pedal

Lever Play Adjustment

Adjust the front brake lever [A] to suit you.

- Loosen the adjuster locknut [B] and turn the adjuster [C] to either side.
- After adjustment, tighten the locknut.

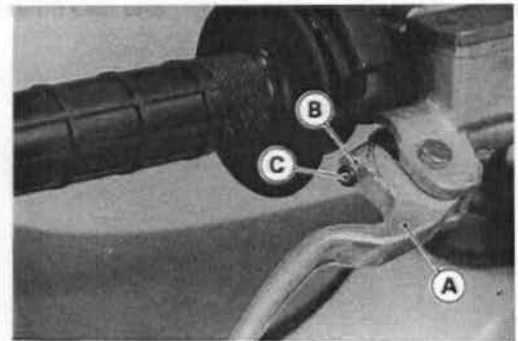

Pedal Position/Pedal Play Adjustment

The brake pedal position and pedal play should not be adjusted. There is no pedal position adjustment device as such. The only adjustment is master cylinder push rod length.

NOTE

- Usually it is not necessary to adjust the push rod length, but always adjust it when the rear master cylinder [A] is disassembled.
- When the brake pedal is in its rest position, measure the length [B] indicated in the figure.

B : 52 mm

★ If the length [B] is not within the specified length, adjust the clevis [D] as follows.



- Loosen the push rod locknut [C].
- Pull out the cotter pin [E] and the joint pin [F].
- Turn the clevis [D] to obtain the specified length.
- Tighten the locknut.

Torque – Push Rod Locknut : 18 N-m (1.8 kg-m, 13.0 ft-lb)

- Install the joint pin and new cotter pin.


NOTE

- If the pedal position is incorrect after adjusting the master cylinder push rod, the brake pedal may be deformed or incorrectly installed.

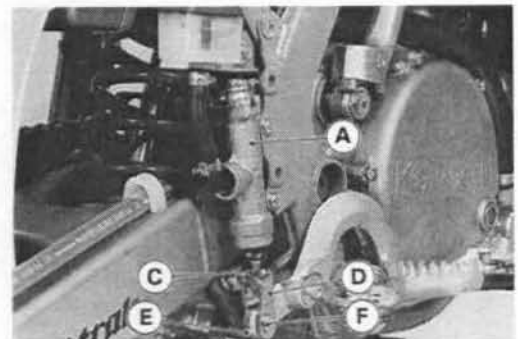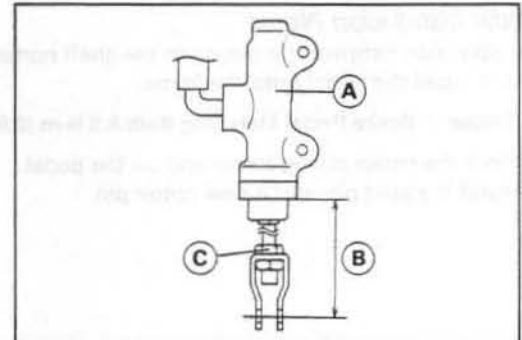


Pedal Removal

- Remove:
 - Cotter Pin [A]
 - Joint Pin [B]
 - Return Spring Lower End [C]

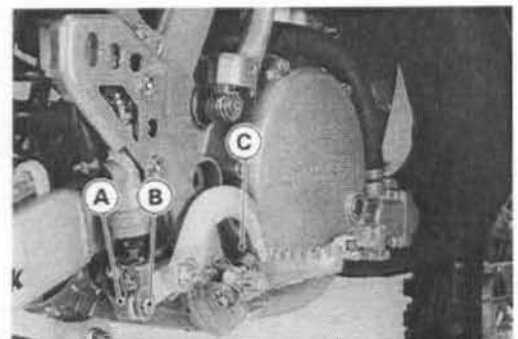



10-6 BRAKES

- Remove the mounting bolt [B] and take off the brake pedal [A].

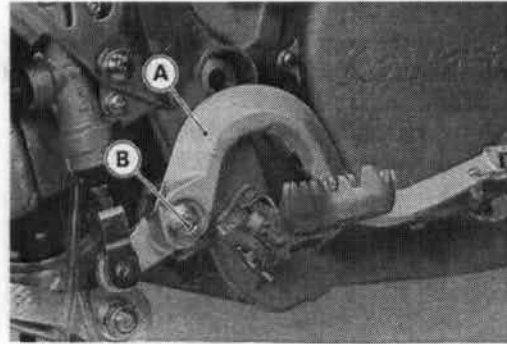

Pedal Installation Notes

- Apply high temperature grease to the shaft portion of the brake pedal, and install the pedal onto the frame.
- Torque – Brake Pedal Mounting Bolt: 8.8 N-m (0.9 kg-m, 78 In-lb)**
- Hook the return spring lower end on the pedal.
- Install the joint pin and a new cotter pin.

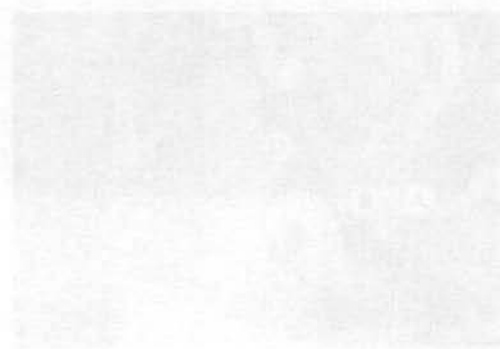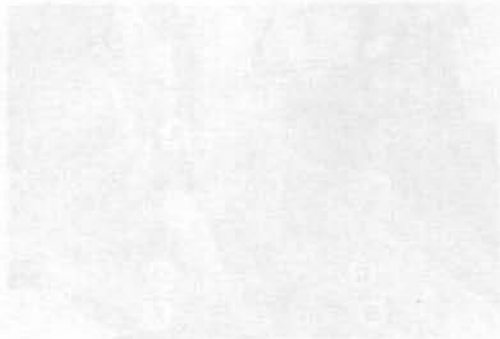

Brake Fluid

▲WARNING

When working with the disc brake, observe the precautions listed below.

1. Never reuse old brake fluid.
2. Do not use fluid from a container that has been left unsealed or that has been open for a long time.
3. Do not mix two types and brands of fluid for use in the brake. This lowers the brake fluid boiling point and could cause the brake to be ineffective. It may also cause the rubber brake parts to deteriorate.
4. Don't leave the reservoir cap off for any length of time to avoid moisture contamination of the fluid.
5. Don't change the fluid in the rain or when a strong wind is blowing.
6. Except for the disc pads and disc, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol for cleaning brake parts. Do not use any other fluid for cleaning these parts. Gasoline, engine oil, or any other petroleum distillate will cause deterioration of the rubber parts. Oil spilled on any part will be difficult to wash off completely and will eventually deteriorate the rubber used in the disc brake.
7. When handling the disc pads or disc, be careful that no disc brake fluid or any oil gets on them. Clean off any fluid or oil that inadvertently gets on the pads or disc with a high flash-point solvent. Do not use one which will leave an oily residue. Replace the pads with new ones if they cannot be cleaned satisfactorily.
8. Brake fluid quickly ruins painted surfaces; any spilled fluid should be completely wiped up immediately.
9. If any of the brake line fittings or the bleed valve is opened at any time, the **AIR MUST BE BLED FROM THE BRAKE.**

Level Inspection

In accordance with the Periodic Maintenance Chart, inspect the brake fluid level in the front and rear brake fluid reservoirs.

- Check the brake fluid level in the front brake reservoir [A] is more than half full.



NOTE

○ Hold the reservoir horizontal when checking brake fluid level.

- Remove the reservoir guard and check the brake fluid level in the rear brake reservoir [B] is between the upper [C] and lower [D] level lines.
- ★ If the fluid level is lower than the lower level line, fill the reservoir to the upper level line of the reservoir.

▲WARNING

Change the brake fluid in the brake line completely if the brake fluid must be refilled but the type and brand of the brake fluid that already is in the reservoir are unidentified. After changing the fluid, use only the same type and brand of fluid thereafter. Mixing different types and brand of brake fluid lowers the brake fluid boiling point and could cause the brake to be ineffective. It may also cause the rubber brake parts to deteriorate.

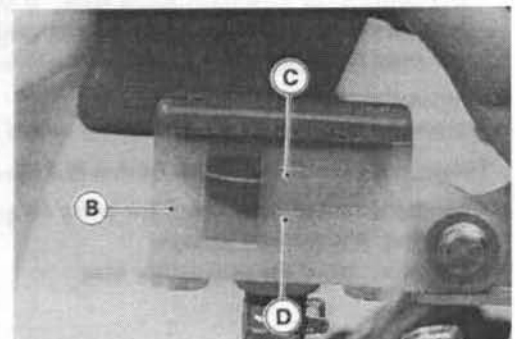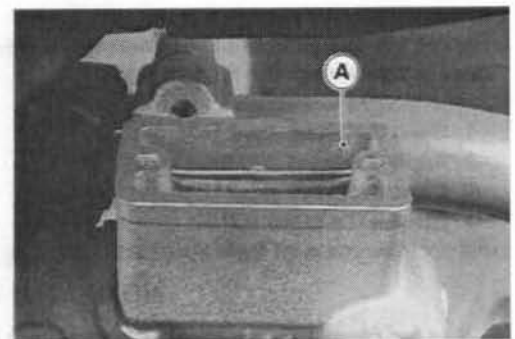

Recommended Disc Brake Fluid

Type: D.O.T.3 or D.O.T.4

Brand: [D.O.T.3]

- Atlas Extra Heavy Duty
- Shell Super Heavy Duty
- Texaco Super Heavy Duty
- Wagner Lockheed Heavy Duty
- Castrol Girling-Universal
- Castrol GT (LMA)
- Castrol Disc Brake Fluid

[D.O.T.4]

- Castrol Girling – Universal
- Castrol GT (LMA)
- Castrol Disc Brake Fluid
- Check Shock Premium Heavy Duty


Change

In accordance with the Periodic Maintenance Chart, change the brake fluid. The brake fluid should also be changed if it becomes contaminated with dirt or water. Furthermore, the brake fluid should be changed to bleed the air quickly and completely whenever the brake line parts are removed.

NOTE

- The procedure to change the front brake fluid is as follows. Changing the rear brake fluid is the same as for the front brake.

- Level the brake fluid reservoir.
- Remove the reservoir cap.
- Remove the rubber cap on the bleed valve [A].
- Attach a clear plastic hose to the bleed valve on the caliper, and run the other end of the hose into a container.

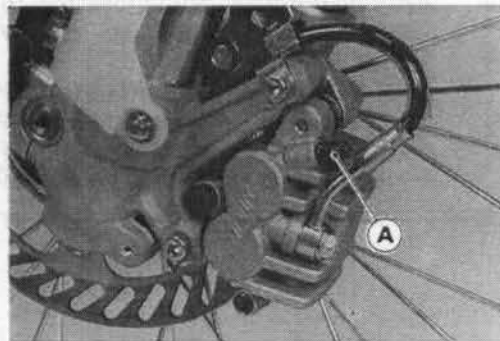

- Change the brake fluid as follows:
- Repeat this operation until fresh brake fluid comes out from the plastic hose or the color of the fluid changes.

1. Open the bleed valve [A].
2. Apply the brake and hold it [B].
3. Close the bleed valve [C].
4. Release the brake [D].

- Fill the reservoir with fresh specified brake fluid.

NOTE


- The fluid level must be checked often during the changing operation and replenished with fresh brake fluid. If the fluid in the reservoir runs almost out any time during the changing operation, the brakes will need to be bled since air will have entered the brake line.

- Remove the clear plastic hose.
- Tighten the bleed valves, and install the rubber caps.

Torque – Caliper Bleed Valve: 7.8 N-m (0.8 kg-m, 69 in-lb)

- After changing the fluid, check the brake for good braking power, no brake drag, and no fluid leakage.

- ★ If necessary, bleed the air from the lines.

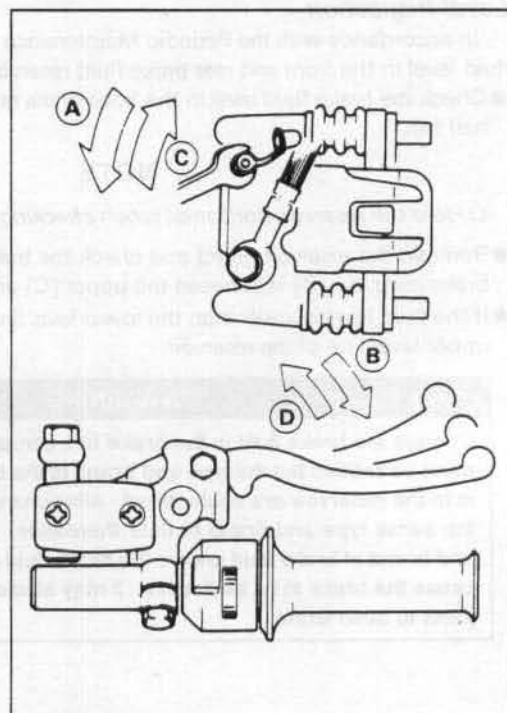

Bleeding the Brake Line

The brake fluid has a very low compression coefficient so that almost all the movement of the brake lever or pedal is transmitted directly to the caliper for braking action. Air, however, is easily compressed. When air enters the brake lines, brake lever or pedal movement will be partially used in compressing the air. This will make the lever or pedal feel spongy, and there will be a loss in braking power.


▲WARNING

Be sure to bleed the air from the brake whenever brake lever or pedal action feels soft or spongy, after the brake fluid is changed, or whenever a brake line fitting has been loosened for any reason.

NOTE

○ The procedure to bleed the front brake line is as follows. Bleeding the rear brake line is the same as for the front brake.

- Remove the reservoir cap, and check that there is plenty of fluid in the reservoir.
- With the reservoir cap off, slowly pump the brake lever several times until no air bubbles can be seen rising up through the fluid from the holes at the bottom of the reservoir.
- Bleed the air completely from the master cylinder by this operation.
- Install the reservoir cap.
- Attach a clear plastic hose to the bleed valve on the caliper, and run the other end of the hose into a container.
- Bleed the brake line and the caliper as follows:
- Repeat this operation until no more air can be seen coming out into the plastic hose.
 1. Pump the brake lever until it becomes hard, and apply the brake and hold it [A].
 2. Quickly open and close the bleed valve while holding the brake applied [B].
 3. Release the brake [C].

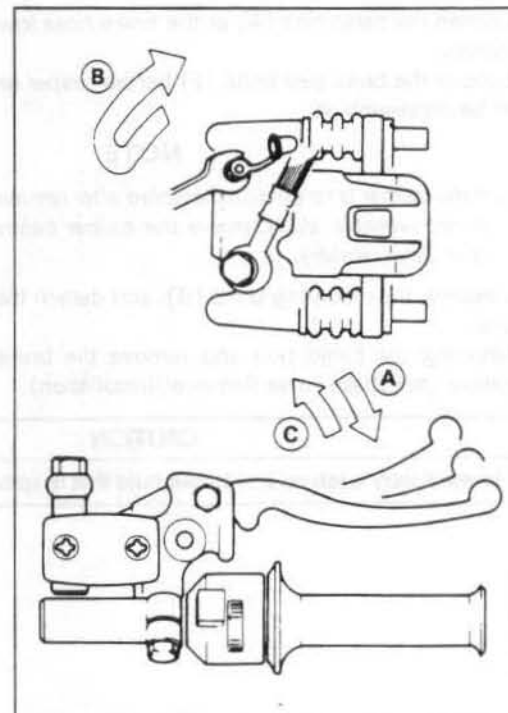

NOTE

- The fluid level must be checked often during the bleeding operation and replenished with fresh brake fluid as necessary. If the fluid in the reservoir runs almost out any time during bleeding operation, the operation must be done over again from the beginning since air will have entered the line.
- Tap the brake hose lightly from the caliper to the reservoir for easier bleeding.

- Remove the clear plastic hose.
- Tighten the bleed valves, and install the rubber caps.

Torque – Caliper Bleed Valve: 7.8 N-m (0.8 kg-m, 69 in-lb)


- Check the fluid level.
- After the bleeding is done, check the brake for good braking power, no brake drag, and no fluid leakage.

10-10 BRAKES

Caliper

Removal

- Remove the front wheel (see Front Wheel Removal in the Wheels/Tires chapter).
- Remove the brake hose guide bolt [A] and take off the guide [B].
- Remove the front brake hose clamp bolts [C].

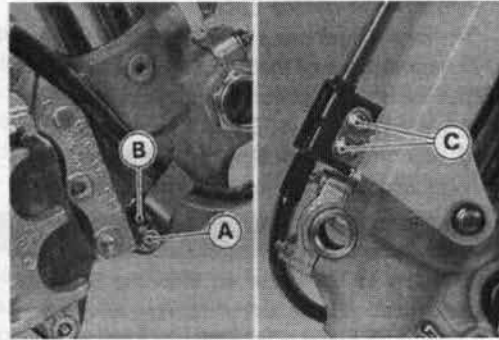


- Loosen the banjo bolt [A] at the brake hose lower end, and tighten it loosely.
- Loosen the brake pad bolts [E] before caliper removal if the caliper is to be disassembled.

NOTE


○ If the caliper is to be disassembled after removal and compressed air is not available, disassemble the caliper before brake hose removal (see Disassembly).

- Unscrew the mounting bolts [B], and detach the caliper [C] from the disc.
- Unscrew the banjo bolt and remove the brake hose [D] from the caliper (see Brake Hose Removal/Installation).

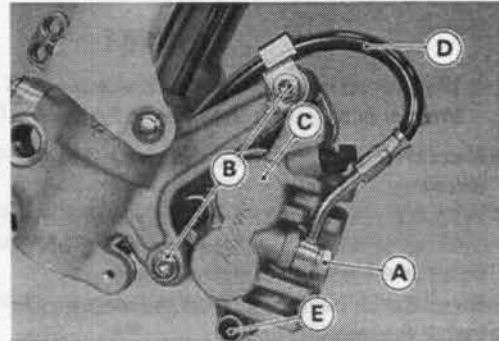

CAUTION

Immediately wash up any brake fluid that is spilled.

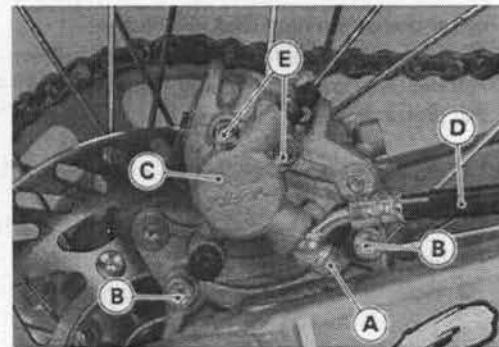

Installation Notes


- Tighten the brake pad bolts if it was removed.
Torque – Brake Pad Bolts: 18 N-m (1.8 kg-m, 13 ft-lb)
- Install the caliper, and the brake hose lower end.
- Replace the washers that are on each side of the hose fitting with new ones.
Torque – Caliper Mounting Bolts: 25 N-m (2.5 kg-m, 18.0 ft-lb)
Brake Hose Banjo Bolt: 25 N-m (2.5 kg-m, 18.0 ft-lb)
- Bleed the brake line (see Bleeding the Brake Line).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

▲WARNING

Do not attempt to drive the motorcycle until a full brake lever or pedal is obtained by pumping the brake lever or pedal until the pads are against the disc. The brakes will not function on the first application of the lever or pedal if this is not done.

Disassembly

- Remove the brake hose guide bolt.
- Remove the front/rear caliper (see Caliper Removal).
- Remove the pads and spring (see Pad Removal).
- Remove the caliper holder, shaft rubber friction boot and cover.
- Using compressed air, remove the piston(s).
- Cover the caliper opening with a clean, heavy cloth [A].
- Remove the piston(s) by lightly applying compressed air [B] to where the brake line fits into the caliper.

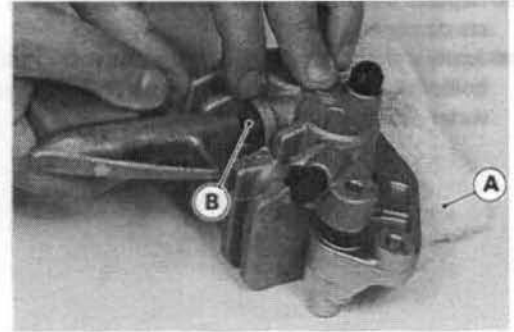**⚠ WARNING**

To avoid serious injury, never place your fingers or palm inside the caliper opening. If you apply compressed air into the caliper, the piston(s) may crush your hand or fingers.

NOTE

- If the caliper is to be disassembled after removal and compressed air is not available, remove the piston(s) using the following three steps before disconnecting the brake hose from the caliper.
- Prepare a container for brake fluid, and perform the work above it.
- Remove the pads and spring (see Pad Removal).
- Pump the brake lever or pedal to remove the caliper piston(s).
- Remove the dust seal(s) and fluid seal(s).
- Remove the bleed valve and rubber cap.

Assembly Notes

- Clean the caliper parts except the pads.


CAUTION

For cleaning the parts, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol.

- Tighten the bleed valve.


Torque – Caliper Bleed Valve: 7.8 N-m (0.8 kg-m, 69 in-lb)

- Replace the fluid seals which are removed with new ones.
- Apply brake fluid to the fluid seals [A], and install them into the cylinders by hand.
- Replace the dust seals [B] with new ones if they are damaged.
- Apply brake fluid to the dust seals, and install them into the cylinders by hand.
- Apply brake fluid to the outside of the pistons [C], and push them into each cylinder by hand.

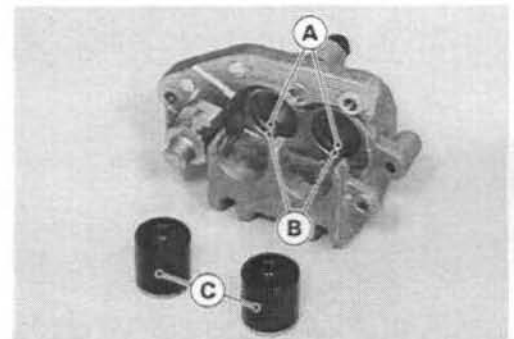


10-12 BRAKES

- Replace the shaft rubber friction boot [A] and dust cover [B] if they are damaged.
- Apply a thin coat of PBC (Poly Butyl Cuprysil) grease to the caliper holder shafts [C] and holder holes (PBC is a special high temperature, water-resistant grease).

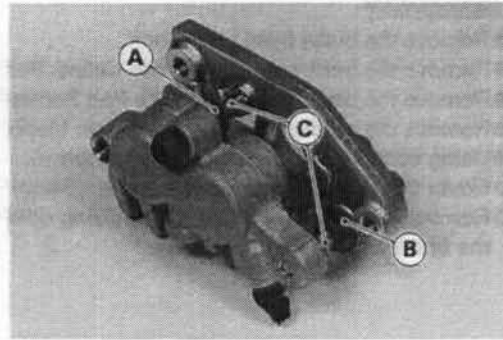

- Install the anti-rattle spring [A] in the caliper as shown.
- Install the pads (see Pads Installation Notes).
- Wash up any spilled brake fluid on the caliper.

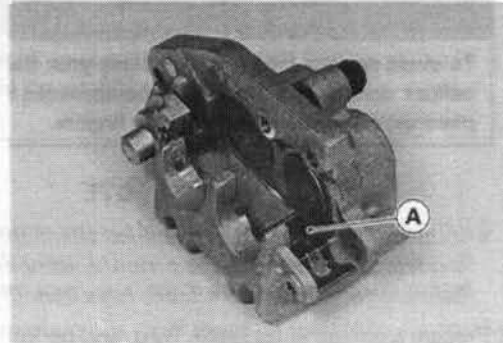


CAUTION
Do not use a screwdriver to pry the pads out of the caliper. This will damage the pads and the caliper.

Brake Pads

Removal

- Remove the rear caliper cover.
- Loosen the pad bolts.
- Unscrew the caliper mounting bolts.
- Detach the caliper from the disc.
- Take the piston side pad [A] out of the caliper holder [B].
- Push the caliper holder toward the piston, and then remove the other pad [C] from the caliper holder shafts.

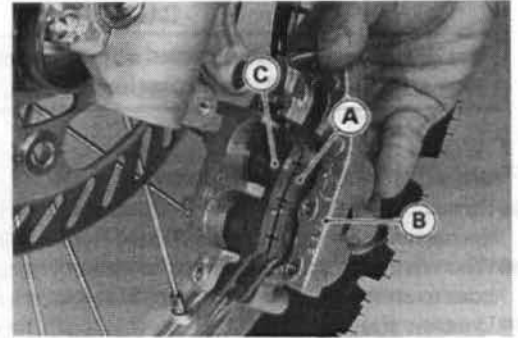

Installation Notes

- Push the caliper pistons in by hand as far as they will go.
- Install the anti-rattle spring in place.
- Install the piston side pad first, and then the other pad.
- Tighten the brake pad bolts.

Torque – Brake Pad Bolt: 18 N-m (1.8 kg-m, 13 ft-lb)

- Install the caliper (see Caliper Installation Notes).

⚠ WARNING


Do not attempt to drive the motorcycle until a full brake lever or pedal is obtained by pumping the brake lever or pedal until the pads are against the disc. The brake will not function on the first application of the lever or pedal if this is not done.

Inspection

- Check the lining thickness and condition of the pads in each caliper.
- ★ If either pad is damaged, replace both pads in the caliper as a set.
- ★ If the lining thickness [A] of either pad is less than the service limit [B], replace both pads in the caliper as a set.

Lining Thickness

	Front	Rear
Standard:	4.2 mm	4.7 mm
Service Limit:	1 mm	1 mm

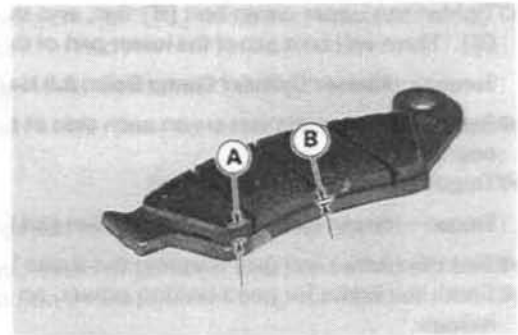

10-14 BRAKES


Master Cylinder

CAUTION

Brake fluid quickly ruins painted or plastic surfaces; any spilled fluid should be completely washed up immediately.

Front Master Cylinder Removal

- Remove the banjo bolt [A] to disconnect the upper brake hose from the master cylinder (see Brake Hose Removal/Installation Notes).
- When removing the brake hose, temporarily secure the end of the brake hose to some high place to keep fluid loss to a minimum.
- Unscrew the clamp bolts [B], and take off the master cylinder [C] as an assembly with the reservoir and brake lever.

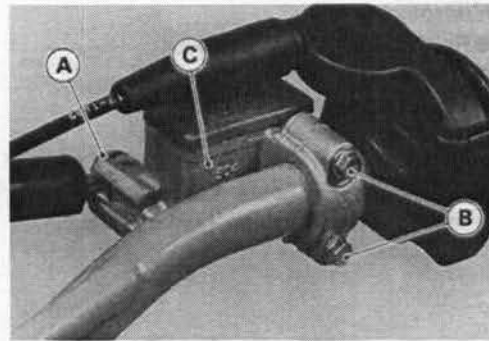

Front Master Cylinder Installation Notes


- The master cylinder clamp must be installed with the arrow mark [A] upward.
- Tighten the upper clamp bolt [B] first, and then the lower clamp bolt [C]. There will be a gap at the lower part of the clamp after tightening.

Torque – Master Cylinder Clamp Bolts: 8.8 N-m (0.9 kg-m, 78 in-lb)

- Replace the washers that are on each side of the hose fitting with new ones.
- Torque the brake hose banjo bolt.

Torque – Brake Hose Banjo Bolt: 25 N-m (2.5 kg-m, 18.0 ft-lb)

- Bleed the brake line (see Bleeding the Brake Line).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

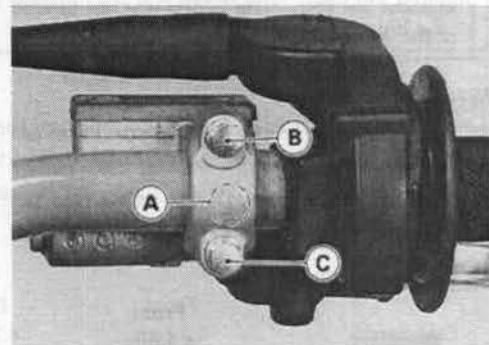


Rear Master Cylinder Removal

- Remove the reservoir guard and the reservoir mounting bolt [A].
- Remove the cotter pin [F].
- Pull off the joint pin [B].

NOTE

○ Pull out the joint pin while pressing down the brake pedal.

- Unscrew the brake hose banjo bolt [C] (see Brake Hose Removal/Installation Notes).
- When removing the brake hose, temporarily secure the end of the brake hose to some high place to keep fluid loss to a minimum.

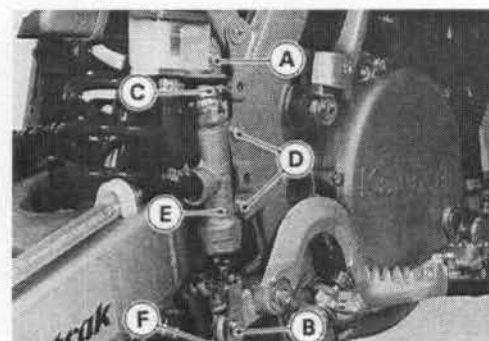

- Unscrew the master cylinder mounting screws [D], and remove the master cylinder [E] with the reservoir.
- Remove the reservoir cap, and pour the brake fluid into a container.
- Remove the reservoir and its hose from the master cylinder.

Rear Master Cylinder Installation Notes

- Tighten the rear master cylinder mounting screws securely.
- Replace the cotter pin with a new one.
- Replace the washers are on each side of the hose fitting with new ones.
- Torque the following:

Torque – Brake Hose Banjo Bolt: 25 N-m (2.5 kg-m, 18.0 ft-lb)


- Bleed the brake line (see Bleeding the Brake Line).
- Check the brake for good braking power, no brake drag, and no fluid leakage.
- Check the brake pedal position (master cylinder push rod length).

Front Master Cylinder Disassembly

- Remove the front master cylinder.
- Remove the reservoir cap and diaphragm, and pour the brake fluid into a container.
- Unscrew the locknut and pivot bolt, and remove the brake lever.
- Push the dust cover [A] out of place, and remove the circlip [B].

Special Tool – Inside Circlip Pliers: 57001-143

- Remove the washer [C], pull out the piston [D], secondary cup [E], primary cup [F], and return spring [G].

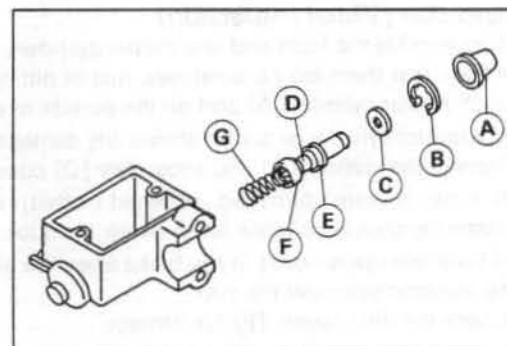

CAUTION


Do not remove the secondary cup from the piston since removal will damage it.

Rear Master Cylinder Disassembly

- Remove the rear master cylinder.
- Slide the dust cover [A] on the push rod [B] out of place, and remove the circlip [C].

Special Tool – Inside Circlip Pliers: 57001-143

- Pull out the push rod with the piston stop [D].
- Take off the piston [E], secondary cup [F], primary cup [G], and return spring [H].

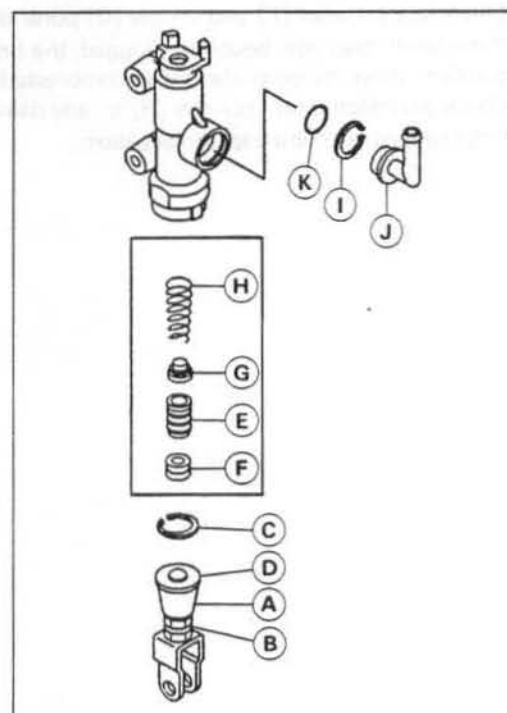

CAUTION

Do not remove the secondary cup from the piston since removal will damage it.

- Remove the circlip [I], and take off the connector [J] and O-ring [K].

Assembly Notes

- Before assembly, clean all parts including the master cylinder with brake fluid or alcohol.
- Apply brake fluid to the removed parts and to the inner wall of the cylinder.



CAUTION

Except for the disc pads and disc, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol for cleaning brake parts. Do not use any other fluid for cleaning these parts. Gasoline, engine oil, or any other petroleum distillate will cause deterioration of the rubber parts. Oil spilled on any part will be difficult to wash off completely, and will eventually deteriorate the rubber used in the disc brake.

- Take care not to scratch the piston or the inner wall of the cylinder.
- Tighten the brake lever pivot bolt and locknut securely.

Inspection (Visual Inspection)

- Disassemble the front and rear master cylinders.
- Check that there are no scratches, rust or pitting on the inner wall of each master cylinder [A] and on the outside of each piston [B].
- ★ If a master cylinder or piston shows any damage, replace them.
- Inspect the primary [C] and secondary [D] cups.
- ★ If a cup is worn, damaged, softened (rotted), or swollen, the piston assembly should be replaced to renew the cups.
- ★ If fluid leakage is noted at the brake lever, the piston assembly should be replaced to renew the cup.
- Check the dust covers [E] for damage.
- ★ If they are damaged, replace them.
- Check that the relief [F] and supply [G] ports are not plugged.
- ★ If the small relief port becomes plugged, the brake pads will drag on the disc. Blow the ports clean with compressed air.
- Check the piston return springs [H] for any damage.
- ★ If the springs are damaged, replace them.

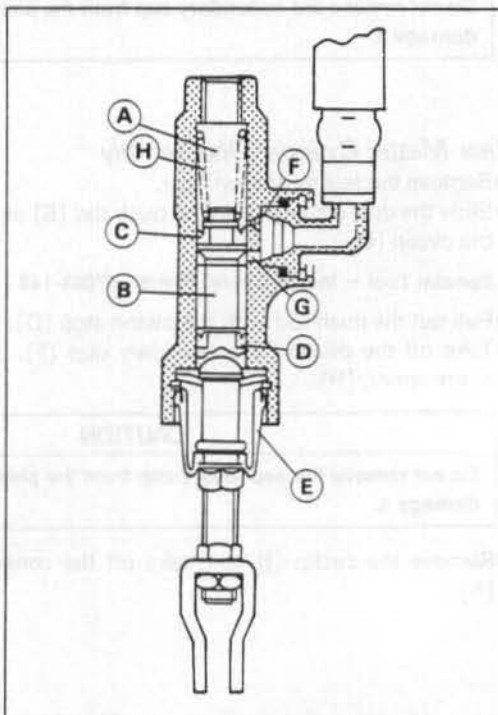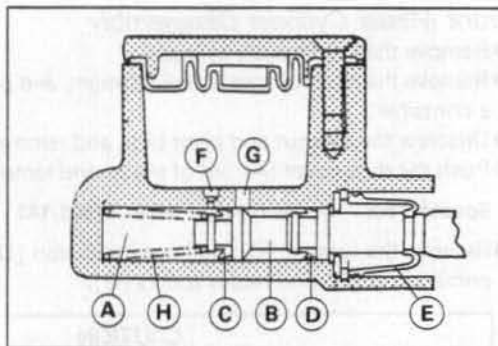

Brake Disc

Inspection

- Visually inspect the disc.
- ★ If it is scratched or damaged, replace the disc.
- Measure the thickness of each disc at the point where it has worn the most.
- ★ Replace the disc if it has worn past the service limit.

Thickness

	Front	Rear
Standard:	2.85 ~ 3.15 mm	4.35 ~ 4.65 mm
Service Limit:	2.5 mm	3.8 mm



- Place a jack under the motorcycle so that the front/rear wheel is raised off the ground.

Special Tool – Jack: 57001-1238

- Set up a dial gauge against the disc as illustrated.
- For the front disc, turn the handlebar fully to one side.
- Measure the disc runout while rotating the wheel slowly.
- ★ If the runout exceeds the service limit, replace the disc.

Runout

Standard:	Not more than 0.12 mm
Service Limit:	0.3 mm

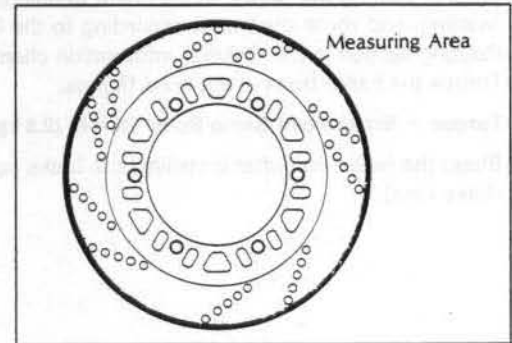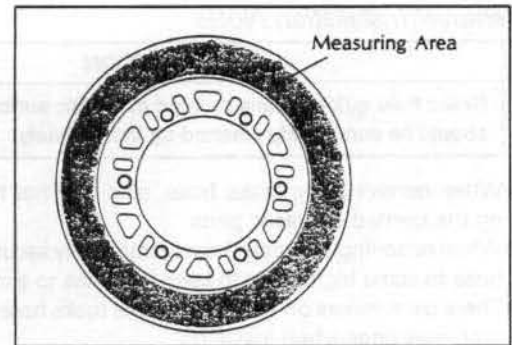

10-18 BRAKES

Brake Hose

Removal/Installation Notes

CAUTION

Brake fluid quickly ruins painted or plastic surfaces; any spilled fluid should be completely washed up immediately.

- When removing the brake hose, take care not to spill the brake fluid on the painted or plastic parts.
- When removing the brake hose, temporarily secure the end of the brake hose to some high place to keep fluid loss to a minimum.
- There are washers on each side of the brake hose fitting. Replace them with new ones when installing.
- When installing the hoses, avoid sharp bending, kinking, flattening or twisting, and route the hoses according to the Cable, Wire and Hose Routing section in the General Information chapter.
- Torque the banjo bolts at the hose fittings.

Torque – Brake Hose Banjo Bolts: 25 N-m (2.5 kg-m, 18.0 ft-lb)

- Bleed the brake line after installing the brake hose (see Bleeding the Brake Line).

Inspection

- The high pressure inside the brake line can cause fluid to leak or the hose to burst if the line is not properly maintained. Bend and twist the rubber hose while examining it.
- ★ Replace it if any crack or bulge is noticed.

Suspension


Table of Contents

Exploded View	11-2	Swingarm	11-25
Specifications	11-4	Removal	11-25
Front Fork	11-5	Installation Notes	11-25
Air Pressure	11-5	Tie-Rod, Rocker Arm	11-25
Rebound Damping Adjustment	11-5	Tie-Rod Removal	11-25
Compression Damping Adjustment	11-5	Tie-Rod Installation Notes	11-26
Oil Change/Oil Level Adjustment	11-6	Rocker Arm Removal	11-26
Removal	11-8	Rocker Arm Installation Notes	11-26
Installation Notes	11-8	Uni-Trak Maintenance	11-27
Disassembly	11-9	Rocker Arm Sleeve Wear	11-27
Spring Guide Removal	11-9	Rocker Arm Mounting Bolt Bend	11-27
Push Rod Disassembly	11-10		
Inner Tube Removal	11-11		
Assembly	11-12		
Inner to Outer Tube Assembly	11-12		
Cylinder Unit Assembly	11-13		
Install Fork Cylinder	11-13		
Inner Tube Inspection	11-15		
Guide Bush Inspection	11-15		
Dust Seal/Oil Seal Inspection	11-15		
Spring Tension	11-16		
Rear Suspension (Uni-Trak)	11-17		
Rear Shock Absorber	11-17		
Rebound Damping Adjustment	11-17		
Compression Damping Adjustment	11-17		
Spring Preload Adjustment	11-18		
Removal	11-18		
Installation Note	11-19		
Spring Replacement	11-19		
Disassembly (Oil Change)	11-20		
Assembly	11-21		
Spring Tension	11-24		
Scrapping	11-24		


11-2 SUSPENSION

Exploded View

Front Fork

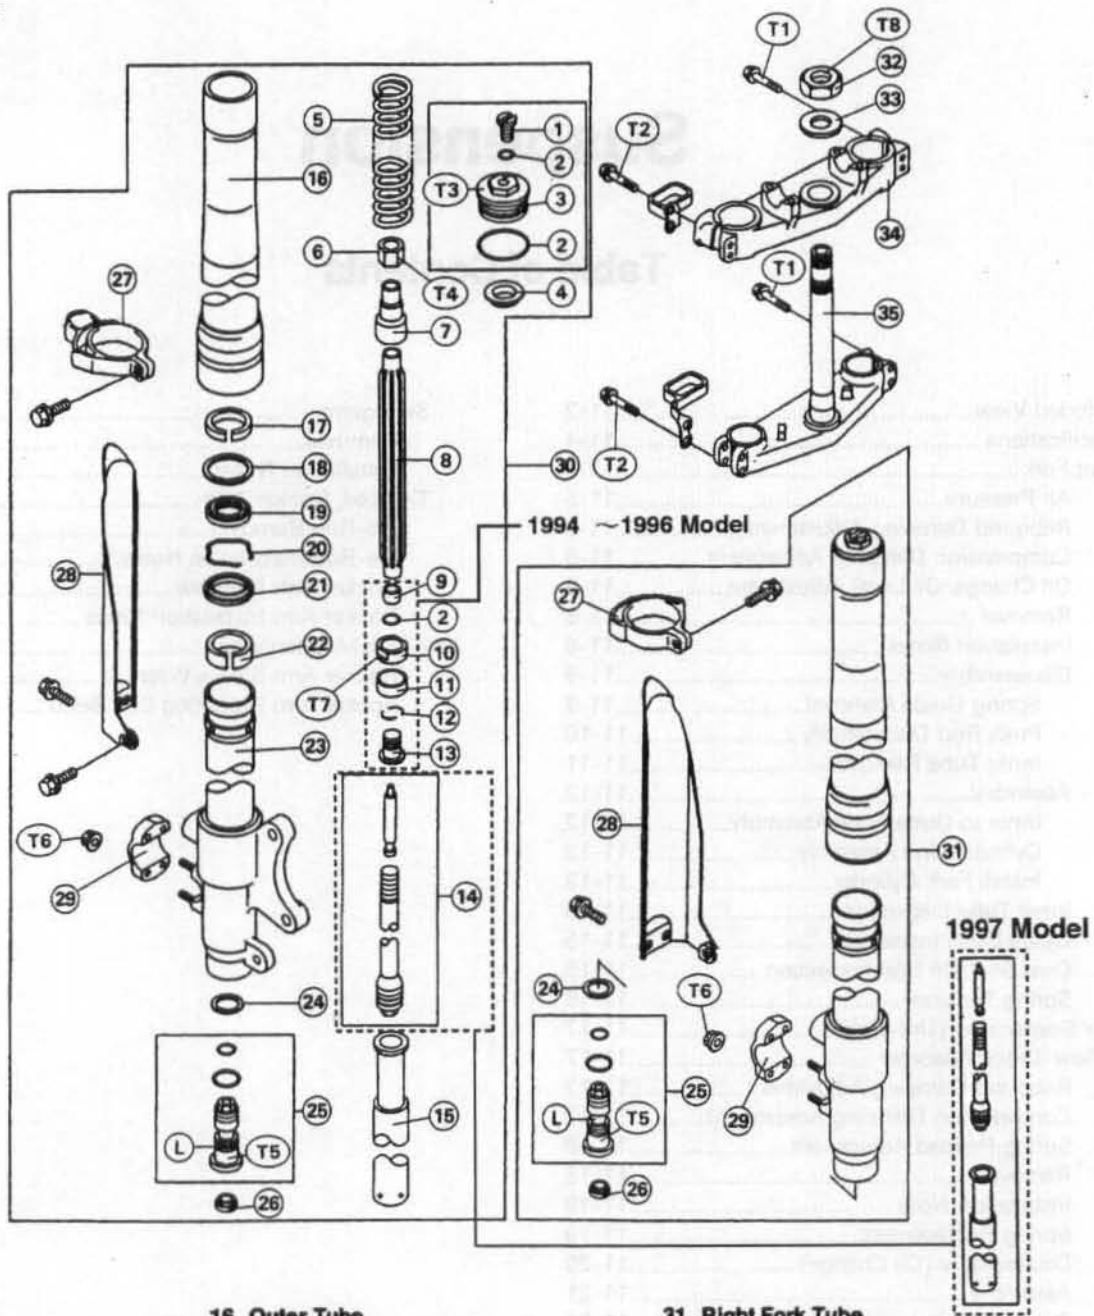

- | | | |
|-----------------------|----------------------------------|---|
| 1. Screw | 16. Outer Tube | 31. Right Fork Tube |
| 2. O-Ring | 17. Guide Bush | 32. Steering Stem Head Nut |
| 3. Top Plug | 18. Washer | 33. Washer |
| 4. Spring Seat | 19. Oil Seal | 34. Steering Stem Head |
| 5. Spring | 20. Retaining Ring | 35. Steering Stem |
| 6. Nut | 21. Dust Seal | L : Apply a non-permanent locking agent to the threads. |
| 7. Collar | 22. Guide Bush | T1 : 20 N-m (2.0 kg-m, 14.5 ft-lb) |
| 8. Spring Guide | 23. Inner Tube | T2 : 22 N-m (2.25 kg-m, 16.3 ft-lb) |
| 9. Collar | 24. Gasket | T3 : 29 N-m (3.0 kg-m, 22 ft-lb) |
| 10. Guide Stay Nut | 25. Fork Cylinder Valve Assembly | T4 : 28 N-m (2.85 kg-m, 20.6 ft-lb) |
| 11. Oil Lock Piston | 26. Cap | T5 : 54 N-m (5.5 kg-m, 40 ft-lb) |
| 12. Split Ring Keeper | 27. Fork Guide | T6 : 9.3 N-m (0.95 kg-m, 82 in-lb) |
| 13. Piston Holder | 28. Fork Protector | T7 : 27 N-m (2.8 kg-m, 20 ft-lb) |
| 14. Push Rod | 29. Front Axle Clamp | T8 : 78 N-m (8.0 kg-m, 58 ft-lb) |
| 15. Fork Cylinder | 30. Left Fork Tube | |

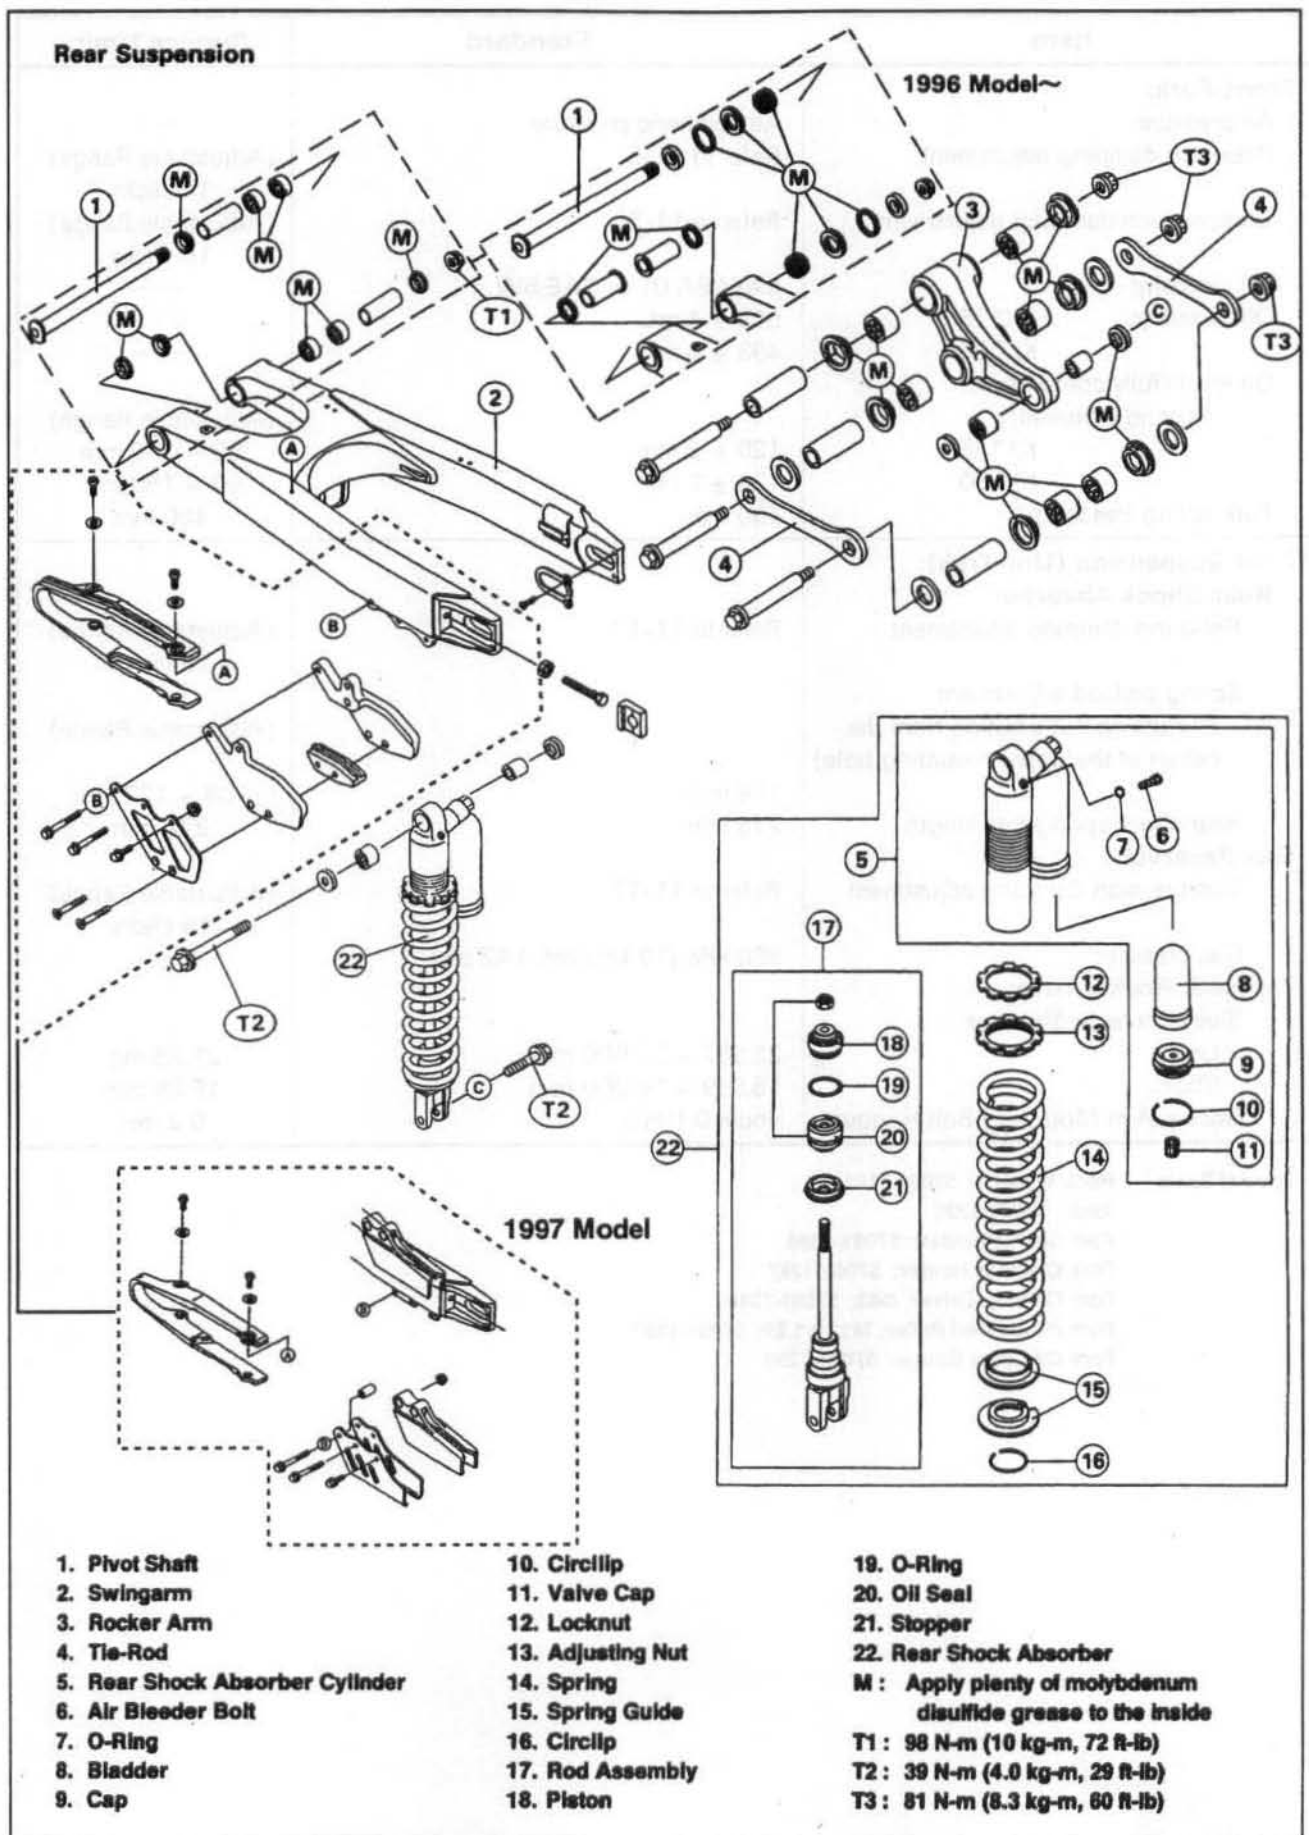

11-4 SUSPENSION

Specifications

Item	Standard	Service Limit
Front Fork:		
Air pressure	Atmospheric pressure	---
Rebound damping adjustment	Refer to 11-5	(Adjustable Range) 16 clicks
Compression damping adjustment	Refer to 11-5	(Adjustable Range) 16 clicks
Oil viscosity	KAYABA 01 or SAE 5W	---
Oil capacity: KX125	508 ± 4 mL	---
KX250	493 ± 4 mL	---
Oil level (fully compressed, spring removed):		(Adjustable Range)
KX125	120 ± 2 mm	90 ~ 150 mm
KX250	130 ± 2 mm	90 ~ 150 mm
Fork spring free length	490 mm	480 mm
Rear Suspension (Uni-Trak):		
Rear Shock Absorber:		
Rebound damping adjustment	Refer to 11-17	(Adjustable Range) 16 clicks
Spring preload adjustment (Adjusting nut position from the center of the upper mounting hole)		(Adjustable Range)
	118 mm	108 ~ 127 mm
Rear shock spring free length	275 mm	270 mm
Gas Reservoir:		
Compression damping adjustment	Refer to 11-17	(Adjustable Range) 16 clicks
Gas pressure	980 kPa (10 kg/cm ² , 142 psi)	---
Tie-Rod, Rocker Arm:		
Sleeve outside diameter:		
Long	21.987 ~ 22.000 mm	21.85 mm
Short	15.989 ~ 16.000 mm	15.85 mm
Rocker Arm Mounting Bolt Runout	under 0.1 mm	0.2 mm

Special Tools – Hook Wrench: 57001-1101
 Jack: 57001-1238
 Fork Spring Holder: 57001-1286
 Fork Cylinder Holder: 57001-1287
 Fork Oil Seal Driver, $\phi 43$: 57001-1340
 Fork Piston Rod Puller, M12 x 1.25: 57001-1289
 Fork Oil Level Gauge: 57001-1290

Front Fork


Air Pressure

The standard air pressure in the fork legs is atmospheric pressure. The air pressure in the fork legs increases as the fork heats up, so the fork action will get stiffer as the vehicle operation progresses.

- Place the jack under the frame so that the front wheel is off the ground.

Special Tool – Jack: 57001-1238

- Remove the screws [A] at the top of the front fork top plugs to let the air pressure equalize. Then install them.

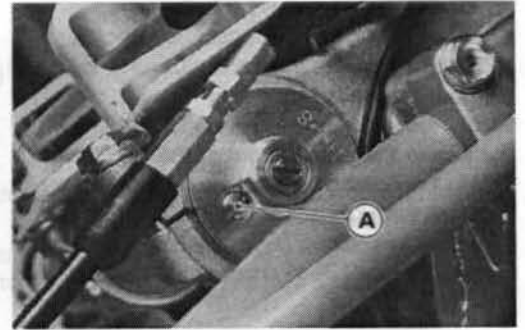


Rebound Damping Adjustment

- Place the jack under the frame so that the front wheel is off the ground.

Special Tool – Jack: 57001-1238

- To adjust rebound damping, turn the adjuster [A] on the front fork top plugs with the blade of a screwdriver until you feel a click. Adjust the rebound damping to suit your preference under special conditions.

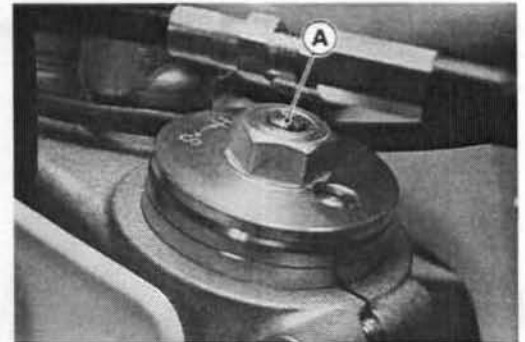


CAUTION

The left and right fork legs must have the same shock damping.

Rebound Damping Adjuster Setting

Standard: 12 clicks

Seated position: adjuster turned fully clockwise [A].

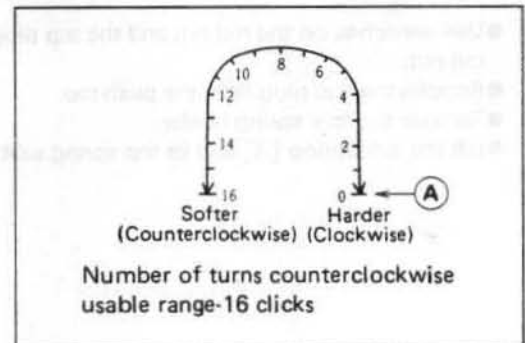


Compression Damping Adjustment

- Place the jack under the frame so that the front wheel is off the ground.

Special Tool – Jack: 57001-1238

- Clean the bottom of the fork tubes.
- Remove the caps on the bottom of the fork tubes.
- To adjust compression damping, turn the adjuster [A] on the front fork cylinder valve with the blade of a screwdriver until you feel a click. Adjust the compression damping to suit your preference under special conditions.

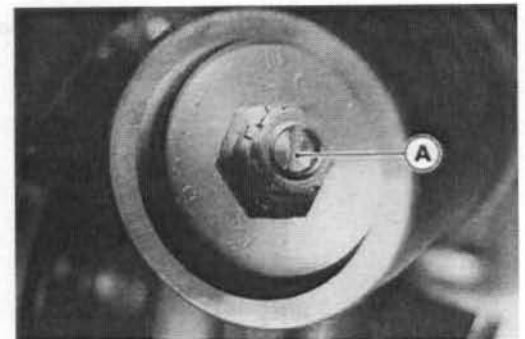

CAUTION


The left and right fork legs must have the same shock damping.

Compression Damping Adjuster Setting

**Standard: KX125: 10 clicks
KX250: 8 clicks**


Seated position: adjuster turned fully clockwise [A].

- Put the caps into the bottom of the fork tubes.

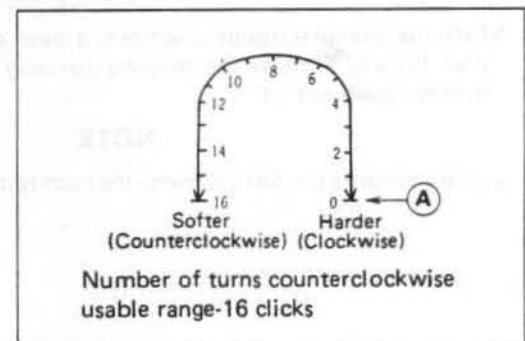


Oil Change/Oil Level Adjustment

- Loosen the front fork upper clamp bolts.
- Place the handlebar on one side, and loosen the fork top plug.
- Remove the front fork.
- Hold the inner tube lower end in a vise.
- Unscrew the top plug out of the outer tube.
- Push the outer tube all the way down away from the top plug and hold it there throughout the following procedure.
- Pull the fork spring [A] away from the top plug a little and slip the fork spring holder [B] in on top of the spring seat and under the push rod nut [C].

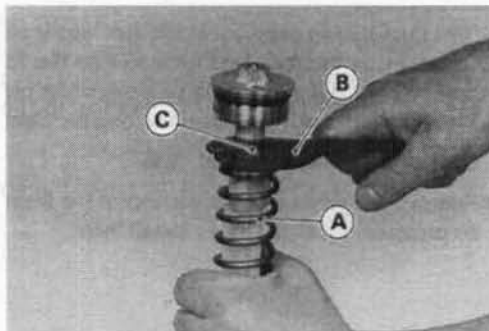


Special Tool – Fork Spring Holder: 57001-1286 [B]

- Use wrenches on the rod nut and the top plug [A] to loosen the push rod nut.
- Remove the top plug from the push rod.
- Remove the fork spring holder.
- Lift the fork spring [B] and its top spring seat [C].

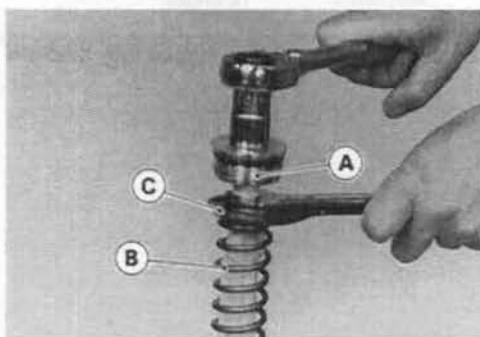


- Take the rebound damping adjuster rod (short) [A] out of the push rod [B].

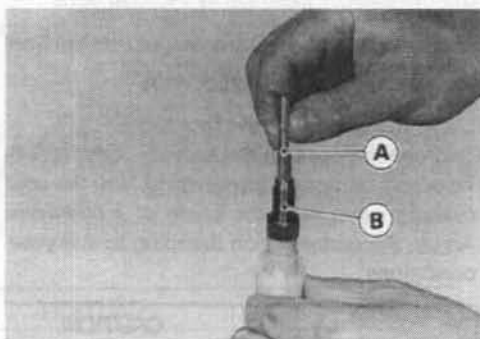


- Hold the fork tube upside down over a clean container and pump it to drain the oil. Remove the rebound damping adjuster rod (long) [B] from the push rod [A].

NOTE

○ To discharge the fork oil, pump the push rod up and down ten times.

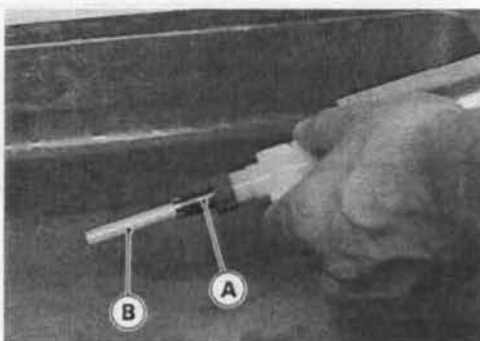

- Hold the fork tube upright, press the outer tube and the push rod all the way down.
- Insert the long rebound damping adjuster rod into the push rod.
- Insert the short rebound damping adjuster rod [A] into the push rod so that the holes [B] are down.

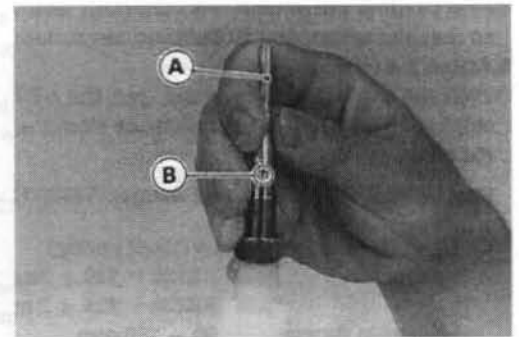

NOTE

○ The spring should not be installed.


- Fill the front fork to the top with the specified oil.

Recommended Oil


KAYABA 01 or SEA 5W

NOTE


○ While doing this, take care to keep the oil level topped off so that it stays above the two large holes [A] near the top of the inner tube [B].

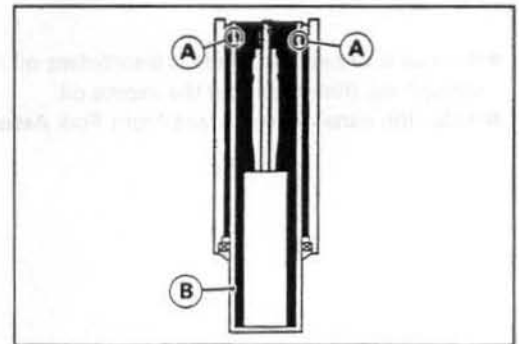

- Screw the fork piston rod puller [A] onto the end of the rod.
Special Tool – Fork Piston Rod Puller, M12 x 1.25: 57001-1289 [A]
- Purge the air from the fork cylinder by gently moving the piston rod puller up and down five times.
- Remove the fork piston rod puller.

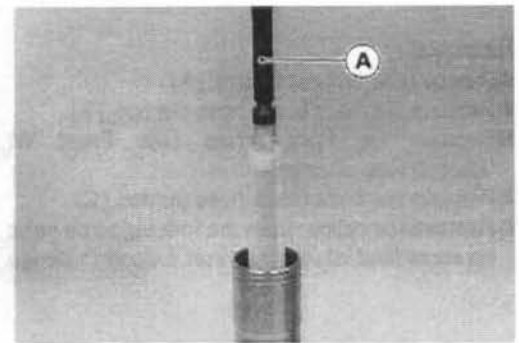

- Purge the air from between the inner and outer tubes by pumping the outer tube [A] up and down.

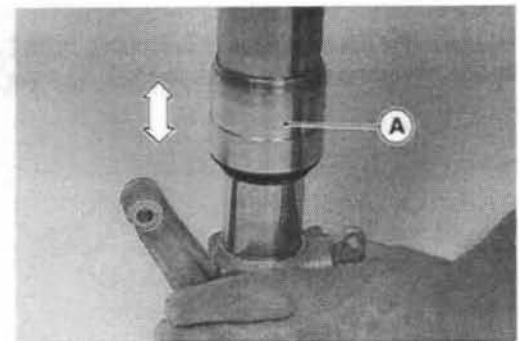

11-8 SUSPENSION

- After purging the air from the assembly, let it sit for about five minutes so that any suspended air bubbles can surface.
- Adjust the oil level.
- With the fork fully compressed, put the oil level gauge [A] and the stopper [B], and adjust the distance from the top of the inner tube to the oil.


Special Tool – Fork Oil Level Gauge: 57001-1290 [A]

Oil Level (fully compressed, without spring)

Standard: KX125 – 120 ± 2 mm

KX250 – 135 ± 2 mm


Adjustable Range: 90 ~ 150 mm

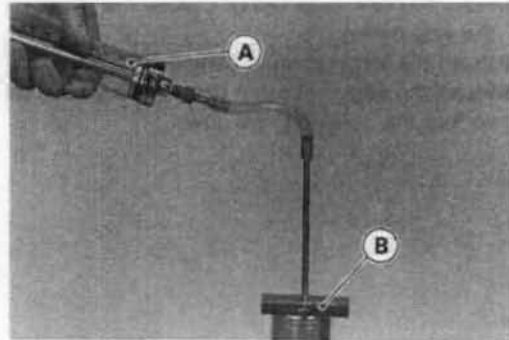


- ★ If no oil is drawn out, there is insufficient oil in the fork tube. Pour in enough oil, then draw out the excess oil.
- Install the parts removed (see Front Fork Assembly in this chapter).

Removal

- Remove the fork protectors [A].
- Remove the front brake hose clamps [B].
- Remove the front wheel (see Front Wheel Removal in the Wheels/Tires chapter).
- Remove the front brake hose guides [C].
- Remove the caliper from the fork leg to be removed, and rest the caliper on some kind of stand so that it doesn't dangle.

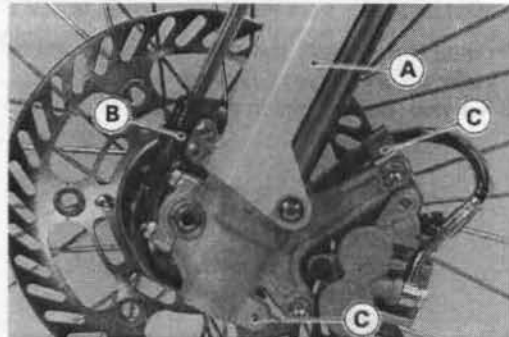

- Loosen the upper and lower fork clamp bolts [A].
- With a twisting motion, work the fork leg down and out.

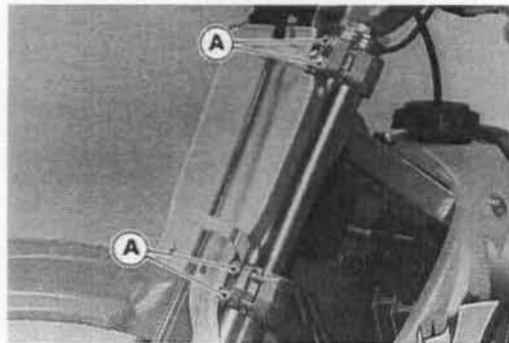

Installation Notes

- If the fork leg was disassembled, check the fork oil level.
- Route the cables and hose according to the Cable, Wire and Hose Routing section in the General Information chapter.
- Install the front wheel (see Front Wheel Installation Notes in the Wheels/Tires chapter).

- Torque the following:

Torque – Fork Clamp Bolts (Right) : 20 N-m (2.0 kg-m, 14.5 ft-lb)
Fork Clamp Bolts (Left) : 22 N-m (2.25 kg-m, 16.3 ft-lb)
Fork Protector Mounting Bolts : 9.8 N-m (1.0 kg-m, 87 in-lb)
Front Caliper Mounting Bolts : 25 N-m (2.5 kg-m, 18 ft-lb)
Front Brake Hose Clamp Bolt : 9.8 N-m (1.0 kg-m, 87 in-lb)


- Check the front brake operation after installation.

Disassembly


Spring Guide Removal

- Place the handlebar on one side, and loosen each fork top plug.
- Remove the front fork.
- Hold the inner tube lower end in a vise.
- Unscrew the top plug out of the outer tube.
- Push the outer tube all the way down away from the top plug and hold it there throughout the following procedure.
- Pull the fork spring [A] away from the top plug a little and slip the fork spring holder [B] in on top of the spring seat and under the push rod nut [C].


Special Tool – Fork Spring Holder: 57001-1286 [B]

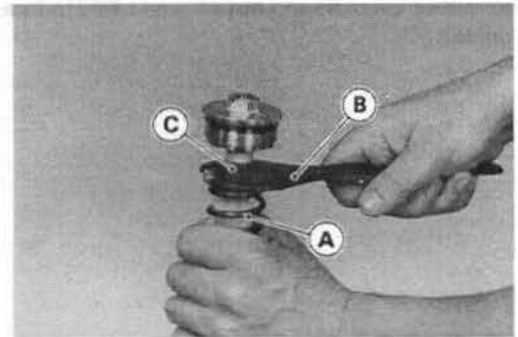

- Use wrenches on the rod nut and top plug [A] to loosen the push rod nut.
- Remove the top plug from the push rod.
- Lift the fork spring [B] and its top spring seat [C] out of the fork tube.

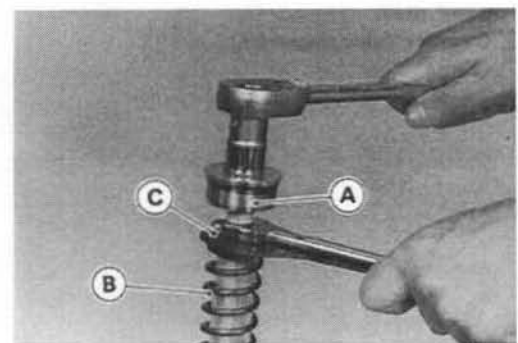

- Take the rebound damping adjuster rod (short) [A] out of the push rod [B].

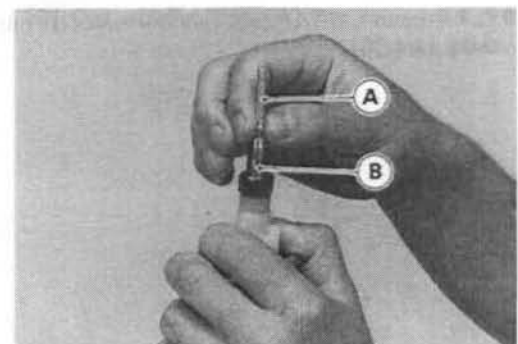


11-10 SUSPENSION


- Hold the fork tube upside down over a clean container and pump it to drain the oil. Remove the rebound damping adjuster rod (long) [B] from the push rod [A].

NOTE

- To discharge the fork oil, pump the push rod up and down ten times.

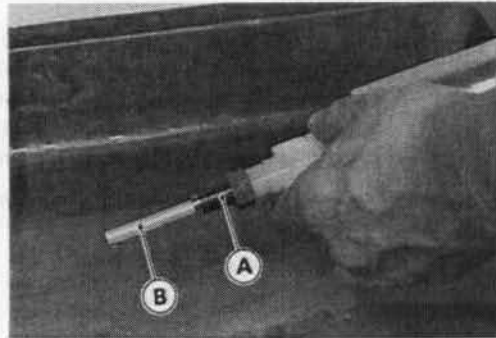


- Remove the push rod nut [A], and take out the collars [B] and spring guide [C].

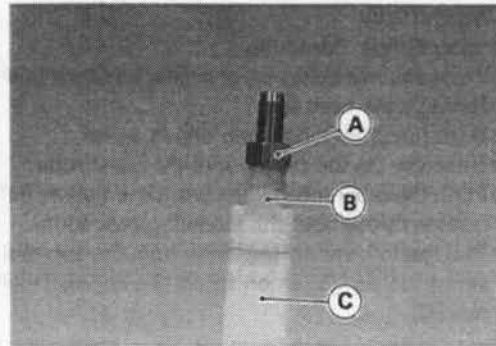


Push Rod Disassembly

- Clean the bottom of the inner tube.
- Remove the cap on the bottom of the inner tube.
- Hold the front fork horizontally in a vise.
- Stop the cylinder unit [A] from turning by using the fork cylinder holder [B]. Unscrew the cylinder valve assembly [C], and take the cylinder valve assembly and gasket out of the bottom of the inner tube.


Special Tool – Fork Cylinder Holder: 57001-1287 [B]

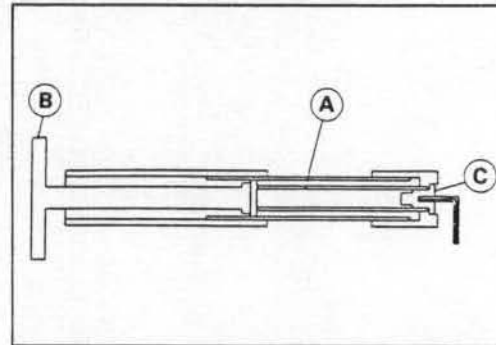


- A. Inner Tube
- B. Cylinder Valve Assembly
- C. O-ring
- D. Gasket

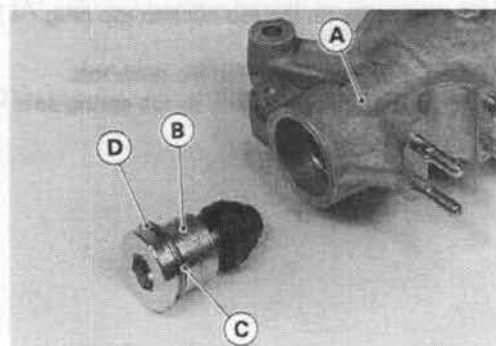


- Pull the push rod [A] and cylinder unit [B] out from the top of the outer tube [C].

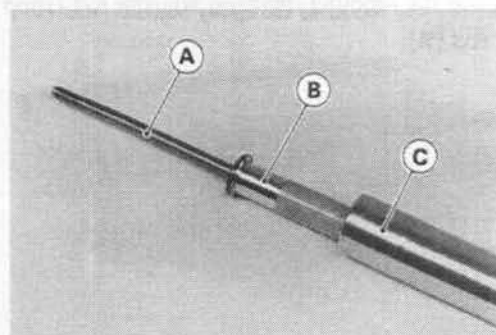

- Unscrew the guide stay nut [B] from the piston holder [E], and remove the split ring keepers [C].
- Remove the O-ring [A], guide stay nut, oil lock piston [D] and piston holder from the push rod.

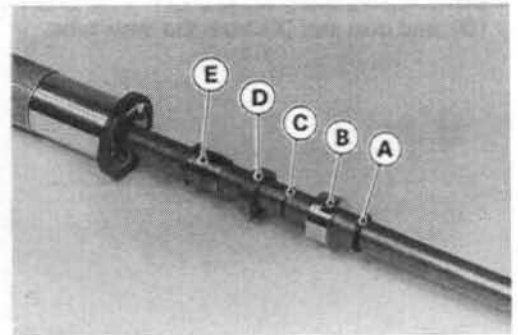


- Pull the push rod assembly [A] out of the bottom of the fork cylinder [B].

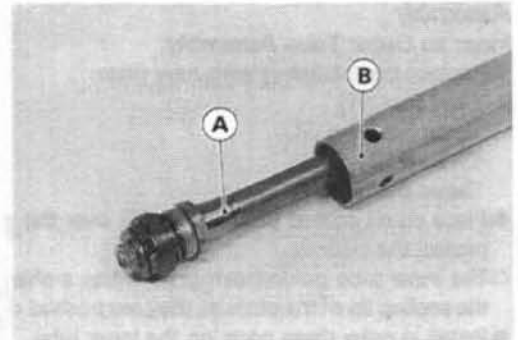

Inner Tube Removal


- Separate the inner tube [C] from the outer tube [D] as follows:
 - Slide up the spring band [A].
 - Slide up the dust seal [B].

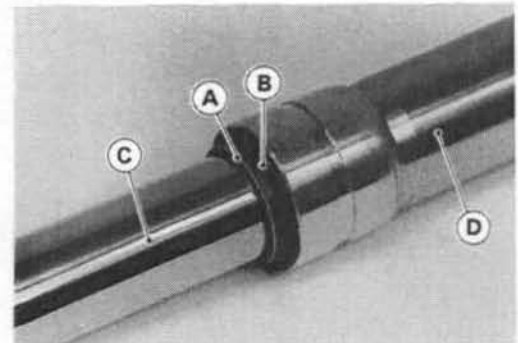

- Remove the retaining ring [A] from the outer tube.




- Grasp the outer tube [B] and stroke the inner tube [A] up and down several times. The shock to fork seal separates the inner tube from the outer tube.

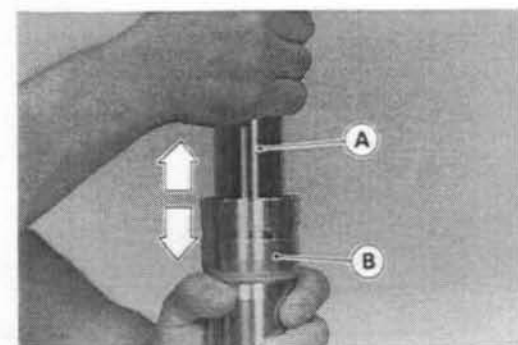

11-12 SUSPENSION


- Remove the guide bushes [A], washer [B], oil seal [C], retaining ring [D], and dust seal [E] from the inner tube.

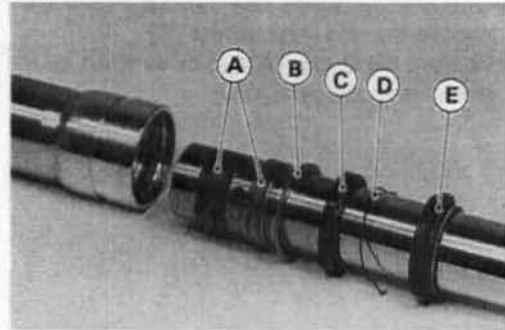

Assembly

Inner to Outer Tube Assembly

- Replace the following with new ones:
 - Dust Seal [A]
 - Retaining Ring [B]
 - Oil Seal [C]
 - Guide Bushes [D]
- Place an oil coated plastic bag [E] over the end of the inner tube to protect the oil seals.
- The inner tube guide-bush groove has a sharp edge [F] that can cut the sealing lip of the seals as they are pushed down over the inner tube.
- Install in order these parts on the inner tube.

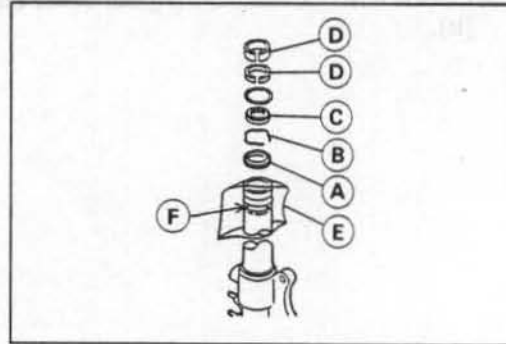


- When assembling the new outer tube guide bush [A], hold the washer [B] against the new one, and tap the washer with the fork oil seal driver [C] until it stops.

Special Tool – Fork Oil Seal Driver, $\phi 43$: 57001-1340 [C]

- After installing the washer, install the oil seal by using the fork oil seal driver.

Special Tool – Fork Oil Seal Driver, $\phi 43$: 57001-1340


- Install the retaining ring to the outer tube.
- Push the dust seal into the outer tube, and put the spring band on the dust seal.

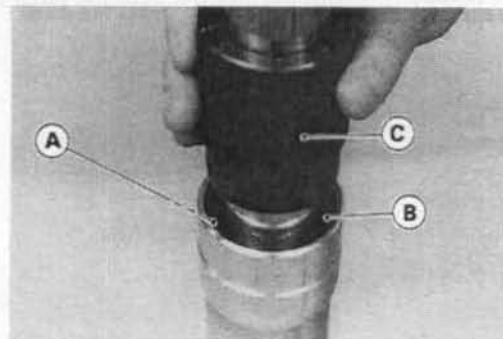

Cylinder Unit Assembly

- Install the oil lock piston [D] on the piston holder [E] so that the grooves face down.
- First, insert the push rod [A] into the piston holder, then, install the oil lock piston. The split ring keepers [C] that hold the oil lock piston to the push rod can cause severe damage to the fork if not installed securely.


- A. Push Rod
- B. Guide Stay Nut
- C. Split Ring Keepers
- D. Oil Lock Piston
- E. Piston Holder
- F. Upward pressure on piston holder positions keepers while guide stay nut is tightened.

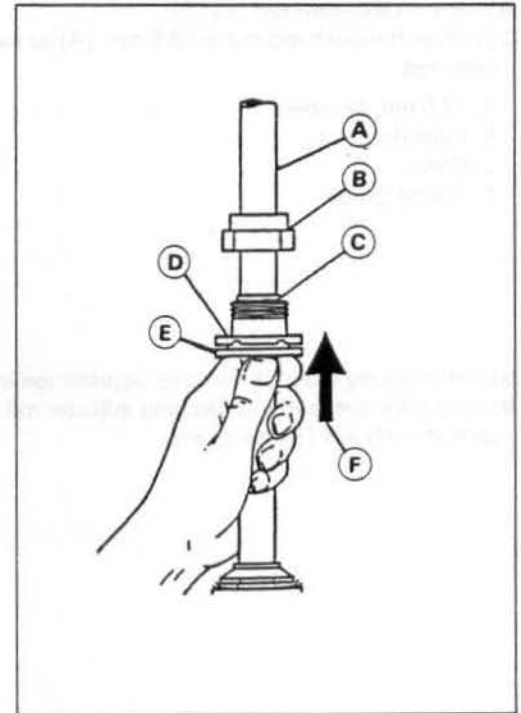

- Tighten the guide stay nut [D].

Torque – Guide Stay Nut: 27 N-m (2.8 kg-m, 20 ft-lb)

- Check the O-ring [E] on the guide stay nut, and replace it with a new one if damaged.
- A. Piston Holder
- B. Oil Lock Piston
- C. Grooved Side
- D. Guide Stay Nut
- E. O-ring

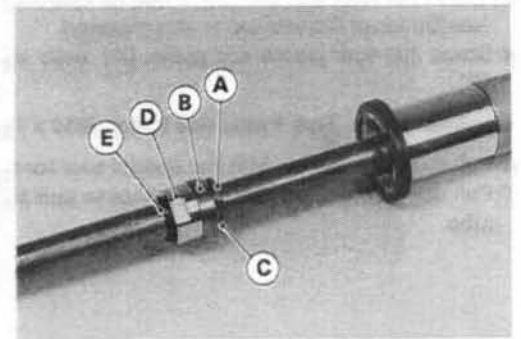


Install Fork Cylinder


- Check the O-ring [A] on the cylinder valve assembly [B], and replace it with a new one.
- Replace the gasket [C] with a new one.
- Apply a non-permanent locking agent to the threads [D] of the cylinder valve assembly and screw it into the bottom of the inner tube.
- Hold the fork cylinder with the fork cylinder holder, and tighten the cylinder valve assembly.

Special Tool – Fork Cylinder Holder: 57001-1287

Torque – Cylinder Valve Assembly: 54 N-m (5.5 kg-m, 40 ft-lb)

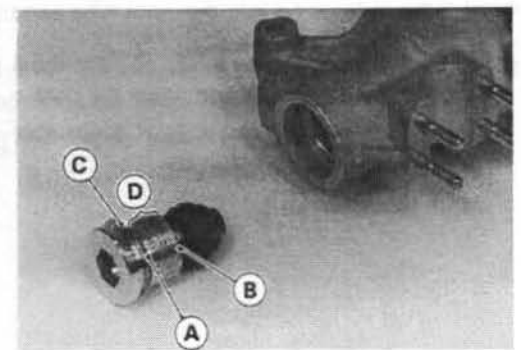


- Install the spring guide [A] so that the longer end [B] is down. Then install the collar [C] with the large end [D] down.

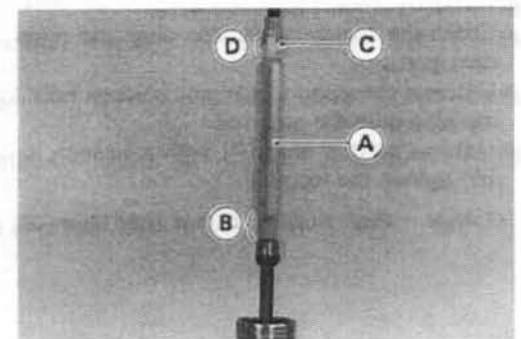


11-14 SUSPENSION

- Screw on the push rod nut [B].
- Position the push rod nut at 18.5 mm [A] or more from the top of the push rod.

- A. 18.5 mm or more
- B. Push Rod Nut
- C. Collar
- D. Spring Guide

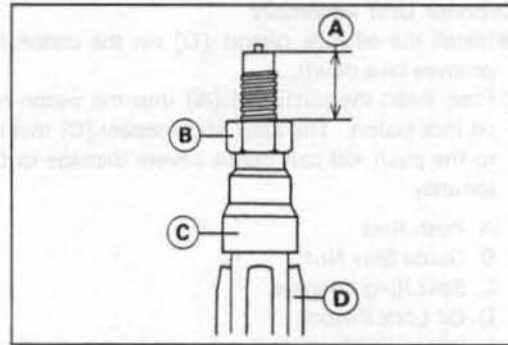


- Insert the long rebound damping adjuster rod into the push rod.
- Insert the short rebound damping adjuster rod [A] into the push rod so that the holes [B] are down.

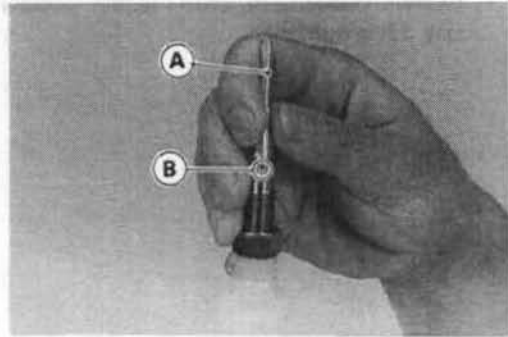

- Pour in the type and amount of fork oil specified and adjust the oil level (see Oil Level Adjustment in this chapter).
- Screw the fork piston rod puller [A] onto the end of the push rod [B].


Special Tool – Fork Piston Rod Puller, M12 x 1.25: 57001-1289 [A]

- Pull the push rod up with the special tool for the next procedures.
- Pull up the push rod slowly so as not to spill the fork oil out of the fork tube.

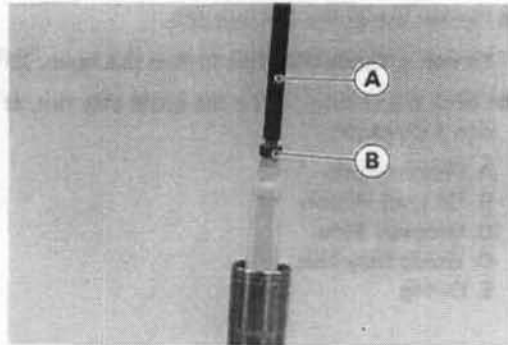


- Install the fork spring into the inner tube and then set the spring seat in place.
- Pull the fork spring away a little and slip the fork spring holder [B] in on top of the spring seat and under the push rod nut [C].

Special Tool – Fork Spring Holder: 57001-1286 [B]

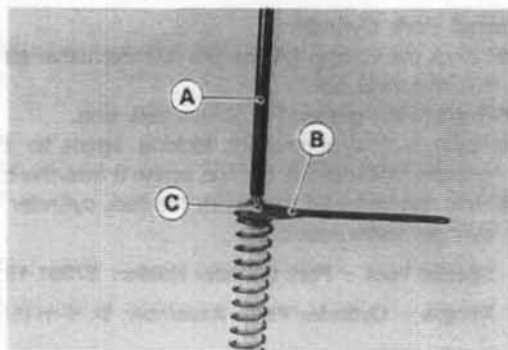

- Remove the fork piston rod puller.
- Check the O-ring on the top plug and replace it with a new one if damaged.
- Unscrew the rebound damping adjuster fully, then screw the front fork top plug onto the push rod.
- Holding the top plug [A] with a wrench, tighten the push rod nut [B] against the top plug.

Torque – Push Rod Nut: 28 N-m (2.85 kg-m, 20.6 ft-lb)

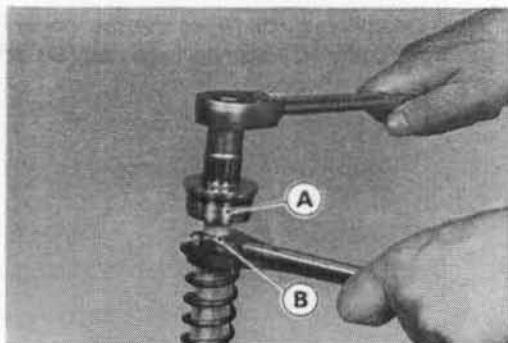

- Pull out the fork spring holder, raise the outer tube and screw the top plug into it.
- After installing the front fork, torque the top plug.

Torque – Fork Top Plug: 29 N-m (3.0 kg-m, 22 ft-lb)

Inner Tube Inspection


- Visually inspect the inner tube, repair any damage.
- Nick or rust damage can sometimes be repaired by using a wet-stone to remove sharp edges or raised areas which cause seal damage.
- ★ If the damage is not repairable, replace the inner tube. Since damage to the inner tube damages the oil seal, replace the oil seal whenever the inner tube is repaired or replaced.
- Temporarily assemble the inner and outer tubes, and pump them back and forth manually to check for smooth operation.

CAUTION

If the inner tube is badly bent or creased, replace it. Excessive bending, followed by subsequent straightening, can weaken the inner tube.


Guide Bush Inspection

- Visually inspect the guide bushes [A], and replace them if necessary.

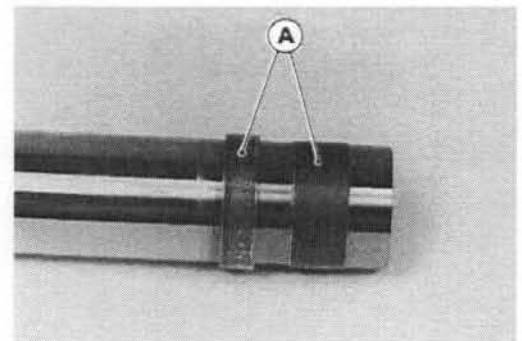

Dust Seal/Oil Seal Inspection

- Inspect the dust seal [A] for any signs of deterioration or damage.
- ★ Replace it if necessary.
- Replace the oil seal [B] with a new one whenever it has been removed.

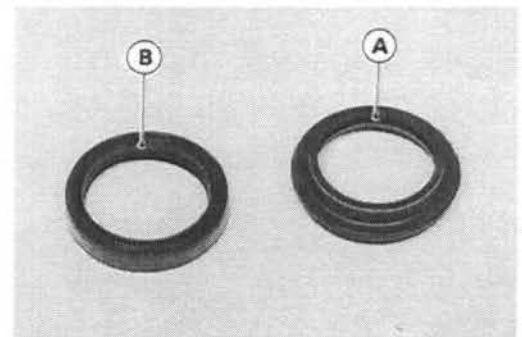


11-16 SUSPENSION

Spring Tension

- Since a spring becomes shorter as it weakens, check its free length [A] to determine its condition.
- ★ If the spring of either fork leg is shorter than the service limit, it must be replaced. If the length of the replacement spring and that of the remaining spring vary greatly, the remaining spring should also be replaced in order to keep the fork legs balanced for motorcycle stability.

Fork Spring Free Length

Standard: 490 mm
Service Limit: 480 mm

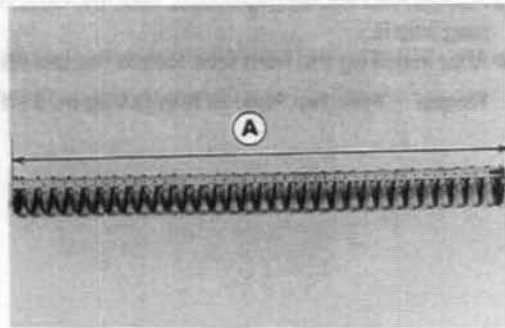

FORK SPRING	
Standard	490 mm
Service Limit	480 mm

Rear Suspension (Uni-Trak)


Rear Shock Absorber:

The rear suspension system of this motorcycle is Uni-trak. It consists of a rear shock absorber, swingarm, tie-rod and rocker arm.

To suit to various riding conditions, the spring preload of the shock absorber can be adjusted or the spring can be replaced with an optional one. Also the damping force can be adjusted easily so changing oil viscosity is unnecessary.

Rebound Damping Adjustment


- Turn the rebound damping adjuster [A] on the rear shock absorber lower end with the blade of a screwdriver until you feel a click.
- ★ If the damper setting feels too soft or too stiff, adjust it in accordance with the following table:

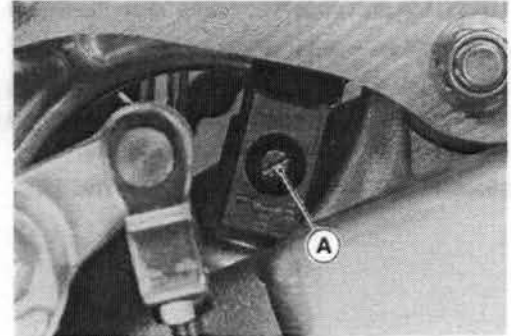

Rebound Damping Adjuster Setting


Standard: 14 clicks

Seated position: adjuster turned fully clockwise [A].

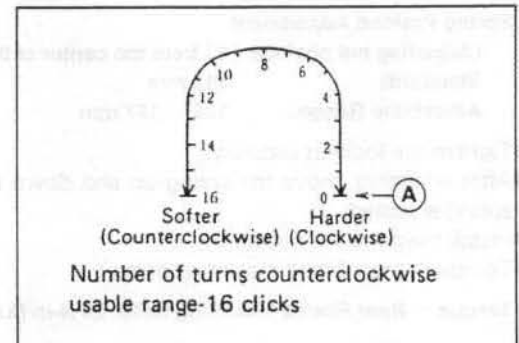

Compression Damping Adjustment


- Turn the compression damping adjuster [A] on the gas reservoir with the blade of a screwdriver until you feel a click.
- ★ If the damper setting feels too soft or too stiff, adjust it in accordance with the following table.

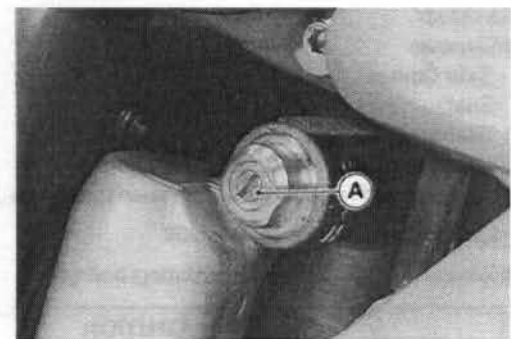

Compression Damping Adjuster Setting


Standard: KX125: 10 clicks
KX250: 12 clicks

Seated position: adjuster turned fully clockwise [A].

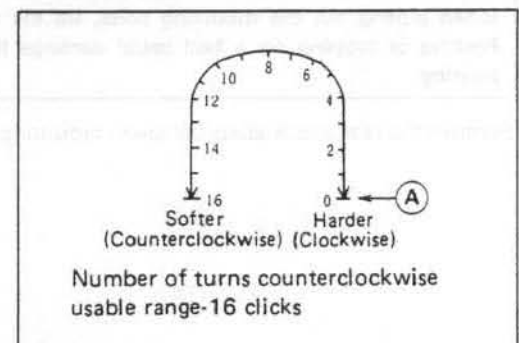

Spring Preload Adjustment

- Remove:
 - Side Covers
 - Seat
 - Silencer
 - Rear Frame [A] with Air Cleaner Housing [B]

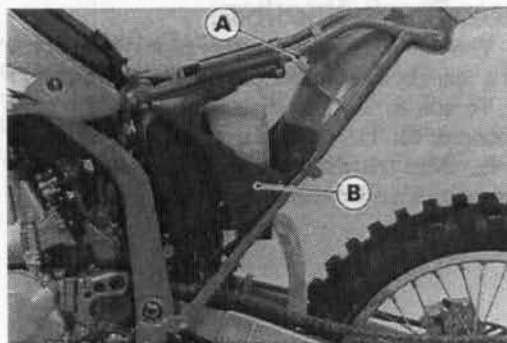


- Using the jack under the frame, raise the rear wheel off the ground.

Special Tool – Jack: 57001-1238

- Using the hook wrenches [A], loosen the locknut [B] and turn the adjusting nut [C] as required. Turning the adjusting nut down makes the spring preload stronger.

Special Tool – Hook Wrench: 57001-1101 [A]

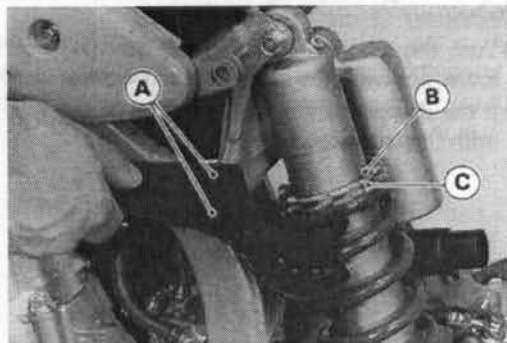

Spring Preload Adjustment

(Adjusting nut position [A] from the center of the mounting hole)

Standard: 118 mm

Adjustable Range: 108 ~ 127 mm

- Tighten the locknut securely.
- After adjusting, move the spring up and down to make sure that the spring is seated.
- Install the parts removed.
- Torque the rear frame mounting bolts.

Torque – Rear Frame Mounting Bolts: 29 N-m (3.0 kg-m, 22 ft-lb)




Removal

- Remove:
 - Side Covers
 - Seat
 - Silencer
 - Rear Frame with Air Cleaner Housing
- Using the jack under the frame, raise the rear wheel off the ground.

Special Tool – Jack: 57001-1238

- Remove the tie-rod front mounting bolt [A].

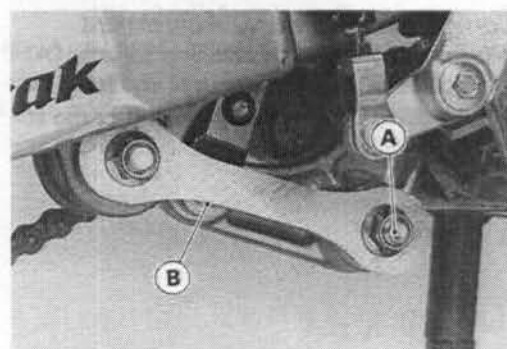


CAUTION

When pulling out the mounting bolts, lift the rear wheel slightly. Forcing or tapping on a bolt could damage the bolt, sleeve and bearing.

- Remove the rear shock absorber lower mounting bolt [B].

- Remove the rear shock absorber upper mounting bolt [A], and pull out the rear shock absorber [B].

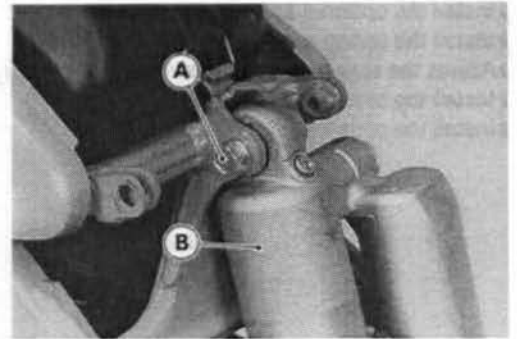

Installation Note

- Torque the following:

Torque – Rear Shock Absorber Mounting Bolts :

39 N-m (4.0 kg-m, 29 ft-lb)

Tie-Rod Mounting Nut: 81 N-m (8.3 kg-m, 60 ft-lb)

Rear Frame Mounting Bolts: 29 N-m (3.0 kg-m, 22 ft-lb)

Spring Replacement

In addition to the standard spring, heavy and light springs are available. If the standard spring is improper for your purpose, select a proper one according to the rider's weight or course conditions.

- Remove:

Seat

Side Covers

Silencer

Rear Frame with Air Cleaner Housing


- Remove the rear shock absorber.

- Clean the threaded portion on the upper of the rear shock absorber.

- Hold the lower end of the rear shock absorber in a vise.

- Using the hook wrenches [C], loosen the locknut [B] and turn the adjusting nut [A] all the way up.


Special Tool – Hook Wrench: 57001-1101 [C]

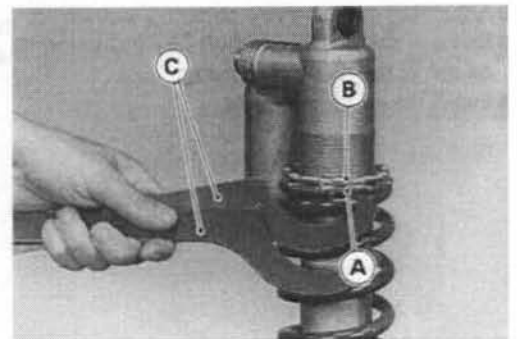


- Remove the rear shock absorber from the vise.

- Slide down the rubber bumper.

- Remove the spring guide [A] from the shock absorber and lift off the spring [B].

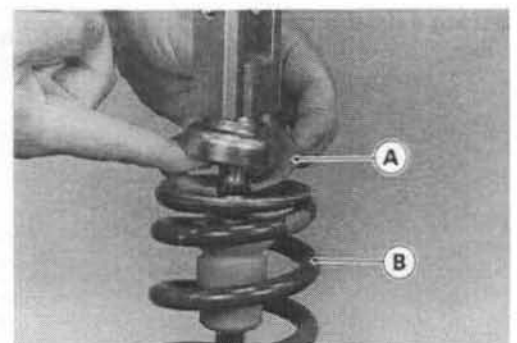


- Install the optional spring [A].
- Install the spring guide.
- Adjust the spring preload (see Spring Preload Adjustment).
- Install the rear shock absorber.
- Install the parts removed.

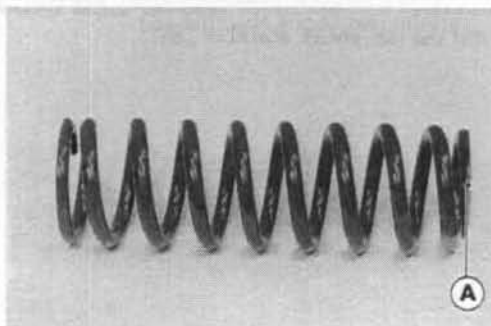

Disassembly (Oil Change)

The oil should be changed in the rear shock absorber at least once per racing season. The frequency for best performance must be based upon riding conditions and rider ability.


- Remove the rear shock absorber from the frame (see Rear Shock Absorber Removal).
- Remove the shock absorber spring (see Rear Shock Absorber Spring Replacement).
- Point the valve [A] away from you. Slowly release nitrogen gas pressure by pushing down the valve core with a screwdriver.

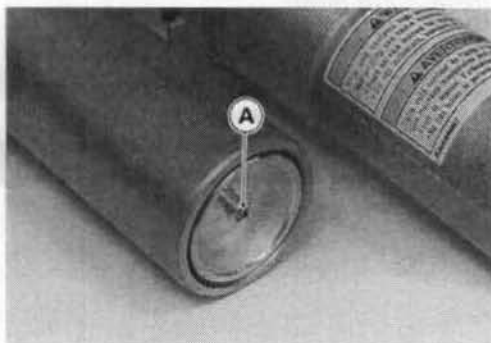

⚠ WARNING

Be sure to point the reservoir valve away from you when releasing nitrogen gas pressure. An oil mist is often released with the nitrogen. Always release nitrogen gas pressure before disassembling the rear shock absorber to prevent explosive separation of parts.


- Adjust the gas reservoir damping adjuster to the softest position.
- Remove the air bleeder bolt [A] and pump the rear shock to drain the oil out of the rear shock body.
- Install the air bleeder bolt.

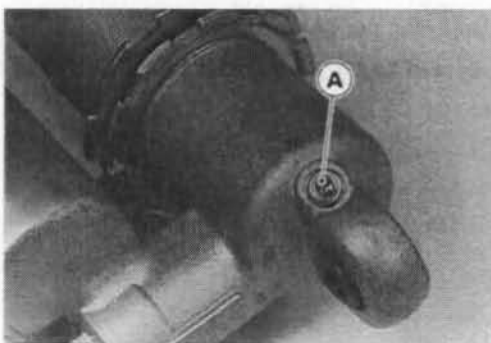


- Using a suitable tool [A] and press [B], push the reservoir cap in 10 mm.




- Remove the circlip [A] from the gas reservoir.

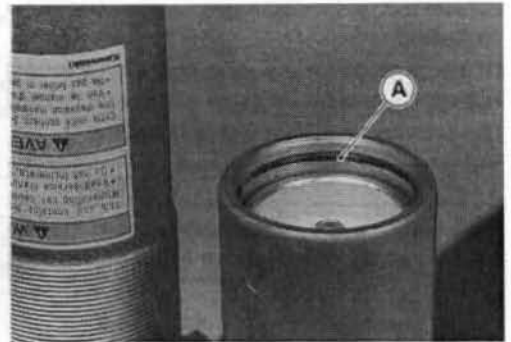


- Pull the gas reservoir cap [B] out of the gas reservoir using pliers [A].

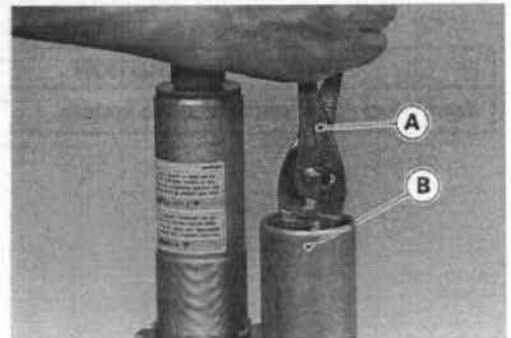

- Pry or tap [B] at the gaps [A] in the stop with suitable tools to free the stop from the rear shock body.

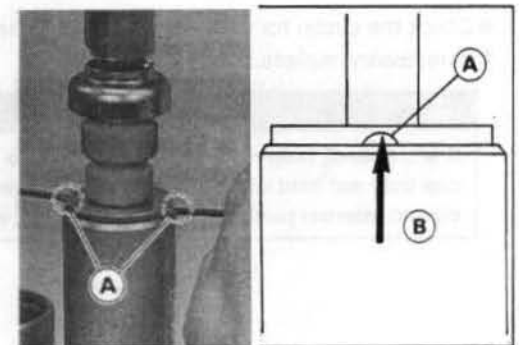


- Slide the stop up to the top of the push rod then lightly tap around the seal with a suitable rod and mallet, and push the seal assembly 10 mm down.
- Remove the circlip [A].
- Lightly move the push rod back and forth, and pull out the push rod assembly.
- Pour the oil out of the rear shock body.

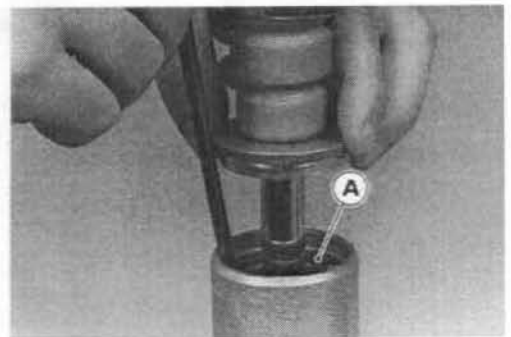

Assembly

- Adjust the gas reservoir damper adjuster to the softest position.
- Install the air bleeder bolt.
- Check the O-ring on the air bleeder bolt, and replace it if necessary.
- Pour KYB K2-C (SAE 5W or Bel-Ray SE2 #40) oil into the gas reservoir to 60 ~ 70 mm [A] from the gas reservoir upper end.

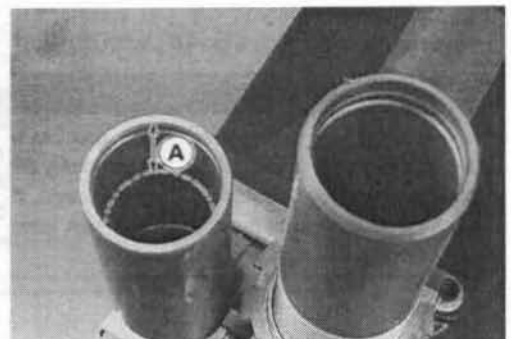

11-22 SUSPENSION

- Check that the bladder [A] on the gas reservoir cap is not partially collapsed.
- ★ If it is, push down the valve core with a screwdriver.
- Check the bladder for signs of damage or cracks.
- ★ If necessary, replace it with a new one.


CAUTION

Do not use a damaged or partially collapsed bladder, because it may burst, gently reducing rear shock performance.

- Apply grease to the lip [B] of the bladder.
- Push the bladder into the gas reservoir slowly until it just clears the circlip groove. Wipe out any spilled oil.

CAUTION

Ensure that no air remains in the system.

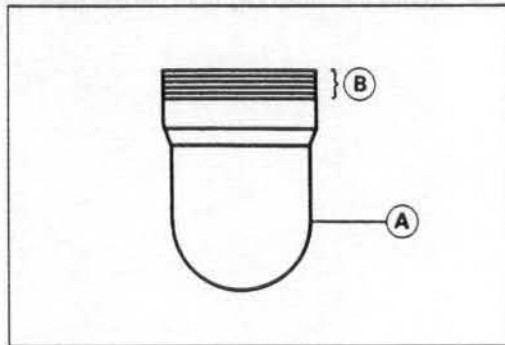


- Check the circlip for weakening, deformity and flaws.
- ★ If necessary, replace it with a new one.

⚠ WARNING

If weakened, deformed or flawed circlip is used, the gas reservoir cap may not hold when injecting the nitrogen gas. This would allow oil and internal parts to explode out of the reservoir.


- Mount the circlip [A] in the groove in the gas reservoir.

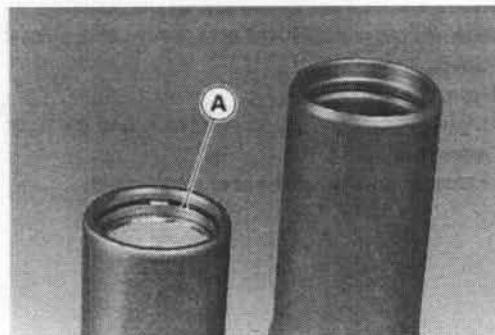


- Pull up the gas reservoir cap [A] against the circlip. The end of the gas reservoir cap must align [C] with the end of the gas reservoir [B].

⚠ WARNING


If the end of the gas reservoir cap and the end of the gas reservoir are not aligned, the circlip is not correctly fitting in the groove in the gas reservoir or is deformed. In this case, the oil and internal parts could explode out of the reservoir when injecting the nitrogen gas or while riding the motorcycle.

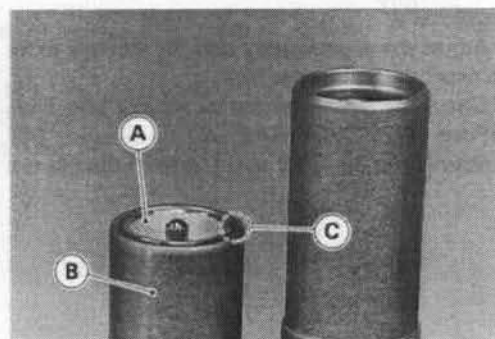

- Pour KYB K2-C (SAE 5W or Bel-Ray SE2 #40) oil into the rear shock body to 45 mm [A] from the end of the rear shock body.

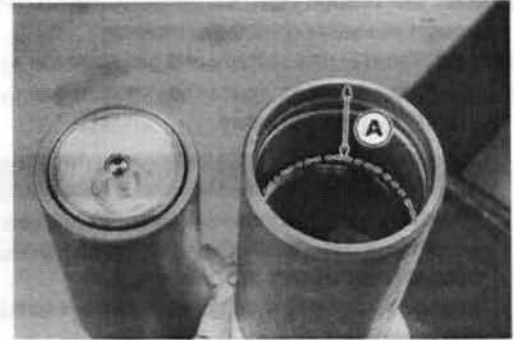


- Insert the piston [A] end of the push rod assembly into the rear shock body slowly, and pump the push rod until all the air is forced out of the rear shock body.
- Push the seal assembly [B] into the rear shock body until it just clears the circlip groove.

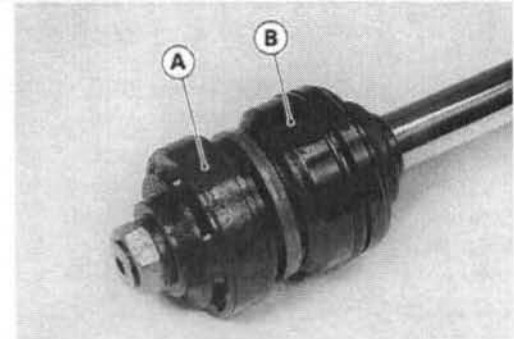

- Check the circlip.
- ★ If it is deformed or damaged, replace it with a new one.
- Fit the circlip [A] into the groove in the rear shock body.


▲WARNING

If the circlip is not a certain fit in the groove in the rear shock body, the push rod assembly may come out of the shock absorber when injecting the nitrogen gas or riding the motorcycle.

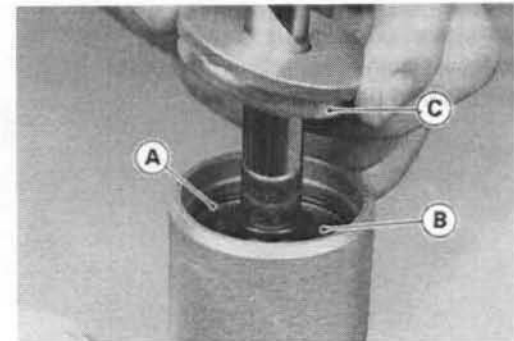

- Pull up the push rod assembly [B] against the circlip.
- Force the stop [C] into the rear shock body by lightly tapping around the edge of the stop with a mallet.

- Hold the lower end of the push rod assembly in a vise.
- Pump the rear shock up and down several times, and then leave it in the fully extended position for about three minutes.
- Remove the air bleeder bolt [A] from the upper part of the rear shock body.
- ★ If oil comes out of the air bleeder bolt hole, let it overflow until it stops.
- ★ If oil does not come out of the air bleeder bolt hole, add the specified oil into the air bleeder bolt hole until it runs spill over (that is, until all the remaining air is forced out).
- Install the air bleeder bolt securely.
- Fully extend the push rod assembly.

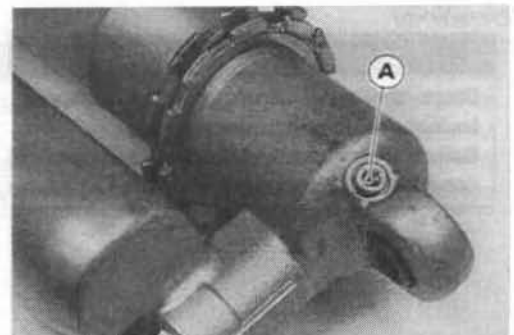

11-24 SUSPENSION

- Inject the nitrogen gas to a pressure of 50 kPa (0.5 kg/cm², 7 psi) through the valve on the gas reservoir.
- Check the rear shock body and gas reservoir for oil and gas leaks.
- ★ If there are no leaks, inject the nitrogen gas up to the 1 000 kPa (10 kg/cm², 142 psi) pressure.

⚠ WARNING

Pressurize the gas reservoir with nitrogen gas only. Do not use air or other gases, since they may cause premature wear, rust, fire hazard or substandard performance.
High pressure gas is dangerous. Have a qualified mechanic perform this procedure.

- Install the spring and spring guide.
- Reinstall the rear shock absorber.
- Adjust spring preload.
- Install the parts removed.

Spring Tension


Since a spring becomes shorter as it weakens, check its free length [A] to determine its condition.

★ If the spring is shorter than the service limit, it must be replaced.

Rear Shock Absorber Spring Free Length

Standard: 275 mm


Service Limit: 270 mm

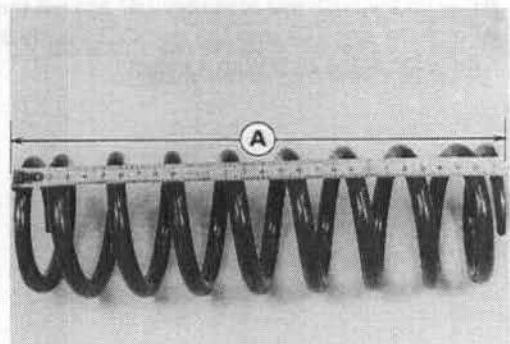

Scrapping

⚠ WARNING

Since the rear shock absorber contains nitrogen gas, do not incinerate the rear shock absorber.
Before a rear shock absorber is scrapped, release the nitrogen gas completely. Do not point the valve [A] toward your face or body.

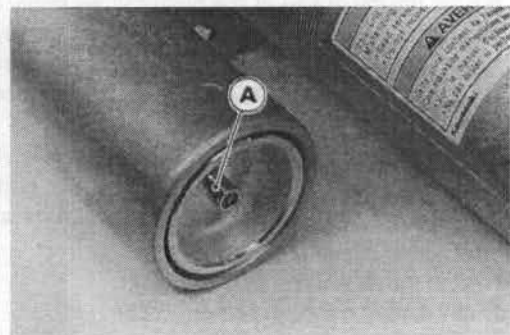

Swingarm:**Removal**

- Place the jack under the frame so that the rear wheel is off the ground.
Special Tool – Jack: 57001-1238
- Remove the rear wheel (see Rear Wheel Removal in the Wheels/Tires chapter).
- Remove the brake pedal.
- Remove the tie-rod rear mounting bolt [A].


CAUTION

When pulling out the mounting bolts, lift the rear end of the swingarm slightly. Forcing or tapping on a bolt could damage the bolt, sleeve and bearing.

- Pull out the swingarm pivot shaft [B], and remove the swingarm [C].
- Separate the chain guide and chain slipper from the swingarm.

Installation Notes

- Apply plenty of molybdenum disulfide grease to the inside of the needle bearings and sleeves.
- Torque the following:
Torque – Swingarm Pivot Shaft Nut: 98 N-m (10.0 kg-m, 72 ft-lb)
Tie-Rod Mounting Nut: 81 N-m (8.3 kg-m, 60 ft-lb)
- Refer to the Wheels/Tires, Final Drive, and Brakes chapters for wheel installation

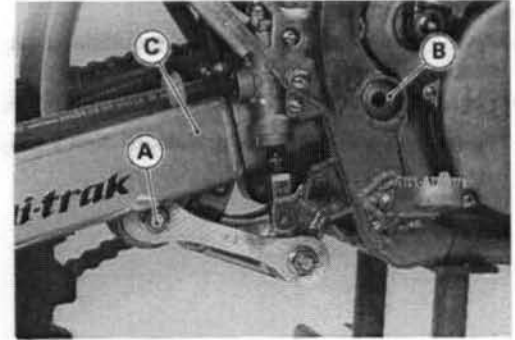
**Tie-Rod, Rocker Arm:****Tie-Rod Removal**

- Using the jack under the frame, raise the rear wheel off the ground.
Special Tool – Jack: 57001-1238
- Remove the tie-rod front mounting bolt [A].

CAUTION

When pulling out the mounting bolts, lift the rear wheel slightly. Forcing or tapping on a bolt could damage the bolt, sleeve and bearing.

- Remove the tie-rod rear mounting bolt [B], and then take out the tie-rods [C].

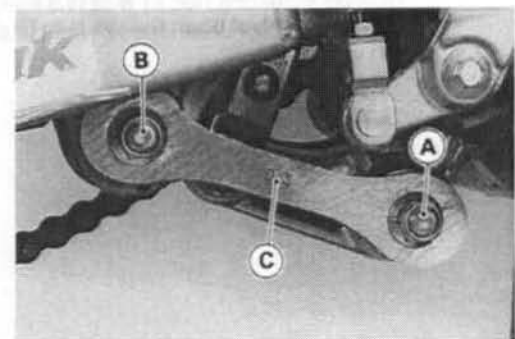

Tie-Rod Installation Notes

- Apply plenty of molybdenum disulfide grease to the inside of the needle bearings and oil seals.
- Torque the tie-rod front and rear mounting nuts.

Torque – Tie-Rod Mounting Nuts: 81 N-m (8.3 kg-m, 60 ft-lb)

Rocker Arm Removal


- Using the jack under the frame, raise the rear wheel off the ground.

Special Tool – Jack: 57001-1238

- Loosen the swingarm pivot shaft nut.
- Remove the tie-rod front mounting bolt [A].

CAUTION

When pulling out the mounting bolts, lift the rear wheel slightly. Forcing or tapping on a bolt could damage the bolt, sleeve and bearing.

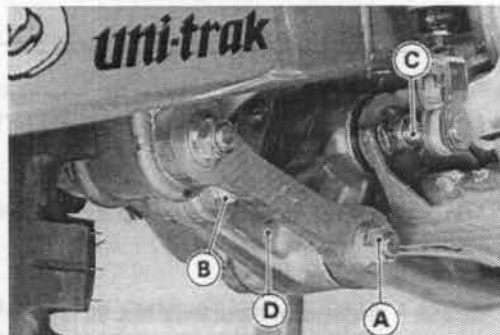

- Remove the rear shock absorber lower mounting bolt [B].
- Remove the rocker arm pivot shaft [C].
- Remove the rocker arm [D].

Rocker Arm Installation Notes

- Apply plenty of molybdenum disulfide grease to the inside of the rocker arm hole, outside of the sleeve, and needle bearing.
- Torque the following:

Torque – Rocker Arm Pivot Nut: 81 N-m (8.3 kg-m, 60 ft-lb)

Rear Shock Absorber Mounting Bolt:

39 N-m (4.0 kg-m, 29 ft-lb)

Tie-Rod Mounting Nut: 81 N-m (8.3 kg-m, 60 ft-lb).

Swingarm Pivot Shaft Nut: 98 N-m (10.0 kg-m, 72 ft-lb)


Uni-Trak Maintenance

Check the uni-trak component parts for wear periodically, or whenever excessive play is suspected.

- Using the jack under the frame, raise the rear wheel off the ground.

Special Tool – Jack: 57001-1238

- Push and pull on the swingarm [A], up and down, to check for wear.
- ★ A small amount of play on the swingarm is normal and no corrective action is needed. However, if excessive play is felt, remove the uni-trak parts from the frame and check for wear.

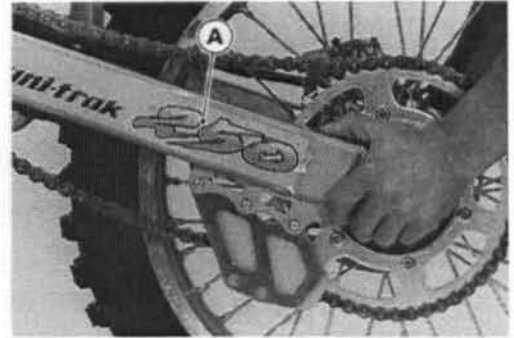

Rocker Arm Sleeve Wear

- Pull out the sleeves [A] of the rocker arm, and measure the outside diameter of the sleeve.
- ★ If the sleeve is worn past the service limit, replace the sleeve.


Sleeve Outside Diameter

[Long]

Standard: 21.987 ~ 22.000 mm
Service Limit: 21.85 mm

[Short]

Standard: 15.989 ~ 16.000 mm
Service Limit: 15.85 mm

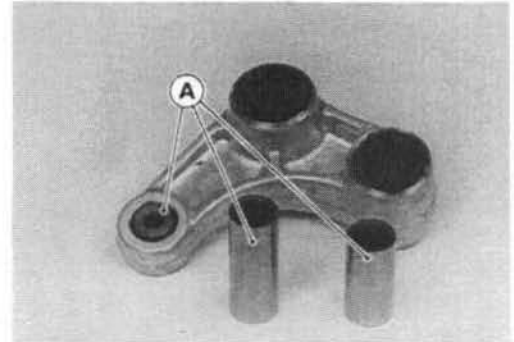


Rocker Arm Mounting Bolt Bend

A bent bolt causes vibration, poor handling, and instability.

- To measure bolt runout, remove the bolt, place it in V blocks, and set a dial gauge to the bolt at a point halfway between the blocks. Turn [A] the bolt to measure the runout. The amount of dial variation is the amount of runout.
- ★ If runout exceeds the service limit, replace the bolt.

Bolt Runout

Standard: Under 0.1 mm
Service Limit: 0.2 mm

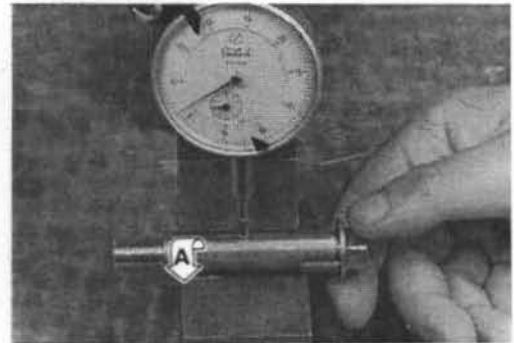


Steering

Table of Contents

Exploded View	12-2
Specifications	12-3
Steering	12-4
Inspection	12-4
Adjustment.....	12-4
Stem, Stem Bearing Removal.....	12-5
Stem, Stem Bearing Installation.....	12-6
Steering Maintenance.....	12-8
Stem Bearing Lubrication.....	12-8
Stem Bearing Wear, Damage	12-8
Stem Warp	12-8

12-2 STEERING

Exploded View

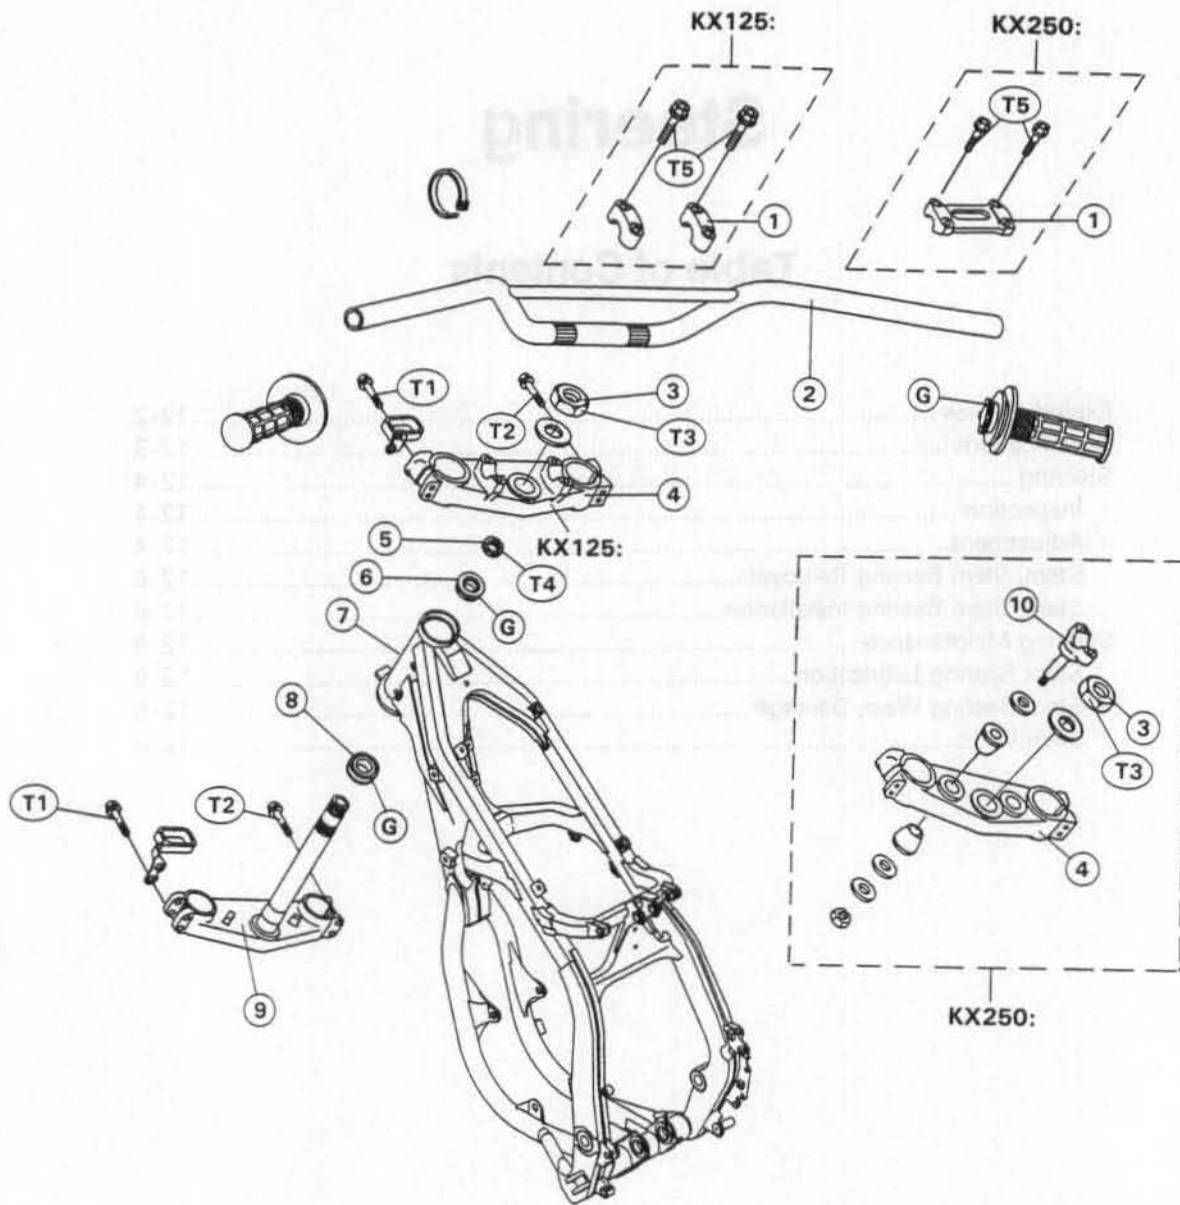

1. Handlebar Clamp
2. Handlebar
3. Steering Stem Head Nut
4. Steering Stem Head
5. Locknut
6. Tapered Roller Bearing
7. Head Pipe
8. Tapered Roller Bearing
9. Steering Stem
10. Handlebar Holder

G : Apply grease liberally

T1 : 22 N-m (2.25 kg-m, 16.3 ft-lb)

T2 : 20 N-m (2.0 kg-m, 14.5 ft-lb)

T3 : 78 N-m (8.0 kg-m, 58 ft-lb)



T4 : Tighten all snugly, then loosen.

Retighten to 3.9 N-m (0.4 kg-m, 35 in-lb)

T5 : 25 N-m (2.5 kg-m, 18.0 ft-lb)

Specifications

Special Tools – Steering Stem Bearing Driver: 57001-137
Steering Stem Bearing Driver Adapter: 57001-1074
Head Pipe Outer Race Press Shaft: 57001-1075
Head Pipe Outer Race Driver: 57001-1076
Head Pipe Outer Race Driver: 57001-1077
Steering Stem Nut Wrench: 57001-1100
Head Pipe Outer Race Remover: 57001-1107
Jack: 57001-1238

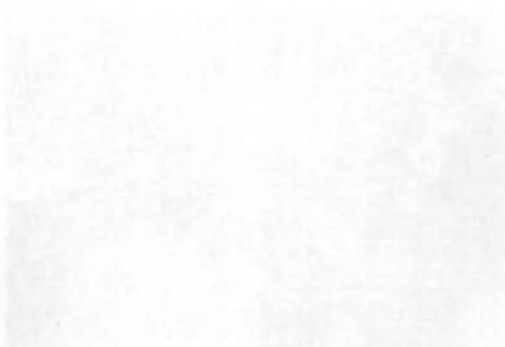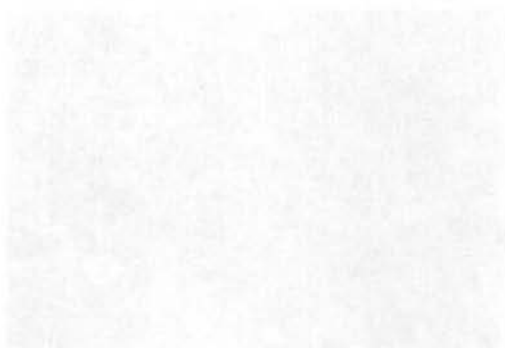

12-4 STEERING


Steering

Inspection

- Using the jack, raise the front wheel off the ground.

Special Tool – Jack: 57001-1238

- With the front wheel pointing straight ahead, alternately nudge each end of the handlebar. The front wheel should swing fully left and right from the force of gravity until the fork hits the stop.
- ★ If the steering binds or catches before the stop, check the routing of the cables, wire and hoses.
- ★ If the steering feels tight, adjust or lubricate the steering.
- Feel for steering looseness by pushing and pulling the forks.
- ★ If you feel looseness, adjust the steering.

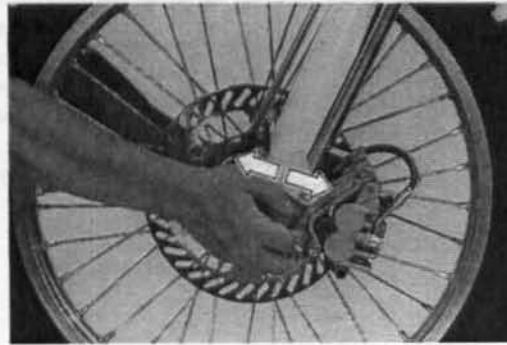


Adjustment

- For KX250 model, remove the number plate.
- Using the jack, raise the front wheel off the ground.

Special Tool – Jack: 57001-1238

- Remove the handlebar.
- For KX125 model, loosen the front fork lower clamp bolts [A] and steering stem head nut [B].
- For KX250 model, loosen the front fork upper clamp bolts, and remove the steering stem head nut [B] and steering stem head [C].

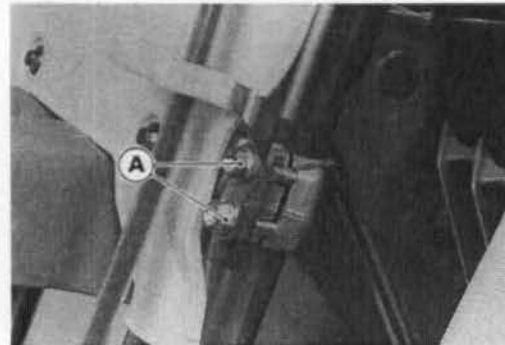


- Turn the steering stem locknut [A] with the steering stem nut wrench [B] to obtain the proper adjustment.
- ★ If the steering is too tight, loosen the stem locknut a fraction of a turn; if the steering is too loose, tighten the locknut a fraction of a turn.

Special Tool – Steering Stem Nut Wrench: 57001-1100 [B]

NOTE

- Turn the locknut 1/8 turn at a time maximum.

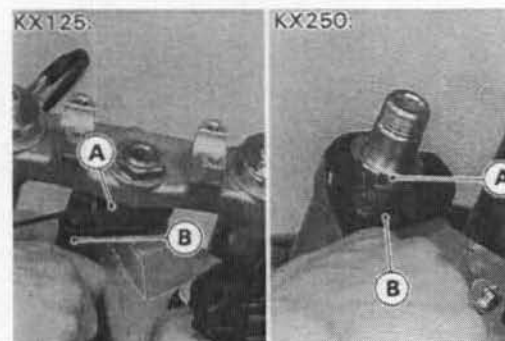


- For KX250 model, install the steering stem head.
- Torque the following:

Torque – Steering Stem Head Nut: 78 N-m (8.0 kg-m, 58 ft-lb)


Front Fork Clamp Bolts:

- Left Side : 22 N-m (2.25 kg-m, 16.3 ft-lb)**
- Right Side : 20 N-m (2.0 kg-m, 14.5 ft-lb)**

- For KX125 model, mount the handlebar clamps [B] so that the arrow [C] on the clamp points to the front [A].

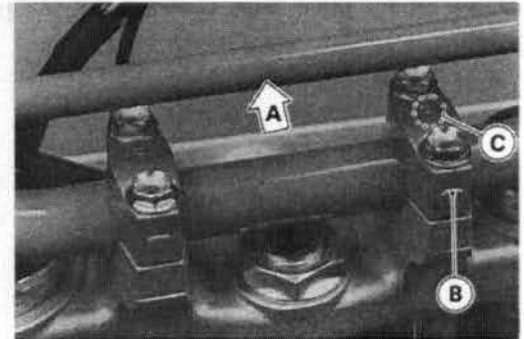


- For KX250 model, mount the handlebar clamp [A] so that the cut side [B] on the clamp points toward the rear.

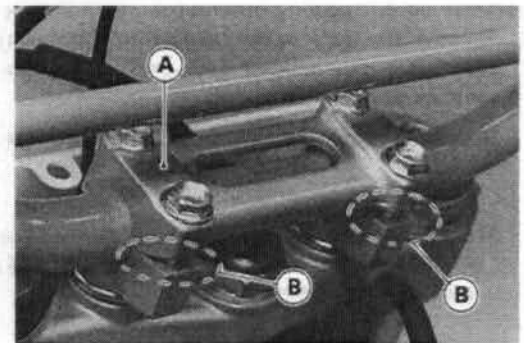

- Torque the handlebar clamp bolts.

Torque – Handlebar Clamp Bolts: 25 N-m (2.5 kg-m, 18 ft-lb)

- Tighten the clamp bolts, front first and then the rear. If the handlebar clamp is correctly installed, there will be no gap [A] at the front and a gap [B] at the rear after tightening.

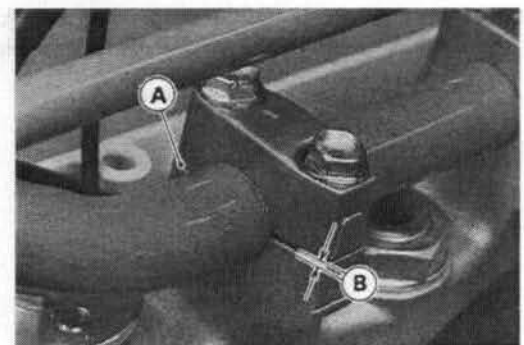


Stem, Stem Bearing Removal

- Remove:
 - Front Wheel
 - Brake Hose Clamp
 - Caliper Mounting Bolts
 - Master Cylinder Clamp
 - Front Fender
 - Handlebar
 - Front Fork
- Remove the steering stem head nut and washer.
- Remove the steering stem head.


12-6 STEERING

- Pushing up on the stem base [A], and remove the steering stem locknut [B], with the steering stem nut wrench [D], then remove the steering stem [C] and stem base.

Special Tool – Steering Stem Nut Wrench: 57001-1100 [D]

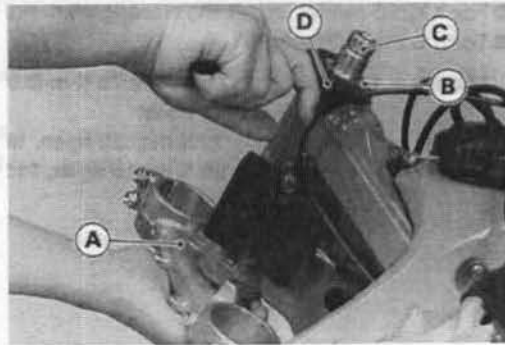

- Take off the upper stem bearing inner race (tapered roller bearing) [A].

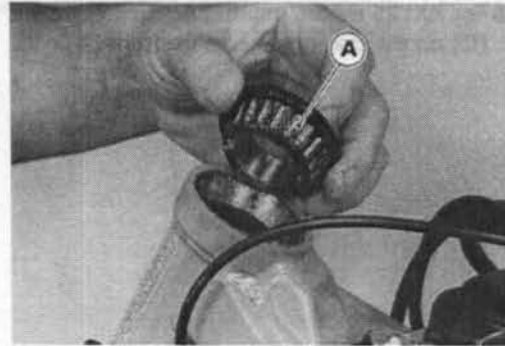


- Drive out the bearing outer races from the head pipe.
- Remove the outer races pressed into the head pipe, using the head pipe outer race remover [A], and hammer the head pipe outer race remover to drive it out.


Special Tool – Head Pipe Outer Race Remover: 57001-1107 [A]

NOTE

○ If either steering stem bearing is damaged, it is recommended that both the upper and lower bearing (including outer races) should be replaced with new ones.

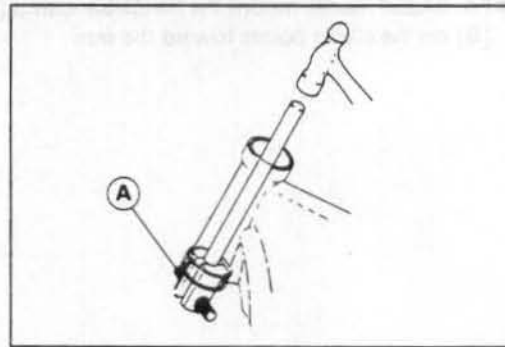

- Remove the lower stem bearing inner race (tapered roller bearing) [A] with its grease seal from the stem using suitable tools.

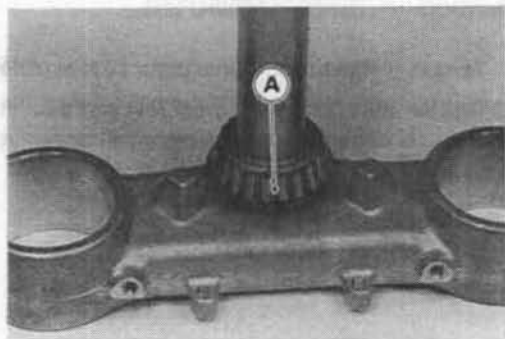


Stem, Stem Bearing Installation

- Replace the bearing outer race with new ones.
- Apply grease to the outer races, and drive them into the head pipe at the same time using the head pipe outer race press shaft [A] and the drivers [B][C].

Special Tool – Head Pipe Outer Race Press Shaft: 57001-1075 [A]


Head Pipe Outer Race Driver: 57001-1076 [B]

Head Pipe Outer Race Driver: 57001-1077 [C]

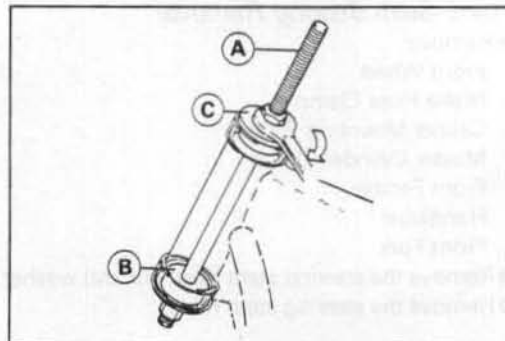


- Replace the lower inner races with new ones.
- Apply grease to the lower inner race, and drive it onto the stem using the steering stem bearing driver [A] and adapter [B].

**Special Tool – Steering Stem Bearing Driver: 57001-137 [A]
Steering Stem Bearing Driver Adapter: 57001-1074 [B]**

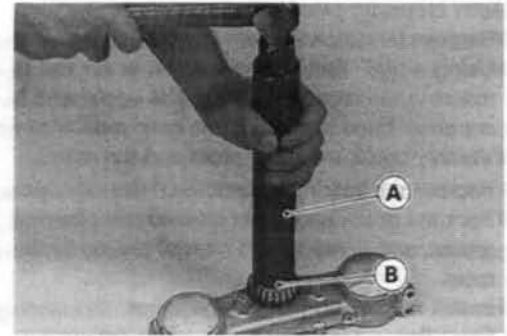

- Apply grease to the upper inner race, and install it in the head pipe.
- Install the stem through the head pipe and upper bearing, install the stem cap and hand-tighten the locknut while pushing up on the stem base.
- Install the stem head and washer, and tighten the stem head nut lightly.
- Settle the bearings in place as follows:
 - Tighten the stem locknut to 39 N-m (4.0 kg-m, 29 ft-lb) of torque. (To tighten the steering stem locknut to the specified torque, hook the wrench [A] on the stem locknut, and pull the wrench at the hole by 22.2 kg force in the direction shown.)

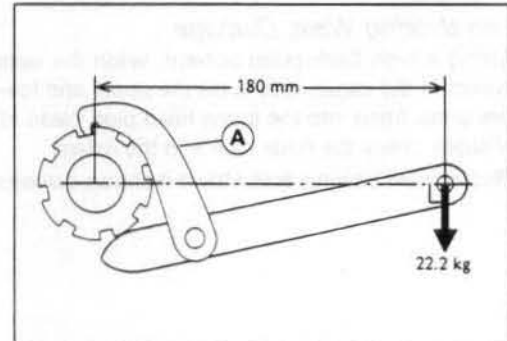

Special Tool – Steering Stem Nut Wrench: 57001-1100 [A]

- Check that there is no play and the steering stem turns smoothly without rattles. If not, the steering stem bearings may be damaged.
- Again back out the stem locknut a fraction of a turn until it turns lightly.
- Turn the stem locknut lightly clockwise until it just becomes hard to turn. Do not overtighten, or the steering will be too tight.

Torque – Steering Stem Locknut: 3.9 N-m (0.4 kg-m, 35 in-lb)

- Install the front fork (see the Suspension chapter).

NOTE

- Tighten the fork upper clamp bolts first, next the stem head nut, last the fork lower clamp bolt.

Torque – Steering Stem Head Nut : 78 N-m (8.0 kg-m, 58 ft-lb)

Front Fork Clamp Bolt :

Left Side : 22 N-m (2.25 kg-m, 16.3 ft-lb)

Right Side : 20 N-m (2.0 kg-m, 14.5 ft-lb)

- Install the parts removed (see the appropriate chapter).

⚠ WARNING

Do not impede the handlebar turning by routing the cables, wires and hoses improperly (see the General Information chapter).


- Check and adjust:
 - Steering
 - Front Brake
 - Clutch Cable
 - Throttle Cable

12-8 STEERING

Steering Maintenance

Stem Bearing Lubrication

- Remove the steering stem (see Steering Stem Removal).
- Using a high flash-point solvent, wash the upper and lower tapered rollers in the cages, and wipe the upper and lower outer races, which are press-fitted into the frame head pipe, clean off grease and dirt.
- Visually check the outer races and the rollers.
- ★ Replace the bearing assemblies if they shows wear or damage.
- Pack the upper and lower tapered roller bearings [A] in the cages with grease, and apply a light coat of grease to the upper and lower outer races.
- Install the steering stem, and adjust the steering (see Steering Stem, Stem Bearing Installation, Steering Adjustment).

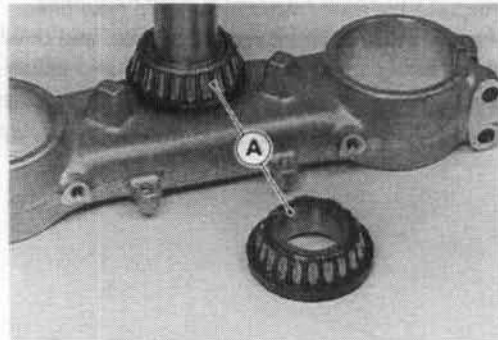

Stem Bearing Wear, Damage

- Using a high flash-point solvent, wash the upper and lower tapered rollers in the cages, and wipe the upper and lower outer races, which are press-fitted into the frame head pipe, clean off grease and dirt.
- Visually check the outer race and the rollers.
- ★ Replace the bearing assembly if it shows damage.

Stem Warp

- Whenever the steering stem is removed, or if the steering cannot be adjusted for smooth action, check the steering stem for straightness.
- ★ If the steering stem shaft is bent, replace the steering stem.

Electrical System

Table of Contents

Wiring Diagram	13-2
Exploded View	13-3
Specifications	13-4
Precautions and Safety Instructions	13-5
Safety Instructions:	13-5
Electrical Wiring	13-6
Inspection	13-6
Ignition Timing	13-7
Ignition Timing Adjustment	13-7
Flywheel Magneto	13-8
Removal	13-8
Installation Notes	13-9
Flywheel Magneto Inspection	13-9
Ignition System	13-10
Ignition Coil Removal	13-10
Ignition Coil Inspection	13-10
Spark Plug Cleaning and Inspection	13-11
Spark Plug Gap Inspection	13-11
Igniter Removal	13-11
Igniter Inspection	13-12
Stator Coil Inspection	13-13


13-2 ELECTRICAL SYSTEM

Wiring Diagram

KX125, 250:


1. Spark Plug
2. Ignition Coil
3. Igniter
4. Pickup Coil
5. Excitor Coil
6. Magneto
7. Engine Stop Button

Color Code	
BK	Black
G	Green
O	Orange
R	Red
W	White
Y	Yellow

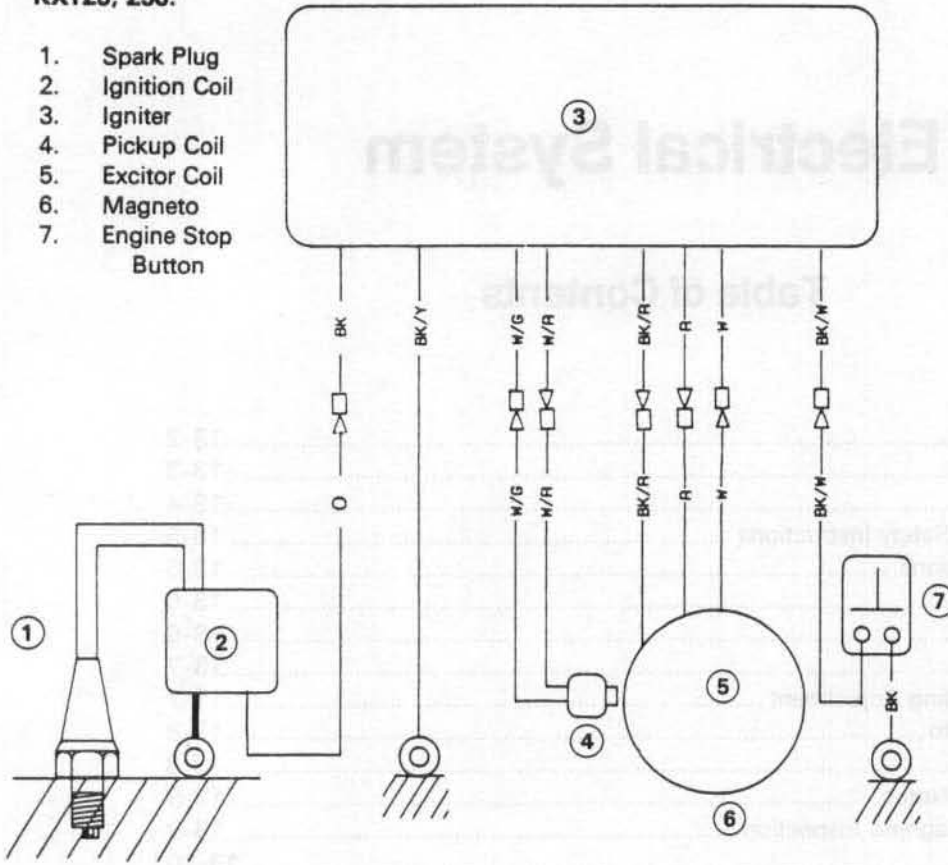


Exploded View

KX125:

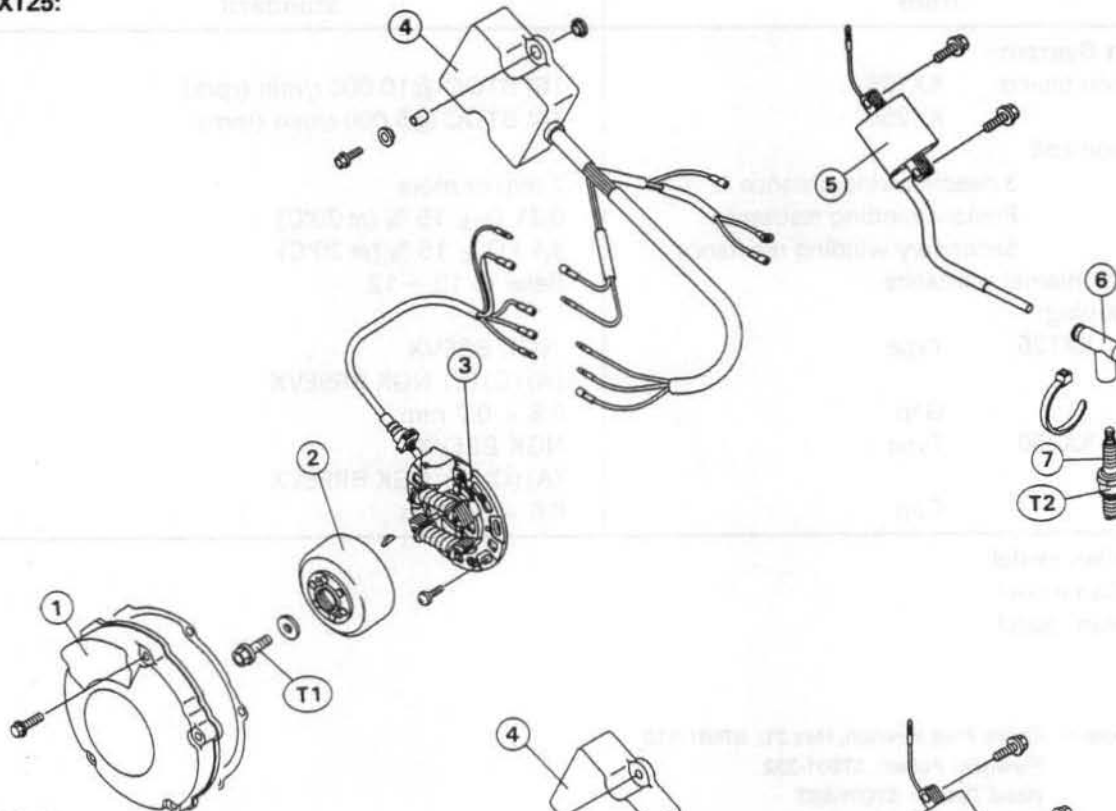

KX250:

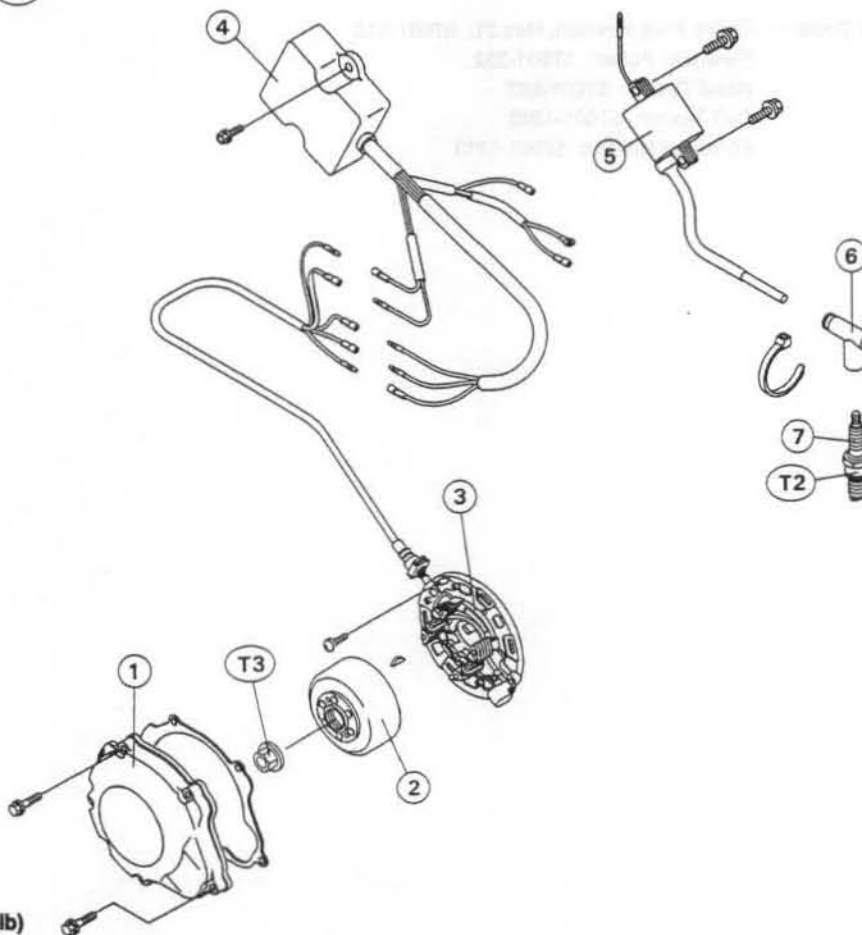

- 1. Magneto Cover
- 2. Magneto Flywheel
- 3. Stator
- 4. I.C. Igniter
- 5. Ignition Coil
- 6. Spark Plug Cap
- 7. Spark Plug
- T1 : 22 N-m (2.2 kg-m, 16.0 ft-lb)
- T2 : 27 N-m (2.8 kg-m, 20 ft-lb)
- T3 : 78 N-m (8.0 kg-m, 58 ft-lb)

13-4 ELECTRICAL SYSTEM

Specifications

Item	Standard
Ignition System:	
Ignition timing: KX125	15° BTDC @10 000 r/min (rpm)
KX250	14° BTDC @6 000 r/min (rpm)
Ignition coil:	
3 needle arcing distance	7 mm or more
Primary winding resistance	0.31 Ω \pm 15 % (at 20°C)
Secondary winding resistance	4.1 k Ω \pm 15 % (at 20°C)
Igniter internal resistance	Refer to 13 - 12
Spark plug:	
KX125 Type	NGK B9EVX (A)(C)(E) NGK BR9EVX
Gap	0.6 ~ 0.7 mm
KX250 Type	NGK B8EVX (A)(C)(E) NGK BR8EVX
Gap	0.6 ~ 0.7 mm

(A) : Australian model

(C) : Canadian model

(E) : European model

Special Tools - Spark Plug Wrench, Hex 21: 57001-110

Flywheel Puller: 57001-252

Hand Tester: 57001-983

Coil Tester: 57001-1242

Flywheel Holder: 57001-1313


Precautions and Safety Instructions

There are numbers of important precautions that are musts when servicing electrical systems. Learn and observe all the rules below.


- The electrical parts should never be struck sharply, as with a hammer, or allowed to fall on a hard surface. Such a shock to the parts can damage them.
- Troubles may involve one or in some cases all items. Never replace a defective part without determining what CAUSED the failure. If the failure was caused by some other item or items, they too must be repaired or replaced, or the new replacement will soon fail again.
- Make sure all connectors in the circuit are clean and tight, and examine wires for signs of burning, fraying, etc. Poor wires and bad connections will affect electrical system operation.
- Measure coil and winding resistance when the part is cold (at room temperature).

○ Electrical Connectors

[A] Female Connectors

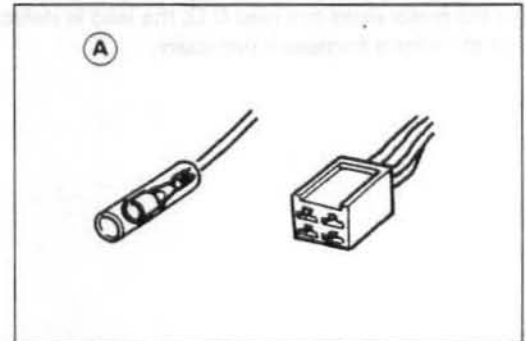

[B] Male Connectors

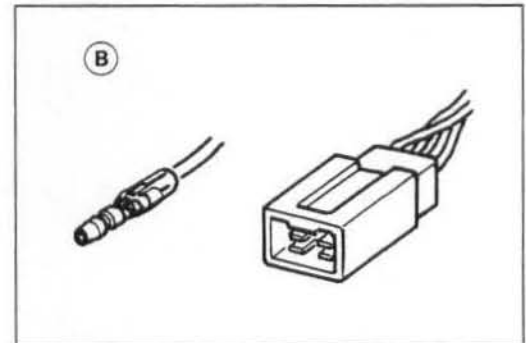

Safety Instructions:

⚠ WARNING


The ignition system produces extremely high voltage. Do not touch the spark plug, high tension coil, or spark plug lead while the engine is running, or you could receive a severe electrical shock.

13-6 ELECTRICAL SYSTEM

Electrical Wiring

Inspection

- Visually inspect the wiring for signs of burning, fraying, etc.
- ★ If any wiring is poor, replace the damaged wiring.
- Pull each connector apart and inspect it for corrosion, dirt, and damage.
- ★ If the connector is corroded or dirty, clean it carefully. If it is damaged, replace it.
- Check the wiring for continuity.
- Use the wiring diagram to find the ends of the lead which is suspected of being a problem.
- Connect an ohmmeter between the ends of the leads.
- Set the meter to the $\times 1\Omega$ range, and lead the meter.
- ★ If the meter does not read 0Ω , the lead is defective. Replace the lead or the wiring harness if necessary.

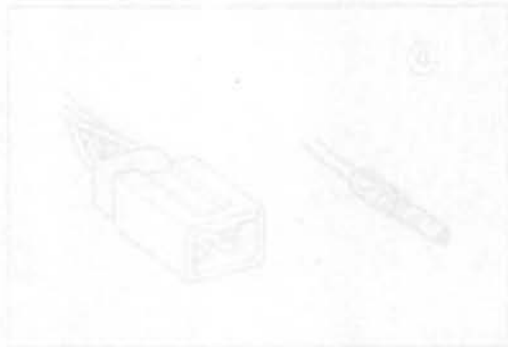



SAFETY INSTRUCTIONS

Always use proper safety procedures when working on electrical systems. Disconnect the battery before working on the electrical system. Do not use open flames or sparks near the battery. Wear eye protection and avoid contact with the battery electrolyte. Do not touch the battery terminals or other electrical components while the engine is running. Do not use flammable liquids near the battery. Do not use tools or equipment that could cause a short circuit. Do not use electrical components that are not approved for use in the vehicle. Do not use electrical components that are not approved for use in the vehicle.

Ignition Timing



Ignition Timing Adjustment

- Remove the magneto cover.
- Check to see if the center mark of the three marks [B] on the magneto stator is aligned with the mark [A] on the crankcase.
- ★ If the marks are not aligned, loosen the magneto stator screws [C] and turn the magneto stator [D].
- Tighten the screws securely.
- Install the magneto cover.

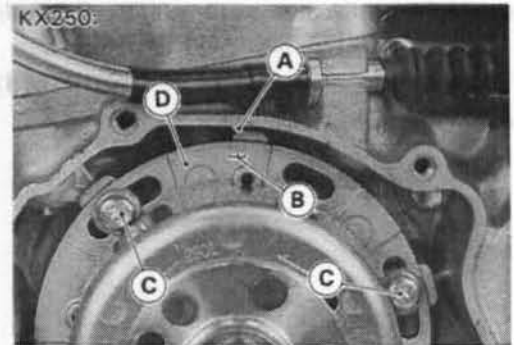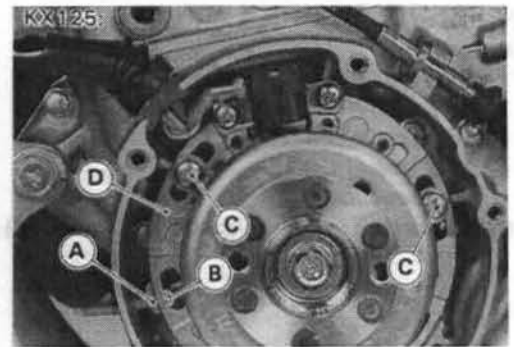

The ignition timing can be adjusted for different power bands to suit the rider's preference and ability.

- Remove the magneto cover.
- Loosen the stator screws.
- Adjust the timing by shifting the stator position within the three lines [A].

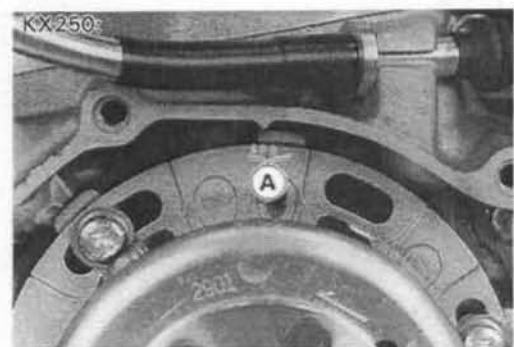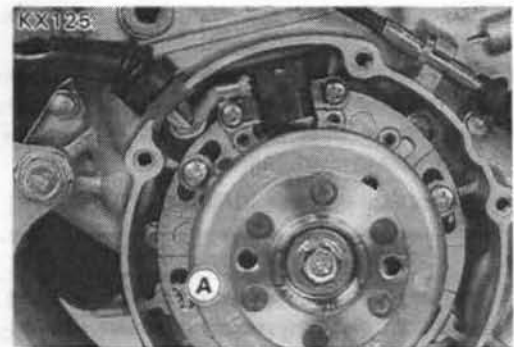


NOTE

○ For best engine performance, it is very important to adjust the ignition timing within the adjustable range just explained.

- A. Crankshaft Rotation
- B. Stator Movement
- C. Retard
- D. Advance

- Tighten the stator screws securely.
- Install the magneto cover.
- Test ride the motorcycle and readjust the ignition timing if necessary.

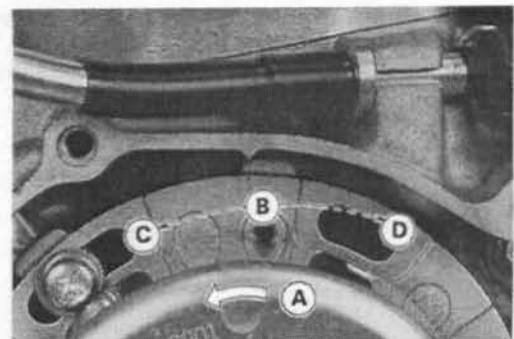


13-8 ELECTRICAL SYSTEM

Flywheel Magneto

Removal


- Remove:
 - Side Covers
 - Seat
 - Radiator Covers
 - Fuel Tank
 - Magneto Cover
- Unscrew the mounting screws [A], and remove the pickup coil [B].

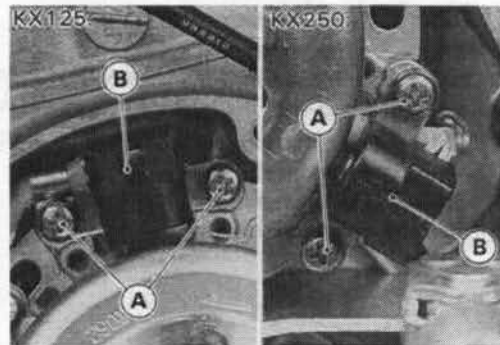

- Holding the flywheel steady with the flywheel holder [B], remove the flywheel bolt (KX125) or nut (KX250) [A].


Special Tool – Flywheel Holder: 57001-1313 [B]

- Remove the flywheel holder.

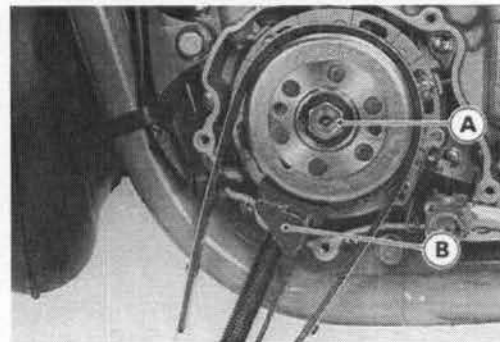

- Screw the flywheel puller [A] into the flywheel by turning it counter-clockwise (left-hand thread).
- Remove the flywheel from the crankshaft by turning in the puller center bolt and tapping the head of the bolt lightly with a hammer, while holding the puller body steady. There is a woodruff key in the crankshaft tapered portion.


Special Tool – Flywheel Puller: 57001-252 [A]

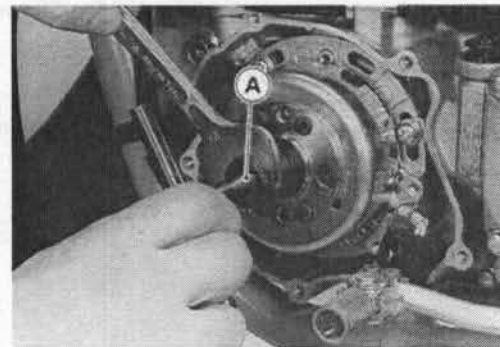

CAUTION


Never strike the grab bar or the flywheel itself. Striking the bar can bend it. If the flywheel is struck, the magnets may lose their magnetism.

- Unscrew the mounting screws [A], and remove the stator plate [B] and the wiring grommet [C].
- Disconnect the stator lead connectors from the igniter connectors.

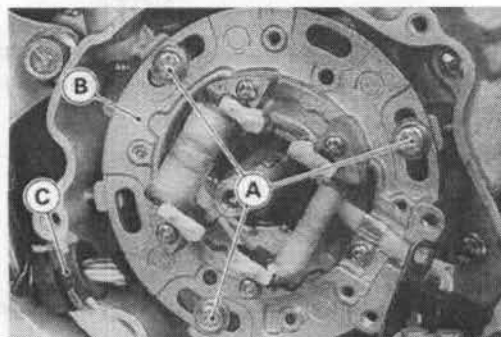


Installation Notes


- Using a high flash-point solvent, clean off any oil or dirt that may be on the crankshaft taper [A] or in the hole [B] in the flywheel. Dry them with a clean cloth.

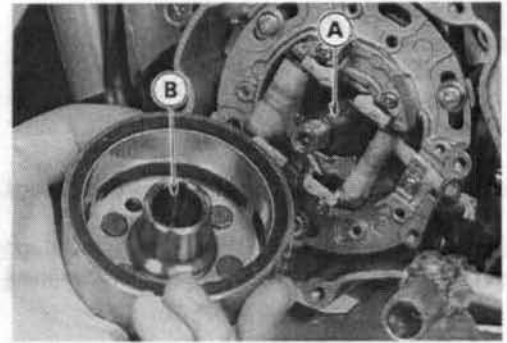

- Set the stator wiring grommet [A] securely in the notch in the left crankcase half, and route the wires [B] according to the Cable, Wire and Hose Routing section in the General Information chapter.

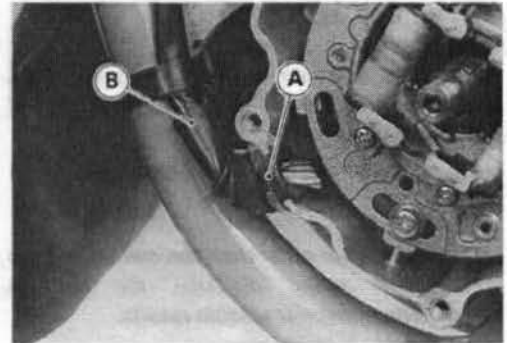

- Fit the woodruff key [A] securely in the slot in the crankshaft before installing the flywheel.
- Install the flywheel on the crankshaft.

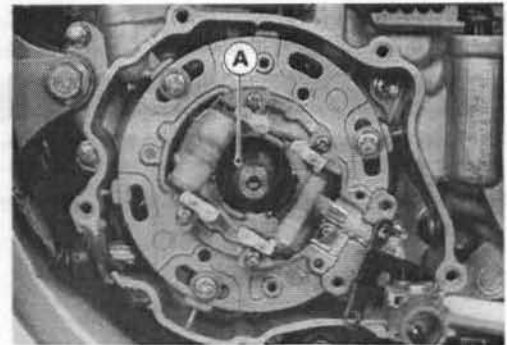


- Holding the flywheel steady, with the flywheel holder [A], and tighten the flywheel bolt (KX125) or nut (KX250) [B].

Special Tool – Flywheel Holder: 57001-1313 [A]

Torque – Flywheel Bolt (KX125): 22 N-m (2.2 kg-m, 16 ft-lb)
Flywheel Nut (KX250): 78 N-m (8.0 kg-m, 58 ft-lb)

- Install the pickup coil securely.
- Replace the gasket with a new one.

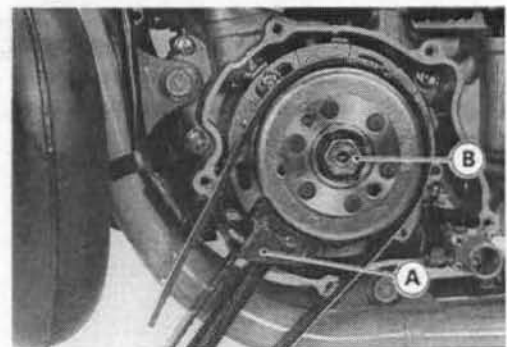

Flywheel Magneto Inspection


There are three types of magneto problems: short, open (wire burned out), or loss in flywheel magnetism. A short or open in one of the coil wires will result in either a low output, or no output at all. A loss in flywheel magnetism, which may be caused by dropping or hitting the flywheel, or just by aging, will result in low output. Inspect the coils and the flywheel (see Ignition System).

13-10 ELECTRICAL SYSTEM

Ignition System

Ignition Coil Removal

- Remove:
 - Side Covers
 - Seat
 - Radiator Covers
 - Fuel Tank
- Disconnect the ignition coil primary lead, engine stop button earth and igniter earth leads [A].
- Pull off the plug cap [B] from the spark plug [C].
- Unscrew the mounting bolt, and remove the ignition coil [D].

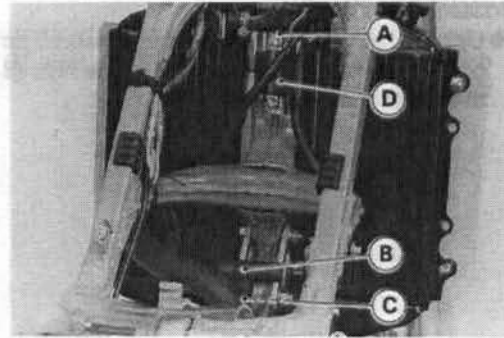

Ignition Coil Inspection

Measuring arcing distance:


The most accurate test for determining the condition of the ignition coil is made by measuring arcing distance using the coil tester for the 3-needle method.

Special Tool – Coil Tester: 57001-1242

NOTE

○ Since a tester other than the coil tester (special tool) may produce a different arcing distance, the coil tester (special tool) is recommended for reliable results.

- Remove the ignition coil.
- Connect the ignition coil (with the spark plug cap left installed on the spark plug lead) [A] to the tester [B], and measure the arcing distance.

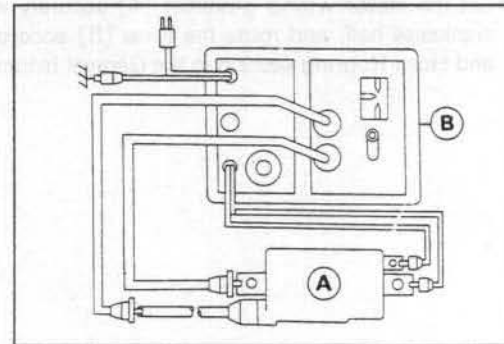

▲WARNING

To avoid extremely high voltage shocks, do not touch the coil or lead.

- ★ If the distance reading is less than the specified value, the ignition coil or spark plug cap is defective.

Ignition Coil Arcing Distance


Standard: 7 mm or more

- To determine which part is defective, measure the arcing distance again with the spark plug cap removed from the ignition coil lead.
- ★ If the arcing distance is subnormal as before, the trouble is with the ignition coil itself. If the arcing distance is now normal, the trouble is with the spark plug cap.

Measuring coil resistance:

If the arcing tester is not available, the coil can be checked for a broken or badly shorted winding with an ohmmeter. However, an ohmmeter cannot detect layer shorts and shorts resulting from insulation breakdown under high voltage.

- Remove the ignition coil.
- Measure the primary winding resistance [A].
 - Connect an ohmmeter between the coil terminals.
 - Set the meter to the x 1 Ω range, and read the meter.
- Measure the secondary winding resistance [B].
 - Pull the spark plug cap off the lead.

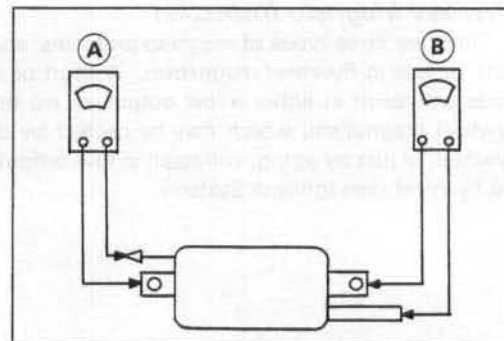

- Connect an ohmmeter between the spark plug lead and the ground lead terminal.
- Set the meter to the x 1 k Ω range, and read the meter.
- ★ If the meter does not read as specified, replace the coil.
- ★ If the meter reads as specified, the ignition coil windings are probably good. However, if the ignition system still does not perform as it should after all other components have been checked, test replace the coil with one known to be good.

Ignition Coil Winding Resistance

Primary windings: 0.31 Ω \pm 15 % (at 20°C)

Secondary windings: 4.1 k Ω \pm 15 % (at 20°C)

- Check the spark plug lead for visible damage.
- ★ If the spark plug lead is damaged, replace the coil.

Spark Plug Cleaning and Inspection


- Remove the spark plug, and visually inspect it.
- Clean the spark plug, preferably in a sandblasting device, and then clean off any abrasive particles. The plug may also be cleaned using a high flash-point solvent and a wire brush or other suitable tool.
- ★ If the spark plug electrodes are corroded or damaged, or if the insulator is cracked, replace the plug. Use the standard spark plug.

Spark Plug Gap Inspection

- Measure the gap [A] with a wire-type thickness gauge.
- ★ If the gap is incorrect, carefully bend the side electrode [B] with a suitable tool to obtain the correct gap.


Spark Plug Gap

Standard: 0.6 ~ 0.7 mm

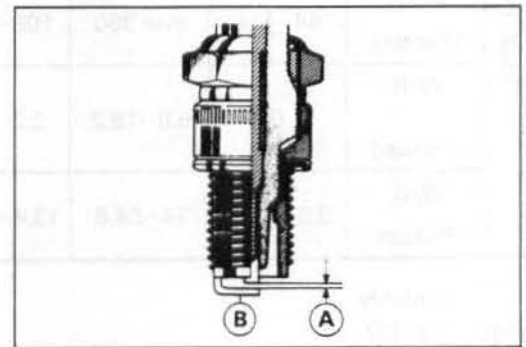

Igniter Removal

- Remove:
 - Side Covers
 - Seat
 - Radiator Covers
 - Fuel Tank
- Disconnect the igniter lead.
- Unscrew the mounting bolts [A], and remove the igniter [B].

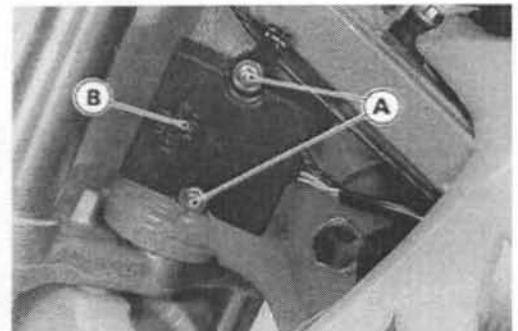

13-12 ELECTRICAL SYSTEM

Igniter Inspection

● Set the hand tester to the $\times 1k\Omega$ range, connect the tester to the terminals in the igniter lead, and check the internal resistance following the table.

★ If the readings do not correspond to the table, replace the igniter.

Special Tool – Hand Tester: 57001-983

CAUTION

Use only the Kawasaki Hand Tester for this test. A tester other than the Kawasaki Hand Tester may show different readings.
Do not use a megger or a meter with a large capacity battery, or the igniter will be damaged.

Igniter Tester Using the Kawasaki Hand Tester

		Tester Positive (+) Lead Connection							
Lead Color		BK/Y (Ground)	BK/W (Stop)	R (Exciter)	BK (Ign. Coil)	W (Exciter)	BK/R (Exciter)	W/R (Pickup)	W/G (Pickup)
Tester Negative (-) Lead Connection	BK/Y (Ground)	-	6.8-19.2	2.2-4.7	∞	∞	2.2-4.8	0	7.7-13.4
	BK/W (Stop)	∞	-	∞	∞	∞	∞	∞	∞
	R (Exciter)	116-330	2.2-4.6	-	∞	∞	272-1200	116-330	128-420
	BK (Ign. Coil)	2.0-4.4	22.7-120	6.8-18.2	-	∞	7.0-19.4	2.0-4.4	12.8-24.4
	W (Exciter)	∞	2.2-4.7	∞	∞	-	∞	∞	∞
	BK/R (Exciter)	44-114	over 360	108-540	∞	∞	-	44-114	68-180
	W/R (Pickup)	0	6.8-19.2	2.2-4.7	∞	∞	2.2-4.8	-	7.7-13.4
	W/G (Pickup)	8.0-13.8	24-54.6	13.4-25.8	∞	∞	13.6-26.4	8.0-13.8	-

∞ : Infinity
Range : $\times 1k\Omega$
Unit : $k\Omega$

Color Code	
BK	Black
G	Green
O	Orange
R	Red
W	White
Y	Yellow

Stator Coil Inspection

- Remove:
 - Side Covers
 - Seat
 - Radiator Covers
 - Fuel Tank
- Disconnect the magneto lead.
- Zero the ohmmeter, and connect it as shown in the table.

Stator Coil Resistance (at 20°C)

Connections	Reading
White/Red-White/Green	396 ~ 594 Ω
Red - Black/Red	288 ~ 432 Ω
White - Red	14 ~ 21 Ω

- Note the resistance reading.
- ★ If there is more resistance than shown in the table, the stator has a broken wire, the leads between the stator and the connector are open, or the connections are bad. Check the stator and the leads, and fix or replace the damaged parts.
- ★ If there is much less resistance than shown in the table, the stator is shorted, or the leads between the stator and the connector is grounded. Check the stator and the leads, and fix or replace the damaged parts.

Appendix

Table of Contents

Troubleshooting Guide	14-2
General Lubrication	14-5
Lubrication	14-5
Unit Conversion Table	14-6

Troubleshooting Guide

NOTE

○ *This is not an exhaustive list, giving every possible cause for each problem listed. It is meant simply as a rough guide to assist the troubleshooting for some of the more common difficulties.*

Engine Doesn't Start; Starting Difficulty:

Engine won't turn over:

- Cylinder, piston seizure
- Crankshaft seizure
- Connecting rod small end seizure
- Connecting rod big end seizure
- Transmission gear or bearing seizure
- Kick shaft return spring broken
- Kick ratchet gear not engaging

No fuel flow:

- No fuel in tank
- Fuel tap turned off
- Tank cap air vent obstructed
- Fuel tap clogged
- Fuel line clogged
- Float valve clogged

Engine flooded:

- Fuel level too high
- Float valve worn or stuck open
- Starting technique faulty
(when flooded, kick with the throttle fully open to allow more air to reach the engine.)

No spark; spark weak:

- Spark plug dirty, broken, or maladjusted
- Spark plug cap or high tension wiring trouble
- Spark plug cap not in good contact
- Spark plug incorrect
- Igniter trouble
- Ignition coil trouble
- Ignition coil resistor open
- Flywheel magneto damaged
- Wiring shorted or open

Fuel/air mixture incorrect:

- Idle adjusting screw maladjusted
- Slow jet or air passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Starter jet clogged

Compression Low:

- Spark plug loose
- Cylinder head not sufficiently tightened down
- Cylinder nut loose
- Cylinder, piston worn
- Piston ring bad (worn, weak, broken, or sticking)
- Piston ring/land clearance excessive
- Cylinder head gasket damaged
- Cylinder head warped
- Cylinder base gasket damaged
- Reed valve damaged

Poor Running at Low Speed:

Spark weak:

- Spark plug dirty, broken, or maladjusted
- Spark plug cap or high tension wiring trouble
- Spark plug cap shorted or not in good contact

- Spark plug incorrect
- Igniter trouble
- Ignition coil trouble
- Flywheel magneto damaged
- Ignition coil lead or igniter lead not in good contact

Fuel/air mixture incorrect:

- Idle adjusting screw maladjusted
- Slow jet or air passage clogged
- Air cleaner element clogged, poorly sealed, or missing
- Starter plunger stuck open
- Float level too high or too low
- Fuel tank air vent obstructed
- Carburetor holder loose
- Air cleaner duct loose

Compression low:

- Spark plug loose
- Cylinder head not sufficiently tightened down
- Cylinder nut loose
- Cylinder, piston worn
- Piston ring bad (worn, weak, broken, or sticking)
- Piston ring/land clearance excessive
- Cylinder head gasket damaged
- Cylinder head warped
- Cylinder base gasket damaged
- Reed valve damaged

KIPS ports stuck open:

- KIPS exhaust valve stuck open (valve seizure, or carbon accumulation)
- KIPS exhaust valves assembled incorrectly
- Exhaust advancer spring damaged
- Exhaust valve operating rod seizure
- Rod (for KIPS) seized in cylinder

Other:

- Igniter trouble
- Transmission oil viscosity too high
- Brake dragging

Poor Running or No Power at High Speed:

Firing incorrect:

- Spark plug dirty, damaged, or maladjusted
- Spark plug cap or high tension wiring damaged
- Spark plug cap shorted or not in good contact
- Spark plug incorrect
- Igniter trouble
- Ignition coil trouble
- Flywheel magneto damaged
- Ignition coil lead or igniter lead not in good contact

Fuel/air mixture incorrect:

- Main jet clogged or wrong size
- Jet needle or needle jet worn
- Jet needle clip in wrong position
- Fuel level too high or too low
- Air jet or air passage clogged
- Air cleaner element clogged, poorly sealed, or missing
- Starter plunger stuck open
- Fuel to carburetor insufficient
- Water or foreign matter in fuel
- Fuel tank air vent obstructed
- Carburetor holder loose

Air cleaner duct loose

Fuel tap clogged

Fuel line clogged

Compression low:

Spark plug loose

Cylinder head not sufficiently tightened down

Cylinder nut loose

Cylinder, piston worn

Piston ring bad (worn, weak, broken, or sticking)

Piston ring/land clearance excessive

Cylinder head gasket damaged

Cylinder head warped

Cylinder base gasket damaged

Reed valve damaged

Engine rpm will not rise properly:

Starter plunger stuck open

Fuel level too high or too low

Main jet clogged

Throttle valve does not fully open

Air cleaner element clogged

Muffler clogged

Water or foreign matter in fuel

Cylinder exhaust port clogged

Brake dragging

Clutch slipping

Overheating

Transmission oil level too high

Transmission oil viscosity too high

Crankshaft bearing worn or damaged

KIPS ports stuck closed:

KIPS ports stuck closed

KIPS exhaust valves stuck closed (valve seizure, or carbon accumulation)

KIPS exhaust valves assembled incorrectly

KIPS ports clogged (carbon accumulation)

Exhaust valve operating rod seizure

Rod (for KIPS) seized in cylinder

Knocking:

Carbon built up in combustion chamber

Fuel poor quality or incorrect

Spark plug incorrect

Igniter trouble

Overheating:

Firing incorrect:

Spark plug dirty, broken, or maladjusted

Spark plug incorrect

Igniter trouble

Fuel/air mixture incorrect:

Main jet clogged or wrong size

Fuel level too low

Carburetor holder loose

Air cleaner element clogged, poorly sealed, or missing

Air cleaner duct poorly sealed

Compression high:

Carbon built up in combustion chamber

Engine load faulty:

Brake dragging

Clutch slipping

Transmission oil level too high

Transmission oil viscosity too high

Lubrication inadequate:

Transmission oil level too low

Transmission oil poor quality or incorrect

Coolant incorrect:

Coolant level too low

Coolant deteriorated

Cooling system component incorrect:

Radiator clogged

Radiator cap trouble

Water pump not rotating

Clutch Operation Faulty:

Clutch slipping:

No clutch lever play

Clutch cable maladjusted

Clutch inner cable catching

Clutch plate worn or warped

Clutch spring broken or weak

Clutch release mechanism trouble

Clutch hub or housing unevenly worn

Clutch not disengaging properly:

Clutch lever play excessive

Clutch plate warped or too rough

Clutch spring tension uneven

Transmission oil deteriorated

Transmission oil viscosity too high

Transmission oil level too high

Clutch housing frozen on drive shaft

Clutch release mechanism trouble

Gear Shifting Faulty:

Doesn't go into gear; shift pedal doesn't return:

Clutch not disengaging

Shift fork bent or seized

Gear stuck on the shaft

Gear positioning lever binding

Shift return spring weak or broken

Shift return spring pin loose

Shift mechanism arm spring broken

Shift mechanism arm broken

Shift drum broken

Jumps out of gear:

Shift fork worn

Gear groove worn

Gear dogs and/or dog holes worn

Shift drum groove worn

Gear positioning lever spring weak or broken

Shift fork guide pin worn

Drive shaft, output shaft, and/or gear splines worn

Overshifts:

Gear positioning lever spring weak or broken

Shift mechanism arm spring broken

Abnormal Engine Noise:

Knocking:

Igniter trouble

Carbon built up in combustion chamber

Fuel poor quality or incorrect

Spark plug incorrect

Overheating

Piston slap:

- Cylinder/piston clearance excessive
- Cylinder, piston worn
- Connecting rod bent
- Piston pin, piston pin holes worn

Other noise:

- Connecting rod small end clearance excessive
- Connecting rod big end clearance excessive
- Piston ring worn, broken or stuck
- Piston seizure or damaged
- Cylinder head gasket leaking
- Exhaust pipe leaking at cylinder head connection
- Crankshaft runout excessive
- Engine mounts loose
- Crankshaft bearing worn
- Primary gear worn or chipped

Abnormal Drive Train Noise:

Clutch noise:

- Clutch housing/friction plate clearance excessive
- Clutch housing gear/primary gear backlash excessive
- Metal chip jammed in clutch housing gear teeth

Transmission noise:

- Crankcase bearing worn or damaged
- Transmission gear worn or chipped
- Metal chip jammed in gear teeth
- Transmission oil insufficient or too thin
- Kick ratchet gear not properly disengaging from kick gear
- Output shaft idle gear worn or chipped

Drive chain noise:

- Drive chain adjusted improperly
- Chain worn
- Rear and/or engine sprocket(s) worn
- Chain lubrication insufficient
- Rear wheel misaligned

Abnormal Frame Noise:

Front fork noise:

- Oil insufficient or too thin
- Spring weak or broken

Rear shock absorber noise:

- Shock absorber damaged

Disc brake noise:

- Pad installed incorrectly
- Pad surface glazed
- Disc warped
- Caliper trouble
- Cylinder damaged

Other noise

- Bracket, nut, bolt, etc. not properly mounted or tightened

Exhaust Smoke:

Excessive white smoke:

- Throttle cable maladjusted

Brownish smoke:

- Air cleaner element clogged
- Main jet too large or fallen out
- Starter plunger stuck open
- Fuel level too high

Handling and/or Stability Unsatisfactory:

Handlebar hard to turn:

- Control cable routing incorrect
- Wiring routing incorrect
- Steering stem locknut too tight
- Bearing roller damaged
- Bearing race dented or worn
- Steering stem lubrication inadequate
- Steering stem bent
- Tire air pressure too low

Handlebar shakes or excessively vibrates:

- Tire worn
- Swingarm sleeve or needle bearing damaged
- Rim warped, or not balanced
- Front, rear axle runout excessive
- Wheel bearing worn
- Handlebar clamp loose
- Steering stem head nut loose

Handlebar pulls to one side:

- Frame bent
- Wheel misalignment
- Swingarm bent or twisted
- Swingarm pivot shaft runout excessive
- Steering maladjusted
- Steering stem bent
- Front fork leg bent
- Right/left front fork oil level uneven

Shock absorption unsatisfactory:

- (Too hard)
- Front fork oil excessive
- Front fork oil viscosity too high
- Front fork leg bent
- Tire air pressure too high
- Rear shock absorber maladjusted
- (Too soft)
- Front fork oil insufficient and/or leaking
- Front fork oil viscosity too low
- Front fork, rear shock absorber spring weak
- Rear shock absorber gas leaking
- Rear shock absorber maladjusted

Brakes Don't Hold:

- Air in the brake line
- Pad or disc worn
- Brake fluid leak
- Disc warped
- Contaminated pads
- Brake fluid deteriorated
- Primary or secondary cup damaged
- Master cylinder scratched inside
- Brake maladjustment (lever play excessive)

General Lubrication

Lubrication

- Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.
- Lubricate the points listed below with indicated lubricant.

NOTE

- Whenever the vehicle has been operated under wet or rainy conditions, or especially after using a high-pressure water spray, perform the general lubrication.

Pivots: Lubricate with Motor Oil.

Clutch Lever
 Brake Lever
 Kick Pedal
 Shift Pedal
 Rear Brake Rod Joint
 Drive Chain


Points: Lubricate with Grease.

Clutch Inner Cable Upper and Lower Ends
 Throttle Inner Cable Upper End
 Swingarm Pivot
 Tie-Rod Pivot
 Rocker Arm Pivot
 Steering Stem Bearing

Cables: Lubricate with Rust Inhibiter.

Throttle Cable
 Clutch Cable

Special Tool – Pressure Cable Luber: K56019-021 [A]

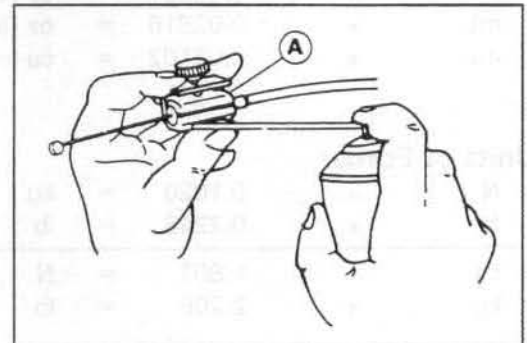

14-6 APPENDIX

Unit Conversion Table

Prefixes for Units:

Prefix	Symbol	Power
mega	M	$\times 1,000,000$
kilo	k	$\times 1,000$
centi	c	$\times 0.01$
milli	m	$\times 0.001$
micro	μ	$\times 0.000001$

Units of Torque:

N-m	\times	0.1020	=	kg-m
N-m	\times	0.7376	=	ft-lb
N-m	\times	8.851	=	in-lb
<hr/>				
kg-m	\times	9.807	=	N-m
kg-m	\times	7.233	=	ft-lb
kg-m	\times	86.80	=	in-lb

Units of Mass:

kg	\times	2.205	=	lb
g	\times	0.03527	=	oz

Units of Volume:

L	\times	0.2642	=	gal (US)
L	\times	0.2200	=	gal (imp)
L	\times	1.057	=	qt (US)
L	\times	0.8799	=	qt (imp)
L	\times	2.113	=	pint (US)
L	\times	1.816	=	pint (imp)
mL	\times	0.03381	=	oz (US)
mL	\times	0.02816	=	oz (imp)
mL	\times	0.06102	=	cu in


Units of Force:

N	\times	0.1020	=	kg
N	\times	0.2248	=	lb
<hr/>				
kg	\times	9.807	=	N
kg	\times	2.205	=	lb

Units of Length:

km	\times	0.6214	=	mile
m	\times	3.281	=	ft
mm	\times	0.03937	=	in

Units of Temperature:

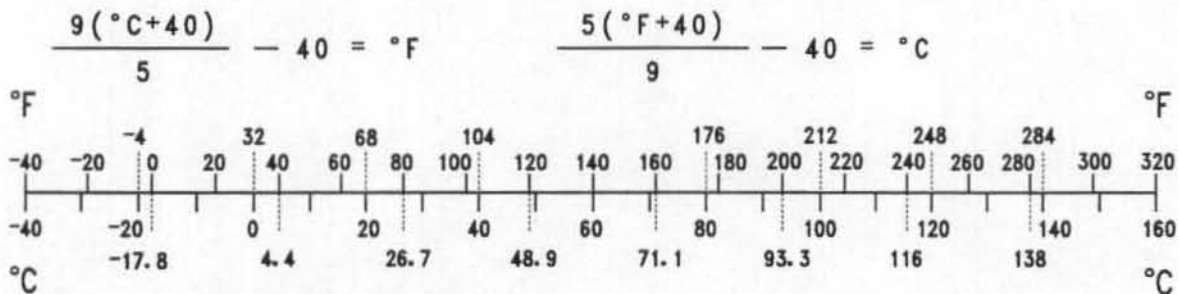

Supplement - 1995 Models

This supplement chapter contains only the information unique to the models covered. Also read the base model chapters in front of this chapter for complete service information.

Models covered by this chapter		Base Models	
1995	KX125-K2	1994	KX125-K1
1995	KX250-K2	1994	KX250-K1


Table of Contents

General Information	15-2
Model Identification	15-2
General Specifications	15-4
Torque and Locking Agent.....	15-8
Cable, Wire and Hose Routing.....	15-9
Fuel System.....	15-11
Specifications.....	15-11
Cooling System.....	15-12
Specifications.....	15-12
Engine Top End	15-13
Specifications.....	15-13
Engine Bottom End/Transmission.....	15-14
Transmission	15-14
Wheels/Tires	15-15
Specifications.....	15-15
Suspension.....	15-16
Specifications.....	15-16
Electrical System	15-17
Wiring Diagram.....	15-17
Exploded View.....	15-18
Specifications.....	15-19
Ignition System.....	15-20

General Information

Model Identification

KX125-K2

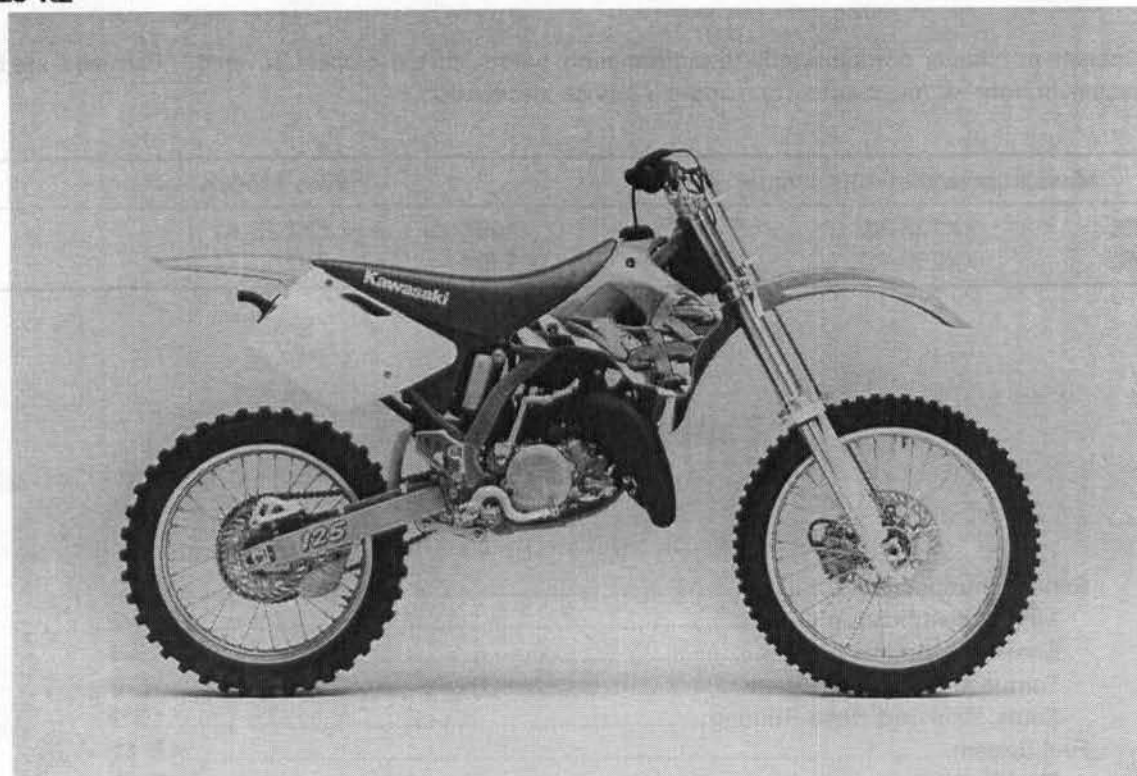

15-1	Looking System
15-2	Specifications
15-3	Engine Top End
15-4	Specifications
15-5	Engine Bottom End
15-6	Transmission
15-7	Wash/Tank
15-8	Swash/Drive
15-9	Clutch
15-10	Specifications
15-11	Electric System
15-12	Wiring Diagram
15-13	Exhaust Valve
15-14	Specifications
15-15	General System

ar

KX250-K2



Item	Part No.	Description
1	53001-0100	Frame (steel)
2	53002-0100	Front fork (steel)
3	53003-0100	Front fender
4	53004-0100	Seat
5	53005-0100	Engine
6	53006-0100	Transmission
7	53007-0100	Rear fender
8	53008-0100	Swingarm
9	53009-0100	Rear wheel
10	53010-0100	Front wheel
11	53011-0100	Headlight
12	53012-0100	Handlebar
13	53013-0100	Clutch lever
14	53014-0100	Brake lever
15	53015-0100	Footpeg
16	53016-0100	Exhaust pipe
17	53017-0100	Protective plate
18	53018-0100	Chain
19	53019-0100	Sprocket
20	53020-0100	Chaincase
21	53021-0100	Oil tank
22	53022-0100	Starter motor
23	53023-0100	Ignition switch
24	53024-0100	Kill switch
25	53025-0100	Headlight switch
26	53026-0100	Turn signal
27	53027-0100	Brake master cylinder
28	53028-0100	Brake slave cylinder
29	53029-0100	Brake line
30	53030-0100	Brake pad
31	53031-0100	Brake disc
32	53032-0100	Brake cable
33	53033-0100	Brake lever
34	53034-0100	Brake master cylinder
35	53035-0100	Brake slave cylinder
36	53036-0100	Brake line
37	53037-0100	Brake pad
38	53038-0100	Brake disc
39	53039-0100	Brake cable
40	53040-0100	Brake lever
41	53041-0100	Brake master cylinder
42	53042-0100	Brake slave cylinder
43	53043-0100	Brake line
44	53044-0100	Brake pad
45	53045-0100	Brake disc
46	53046-0100	Brake cable
47	53047-0100	Brake lever
48	53048-0100	Brake master cylinder
49	53049-0100	Brake slave cylinder
50	53050-0100	Brake line
51	53051-0100	Brake pad
52	53052-0100	Brake disc
53	53053-0100	Brake cable
54	53054-0100	Brake lever
55	53055-0100	Brake master cylinder
56	53056-0100	Brake slave cylinder
57	53057-0100	Brake line
58	53058-0100	Brake pad
59	53059-0100	Brake disc
60	53060-0100	Brake cable
61	53061-0100	Brake lever
62	53062-0100	Brake master cylinder
63	53063-0100	Brake slave cylinder
64	53064-0100	Brake line
65	53065-0100	Brake pad
66	53066-0100	Brake disc
67	53067-0100	Brake cable
68	53068-0100	Brake lever
69	53069-0100	Brake master cylinder
70	53070-0100	Brake slave cylinder
71	53071-0100	Brake line
72	53072-0100	Brake pad
73	53073-0100	Brake disc
74	53074-0100	Brake cable
75	53075-0100	Brake lever
76	53076-0100	Brake master cylinder
77	53077-0100	Brake slave cylinder
78	53078-0100	Brake line
79	53079-0100	Brake pad
80	53080-0100	Brake disc
81	53081-0100	Brake cable
82	53082-0100	Brake lever
83	53083-0100	Brake master cylinder
84	53084-0100	Brake slave cylinder
85	53085-0100	Brake line
86	53086-0100	Brake pad
87	53087-0100	Brake disc
88	53088-0100	Brake cable
89	53089-0100	Brake lever
90	53090-0100	Brake master cylinder
91	53091-0100	Brake slave cylinder
92	53092-0100	Brake line
93	53093-0100	Brake pad
94	53094-0100	Brake disc
95	53095-0100	Brake cable
96	53096-0100	Brake lever
97	53097-0100	Brake master cylinder
98	53098-0100	Brake slave cylinder
99	53099-0100	Brake line
100	53100-0100	Brake pad

15-4 SUPPLEMENT - 1995 MODEL

General Specifications

Items	KX125-K2
Dimensions:	
Overall length	2 150 mm
Overall width	815 mm
Overall height	1 215 mm
Wheelbase	1 455 mm
Road clearance	395 mm
Seat height	950 mm
Dry weight	86.5 kg
Curb weight: Front	45.5 kg
Rear	48.5 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, crankcase reed valve
Cooling system	Liquid-cooled
Bore and stroke	54.0 × 54.5 mm
Displacement	124 mL
Compression ratio	Low speed : 9.3 : 1 (E) 8.9 : 1 High speed : 8.1 : 1 (E) 7.8 : 1
Maximum horsepower	29.1 kW (39.5 PS) @11 500 r/min (rpm)
Maximum torque	24.9 N-m (2.54 kg-m, 18.4 ft-lb) @11 000 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK35
Starting system	Primary kick
Ignition system	CDI
Ignition timing	17° BTDC @10 000 r/min (rpm)
Spark plug	NGK B9EVX (A) (C) (E) NGK BR9EVX
Port timing: Inlet	Open Close
Scavenging	Open Close
Exhaust	Open Close
Lubrication system (Gasoline: oil)	Full open - 63.8° BBDC 63.8° ABDC 84.4° BBDC (low speed), 94.3° BBDC (high speed) 84.4° ABDC (low speed), 94.3° ABDC (high speed) Petrol mix (32:1)
Drive Train:	
Primary reduction system:	Gear
Type	3.200 (64/20)
Reduction ratio	Wet, multi disc
Clutch type	6-speed, constant mesh, return shift
Transmission: Type	
Gear ratios: 1st	2.384 (31/13)
2nd	1.857 (26/14)
3rd	1.529 (26/17)
4th	1.294 (22/17)
5th	1.125 (27/24)
6th	1.000 (25/25)
Final drive system: Type	Chain drive
Reduction ratio	4.083 (49/12)
Overall drive ratio	13.066 @Top gear
Transmission oil: Grade	SE class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.7 L

(Continued on next page.)

Items		KX125-K2
Frame:		
Type		Tubular, semi-double cradle
Steering angle		45° to either side
Caster (rake angle)		26°
Trail		109 mm
Front tire:	Size	80/100-21 51M
	Make/Type	DUNLOP K490 (E) DUNLOP D752, Tube type
Rear tire:	Size	100/90-19 57M
	Make/Type	DUNLOP D737 (E) DUNLOP D752, Tube type
Front suspension:	Type	Telescopic fork (upside down)
	Wheel travel	310 mm
Rear suspension:	Type	Swingarm (Uni-trak)
	Wheel travel	330 mm
Brake type:	Front and Rear	Single disc
Effective disc diameter:	Front	220 mm
	Rear	190 mm

Specifications are subject to change without notice, and may not apply to every country.

- (A) : Australian model
- (C) : Canadian model
- (E) : European model

15-6 SUPPLEMENT - 1995 MODEL

Items	KX250-K2
Dimensions:	
Overall length	2 155 mm
Overall width	815 mm
Overall height	1 215 mm
Wheelbase	1 460 mm
Road clearance	385 mm
Seat height	955 mm
Dry weight	96.5 kg
Curb weight: Front	50 kg
Rear	52 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, piston reed valve
Cooling system	Liquid-cooled
Bore and stroke	66.4 × 72.0 mm
Displacement	249 mL
Compression ratio	Low speed: 10.4 : 1 (U) 10.8 : 1 High speed: 8.7 : 1 (U) 9.0 : 1
Maximum horsepower	39.4 kW (53.6 PS) @8 000 r/min (rpm)
Maximum torque	49.0 N-m (5.0 kg-m, 36 ft-lb) @7 000 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK38
Starting system	Primary kick
Ignition system	CDI
Ignition timing	13.4° BTDC @6 000 r/min (rpm)
Spark plug	NGK B8EVX (A) (C) (E) NGK BR8EVX
Port timing: Inlet	Open Full open
	Close -
Scavenging	Open 58.4° BBDC
	Close 58.4° ABDC
Exhaust	Open 76.9° BBDC (low speed), 91.4° BBDC (high speed)
	Close 76.9° ABDC (low speed), 91.4° ABDC (high speed)
Lubrication system (Gasoline: oil)	Petrol mix (32:1)
Drive Train:	
Primary reduction system:	
Type	Gear
Reduction ratio	2.750 (55/20)
Clutch type	Wet, multi disc
Transmission: Type	5-speed, constant mesh, return shift
Gear ratios: 1st	2.133 (32/15)
2nd	1.687 (27/16)
3rd	1.388 (25/18)
4th	1.136 (25/22)
5th	1.000 (24/24)
Final drive system: Type	Chain drive
Reduction ratio	3.500 (49/14)
Overall drive ratio	9.625 @Top gear
Transmission oil: Grade	SE class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.85 L

(Continued on next page.)

Items	KX250-K2
Frame:	
Type	Tubular, semi-double cradle
Steering angle	45° to either side
Caster (rake angle)	26°
Trail	109 mm
Front tire:	Size 80/100-21 51M
	Make/Type DUNLOP K490 (E) D752, Tube type
Rear tire:	Size 110/90-19 62M
	Make/Type DUNLOP D737 (E) D752, Tube type
Front suspension:	Type Telescopic fork (upside down)
	Wheel travel 310 mm
Rear suspension:	Type Swingarm (Uni-trak)
	Wheel travel 330 mm
Brake type:	Front and Rear Single disc
Effective disc diameter:	Front 220 mm
	Rear 190 mm

Specifications are subject to change without notice, and may not apply to every country.

- (A) : Australian Model
- (C) : Canadian Model
- (E) : European Model
- (U) : US Model

15-8 SUPPLEMENT - 1995 MODEL

Torque and Locking Agent

Refer to P.1-11 ~ 1-13, noting the following.


Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
Engine Right Side:				
External Shift Mechanism Return				
Spring Pin: (KX125)	42	4.3	31	L
(KX250)	42	4.3	31	L
Engine Removal/Installation:				
Engine Mounting Nuts	44	4.5	33	
Engine Bracket Bolts: (10mm)	44	4.5	33	
Wheels/Tires:				
Spoke Nipples	Not less than 2.9	Not less than 0.30	Not less than 26 in-lb	
Final Drive:				
Rear Axle Nut	115	11.5	87	
Rear Sprocket Nuts	34	3.5	25	

Specimens are subject to change without notice and may vary from those shown.

1995 Model
1994 Model
1993 Model
1992 Model


Cable, Wire and Hose Routing

KX125:

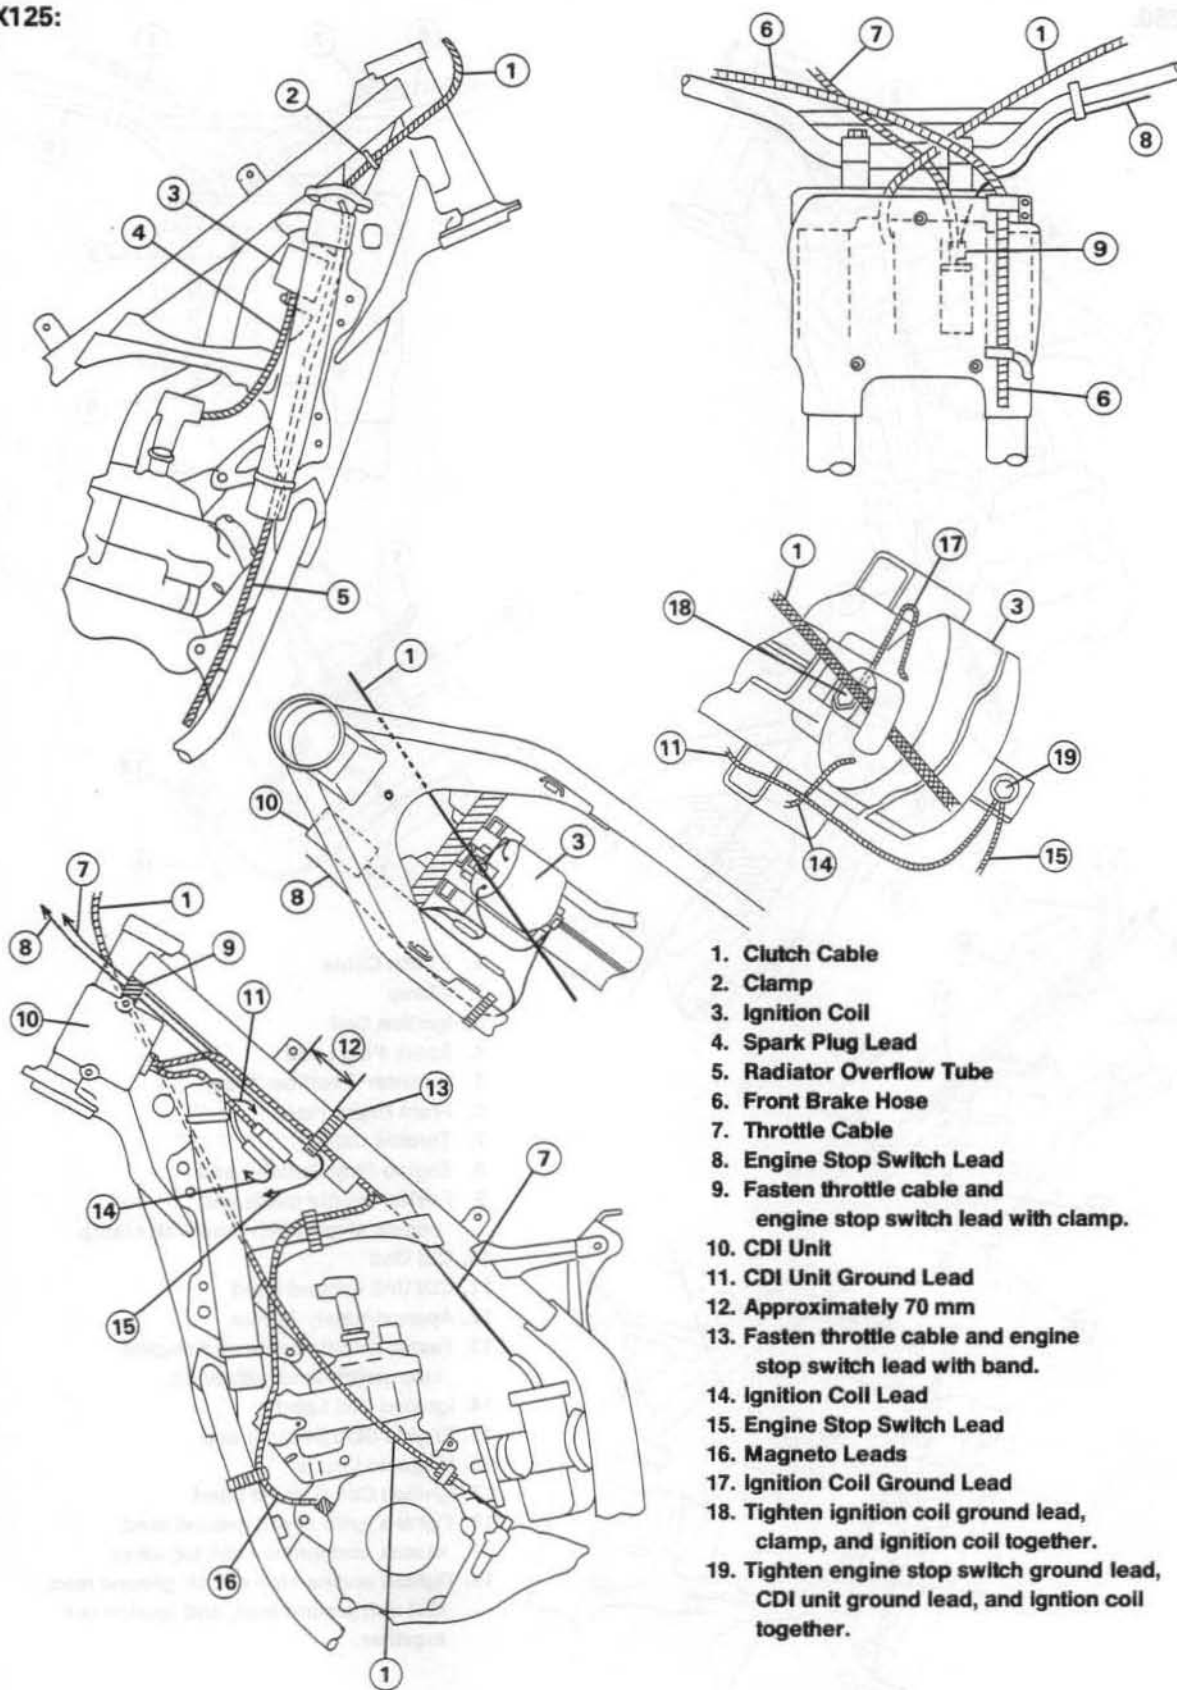

- 1. Clutch Cable
- 2. Clamp
- 3. Ignition Coil
- 4. Spark Plug Lead
- 5. Radiator Overflow Tube
- 6. Front Brake Hose
- 7. Throttle Cable
- 8. Engine Stop Switch Lead
- 9. Fasten throttle cable and engine stop switch lead with clamp.
- 10. CDI Unit
- 11. CDI Unit Ground Lead
- 12. Approximately 70 mm
- 13. Fasten throttle cable and engine stop switch lead with band.
- 14. Ignition Coil Lead
- 15. Engine Stop Switch Lead
- 16. Magneto Leads
- 17. Ignition Coil Ground Lead
- 18. Tighten ignition coil ground lead, clamp, and ignition coil together.
- 19. Tighten engine stop switch ground lead, CDI unit ground lead, and ignition coil together.

KX250:

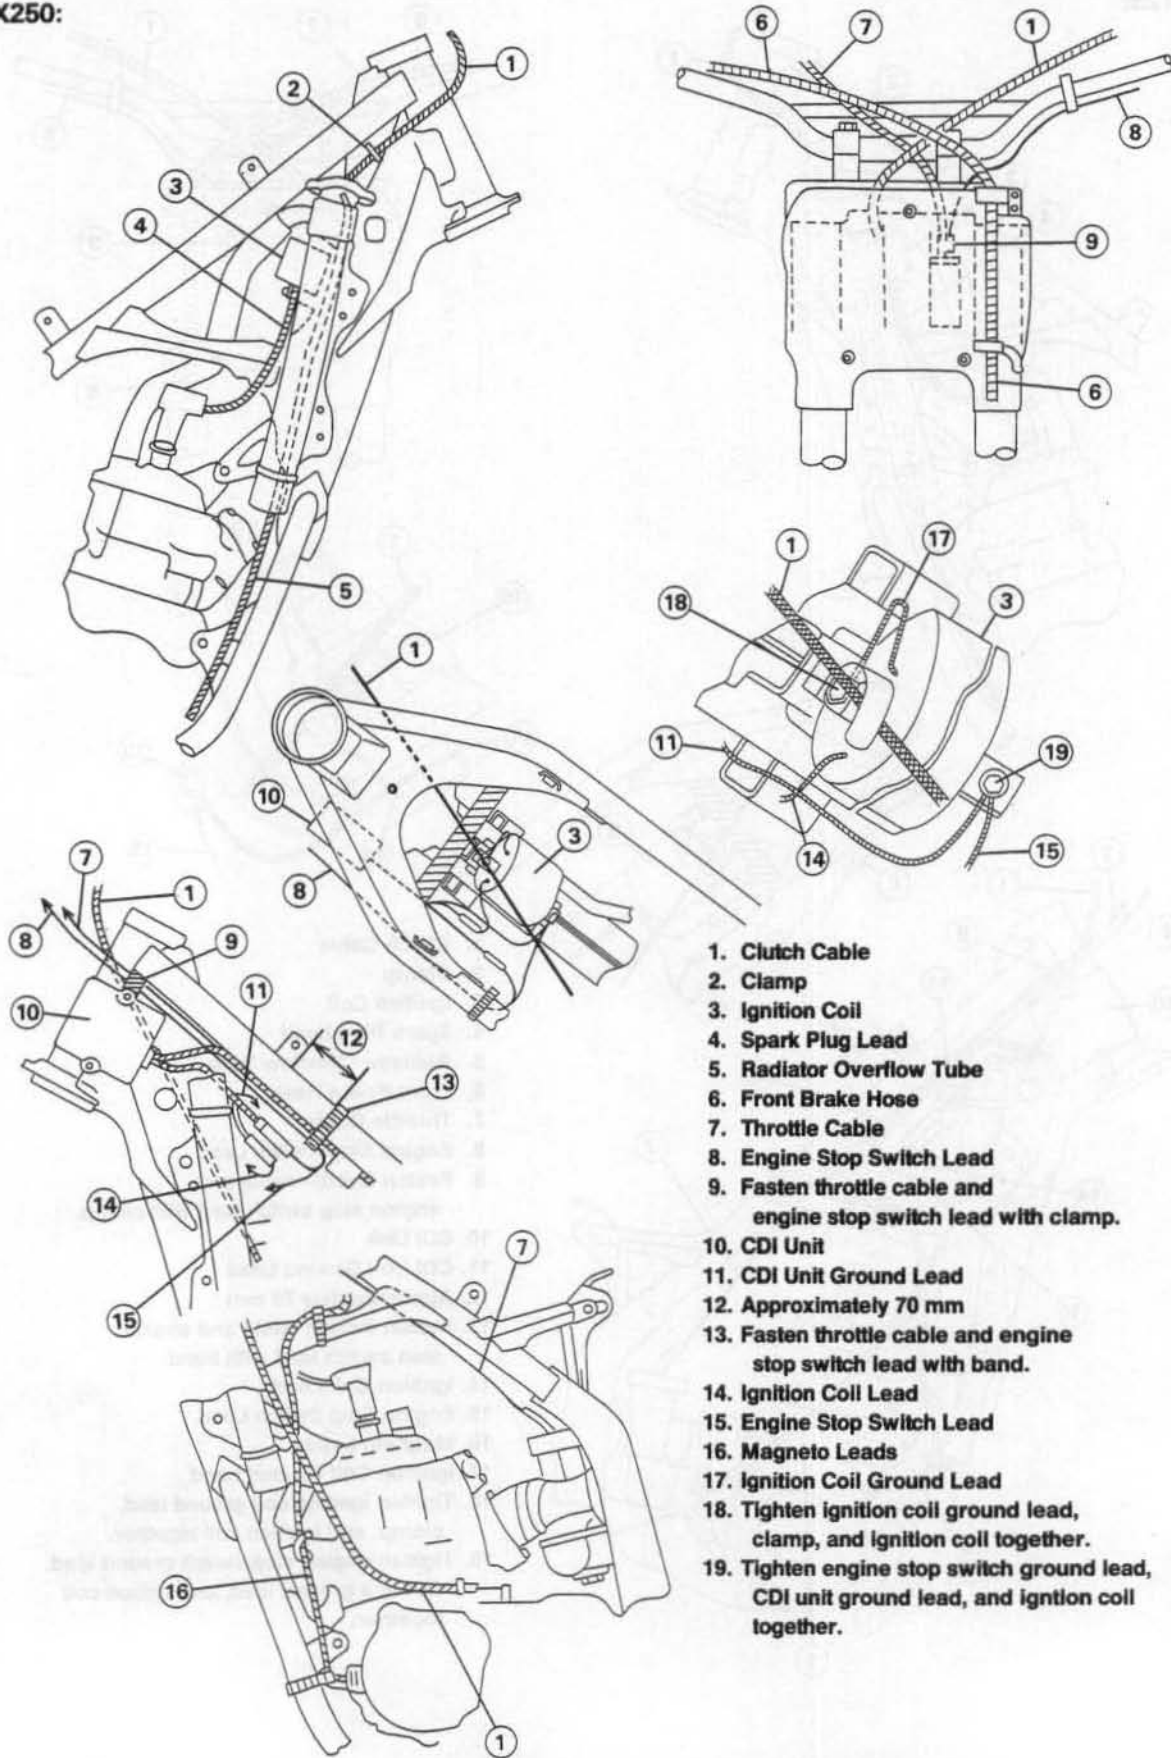

1. Clutch Cable
2. Clamp
3. Ignition Coil
4. Spark Plug Lead
5. Radiator Overflow Tube
6. Front Brake Hose
7. Throttle Cable
8. Engine Stop Switch Lead
9. Fasten throttle cable and engine stop switch lead with clamp.
10. CDI Unit
11. CDI Unit Ground Lead
12. Approximately 70 mm
13. Fasten throttle cable and engine stop switch lead with band.
14. Ignition Coil Lead
15. Engine Stop Switch Lead
16. Magneto Leads
17. Ignition Coil Ground Lead
18. Tighten ignition coil ground lead, clamp, and ignition coil together.
19. Tighten engine stop switch ground lead, CDI unit ground lead, and ignition coil together.

Fuel System

Specifications

KX125:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK35	---
Main jet	#162	---
Throttle valve cutaway	#5	---
Jet needle	N2DL	---
Jet needle clip position	3rd groove from the top	---
Slow jet	#42	---
Air screw	1½ (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

KX250:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK38	---
Main jet	#162, (U) #160	---
Throttle valve cutaway	#7	---
Jet needle	N1EE, (U) NOZE	---
Jet needle clip position	4th groove from the top	---
Slow jet	#45	---
Air screw	2 (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

(U) : US model

Special Tool – Fuel Level Gauge, M18 x 1.0: 57001-122
Pressure Cable Luber: K56019-021

Cooling System

Specifications

Item	Standard
Coolant:	
Type	Permanent type antifreeze for aluminum engines and radiators
Color	Green
Mixed ratio	Soft water 50%, antifreeze 50%
Total amount : KX125	0.97 L
KX250	1.18 L
Radiator:	
Cap relief pressure	95 ~ 125 kPa (0.95 ~ 1.25 kg/cm ² , 14 ~ 18 psi)

Special Tool - Bearing Driver Set: 57001-1129

mm 20	

Standard	Item
mm 18-21	
mm 17.0-17.1	
mm 16.8-16.9	
mm 16.6-16.7	
mm 16.4-16.5	
mm 16.2-16.3	
mm 16.0-16.1	
mm 15.8-15.9	
mm 15.6-15.7	
mm 15.4-15.5	
mm 15.2-15.3	
mm 15.0-15.1	
mm 14.8-14.9	
mm 14.6-14.7	
mm 14.4-14.5	
mm 14.2-14.3	
mm 14.0-14.1	
mm 13.8-13.9	
mm 13.6-13.7	
mm 13.4-13.5	
mm 13.2-13.3	
mm 13.0-13.1	
mm 12.8-12.9	
mm 12.6-12.7	
mm 12.4-12.5	
mm 12.2-12.3	
mm 12.0-12.1	
mm 11.8-11.9	
mm 11.6-11.7	
mm 11.4-11.5	
mm 11.2-11.3	
mm 11.0-11.1	
mm 10.8-10.9	
mm 10.6-10.7	
mm 10.4-10.5	
mm 10.2-10.3	
mm 10.0-10.1	
mm 9.8-9.9	
mm 9.6-9.7	
mm 9.4-9.5	
mm 9.2-9.3	
mm 9.0-9.1	
mm 8.8-8.9	
mm 8.6-8.7	
mm 8.4-8.5	
mm 8.2-8.3	
mm 8.0-8.1	
mm 7.8-7.9	
mm 7.6-7.7	
mm 7.4-7.5	
mm 7.2-7.3	
mm 7.0-7.1	
mm 6.8-6.9	
mm 6.6-6.7	
mm 6.4-6.5	
mm 6.2-6.3	
mm 6.0-6.1	
mm 5.8-5.9	
mm 5.6-5.7	
mm 5.4-5.5	
mm 5.2-5.3	
mm 5.0-5.1	
mm 4.8-4.9	
mm 4.6-4.7	
mm 4.4-4.5	
mm 4.2-4.3	
mm 4.0-4.1	
mm 3.8-3.9	
mm 3.6-3.7	
mm 3.4-3.5	
mm 3.2-3.3	
mm 3.0-3.1	
mm 2.8-2.9	
mm 2.6-2.7	
mm 2.4-2.5	
mm 2.2-2.3	
mm 2.0-2.1	
mm 1.8-1.9	
mm 1.6-1.7	
mm 1.4-1.5	
mm 1.2-1.3	
mm 1.0-1.1	
mm 0.8-0.9	
mm 0.6-0.7	
mm 0.4-0.5	
mm 0.2-0.3	
mm 0.0-0.1	

Engine Top End

Specifications

KX125:

Item	Standard	Service Limit
Cylinder Head:		
Cylinder compression	(usable range) 755 ~ 1 180 kPa (7.7 ~ 12.0 kg/cm ² , 109 ~ 171 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston:		
Cylinder inside diameter	54.000 ~ 54.015 mm	54.08 mm
Piston diameter	53.943 ~ 53.958 mm	53.82 mm
Piston/cylinder clearance	0.052 ~ 0.062 mm	---
Piston ring/groove clearance	0.015 ~ 0.050 mm	0.15 mm
Piston ring groove width	1.01 ~ 1.03 mm	1.10 mm
Piston ring thickness	0.980 ~ 0.995 mm	0.91 mm
Piston ring end gap	0.35 ~ 0.55 mm	0.90 mm
Piston pin diameter	14.995 ~ 15.000 mm	14.96mm
Piston pin hole diameter	15.000 ~ 15.020 mm	15.07 mm
Small end inside diameter	19.003 ~ 19.014 mm	19.05 mm

KX250:

Item	Standard	Service Limit
Cylinder Head:		
Cylinder compression	(usable range) 795 ~ 1 230 kPa (8.1 ~ 12.5 kg/cm ² , 115 ~ 178 psi) (U) 825 ~ 1 280 kPa (8.4 ~ 13.0 kg/cm ² , 119 ~ 185 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston:		
Cylinder inside diameter	66.400 ~ 66.415 mm	66.48 mm
Piston diameter	66.336 ~ 66.351 mm	66.23 mm
Piston/cylinder clearance	0.059 ~ 0.069 mm	---
Piston ring/groove clearance	0.04 ~ 0.08 mm	0.18 mm
Piston ring groove width	1.23 ~ 1.25 mm	1.30 mm
Piston ring thickness	1.17 ~ 1.19 mm	1.10 mm
Piston ring end gap	0.25 ~ 0.45 mm	0.80 mm
Piston pin diameter	17.995 ~ 18.000 mm	17.96mm
Piston pin hole diameter	18.000 ~ 18.020 mm	18.07 mm
Small end inside diameter	22.003 ~ 22.012 mm	22.05 mm

(U) : US Model

Special Tool - Piston Ring Pliers: 57001-115
Compression Gauge: 57001-221
Piston Pin Puller Assembly: 57001-910
Compression Gauge Adapter, M14 x 1.25: 57001-1159

Engine Bottom End/Transmission


Transmission

Shaft Assembly Notes

Refer to P. 7-12 ~ 7-13, noting the following.


KX125:

- A. 1st gear (13T; part of drive shaft)
- B. 5th gear (24T; plain side faces right)
- C. 3rd/4th gear (17T/17T; larger gear faces right)
- D. 6th gear (25T; plain side faces left)
- E. 2nd gear (14T; chamfered side faces right)

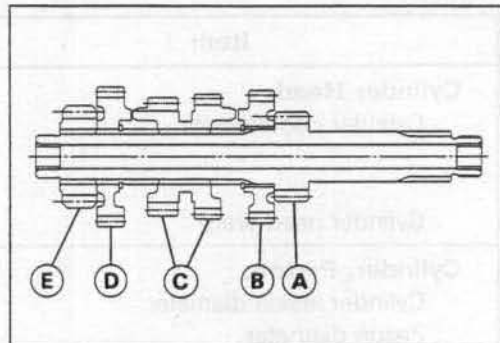

KX125:

- A. 2nd gear (26T; dog recesses face right)
- B. 6th gear (25T; fork groove goes to the right side of the gear teeth)
- C. 3rd gear (26T; dog recesses face left)
- D. 4th gear (22T; dog recesses face right)
- E. 5th gear (27T; fork groove goes to the left side of the gear teeth)
- F. 1st gear (31T; plain side faces right)

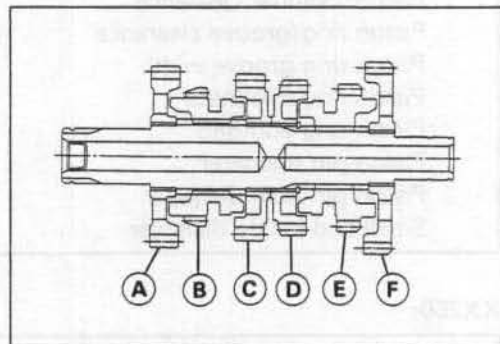

Part Name	Part Number	Quantity	Notes
Shaft	15-14-1000	1	
1st Gear	15-14-1001	1	
2nd Gear	15-14-1002	1	
3rd Gear	15-14-1003	1	
4th Gear	15-14-1004	1	
5th Gear	15-14-1005	1	
6th Gear	15-14-1006	1	
Drive Shaft	15-14-1007	1	
Oil Seal	15-14-1008	2	
Ball Bearing	15-14-1009	2	
Key	15-14-1010	2	
Washer	15-14-1011	2	
Nut	15-14-1012	2	
Lock Washer	15-14-1013	2	
Pin	15-14-1014	2	
Bracket	15-14-1015	2	
Bracket	15-14-1016	2	
Bracket	15-14-1017	2	
Bracket	15-14-1018	2	
Bracket	15-14-1019	2	
Bracket	15-14-1020	2	
Bracket	15-14-1021	2	
Bracket	15-14-1022	2	
Bracket	15-14-1023	2	
Bracket	15-14-1024	2	
Bracket	15-14-1025	2	
Bracket	15-14-1026	2	
Bracket	15-14-1027	2	
Bracket	15-14-1028	2	
Bracket	15-14-1029	2	
Bracket	15-14-1030	2	
Bracket	15-14-1031	2	
Bracket	15-14-1032	2	
Bracket	15-14-1033	2	
Bracket	15-14-1034	2	
Bracket	15-14-1035	2	
Bracket	15-14-1036	2	
Bracket	15-14-1037	2	
Bracket	15-14-1038	2	
Bracket	15-14-1039	2	
Bracket	15-14-1040	2	
Bracket	15-14-1041	2	
Bracket	15-14-1042	2	
Bracket	15-14-1043	2	
Bracket	15-14-1044	2	
Bracket	15-14-1045	2	
Bracket	15-14-1046	2	
Bracket	15-14-1047	2	
Bracket	15-14-1048	2	
Bracket	15-14-1049	2	
Bracket	15-14-1050	2	
Bracket	15-14-1051	2	
Bracket	15-14-1052	2	
Bracket	15-14-1053	2	
Bracket	15-14-1054	2	
Bracket	15-14-1055	2	
Bracket	15-14-1056	2	
Bracket	15-14-1057	2	
Bracket	15-14-1058	2	
Bracket	15-14-1059	2	
Bracket	15-14-1060	2	
Bracket	15-14-1061	2	
Bracket	15-14-1062	2	
Bracket	15-14-1063	2	
Bracket	15-14-1064	2	
Bracket	15-14-1065	2	
Bracket	15-14-1066	2	
Bracket	15-14-1067	2	
Bracket	15-14-1068	2	
Bracket	15-14-1069	2	
Bracket	15-14-1070	2	
Bracket	15-14-1071	2	
Bracket	15-14-1072	2	
Bracket	15-14-1073	2	
Bracket	15-14-1074	2	
Bracket	15-14-1075	2	
Bracket	15-14-1076	2	
Bracket	15-14-1077	2	
Bracket	15-14-1078	2	
Bracket	15-14-1079	2	
Bracket	15-14-1080	2	
Bracket	15-14-1081	2	
Bracket	15-14-1082	2	
Bracket	15-14-1083	2	
Bracket	15-14-1084	2	
Bracket	15-14-1085	2	
Bracket	15-14-1086	2	
Bracket	15-14-1087	2	
Bracket	15-14-1088	2	
Bracket	15-14-1089	2	
Bracket	15-14-1090	2	
Bracket	15-14-1091	2	
Bracket	15-14-1092	2	
Bracket	15-14-1093	2	
Bracket	15-14-1094	2	
Bracket	15-14-1095	2	
Bracket	15-14-1096	2	
Bracket	15-14-1097	2	
Bracket	15-14-1098	2	
Bracket	15-14-1099	2	
Bracket	15-14-1100	2	

Wheels/Tires

Specifications

Item	Standard	Service Limit
Wheels (Rims):		
Rim runout: Axial	---	2 mm
Radial	---	2 mm
Axle runout/100 mm	Under 0.10 mm	0.2 mm
Tires:		
Standard tire:		
KX125		
Front: Size	80/100-21 51M	---
Make	DUNLOP	
Type	K490, Tube (E) D752, Tube	
Rear: Size	100/90-19 57M	---
Make	DUNLOP	
Type	D737, Tube (E) D752, Tube	
KX250		
Front: Size	80/100-21 51M	---
Make	DUNLOP	
Type	K490, Tube (E) D752, Tube	
Rear: Size	110/90-19 62M	---
Make	DUNLOP	
Type	D737, Tube (E) D752, Tube	

(E) : European Model

Special Tool - Inside Circlip Pliers: 57001-143

Rim Protector: 57001-1063

Bead Breaker Assembly: 57001-1072

Bearing Driver Set: 57001-1129

Jack: 57001-1238

Suspension

Specifications

Item	Standard	Service Limit
Front Fork:		
Air pressure	Atmospheric pressure	---
Rebound damping adjustment	10 clicks	(Adjustable Range) 18 clicks or more
Compression damping adjustment	8 clicks	(Adjustable Range) 18 clicks or more
Oil viscosity	KAYABA 01 or SAE 5W	---
Oil capacity	508 ± 4 mL	---
Oil level (fully compressed, spring removed)	120 ± 2 mm	(Adjustable Range) 105 ~ 140 mm
Fork spring free length	490 mm	480 mm
Rear Suspension (Uni-Trak):		
Rear Shock Absorber:		
Rebound damping adjustment	10 clicks	(Adjustable Range) 20 clicks or more
Compression damping adjustment:		
KX125	14 clicks	(Adjustable Range)
KX250	12 clicks	20 clicks or more
Spring preload adjustment (Adjusting nut position from the center of the upper mounting hole):		(Adjustable Range)
KX125	118.5 mm	108 ~ 127 mm
KX250	121.5 mm	108 ~ 127 mm
Rear shock spring free length	275 mm	270 mm
Gas Reservoir:		
Gas pressure	980 kPa (10 kg/cm ² , 142 psi)	---
Tie-Rod, Rocker Arm:		
Sleeve outside diameter:		
Long	21.987 ~ 22.000 mm	21.85 mm
Short	15.989 ~ 16.000 mm	15.85 mm
Rocker Arm Mounting Bolt Runout	under 0.1 mm	0.2 mm

Special Tool - Hook Wrench: 57001-1101

Jack: 57001-1238

Fork Spring Holder: 57001-1286

Fork Cylinder Holder: 57001-1287

Fork Oil Seal Driver, ϕ 43: 57001-1340


Fork Piston Rod Puller, M12 x 1.25: 57001-1289

Fork Oil Level Gauge: 57001-1290

Electrical System


25177

Wiring Diagram

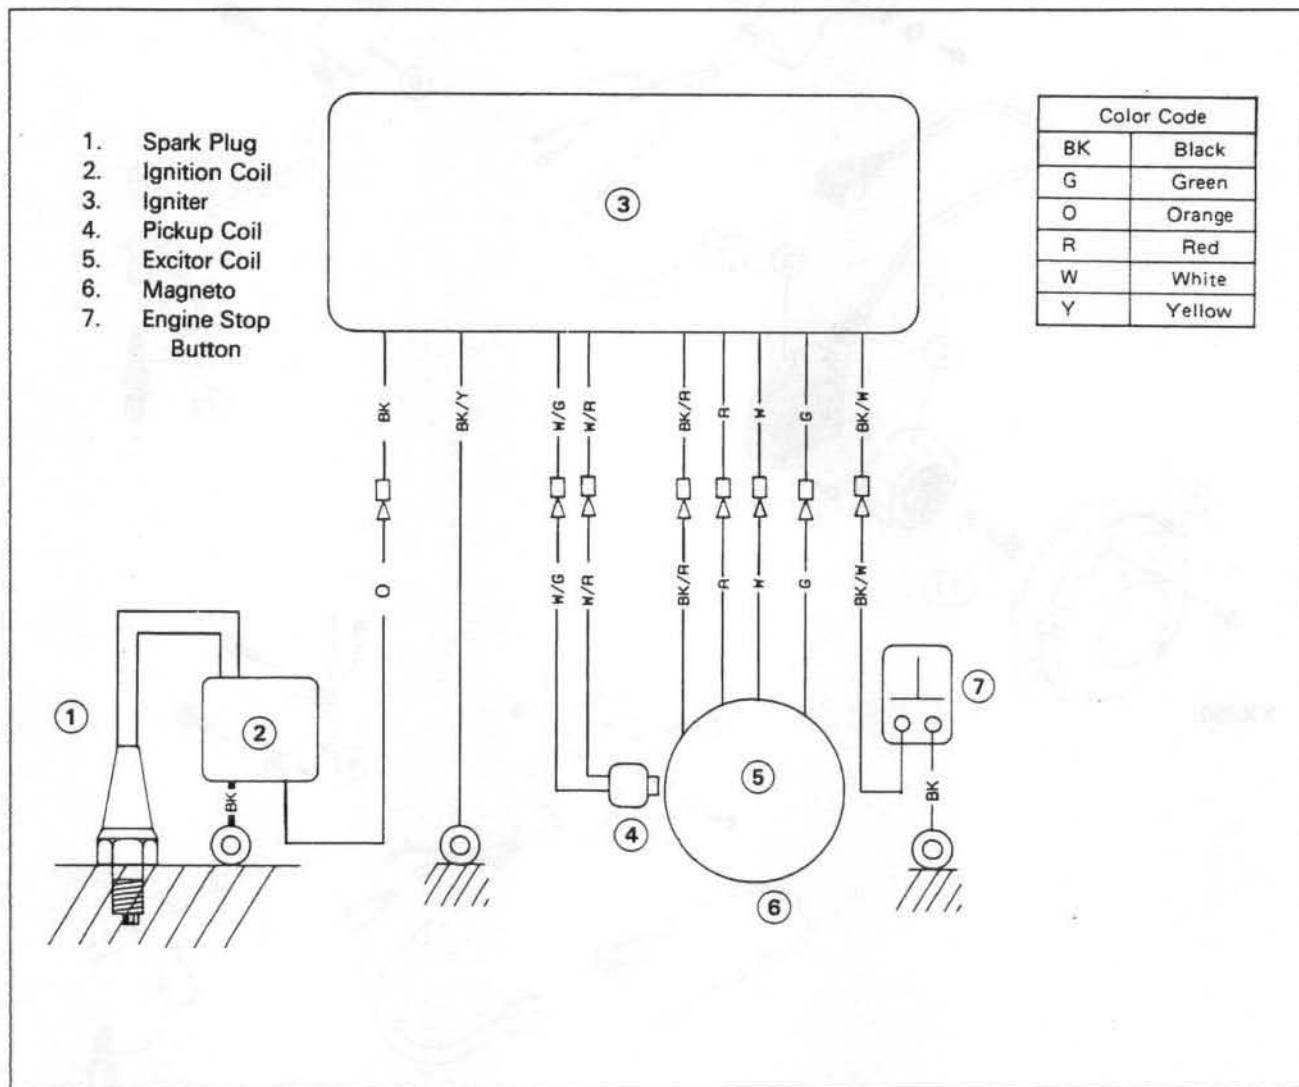


Exploded View

KX125:

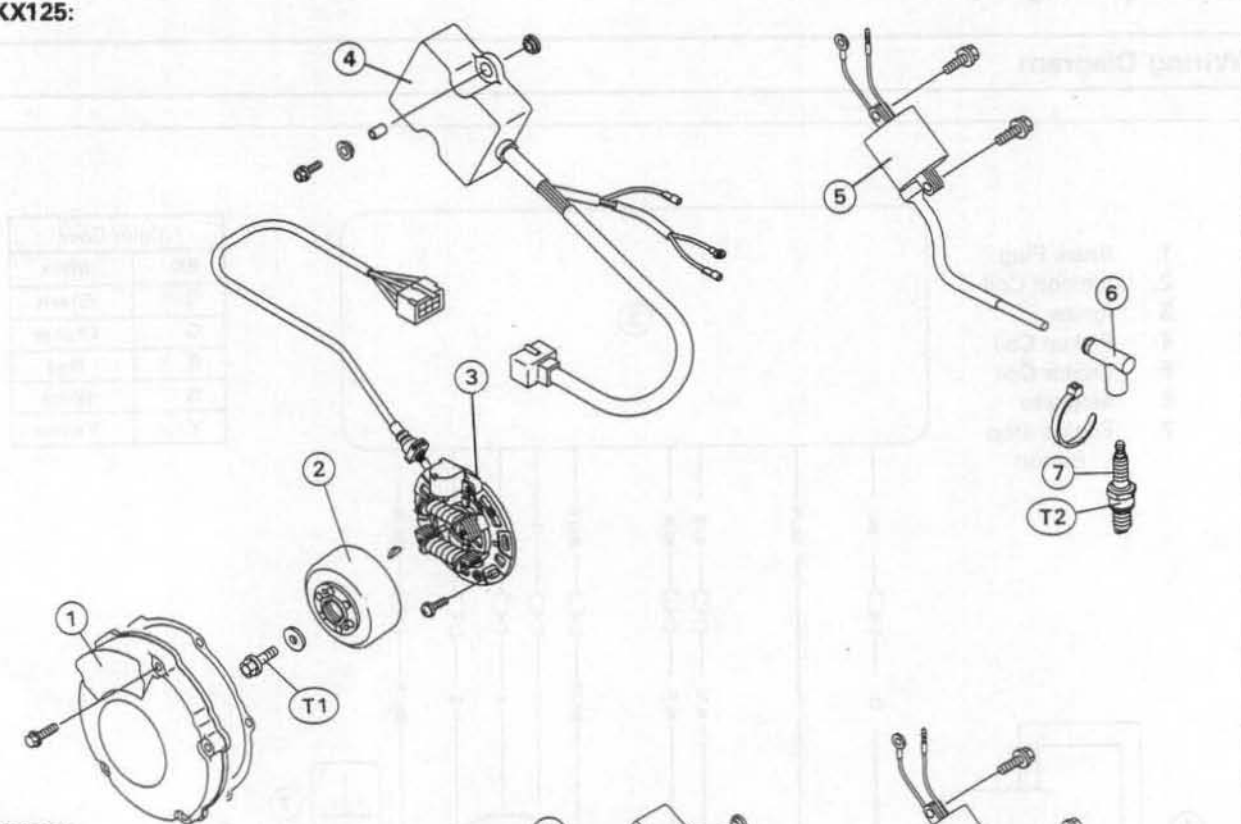

KX250:

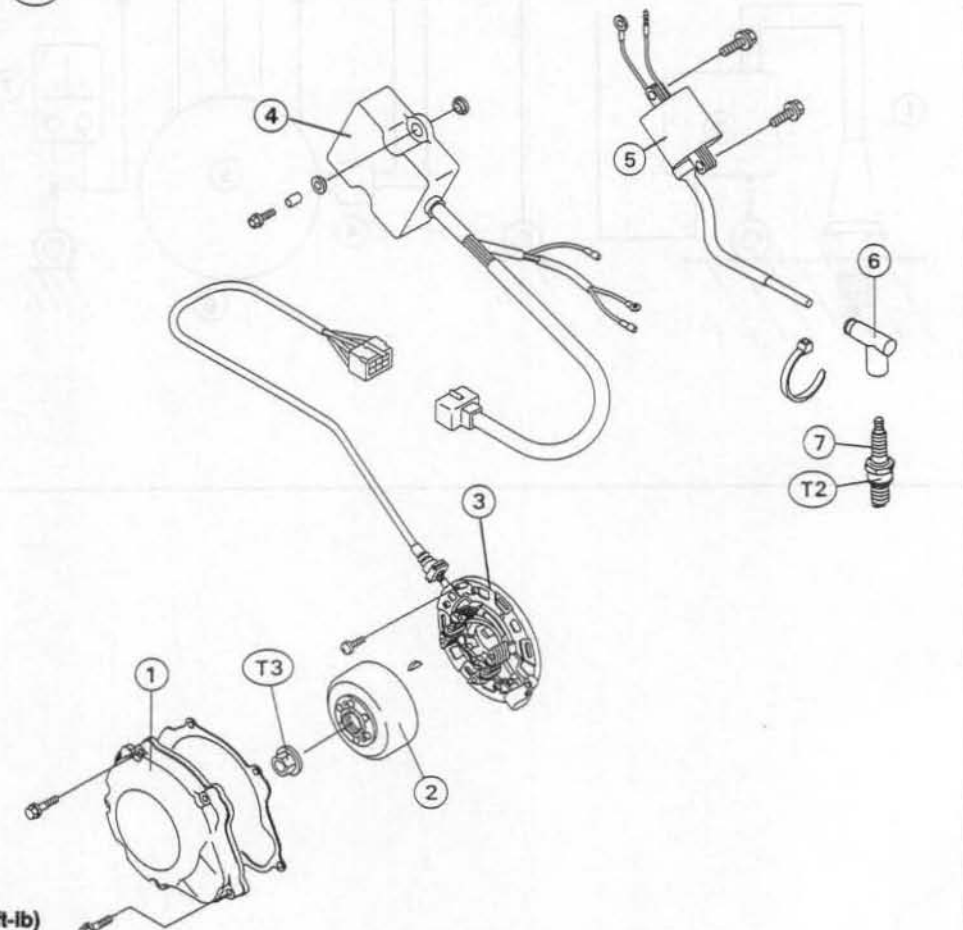

- 1. Magneto Cover
- 2. Magneto Flywheel
- 3. Stator
- 4. Igniter
- 5. Ignition Coil
- 6. Spark Plug Cap
- 7. Spark Plug

T1 : 22 N-m (2.2 kg-m, 16.0 ft-lb)
 T2 : 27 N-m (2.8 kg-m, 20 ft-lb)
 T3 : 78 N-m (8.0 kg-m, 58 ft-lb)

Specifications

Item	Standard
Ignition System:	
Ignition timing: KX125	17° BTDC @10 000 r/min (rpm)
KX250	13.4° BTDC @6 000 r/min (rpm)
Ignition coil:	
3 needle arcing distance	7 mm or more
Primary winding resistance:	
KX125	0.24 Ω ± 15 % (at 20°C)
KX250	0.53 Ω ± 15 % (at 20°C)
Secondary winding resistance:	
KX125	8.3 kΩ ± 15 % (at 20°C)
KX250	12.6 kΩ ± 15 % (at 20°C)
Igniter internal resistance	Refer to p.15 - 20
Spark plug:	
KX125: Type	NGK B9EVX (A)(C)(E) NGK BR9EVX
Gap	0.6 ~ 0.7 mm
KX250: Type	NGK B8EVX (A)(C)(E) NGK BR8EVX
Gap	0.6 ~ 0.7 mm

- (A) : Australian model
- (C) : Canadian model
- (E) : European model

Special Tool - Spark Plug Wrench, Hex 21: 57001-110
Flywheel Puller: 57001-252
Hand Tester: 57001-1394
Flywheel Holder: 57001-1313

15-20 SUPPLEMENT - 1995 MODEL

Ignition System

Igniter Inspection

Refer to p. 13-12, noting the following.

Igniter Internal Resistance

Lead Color	Tester Positive (+) Lead Connection									
	BK/Y (Ground)	BK/W (Stop)	R (Exciter)	G (Exciter)	BK (Ign. Coil)	W (Exciter)	BK/R (Exciter)	W/R (Pickup)	W/G (Pickup)	
BK/Y (Ground)	-	6.8 ~ 19.2	2.2 ~ 4.7	2.2 ~ 4.7	∞	∞	2.2 ~ 4.8	0	7.7 ~ 13.4	
BK/W (Stop)	∞	-	∞	∞	∞	∞	∞	∞	∞	
R (Exciter)	116 ~ 330	2.2 ~ 4.6	-	0	∞	∞	272 ~ 1200	116 ~ 330	128 ~ 420	
G (Exciter)	116 ~ 330	2.2 ~ 4.6	0	-	∞	∞	272 ~ 1200	116 ~ 330	128 ~ 420	
BK (Ign. Coil)	2.0 ~ 4.4	22.7 ~ 120	6.8 ~ 18.2	6.8 ~ 18.2	-	∞	7.0 ~ 19.4	2.0 ~ 4.4	12.8 ~ 24.4	
W (Exciter)	∞	2.2 ~ 4.7	∞	∞	∞	-	∞	∞	∞	
BK/R (Exciter)	44 ~ 114	over 360	108 ~ 540	108 ~ 540	∞	∞	-	44 ~ 114	68 ~ 180	
W/R (Pickup)	0	6.8 ~ 19.2	2.2 ~ 4.7	2.2 ~ 4.7	∞	∞	2.2 ~ 4.8	-	7.7 ~ 13.4	
W/G (Pickup)	8.0 ~ 13.8	24 ~ 54.6	13.4 ~ 25.8	13.4 ~ 25.8	∞	∞	13.6 ~ 26.4	8.0 ~ 13.8	-	

* : Tester Negative (-) Lead Connection

∞ : Infinity

Range : × 1kΩ

Unit : kΩ

Color Code	
BK	Black
G	Green
O	Orange
R	Red
W	White
Y	Yellow

Stator Coil Inspection

Refer to p.13-13, noting the following.

Stator Coil Resistance (at 20°C)

Connections	Reading
White/Red - White/Green	396 ~ 594 Ω
Red - Black/Red	288 ~ 432 Ω
White - Green	14 ~ 21 Ω

General Information

Model Identification

Supplement - 1996 Models

1996 KX125-K3

This supplement chapter contains only the information unique to the models covered. Also read the base model chapters in front of this chapter for complete service information.

Models covered by this chapter		Base Models	
1996	KX125-K3	1995	KX125-K2
1996	KX250-K3	1995	KX250-K2

Table of Contents

General Information	16-2
Model Identification	16-2
General Specifications	16-4
Torque and Locking Agent.....	16-8
Special Tools, Sealant	16-8
Fuel System.....	16-9
Specifications.....	16-9
Engine Top End	16-10
Specifications.....	16-10
Engine Bottom End/Transmission.....	16-11
Specifications.....	16-11
Final Drive	16-12
Specifications.....	16-12
Suspension.....	16-13
Specifications.....	16-13
Electrical System	16-14
Specifications.....	16-14

General Information

Model Identification

KX125-K3 Left Side View



KX125-K3 Right Side View



KX250-K3 Left Side View



KX250-K3 Right Side View



16-4 SUPPLEMENT - 1996 MODEL

General Specifications

Items	KX125-K3
Dimensions:	
Overall length	2 150 mm
Overall width	815 mm
Overall height	1 215 mm
Wheelbase	1 455 mm
Road clearance	395 mm
Seat height	950 mm
Dry weight	86.5 kg
Curb weight: Front	45.5 kg
Rear	48.5 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, crankcase reed valve
Cooling system	Liquid-cooled
Bore and stroke	54.0 × 54.5 mm
Displacement	124 mL
Compression ratio	Low speed : 9.7 : 1 (E) 9.2 : 1 High speed : 8.4 : 1 (E) 8.0 : 1
Maximum horsepower	29.1 kW (39.5 PS) @11 500 r/min (rpm)
Maximum torque	24.9 N-m (2.54 kg-m, 18.4 ft-lb) @11 000 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK35
Starting system	Primary kick
Ignition system	CDI
Ignition timing	17° BTDC @10 000 r/min (rpm)
Spark plug	NGK B9EVX (A) (C) (E) NGK BR9EVX
Port timing: Inlet	Open Close
Scavenging	Open Close
Exhaust	Open Close
Lubrication system (Gasoline: oil)	Full open - 64.9° BBDC 64.9° ABDC 84.8° BBDC (low speed), 94.7° BBDC (high speed) 84.8° ABDC (low speed), 94.7° ABDC (high speed) Petrol mix (32:1)
Drive Train:	
Primary reduction system:	Gear
Type	3.200 (64/20)
Reduction ratio	Wet, multi disc
Clutch type	6-speed, constant mesh, return shift
Transmission: Type	6-speed, constant mesh, return shift
Gear ratios: 1st	2.384 (31/13)
2nd	1.857 (26/14)
3rd	1.500 (26/17)
4th	1.272 (22/17)
5th	1.125 (27/24)
6th	1.000 (25/25)
Final drive system: Type	Chain drive
Reduction ratio	3.846 (50/13)
Overall drive ratio	12.307 @Top gear
Transmission oil: Grade	SE class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.7 L

(Continued on next page.)

Items		KX125-K3
Frame:		
Type		Tubular, semi-double cradle
Steering angle		45° to either side
Caster (rake angle)		26°
Trail		109 mm
Front tire:	Size	80/100-21 51M
	Make/Type	DUNLOP K490 (E) DUNLOP D752, Tube type
Rear tire:	Size	100/90-19 57M
	Make/Type	DUNLOP D737 (E) DUNLOP D752, Tube type
Front suspension:	Type	Telescopic fork (upside down)
	Wheel travel	310 mm
Rear suspension:	Type	Swingarm (Uni-trak)
	Wheel travel	330 mm
Brake type:	Front and Rear	Single disc
Effective disc diameter:	Front	220 mm
	Rear	190 mm

Specifications are subject to change without notice, and may not apply to every country.

- (A) : Australian model
- (C) : Canadian model
- (E) : European model

16-6 SUPPLEMENT - 1996 MODEL

Items	KX250-K3
Dimensions:	
Overall length	2 155 mm
Overall width	815 mm
Overall height	1 215 mm
Wheelbase	1 460 mm
Road clearance	385 mm
Seat height	955 mm
Dry weight	96.5 kg
Curb weight: Front	50 kg
Rear	52 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, piston reed valve
Cooling system	Liquid-cooled
Bore and stroke	66.4 × 72.0 mm
Displacement	249 mL
Compression ratio	Low speed: 10.4 : 1 (U) 10.8 : 1 High speed: 8.7 : 1 (U) 9.0 : 1
Maximum horsepower	39.4 kW (53.6 PS) @8 000 r/min (rpm)
Maximum torque	49.0 N-m (5.0 kg-m, 36 ft-lb) @7 000 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK38
Starting system	Primary kick
Ignition system	CDI
Ignition timing	13.4° BTDC @6 000 r/min (rpm)
Spark plug	NGK B8EVX (A) (C) (E) NGK BR8EVX
Port timing: Inlet	Open Full open
	Close -
Scavenging	Open 59.1° BBDC
	Close 59.1° ABDC
Exhaust	Open 76.9° BBDC (low speed), 91.4° BBDC (high speed)
	Close 76.9° ABDC (low speed), 91.4° ABDC (high speed)
Lubrication system (Gasoline: oil)	Petrol mix (32:1)
Drive Train:	
Primary reduction system:	
Type	Gear
Reduction ratio	2.750 (55/20)
Clutch type	Wet, multi disc
Transmission: Type	5-speed, constant mesh, return shift
Gear ratios: 1st	2.133 (32/15)
2nd	1.687 (27/16)
3rd	1.388 (25/18)
4th	1.136 (25/22)
5th	1.000 (24/24)
Final drive system: Type	Chain drive
Reduction ratio	3.500 (49/14)
Overall drive ratio	9.625 @Top gear
Transmission oil: Grade	SE class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.85 L

(Continued on next page.)

Items		KX250-K3
Frame:		
Type		Tubular, semi-double cradle
Steering angle		45° to either side
Caster (rake angle)		26°
Trail		109 mm
Front tire:	Size	80/100-21 51M
	Make/Type	DUNLOP K490 (E) D752, Tube type
Rear tire:	Size	110/90-19 62M
	Make/Type	DUNLOP D737 (E) D752, Tube type
Front suspension:	Type	Telescopic fork (upside down)
	Wheel travel	310 mm
Rear suspension:	Type	Swingarm (Uni-trak)
	Wheel travel	330 mm
Brake type:	Front and Rear	Single disc
Effective disc diameter:	Front	220 mm
	Rear	190 mm

Specifications are subject to change without notice, and may not apply to every country.

- (A) : Australian Model
- (C) : Canadian Model
- (E) : European Model
- (U) : US Model

16-8 SUPPLEMENT - 1996 MODEL

Torque and Locking Agent


Refer to p.1-11 ~ 1-13, p.15-8, noting the following.

Fastener	Torque			Remarks
	N-m	kg-m	ft-lb	
Engine Top End: Coolant Drain Plug (Cylinder, KX250)	8.8	0.90	78 in-lb	

Special Tools, Sealant

Refer to p.1-14 ~ 1-17, noting the following.

Fork Oil Seal Driver, $\Phi 46$: 57001-1395

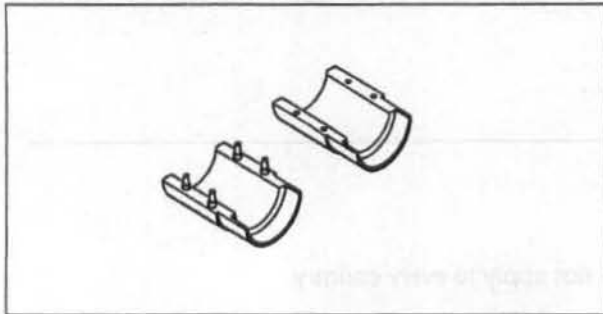

Fuel System

Specifications

KX125:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK35	---
Main jet	#162, (E) #165	---
Throttle valve cutaway	#5	---
Jet needle	N2EJ, (E) N2EK	---
Jet needle clip position	3rd groove from the top	---
Slow jet	#42	---
Air screw	1½ (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

(E): European model

KX250:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK38	---
Main jet	#162, (U) #160	---
Throttle valve cutaway	#7	---
Jet needle	N1ED	---
Jet needle clip position	4th groove from the top	---
Slow jet	#45	---
Air screw	2 (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

(U) : US model

Special Tool - Fuel Level Gauge, M18 x 1.0: 57001-122
Pressure Cable Luber: K56019-021

Engine Top End

Specifications

KX125:

Item	Standard	Service Limit
Cylinder Head:		
Cylinder compression	(usable range) 890 ~ 1 370 kPa (9.1 ~ 14.0 kg/cm ² , 129 ~ 199 psi) (E) 885 ~ 1 350 kPa (9.0 ~ 13.8 kg/cm ² , 128 ~ 196 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston:		
Cylinder inside diameter	54.000 ~ 54.015 mm	54.08 mm
Piston diameter	53.945 ~ 53.960 mm	53.82 mm
Piston/cylinder clearance	0.050 ~ 0.060 mm	---
Piston ring/groove clearance	0.015 ~ 0.050 mm	0.15 mm
Piston ring groove width	1.01 ~ 1.03 mm	1.10 mm
Piston ring thickness	0.980 ~ 0.995 mm	0.91 mm
Piston ring end gap	0.35 ~ 0.55 mm	0.90 mm
Piston pin diameter	14.995 ~ 15.000 mm	14.96 mm
Piston pin hole diameter	15.001 ~ 15.011 mm	15.07 mm
Small end inside diameter	19.003 ~ 19.014 mm	19.05 mm

(E): European Model

KX250:

Item	Standard	Service Limit
Cylinder Head:		
Cylinder compression	(usable range) 795 ~ 1 230 kPa (8.1 ~ 12.5 kg/cm ² , 115 ~ 178 psi) (U) 825 ~ 1 280 kPa (8.4 ~ 13.0 kg/cm ² , 119 ~ 185 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston:		
Cylinder inside diameter	66.400 ~ 66.415 mm	66.48 mm
Piston diameter	66.336 ~ 66.351 mm	66.23 mm
Piston/cylinder clearance	0.059 ~ 0.069 mm	---
Piston ring/groove clearance	0.04 ~ 0.08 mm	0.18 mm
Piston ring groove width	1.23 ~ 1.25 mm	1.30 mm
Piston ring thickness	1.17 ~ 1.19 mm	1.10 mm
Piston ring end gap	0.25 ~ 0.45 mm	0.80 mm
Piston pin diameter	17.995 ~ 18.000 mm	17.96 mm
Piston pin hole diameter	18.000 ~ 18.020 mm	18.07 mm
Small end inside diameter	22.003 ~ 22.012 mm	22.05 mm

(U) : US Model

Special Tool - Piston Ring Pliers: 57001-115
Compression Gauge: 57001-221
Piston Pin Puller Assembly: 57001-910
Compression Gauge Adapter, M14 x 1.25: 57001-1159

Engine Bottom End/Transmission

Specifications

Item	Standard	Service Limit
Transmission Oil:		
Transmission Oil:		
Grade	SE class	---
Viscosity	SAE10W30 or 10W40	---
Amount:	0.7 L	---
	KX125 KX250	0.85 L ---
Crankshaft, Connecting Rod:		
Connecting rod bend	Not more than 0.03 mm/100 mm	0.2 mm/100 mm
Connecting rod twist	Not more than 0.03 mm/100 mm	0.2 mm/100 mm
Connecting rod big end radial clearance:		
	KX125	0.036 ~ 0.047 mm
	KX250	0.037 ~ 0.049 mm
Connecting rod big end side clearance:		
	KX125	0.40 ~ 0.50 mm
	KX250	0.45 ~ 0.55 mm
Crankshaft runout	Not more than 0.03 mm	0.05 mm
Transmission:		
Gear backlash:	0.06 ~ 0.23 mm	0.30 mm
Shift fork ear thickness:	KX125 KX250	4.90 ~ 5.00 mm 4.30 mm
Gear shift fork groove width:	KX125 KX250	5.05 ~ 5.15 mm 4.75 mm
Shift fork guide pin diameter	5.90 ~ 6.00 mm	5.80 mm
Shift drum groove width	6.05 ~ 6.20 mm	6.25 mm

Special Tool - Bearing Puller Adapter: 57001-136
Outside Circlip Pliers: 57001-144
Bearing Puller: 57001-158
Shift Shaft Oil Seal Guide, ϕ 13: 57001-264
Kick Shaft Oil Seal Guide: 57001-267
Crankcase Splitting Tool Assembly: 57001-1098
Bearing Driver Set: 57001-1129
Crankshaft Jig: 57001-1174

Sealant - Kawasaki Bond (Liquid Gasket - Silver): 92104-002

Final Drive

Specifications

Item	Standard	Service Limit
Drive Chain:		
Chain slack	60 ~ 70 mm	Less than 60 mm, or more than 75 mm
Chain 20-link length	317.5 ~ 318.2 mm	323 mm
Standard chain:		
Make	DAIDO	---
Type:	D.I.D 520DS-5	---
KX125	D.I.D 520DS	---
KX250		---
Links	112 Links	---
Sprockets:		
Engine sprocket diameter:	KX125 55.48 ~ 55.68 mm/13T	55.2 mm
	KX250 60.99 ~ 61.19 mm/14 T	60.7 mm
Rear sprocket diameter:	KX125 242.71 ~ 243.21 mm/50T	242.2 mm
	KX250 237.54 ~ 238.04 mm/49T	237.0 mm
Rear sprocket warp	Under 0.4 mm	0.5 mm

Special Tool - Outside Circlip Pliers: 57001-144

Bearing Driver Set: 57001-1129

Jack: 57001-1238

Suspension

Specifications

Item	Standard	Service Limit
Front Fork:		
Air pressure	Atmospheric pressure	---
Rebound damping adjustment	10 clicks	(Adjustable Range) 18 clicks or more
Compression damping adjustment:		
KX125	12 clicks	(Adjustable Range)
KX250	10 clicks	18 clicks or more
Oil viscosity	KAYABA 01 or SAE 5W	---
Oil capacity:	608 ± 4 mL	---
Oil level (fully compressed, spring removed)	115 ± 2 mm	(Adjustable Range) 105 ~ 140 mm
Fork spring free length	470 mm	460 mm
Rear Suspension (Uni-Trak):		
Rear Shock Absorber:		
Rebound damping adjustment	12 clicks	(Adjustable Range) 20 clicks or more
Compression damping adjustment:		
KX125	14 clicks	(Adjustable Range)
KX250	12 clicks	20 clicks or more
Spring preload adjustment (Adjusting nut position from the center of the upper mounting hole):		
KX125	119.5 mm	(Adjustable Range) 111.5 ~ 127 mm
KX250	121.5 mm	111.5 ~ 131 mm
Rear shock spring free length	275 mm	270 mm
Gas Reservoir:		
Gas pressure	980 kPa (10 kg/cm ² , 142 psi)	---
Tie-Rod, Rocker Arm:		
Sleeve outside diameter:		
Long	21.987 ~ 22.000 mm	21.85 mm
Short	15.989 ~ 16.000 mm	15.85 mm
Rocker Arm Mounting Bolt Runout	under 0.1 mm	0.2 mm

Special Tool – Hook Wrench: 57001-1101

Jack: 57001-1238

Fork Spring Holder: 57001-1286

Fork Cylinder Holder: 57001-1287

Fork Oil Seal Driver, Φ46: 57001-1395

Fork Piston Rod Puller, M12 x 1.25: 57001-1289

Fork Oil Level Gauge: 57001-1290

Electrical System

Specifications

Item	Standard
Ignition System:	
Ignition timing: KX125	15° BTDC @10 000 r/min (rpm)
KX250	13.4° BTDC @6 000 r/min (rpm)
Ignition coil:	
3 needle arcing distance	7 mm or more
Primary winding resistance:	
KX125	0.24 Ω ± 15 % (at 20°C)
KX250	0.53 Ω ± 15 % (at 20°C)
Secondary winding resistance:	
KX125	8.3 kΩ ± 15 % (at 20°C)
KX250	12.6 kΩ ± 15 % (at 20°C)
Igniter internal resistance	Refer to p.15 - 20
Spark plug:	
KX125: Type	NGK B9EVX (A)(C)(E) NGK BR9EVX
Gap	0.6 ~ 0.7 mm
KX250: Type	NGK B8EVX (A)(C)(E) NGK BR8EVX
Gap	0.6 ~ 0.7 mm

- (A) : Australian model
- (C) : Canadian model
- (E) : European model

Special Tool - Spark Plug Wrench, Hex 21: 57001-110
Flywheel Puller: 57001-252
Hand Tester: 57001-1394
Flywheel Holder: 57001-1313

Supplement - 1997 Models

This supplement chapter contains only the information unique to the models covered. Also read the base model chapters in front of this chapter for complete service information.

Models covered by this chapter		Base Models	
1997	KX125-K4	1996	KX125-K3
1997	KX250-K4	1996	KX250-K3

Table of Contents

General Information	17-2
Model Identification	17-2
General Specifications	17-4
Cabel, Wire and Hose Routing.....	17-8
Fuel System.....	17-9
Specifications.....	17-9
Engine Top End	17-10
Specifications.....	17-10
Step Installation	17-11
Engine Bottom End/Transmission.....	17-12
Specifications.....	17-12
Final Drive	17-13
Specifications.....	17-13
Brakes.....	17-14
Brake Lever, Brake Pedal.....	17-14
Pedal Installation Notes.....	17-14
Suspension.....	17-15
Specifications.....	17-15
Front Fork	17-16
Push Rod Disassembly	17-16
Electrical System	17-17
Specifications.....	17-17

General Information

Model Identifications

KX125-K4 Left Side View



KX125-K4 Right Side View



KX250-K4 Left Side View



KX250-K4 Right Side View



17-4 SUPPLEMENT - 1997 MODEL

General Specifications

Items	KX125-K4
Dimensions:	
Overall length	2 150 mm
Overall width	815 mm
Overall height	1 215 mm
Wheelbase	1 455 mm
Road clearance	395 mm
Seat height	950 mm
Dry weight	86.5 kg
Curb weight: Front	45.5 kg
Rear	48.5 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, crankcase reed valve
Cooling system	Liquid-cooled
Bore and stroke	54.0 × 54.5 mm
Displacement	124 mL
Compression ratio	Low speed : 9.9 : 1 (EU) 9.4 : 1 High speed : 8.6 : 1 (EU) 8.2 : 1
Maximum horsepower	29.1 kW (39.5 PS) @11 500 r/min (rpm)
Maximum torque	24.9 N-m (2.54 kg-m, 18.4 ft-lb) @11 000 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK35
Starting system	Primary kick
Ignition system	CDI
Ignition timing	14.5° BTDC @10 150 r/min (rpm)
Spark plug	NGK BR9EVX
Port timing: Inlet	Open Full open
	Close -
Scavenging	Open 64.6° BBDC
	Close 64.6° ABDC
Exhaust	Open 84.6° BBDC (low speed), 94.5° BBDC (high speed)
	Close 84.6° ABDC (low speed), 94.5° ABDC (high speed)
Lubrication system (Gasoline: oil)	Petrol mix (32:1)
Drive Train:	
Primary reduction system:	
Type	Gear
Reduction ratio	3.200 (64/20)
Clutch type	Wet, multi disc
Transmission:	
Type	6-speed, constant mesh, return shift
Gear ratios:	
1st	2.384 (31/13)
2nd	1.857 (26/14)
3rd	1.529 (26/17)
4th	1.294 (22/17)
5th	1.125 (27/24)
6th	1.000 (25/25)
Final drive system:	
Type	Chain drive
Reduction ratio	3.846 (50/13)
Overall drive ratio	12.307 @Top gear
Transmission oil:	
Grade	SE, SF or SG class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.7 L

(Continued on next page.)

Items		KX125-K4
Frame:		
Type		Tubular, semi-double cradle
Steering angle		45° to either side
Caster (rake angle)		26°
Trail		109 mm
Front tire:	Size	80/100-21 51M
	Make/Type	DUNLOP K490 (EU) DUNLOP D752, Tube type
Rear tire:	Size	100/90-19 57M
	Make/Type	DUNLOP D737 (EU) DUNLOP D752, Tube type
Front suspension:	Type	Telescopic fork (upside down)
	Wheel travel	310 mm
Rear suspension:	Type	Swingarm (Uni-trak)
	Wheel travel	330 mm
Brake type:	Front and Rear	Single disc
Effective disc diameter:	Front	220 mm
	Rear	190 mm

Specifications are subject to change without notice, and may not apply to every country.

(EU): European model

Items	KX250-K4
Dimensions:	
Overall length	2 170 mm
Overall width	815 mm
Overall height	1 215 mm
Wheelbase	1 475 mm
Road clearance	385 mm
Seat height	955 mm
Dry weight	96.5 kg
Curb weight: Front	50 kg
Rear	52 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, piston reed valve
Cooling system	Liquid-cooled
Bore and stroke	66.4 × 72.0 mm
Displacement	249 mL
Compression ratio	Low speed: 10.4 : 1 (US) 10.8 : 1 High speed: 8.7 : 1 (US) 9.0 : 1
Maximum horsepower	39.4 kW (53.6 PS) @8 000 r/min (rpm)
Maximum torque	49.0 N-m (5.0 kg-m, 36 ft-lb) @7 500 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK38
Starting system	Primary kick
Ignition system	CDI
Ignition timing	14.0° BTDC @6 530 r/min (rpm)
Spark plug	NGK BR8EVX
Port timing: Inlet	Open Full open
	Close -
Scavenging	Open 59.1° BBDC
	Close 59.1° ABDC
Exhaust	Open 76.9° BBDC (low speed), 91.4° BBDC (high speed)
	Close 76.9° ABDC (low speed), 91.4° ABDC (high speed)
Lubrication system (Gasoline: oil)	Petrol mix (32:1)
Drive Train:	
Primary reduction system:	
Type	Gear
Reduction ratio	2.750 (55/20)
Clutch type	Wet, multi disc
Transmission:	
Type	5-speed, constant mesh, return shift
Gear ratios: 1st	2.133 (32/15)
2nd	1.625 (26/16)
3rd	1.333 (24/18)
4th	1.136 (25/22)
5th	1.000 (24/24)
Final drive system:	
Type	Chain drive
Reduction ratio	3.500 (49/14) (US) 3.769 (49/13)
Overall drive ratio	9.625 @Top gear (US) 10.365 @Top gear
Transmission oil:	
Grade	SE, SF or SG class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.85 L

(Continued on next page.)

Items		KX250-K4
Frame:		
Type		Tubular, semi-double cradle
Steering angle		45° to either side
Caster (rake angle)		26°
Trail		109 mm
Front tire:	Size	80/100-21 51M
	Make/Type	BRIDGESTONE M77 (EU) DUNLOP D752, Tube type
Rear tire:	Size	110/90-19 62M
	Make/Type	BRIDGESTONE M78A (EU) DUNLOP D752, Tube type
Front suspension:	Type	Telescopic fork (upside down)
	Wheel travel	310 mm
Rear suspension:	Type	Swingarm (Uni-trak)
	Wheel travel	330 mm
Brake type:	Front and Rear	Single disc
Effective disc diameter:	Front	220 mm
	Rear	190 mm


Specifications are subject to change without notice, and may not apply to every country.

(EU): European Model

(US): US Model

Cable, Wire and Hose Routing

- 1. Fuel Tank Tube
- 2. Steering Shaft

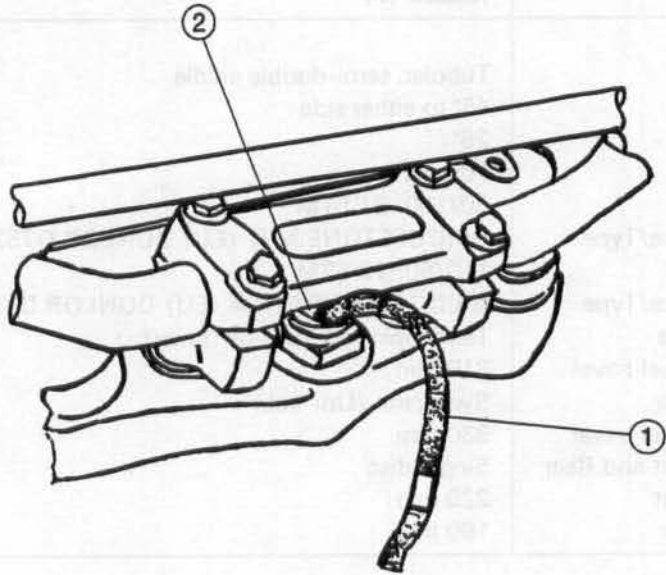

Fuel System

Specifications

KX125:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK35	---
Main jet	#160 (EU)#162	---
Throttle valve cutaway	#5	---
Jet needle	N2EJ	---
Jet needle clip position	3rd groove from the top	---
Slow jet	#40	---
Air screw	2.0, (EU) 1½ (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

(EU): European model

KX250:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK38	---
Main jet	#165	---
Throttle valve cutaway	#7	---
Jet needle	N3WF	---
Jet needle clip position	3rd groove from the top	---
Slow jet	#45	---
Air screw	2 (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

Special Tool - Fuel Level Gauge, M18 x 1.0: 57001-122
Pressure Cable Luber: K56019-021

Engine Top End

Specifications

KX125:

Item	Standard	Service Limit
Cylinder Head:		
Cylinder compression	(usable range) 890 ~ 1 370 kPa (9.1 ~ 14.0 kg/cm ² , 129 ~ 199 psi) (EU) 885 ~ 1 350 kPa (9.0 ~ 13.8 kg/cm ² , 128 ~ 196 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston:		
Cylinder inside diameter	54.000 ~ 54.015 mm	54.08 mm
Piston diameter	53.945 ~ 53.960 mm	53.82 mm
Piston/cylinder clearance	0.050 ~ 0.060 mm	---
Piston ring/groove clearance	0.015 ~ 0.050 mm	0.15 mm
Piston ring groove width	1.01 ~ 1.03 mm	1.10 mm
Piston ring thickness	0.980 ~ 0.995 mm	0.91 mm
Piston ring end gap	0.35 ~ 0.55 mm	0.90 mm
Piston pin diameter	14.995 ~ 15.000 mm	14.96 mm
Piston pin hole diameter	15.001 ~ 15.011 mm	15.07 mm
Small end inside diameter	19.003 ~ 19.014 mm	19.05 mm

KX250:


Item	Standard	Service Limit
Cylinder Head:		
Cylinder compression	(usable range) 795 ~ 1 230 kPa (8.1 ~ 12.5 kg/cm ² , 115 ~ 178 psi) (US) 825 ~ 1 280 kPa (8.4 ~ 13.0 kg/cm ² , 119 ~ 185 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston:		
Cylinder inside diameter	66.400 ~ 66.415 mm	66.48 mm
Piston diameter	66.336 ~ 66.351 mm	66.23 mm
Piston/cylinder clearance	0.059 ~ 0.069 mm	---
Piston ring/groove clearance	0.045 ~ 0.08 mm	0.18 mm
Piston ring groove width	1.03 ~ 1.05 mm	1.13 mm
Piston ring thickness	0.970 ~ 0.985 mm	0.90 mm
Piston ring end gap	0.25 ~ 0.45 mm	0.80 mm
Piston pin diameter	17.995 ~ 18.000 mm	17.96 mm
Piston pin hole diameter	18.000 ~ 18.020 mm	18.07 mm
Small end inside diameter	22.003 ~ 22.012 mm	22.05 mm

(US) : US Model

Special Tool - Piston Ring Pliers: 57001-115
Compression Gauge: 57001-221
Piston Pin Puller Assembly: 57001-910
Compression Gauge Adapter, M14 x 1.25: 57001-1159

Step Installation

● Insert the step pins [A] into the brackets [B] from forward.

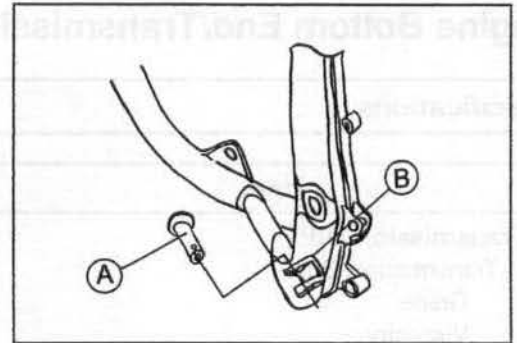

Part Name	Part Number	Quantity	Notes
Bracket	17-11-001	1	
Step Pin	17-11-002	2	
Bracket	17-11-003	1	
Step Pin	17-11-004	2	
Bracket	17-11-005	1	
Step Pin	17-11-006	2	
Bracket	17-11-007	1	
Step Pin	17-11-008	2	
Bracket	17-11-009	1	
Step Pin	17-11-010	2	
Bracket	17-11-011	1	
Step Pin	17-11-012	2	
Bracket	17-11-013	1	
Step Pin	17-11-014	2	
Bracket	17-11-015	1	
Step Pin	17-11-016	2	
Bracket	17-11-017	1	
Step Pin	17-11-018	2	
Bracket	17-11-019	1	
Step Pin	17-11-020	2	
Bracket	17-11-021	1	
Step Pin	17-11-022	2	
Bracket	17-11-023	1	
Step Pin	17-11-024	2	
Bracket	17-11-025	1	
Step Pin	17-11-026	2	
Bracket	17-11-027	1	
Step Pin	17-11-028	2	
Bracket	17-11-029	1	
Step Pin	17-11-030	2	
Bracket	17-11-031	1	
Step Pin	17-11-032	2	
Bracket	17-11-033	1	
Step Pin	17-11-034	2	
Bracket	17-11-035	1	
Step Pin	17-11-036	2	
Bracket	17-11-037	1	
Step Pin	17-11-038	2	
Bracket	17-11-039	1	
Step Pin	17-11-040	2	
Bracket	17-11-041	1	
Step Pin	17-11-042	2	
Bracket	17-11-043	1	
Step Pin	17-11-044	2	
Bracket	17-11-045	1	
Step Pin	17-11-046	2	
Bracket	17-11-047	1	
Step Pin	17-11-048	2	
Bracket	17-11-049	1	
Step Pin	17-11-050	2	
Bracket	17-11-051	1	
Step Pin	17-11-052	2	
Bracket	17-11-053	1	
Step Pin	17-11-054	2	
Bracket	17-11-055	1	
Step Pin	17-11-056	2	
Bracket	17-11-057	1	
Step Pin	17-11-058	2	
Bracket	17-11-059	1	
Step Pin	17-11-060	2	
Bracket	17-11-061	1	
Step Pin	17-11-062	2	
Bracket	17-11-063	1	
Step Pin	17-11-064	2	
Bracket	17-11-065	1	
Step Pin	17-11-066	2	
Bracket	17-11-067	1	
Step Pin	17-11-068	2	
Bracket	17-11-069	1	
Step Pin	17-11-070	2	
Bracket	17-11-071	1	
Step Pin	17-11-072	2	
Bracket	17-11-073	1	
Step Pin	17-11-074	2	
Bracket	17-11-075	1	
Step Pin	17-11-076	2	
Bracket	17-11-077	1	
Step Pin	17-11-078	2	
Bracket	17-11-079	1	
Step Pin	17-11-080	2	
Bracket	17-11-081	1	
Step Pin	17-11-082	2	
Bracket	17-11-083	1	
Step Pin	17-11-084	2	
Bracket	17-11-085	1	
Step Pin	17-11-086	2	
Bracket	17-11-087	1	
Step Pin	17-11-088	2	
Bracket	17-11-089	1	
Step Pin	17-11-090	2	
Bracket	17-11-091	1	
Step Pin	17-11-092	2	
Bracket	17-11-093	1	
Step Pin	17-11-094	2	
Bracket	17-11-095	1	
Step Pin	17-11-096	2	
Bracket	17-11-097	1	
Step Pin	17-11-098	2	
Bracket	17-11-099	1	
Step Pin	17-11-100	2	

Engine Bottom End/Transmission

Specifications

Item	Standard	Service Limit
Transmission Oil:		
Transmission Oil:		
Grade	SE, SF or SG class	---
Viscosity	SAE10W30 or 10W40	---
Amount:		
KX125	0.7 L	---
KX250	0.85 L	---
Crankshaft, Connecting rod:		
Connecting rod bend	Not more than 0.03 mm/100 mm	0.2 mm/100 mm
Connecting rod twist	Not more than 0.03 mm/100 mm	0.2 mm/100 mm
Connecting rod big end radial clearance:		
KX125	0.036 ~ 0.047 mm	0.10 mm
KX250	0.037 ~ 0.049 mm	0.10 mm
Connecting rod big end side clearance:		
KX125	0.40 ~ 0.50 mm	0.70 mm
KX250	0.45 ~ 0.55 mm	0.70 mm
Crankshaft runout	Not more than 0.03 mm	0.05 mm
Transmission:		
Shift fork ear thickness:		
KX125	4.90 ~ 5.00 mm	4.80 mm
KX250	4.40 ~ 4.50 mm	4.30 mm
Gear shift fork groove width:		
KX125	5.05 ~ 5.15 mm	5.25 mm
KX250	4.55 ~ 4.65 mm	4.75 mm
Shift fork guide pin diameter	5.90 ~ 6.00 mm	5.80 mm
Shift drum groove width	6.05 ~ 6.20 mm	6.25 mm

Special Tool – Bearing Puller Adapter: 57001-136
Outside Circlip Pliers: 57001-144
Bearing Puller: 57001-158
Oil Seal Guide, ϕ 13: 57001-264
Kick Shaft Oil Seal Guide: 57001-267
Crankcase Splitting Tool Assembly: 57001-1098
Bearing Driver Set: 57001-1129
Crankshaft Jig: 57001-1174

Sealant – Kawasaki Bond (Liquid Gasket – Silver): 92104-002

Final Drive

Specifications

Item	Standard	Service Limit
Drive Chain:		
Chain Slack	60 ~ 70 mm	Less than 60 mm, or more than 75 mm
Chain 20-link length	317.5 ~ 318.2 mm	323 mm
Standard chain:		
Make	DAIDO	---
Type:	KX125 D.I.D 520DMA	---
	KX250 D.I.D 520DM	---
Links	KX125 112 Links	---
	KX250 114 Links	---
Sprockets:		
Engine sprocket diameter:	KX125 55.48 ~ 55.68 mm/13T	55.2 mm
	KX250 60.99 ~ 61.19 mm/14 T	60.7 mm
Rear sprocket diameter	KX125 242.71 ~ 243.21 mm/50T	242.2 mm
	KX250 237.54 ~ 238.04 mm/49T	237.0 mm
Rear sprocket warp	Under 0.4 mm	0.5 mm


Special Tool - Outside Circlip Pliers: 57001-144
Bearing Driver Set: 57001-1129
Jack: 57001-1238

Brakes

Brake Lever, Brake Pedal

Pedal Installation Notes

- Refer to p.10-6, noting the following.
- When installing the brake pedal [A] to the bracket [B] with the mounting bolt [C], install the seals [D] so that their projection [E] sides face outside.

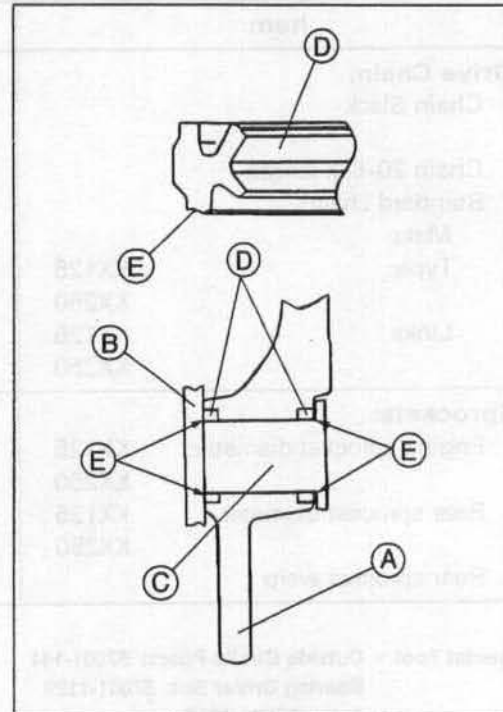

Suspension

Specifications

Item	Standard	Service Limit
Front Fork:		
Air pressure	Atmospheric pressure	---
Rebound damping adjustment	12 clicks	(Adjustable Range) 18 clicks or more
Compression damping adjustment:		
KX125	14 clicks	(Adjustable Range)
KX250	12 clicks	18 clicks or more
Oil viscosity	KAYABA 01 SAE 5W	---
Oil capacity:		
KX125	608 ±4 mL	---
KX250	614 ±4 mL	---
Oil level (fully compressed, spring removed)		
KX125	115 ±2 mm	(Adjustable Range) 105 ~ 140 mm
KX250	110 ±2 mm	(Adjustable Range) 105 ~ 140 mm
Fork spring free length	470 mm	460 mm
Rear Suspension (Uni-Trak):		
Rear Shock Absorber:		
Rebound damping adjustment		
KX125	13 clicks	(Adjustable Range)
KX250	12 clicks	20 clicks or more
Compression damping adjustment:		
KX125	14 clicks	(Adjustable Range)
KX250	12 clicks	20 clicks or more
Spring preload adjustment (Adjusting nut position from the center of the upper mounting hole):		(Adjustable Range)
KX125	115.5 mm	108 ~ 127 mm
KX250	118.5 mm	108 ~ 131 mm
Rear shock spring free length	275 mm	270 mm
Gas Reservoir:		
Gas pressure	980 kPa (10 kg/cm ² , 142 psi)	---
Tie-Rod, Rocker Arm:		
Sleeve outside diameter:		
Long	21.987 ~ 22.000 mm	21.85 mm
Short	15.989 ~ 16.000 mm	15.85 mm
Rocker Arm Mounting Bolt Runout	under 0.1 mm	0.2 mm

Special Tool – Hook Wrench: 57001-1101

Jack: 57001-1238

Fork Spring Holder: 57001-1286

Fork Cylinder Holder: 57001-1287

Oil Seal Driver, Φ46: 57001-1395

Fork Piston Rod Puller, M12 x 1.25: 57001-1289

Fork Oil Level Gauge: 57001-1290

Electrical System

Specifications

Item	Standard
Ignition System:	
Ignition timing: KX125	14.5° BTDC @10 150 r/min (rpm)
KX250	14.0° BTDC @6 530 r/min (rpm)
Ignition coil:	
3 needle arcing distance	7 mm or more
Primary winding resistance:	
KX125	0.24 Ω \pm 15 % (at 20°C)
KX250	0.53 Ω \pm 15 % (at 20°C)
Secondary winding resistance:	
KX125	8.3 k Ω \pm 15 % (at 20°C)
KX250	12.6 k Ω \pm 15 % (at 20°C)
Igniter internal resistance	Refer to p.15 - 20
Spark plug:	
KX125: Type	NGK BR9EVX
Gap	0.6 ~ 0.7 mm
KX250: Type	NGK BR8EVX
Gap	0.6 ~ 0.7 mm

Special Tool - Spark Plug Wrench, Hex 21: 57001-110

Flywheel Puller: 57001-252

Hand Tester: 57001-1394

Flywheel Holder: 57001-1313

Supplement - 1998 Models

This supplement chapter contains only the information unique to the models covered. Also read the base model chapters in front of this chapter for complete service information.

Models covered by this chapter		Base Models	
1998	KX125-K5	1997	KX125-K4
1998	KX250-K5	1997	KX250-K4

Table of Contents

General Information	18-2	Suspension	18-24
Model Identification	18-2	Exploded View	18-24
General Specifications	18-4	Specifications	18-25
Torque and Locking Agent	18-8	Front Fork	18-26
Cable, Wire and Hose Routing	18-9	Install Fork Cylinder	18-26
Fuel System	18-11	Electrical System	18-27
Specifications	18-11	Exploded View	18-27
Cooling System	18-12	Specifications	18-28
Specifications	18-12	Wiring Diagram	18-29
Engine Top End	18-13	Flywheel Magneto	18-30
Exploded View	18-13	Regulator/Rectifier Removal	18-30
Specifications	18-14	Regulator/Rectifier Output	
Cylinder, Piston	18-15	Voltage Inspection	18-30
Cylinder Removal	18-15	Regulator/Rectifier Inspection	18-30
Exhaust Valve (KIPS) KX125-K5 only	18-15	Ignition System	18-32
Removal	18-15	Igniter Removal	18-32
Installation	18-15	Igniter Inspection	18-32
Engine Right Side	18-18	Stator Coil Inspection	18-33
Exploded View	18-18	Fuel Cut Valve	18-34
Specifications	18-19	Fuel Cut Valve Removal	18-34
Right Engine Cover	18-19	Fuel Cut Valve Installation	18-34
Removal	18-19	Fuel Cut Valve Inspection	18-34
Installation	18-19	Appendix	18-35
Engine Bottom End/Transmission	18-20	Troubleshooting Guide	18-35
Specifications	18-20		
Wheels/Tires	18-21		
Specifications	18-21		
Final Drive	18-22		
Specifications	18-22		
Brakes	18-23		
Specifications	18-23		

General Information

Model Identifications

KX125-K5 Left Side View



KX250-K5 Right Side View



KX250-K5 Left Side View



KX250-K5 Right Side View



18-4 SUPPLEMENT - 1998 MODEL

General Specifications

Items	KX125-K5
Dimensions:	
Overall length	2 160 mm
Overall width	815 mm
Overall height	1 210mm
Wheelbase	1 465 mm
Road clearance	390 mm
Seat height	945 mm
Dry weight	87 kg
Curb weight: Front	46 kg
Rear	49 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, crankcase reed valve
Cooling system	Liquid-cooled
Bore and stroke	54.0 × 54.5 mm
Displacement	124 mL
Compression ratio	Low speed : 10.3 : 1 (EU) 9.8 : 1 High speed : 8.7 : 1 (EU) 8.2 : 1
Maximum horsepower	29.1 kW (39.5 PS) @11 500 r/min (rpm)
Maximum torque	24.9 N-m (2.54 kg-m, 18.4 ft-lb) @11 000 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK36
Starting system	Primary kick
Ignition system	CDI
Ignition timing	12.0° BTDC @11 000 r/min (rpm)
Spark plug	NGK BR9EVX
Port timing: Inlet	Open Full open
	Close -
Scavenging	Open 63.9° BBDC
	Close 63.9° ABDC
Exhaust	Open 81.9° BBDC (low speed), 94.7° BBDC (high speed)
	Close 81.9° ABDC (low speed), 94.7° ABDC (high speed)
Lubrication system (Gasoline: oil)	Petrol mix (32:1)
Drive Train:	
Primary reduction system:	
Type	Gear
Reduction ratio	3.200 (64/20)
Clutch type	Wet, multi disc
Transmission: Type	6-speed, constant mesh, return shift
Gear ratios: 1st	2.384 (31/13)
2nd	1.857 (26/14)
3rd	1.529 (26/17)
4th	1.294 (22/17)
5th	1.125 (27/24)
6th	1.000 (25/25)
Final drive system: Type	Chain drive
Reduction ratio	4.000 (48/12)
Overall drive ratio	12.800 @Top gear
Transmission oil: Grade	SE, SF or SG class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.7 L

(Continued on next page.)

Items		KX125-K5
Frame:		
Type		Tubular, semi-double cradle
Steering angle		45° to either side
Caster (rake angle)		26°
Trail		109 mm
Front tire:	Size	80/100-21 51M
	Make/Type	DUNLOP K490 (EU) DUNLOP D755, Tube type
Rear tire:	Size	100/90-19 57M
	Make/Type	DUNLOP D737 (EU) DUNLOP D755, Tube type
Front suspension:	Type	Telescopic fork (upside down)
	Wheel travel	310 mm
Rear suspension:	Type	Swingarm (Uni-trak)
	Wheel travel	330 mm
Brake type:	Front and Rear	Single disc
Effective disc diameter:	Front	220 mm
	Rear	190 mm

Specifications are subject to change without notice, and may not apply to every country.

(EU): European model

Items	KX250-K5
Dimensions:	
Overall length	2 170 mm (US) 2 175 mm
Overall width	815 mm
Overall height	1 210mm
Wheelbase	1 475 mm (US) 1 480 mm
Road clearance	380 mm
Seat height	950 mm
Dry weight	97 kg
Curb weight: Front	51 kg
Rear	52 kg
Fuel tank capacity	8.5 L
Engine:	
Type	2-stroke, single cylinder, piston reed valve
Cooling system	Liquid-cooled
Bore and stroke	66.4 x 72.0 mm
Displacement	249 mL
Compression ratio	Low speed: 10.4 : 1 (US) 10.8 : 1 High speed: 8.7 : 1 (US) 9.0 : 1
Maximum horsepower	40.1 kW (54.6 PS) @8 500 r/min (rpm)
Maximum torque	49.0 N-m (5.0 kg-m, 36 ft-lb) @7 500 r/min (rpm)
Carburetion system	Carburetor, KEIHIN PWK38
Starting system	Primary kick
Ignition system	CDI
Ignition timing	11.0° BTDC @7 000 r/min (rpm)
Spark plug	NGK BR8EVX
Port timing: Inlet	Open Full open
	Close -
Scavenging	Open 59.1° BBDC
	Close 59.1° ABDC
Exhaust	Open 76.9° BBDC (low speed), 91.4° BBDC (high speed)
	Close 76.9° ABDC (low speed), 91.4° ABDC (high speed)
Lubrication system (Gasoline: oil)	Petrol mix (32:1)
Drive Train:	
Primary reduction system:	
Type	Gear
Reduction ratio	2.750 (55/20)
Clutch type	Wet, multi disc
Transmission:	5-speed, constant mesh, return shift
Gear ratios:	
1st	2.133 (32/15)
2nd	1.625 (26/16)
3rd	1.333 (24/18)
4th	1.136 (25/22)
5th	1.000 (24/24)
Final drive system:	
Type	Chain drive
Reduction ratio	3.500 (49/14) (US) 3.692 (48/13)
Overall drive ratio	9.625 @Top gear (US) 10.153 @Top gear
Transmission oil:	
Grade	SE, SF or SG class
Viscosity	SAE 10W-30 or 10W-40
Capacity	0.85 L

(Continued on next page.)

Items	KX250-K5	
Frame:		
Type		Tubular, semi-double cradle
Steering angle		45° to either side
Caster (rake angle)		26°
Trail		109 mm
Front tire:	Size	80/100-21 51M
	Make/Type	BRIDGESTONE M77 (EU) DUNLOP D755, Tube type
Rear tire:	Size	110/90-19 62M
	Make/Type	BRIDGESTONE M78A (EU) DUNLOP D755, Tube type
Front suspension:	Type	Telescopic fork (upside down)
	Wheel travel	310 mm
Rear suspension:	Type	Swingarm (Uni-trak)
	Wheel travel	330 mm
Brake type:	Front and Rear	Single disc
Effective disc diameter:	Front	220 mm
	Rear	190 mm

Specifications are subject to change without notice, and may not apply to every country.

(EU): European Model

(US): US Model

18-8 SUPPLEMENT - 1998 MODEL


Torque and Locking Agent

Refer to P.1-11 ~ 1-13, noting the following.


Fastener	Torque			Remarks
	N-m	kg	ft-lb	
Fuel System:				
Rear Frame Mounting Bolts	34	3.5	25	
Engine Top End:				
Coolant Drain Plug (Cylinder KX250)	8.8	0.9	78 in-lb	
Idle Gear Lever Pin (KX125)	8.8	0.9	78 in-lb	
Idle Gear Lever Nut (KX125)	6.9	0.7	61 in-lb	
Exhaust Valve Main Lever				
Allen Bolt (KX125)	3.9	0.4	35 in-lb	L
Retaining Screw (KX125)	5.4	0.55	48 in-lb	
KIPS Cover Bolts (KX125)	8.8	0.9	78 in-lb	
Main Valve Cover Bolts (KX125)	5.9	0.6	52 in-lb	
Engine Right Side				
External Shift Mechanism Return Spring				
Pin: (KX125)	42	4.3	31	L
(KX250)	42	4.3	31	L
Engine Removal/Installation:				
Engine Mounting Nuts	44	4.5	33	
Engine Bracket Bolts: (10 mm)	44	4.5	33	
Engine Bracket Mounting Nuts: (8 mm)	29	3.0	22	
Wheels/Tires:				
Spoke Nipples	Not less than 2.9	Not less than 0.3	Not less than 26 in-lb	
Final Drive:				
Rear Axle Nut	115	11.5	87	
Rear Sprocket Nuts	34	3.5	25	
Brakes:				
Brake Pedal Mounting Bolt	25	2.6	19	
Suspension:				
Tie-Rod Mounting Nuts (Front, Rear)	88	9.0	65	

Cable, Wire and Hose Routing

Refer to front pages, noting the following.

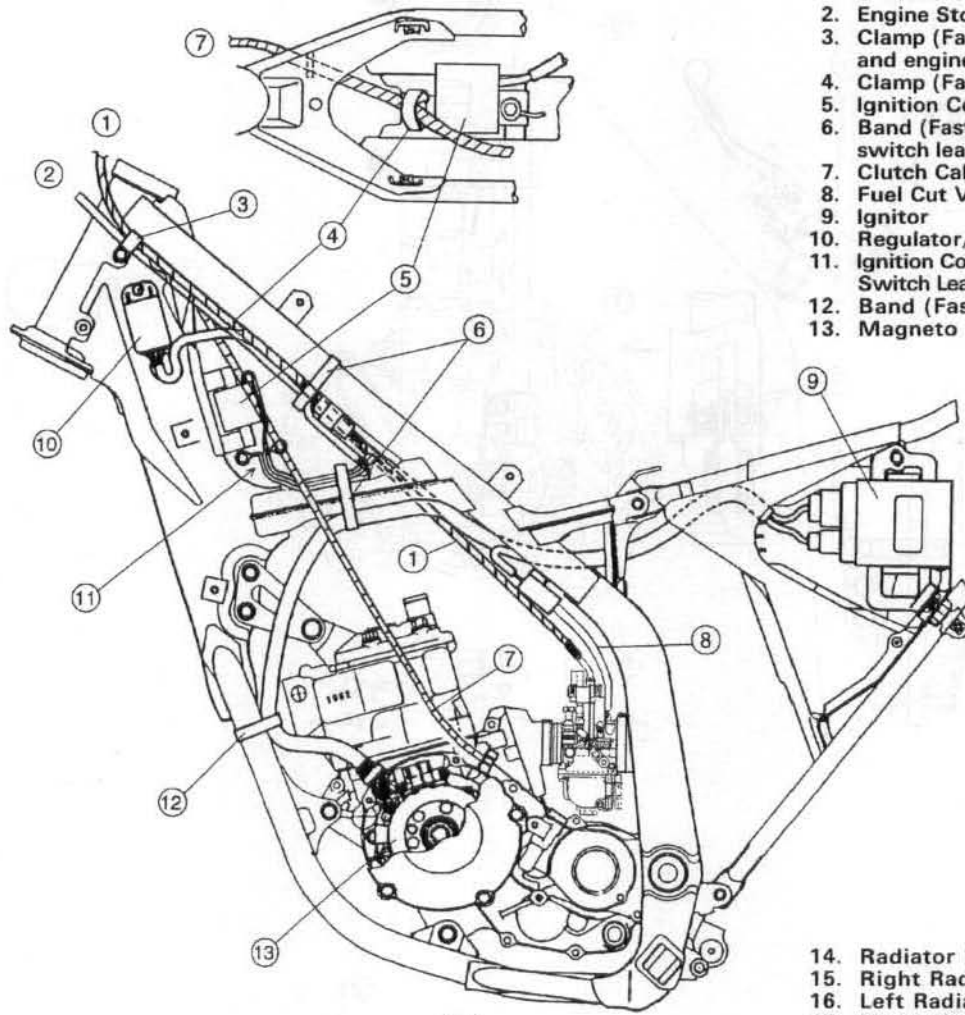


1. Throttle Cable
2. Engine Stop Switch Lead
3. Clamp (Fasten throttle cable and engine stop switch lead)
4. Clamp (Fasten clutch cable)
5. Ignition Coil
6. Band (Fasten engine stop switch lead and regulator lead)
7. Clutch Cable
8. Fuel Cut Valve Lead
9. Ignitor
10. Regulator/Rectifier
11. Ignition Coil Lead, Engine Stop Switch Lead and Ground Lead
12. Band (Fasten magneto lead)
13. Magneto

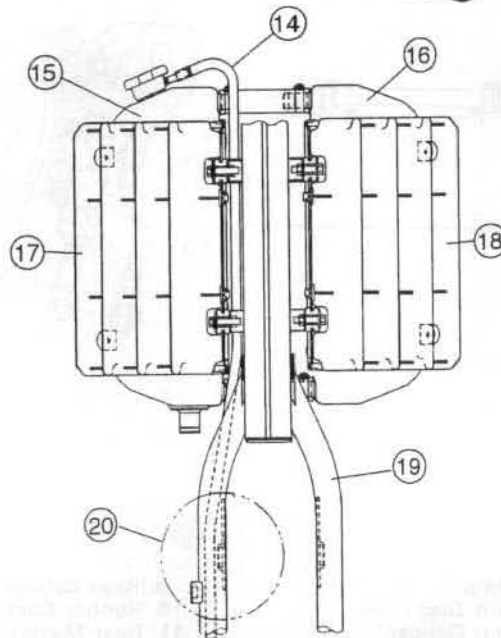


14. Radiator Drain Hose
15. Right Radiator
16. Left Radiator
17. Right Shroud
18. Left Shroud
19. Frame
20. Ran the hose outside the engine mount bracket.

Cable Wire and Hose Routing

Front Brake

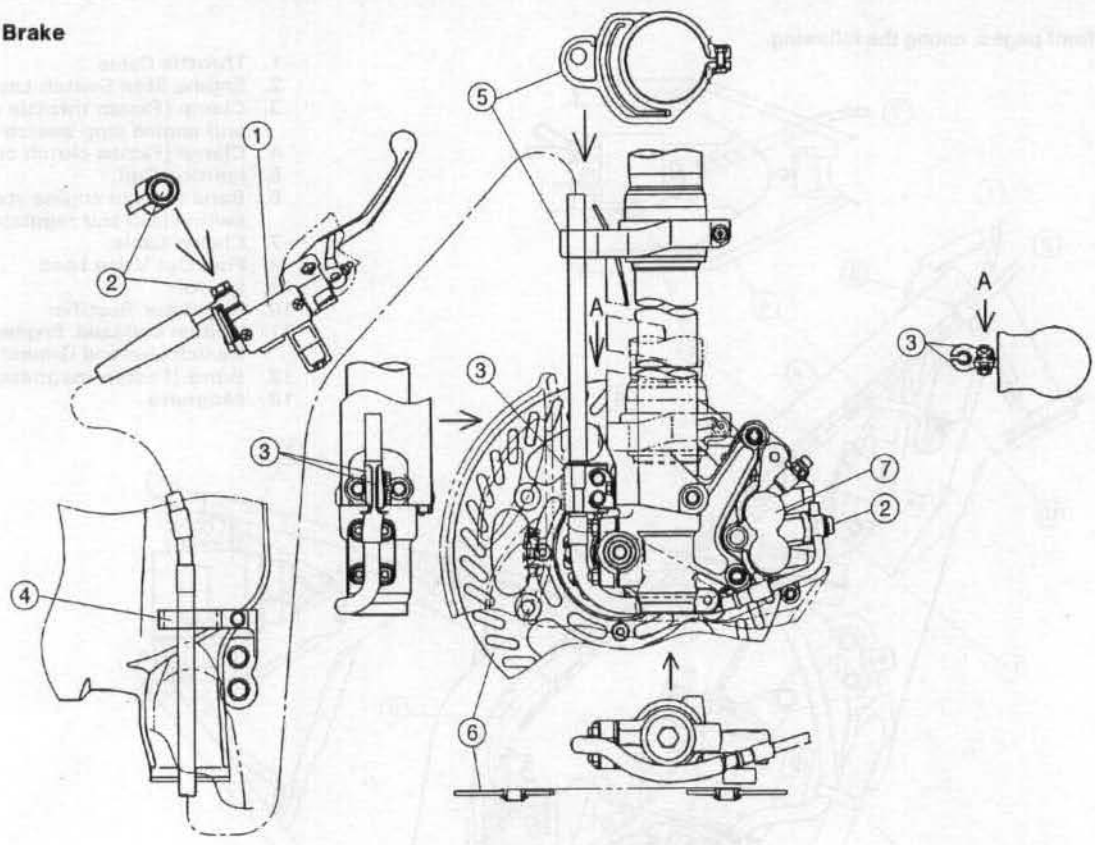

Rear Brake

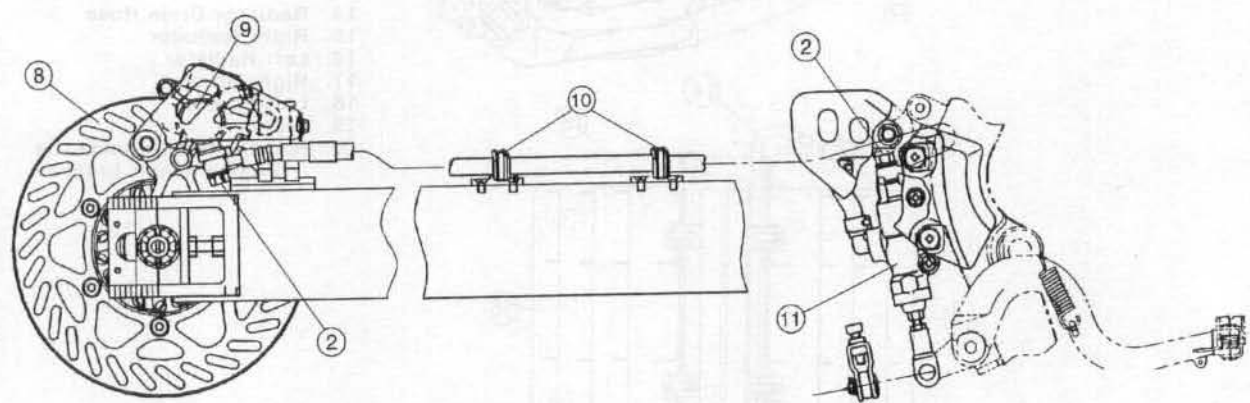

- 1. Front Brake Reservoir
- 2. Banjo Bolts
- 3. Clamp Brackets
- 4. Clamp

- 5. Clamp
- 6. Front Disc
- 7. Front Caliper
- 8. Rear Disc

- 9. Rear Caliper
- 10. Rubber Clamp
- 11. Rear Master Cylinder

Fuel System

Specifications

KX125:

Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK36	---
Main jet	#160	---
Throttle valve cutaway	#6	---
Jet needle	R1469H OXHHK	---
Jet needle clip position	3rd groove from the top	---
Slow jet	#42	---
Air screw	1½	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

(EU): European model

KX250:


Item	Standard	Service Limit
Throttle grip free play and Cable:	2 ~ 3 mm	---
Carburetor:		
Make/type	KEIHIN PWK38	---
Main jet	#158	---
Throttle valve cutaway	#7	---
Jet needle	NOZG	---
Jet needle clip position	3rd groove from the top	---
Slow jet	#45	---
Air screw	1½ (turns out)	---
Service fuel level (below the bottom edge of the carb. body)	1.0±1 mm	---
Float height	16 ±1 mm	---
Air Cleaner:		
Element oil	High-quality foam-air filter oil	---
Reed Valve:		
Reed warp	---	0.5 mm

Special Tool – Fuel Level Gauge, M18 x 1.0: 57001-122
 Pressure Cable Luber: K56019-021

Engine Top End

Exploded View

KX125:

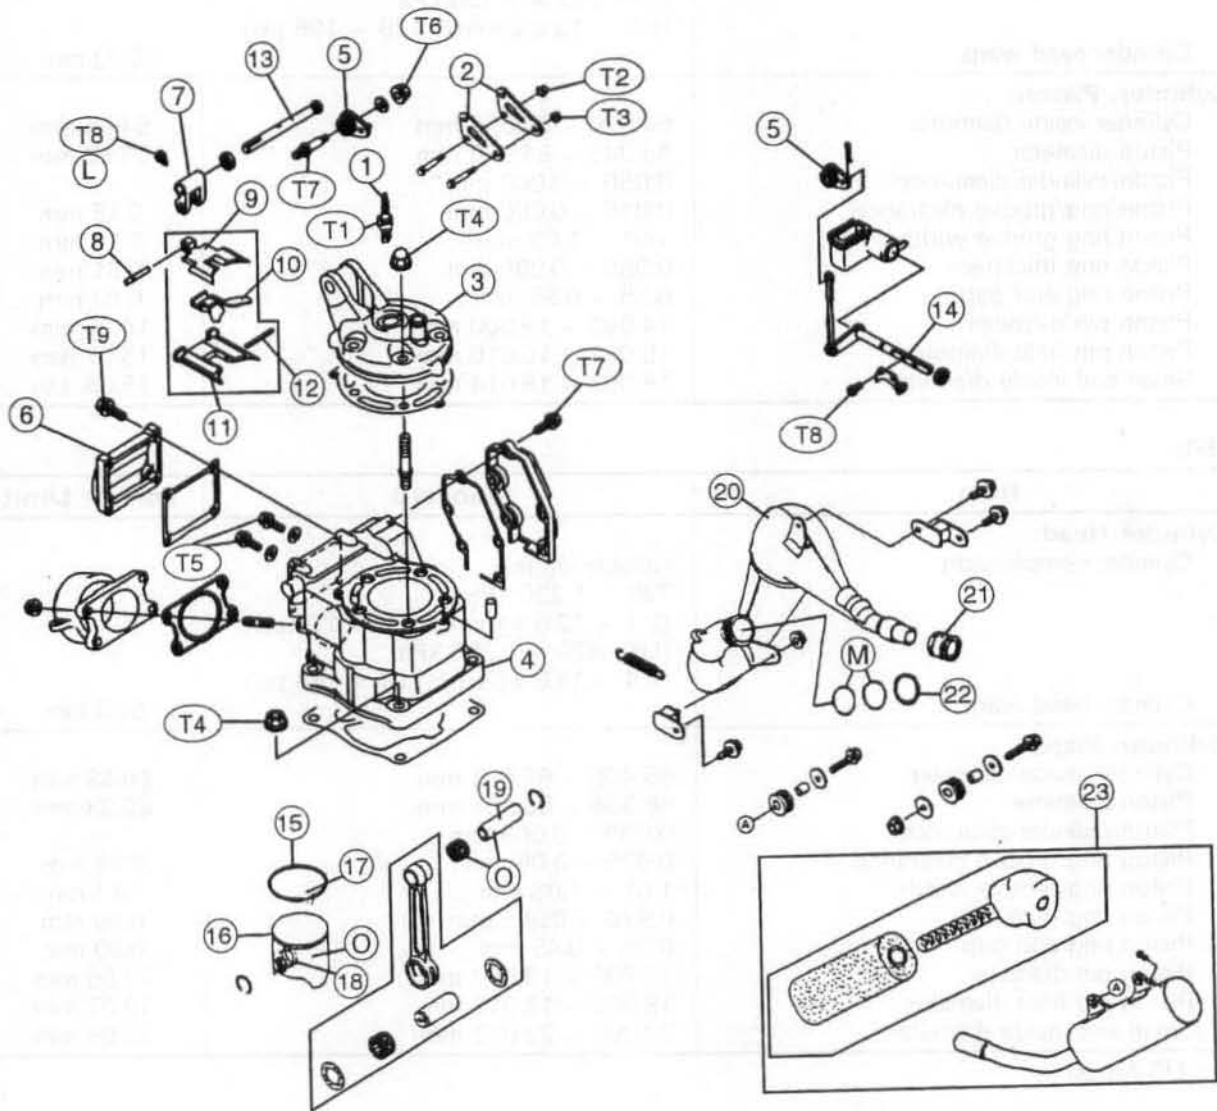

- | | |
|---------------------|--------------------------|
| 1. Spark Plug | 13. Main Shaft |
| 2. Engine Bracket | 14. Governor Shaft Lever |
| 3. Cylinder Head | 15. Piston Ring |
| 4. Cylinder | 16. Piston |
| 5. Idle Gear Lever | 17. "R" Mark |
| 6. Main Valve Cover | 18. "IN" Mark |
| 7. Main Valve | 19. Piston Pin |
| 8. Pin | 19. Piston Pin |
| 9. Slide Valve | 20. Expansion Chamber |
| 10. Butterfly Valve | 21. Rubber Seal |
| 11. Valve Holder | 22. Gasket |
| 12. Pin | 23. Silencer |
| | 24. KIPS Cover |

- L: Apply a non-permanent locking agent to the threads.
- O: Apply 2-stroke engine oil.
- M: Apply molybdenum disulfide grease.
- T1: 27 N-m (2.8 kg-m, 20 ft-lb)
- T2: 29 N-m (3.0 kg-m, 22 ft-lb)
- T3: 44 N-m (4.5 kg-m, 33 ft-lb)
- T4: 25 N-m (2.5 kg-m, 18.0 ft-lb)
- T5: 5.4 N-m (0.55 kg-m, 48 in-lb)
- T6: 6.9 N-m (0.7 kg-m, 61 in-lb)
- T7: 8.8 N-m (0.9 kg-m, 78 in-lb)
- T8: 3.9 N-m (0.4 kg-m, 35 in-lb)
- T9: 5.9 N-m (0.6 kg-m, 52 in-lb)

18-14 SUPPLEMENT - 1998 MODEL

Specifications

KX125:

Item	Standard	Service Limit
Cylinder Head: Cylinder compression	(usable range) 890 ~ 1 370 kPa (9.1 ~ 14.0 kg/cm ² , 129 ~ 199 psi) (EU) 885 ~ 1 350 kPa (9.0 ~ 13.8 kg/cm ² , 128 ~ 196 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston: Cylinder inside diameter	54.000 ~ 54.015 mm	54.08 mm
Piston diameter	53.945 ~ 53.960 mm	53.82 mm
Piston/cylinder clearance	0.050 ~ 0.060 mm	---
Piston ring/groove clearance	0.015 ~ 0.050 mm	0.15 mm
Piston ring groove width	1.01 ~ 1.03 mm	1.10 mm
Piston ring thickness	0.980 ~ 0.995 mm	0.91 mm
Piston ring end gap	0.35 ~ 0.55 mm	0.90 mm
Piston pin diameter	14.995 ~ 15.000 mm	14.96 mm
Piston pin hole diameter	15.001 ~ 15.016 mm	15.07 mm
Small end inside diameter	19.003 ~ 19.014 mm	19.05 mm

KX250:

Item	Standard	Service Limit
Cylinder Head: Cylinder compression	(usable range) 795 ~ 1 230 kPa (8.1 ~ 12.5 kg/cm ² , 115 ~ 178 psi) (US) 825 ~ 1 280 kPa (8.4 ~ 13.0 kg/cm ² , 119 ~ 185 psi)	---
Cylinder head warp	---	0.03 mm
Cylinder, Piston: Cylinder inside diameter	66.400 ~ 66.415 mm	66.48 mm
Piston diameter	66.336 ~ 66.351 mm	66.23 mm
Piston/cylinder clearance	0.059 ~ 0.069 mm	---
Piston ring/groove clearance	0.025 ~ 0.06 mm	0.18 mm
Piston ring groove width	1.01 ~ 1.03 mm	1.13 mm
Piston ring thickness	0.970 ~ 0.985 mm	0.90 mm
Piston ring end gap	0.25 ~ 0.45 mm	0.80 mm
Piston pin diameter	17.995 ~ 18.000 mm	17.96 mm
Piston pin hole diameter	18.005 ~ 18.015 mm	18.07 mm
Small end inside diameter	22.003 ~ 22.012 mm	22.05 mm

(US) : US Model

Special Tool - Piston Ring Pliers: 57001-115
Compression Gauge: 57001-221
Piston Pin Puller Assembly: 57001-910
Compression Gauge Adapter, M14 x 1.25: 57001-1159


Cylinder, Piston

Cylinder Removal

- Refer to p.4-7, noting the following.

KX125:

- Remove the clip [A] and pull out the governor shaft lever [B] from the idle gear lever [C]

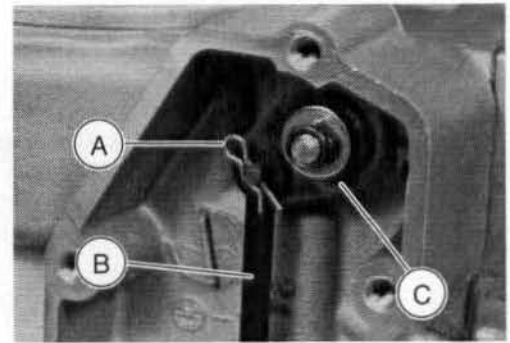


Exhaust Valve (KIPS) KX125-K5 Only

Removal


- Drain the coolant.

- Remove:


- Radiators
- Muffler
- KIPS Cover
- Clip [A]
- Governor Shaft Lever [B]
- Nut and Washer [C]
- Idle gear lever [D]
- Main Valve Cover

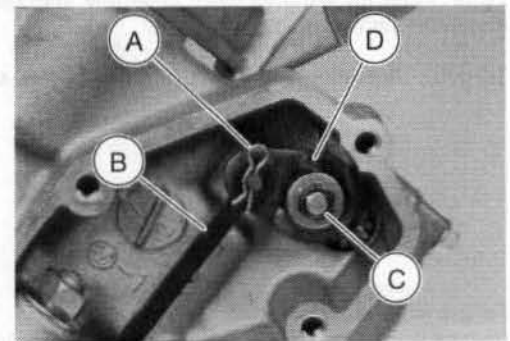

- Position the exhaust valve assembly full open [A], and unscrew the Allen bolt [B].

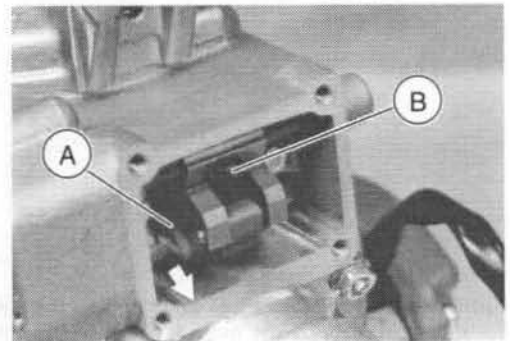


- Pull out the main shaft [A] and remove the main lever [B].
- Unscrew the two exhaust valve retaining screws [C].
- Pull out the main exhaust valve assembly [D].

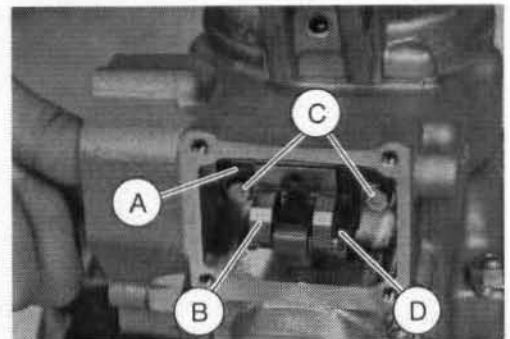

Installation


- Scrape out any carbon and clean the valves with a high flash-point solvent.
- Check the following for signs of damage:
 - Exhaust Valve Assembly
 - Oil Seal
 - Gaskets
- ★ If necessary, replace them with new ones.
- Apply a 2-stroke engine oil to the operation parts.
- Apply high temperature grease to the oil seal lip.

- Set up the exhaust valve assembly as shown.
 - Slide Valve [A]
 - Butterfly Valve [B]
 - Valve Holder [C]
 - Pin [D]
- Check that when the slide valve is slid to front and rear, the butterfly valve is move smoothly up and down.

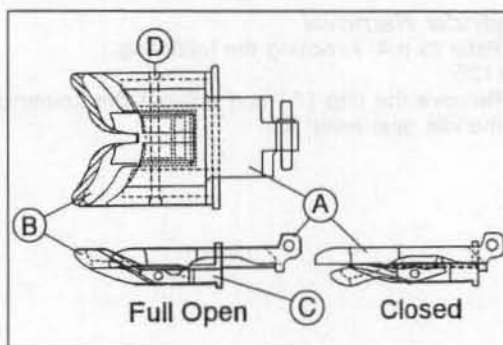


- Insert the pin [A] direction as shown.
- Insert the exhaust valve assembly [B] in to the hole in the cylinder.
- When insert the exhaust valve assembly full opened position.
- Install the retaining screw securely.

Torque - Retaining Screw: 5.4 N-m (0.55 kg-m, 48 in-lb)

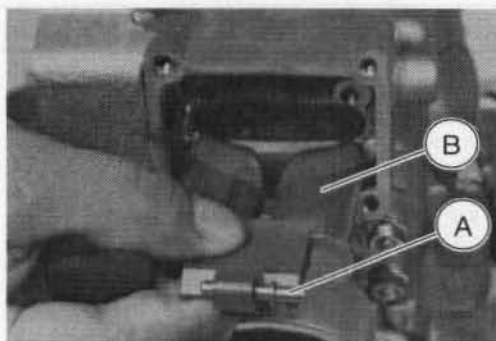


- Fit the main lever [A].
- Insert the main shaft [B] in the hole of the cylinder and through the hole in the main lever.

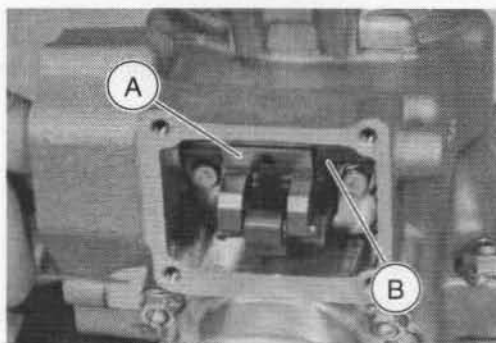


- Apply a non-permanent locking agent to the Allen bolt.
- Fix the main lever to the main shaft with the Allen bolt [A].

Torque - Main Lever Allen Bolt: 3.9 N-m (0.4 kg-m, 35 in-lb)

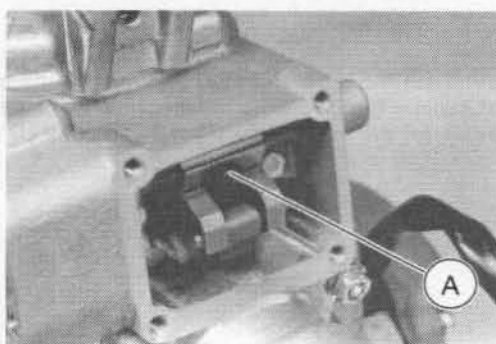


- Install the Idle gear lever [A] so that the mark [B] on the main shaft gear [C] aligns with the groove [D] on the idle gear lever.
- Check that the exhaust valve assembly slide smoothly.
- Install the washer and nut.

Torque - Idle Gear Lever Nut: 6.9 N-m (0.7 kg-m, 61 in-lb)

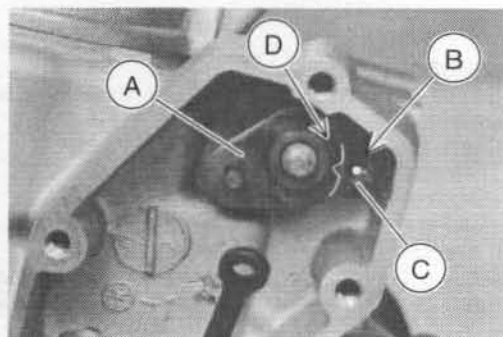


- Using the 12 mm spanner wrench [A], install the governor shaft lever [B] as shown.
- Install the pin, KIPS cover, and main cover.

Torque - KIPS Cover Bolts: 8.8 N-m (0.9 kg-m, 78 in-lb)
Main Valve Cover Bolts: 5.9 N-m (0.6 kg-m, 52 in-lb)

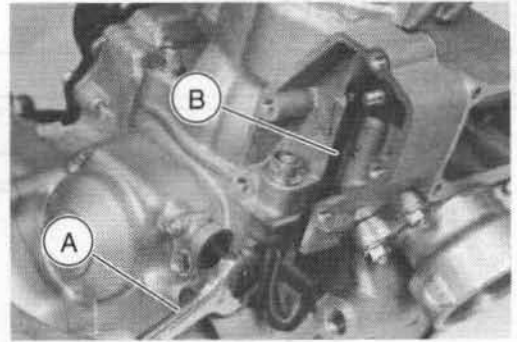

Engine Right Side

Exploded View

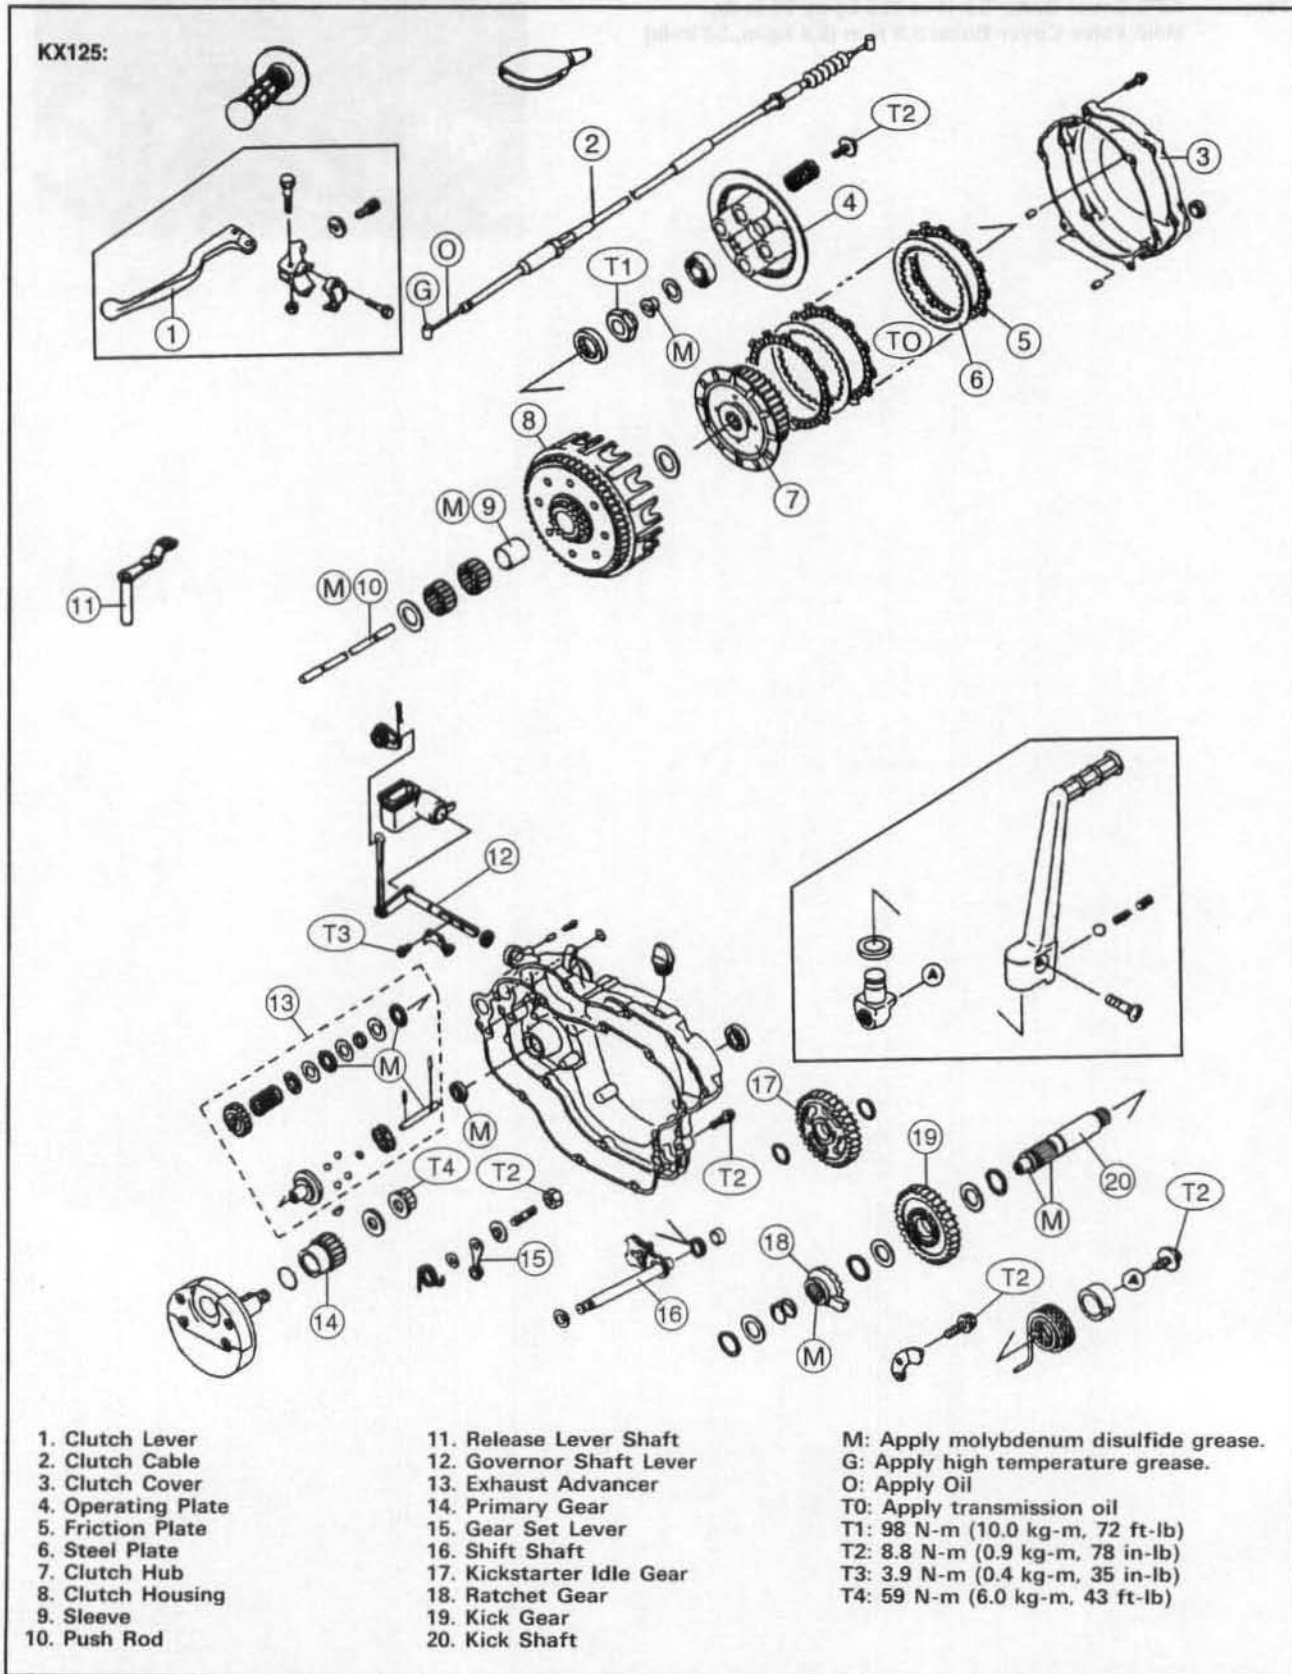

Specifications

Item	Standard	Service Limit
Clutch:		
Lever free play	2 ~ 3 mm	---
Friction plate thickness:		
KX125	2.72 ~ 2.88 mm	2.6 mm
KX250	2.92 ~ 3.08 mm	2.8 mm
Steel plate thickness:		
KX125	1.5 ~ 1.7 mm	1.4 mm
KX250	1.46 ~ 1.74 mm	1.36 mm
Friction plate warp	Not more than 0.15 mm	0.3 mm
Steel plate warp	Not more than 0.2 mm	0.3 mm
Clutch spring free length:		
KX125	36.4 mm	34.9 mm
KX250	35.0 mm	33.6 mm
Friction plate/clutch housing clearance		
KX125	0.04 ~ 0.55 mm	0.9 mm
KX250	0.15 ~ 0.45 mm	0.8 mm

Special Tool – Outside Circlip Pliers: 57001-144
 Kick Shaft Oil Seal Guide: 57001-267
 Oil Seal Guide, Φ 13: 57001-264
 Flywheel Holder: 57001-1313
 Clutch Holder: 57001-1243
 Pressure Cable Luber: K56019-021


Right Engine Cover

Removal

● Refer p.5-8, noting the following.

KX125:

● Remove the clip [A] and pull out the governor shaft lever [B] from the idle gear lever [C].

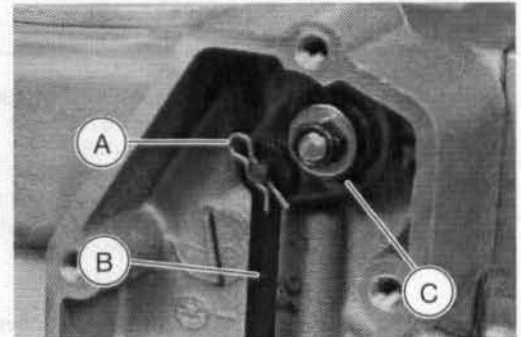


Installation

● Refer p.5-9, noting the following.

KX125:

● Using the 14 mm spanner wrench [A], install the governor shaft lever [B] as shown.

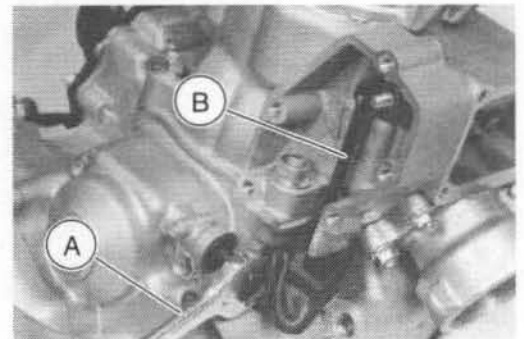

Engine Bottom End/Transmission

Specifications

Item	Standard	Service Limit
Transmission Oil:		
Transmission Oil:		
Grade	SE, SF or SG class	---
Viscosity	SAE10W30 or 10W40	---
Amount:	0.7 L	---
	KX125	---
	KX250	0.85 L
Crankshaft, Connecting rod:		
Connecting rod bend	Not more than 0.03 mm/100 mm	0.2 mm/100 mm
Connecting rod twist	Not more than 0.03 mm/100 mm	0.2 mm/100 mm
Connecting rod big end radial clearance:		
	KX125	0.036 ~ 0.047 mm
	KX250	0.037 ~ 0.049 mm
Connecting rod big end side clearance:		
	KX125	0.40 ~ 0.50 mm
	KX250	0.45 ~ 0.55 mm
Crankshaft runout	Not more than 0.03 mm	0.05 mm
Transmission:		
Shift fork ear thickness:		
	KX125	4.90 ~ 5.00 mm
	KX250	4.40 ~ 4.50 mm
Gear shift fork groove width:		
	KX125	5.05 ~ 5.15 mm
	KX250	4.55 ~ 4.65 mm
Shift fork guide pin diameter	5.90 ~ 6.00 mm	5.80 mm
Shift drum groove width	6.05 ~ 6.20 mm	6.25 mm

Special Tool – Bearing Puller Adapter: 57001-136
 Outside Circlip Pliers: 57001-144
 Bearing Puller: 57001-158
 Oil Seal Guide, $\Phi 13$: 57001-264
 Kick Shaft Oil Seal Guide: 57001-267
 Crankcase Splitting Tool Assembly: 57001-1098
 Bearing Driver Set: 57001-1129
 Crankshaft Jig: 57001-1174

Sealant – Kawasaki Bond (Liquid Gasket – Silver): 92104-002

Wheels/Tires

Specifications

Item	Standard	Service Limit
Wheels (Rims):		
Rim Runout: Axial	---	2 mm
Radial	---	2 mm
Axle runout/100 mm	Under 0.10 mm	0.2 mm
Tires:		
Standard tire:		
KX125		
Front: Size	80/100-21 51 M	---
Make	DUNLOP	
Type	K490, Tube (EU) D755, Tube	
Rear: Size	100/90-19 57 M	---
Make	DUNLOP	
Type	D737, Tube (EU) D755, Tube	
KX250		
Front: Size	80/100-21 51 M	---
Make/Type	BRIDGESTONE M77, Tube (EU) DUNLOP D755, Tube	
Rear: Size	110/90-19 62M	---
Make/Type	BRIDGESTONE M78A, Tube (EU) DUNLOP D755, Tube	

(EU): European Model

Special Tool - Inside Circlip Pliers: 57001-143
Rim Protector: 57001-1063
Bead Breaker Assembly: 57001-1072
Bearing Driver Set: 57001-1129
Jack: 57001-1238

Final Drive

Specifications

Item	Standard	Service Limit
Drive Chain:		
Chain Slack	60 ~ 70 mm	Less than 60 mm, or more than 75 mm
Chain 20-link length	317.5 ~ 318.2 mm	323 mm
Standard chain:		
Make	DAIDO	---
Type:	D.I.D 520DMA	---
	D.I.D 520DM	---
Links	112 Links	---
	114 Links	---
Sprockets:		
Engine sprocket diameter:		
KX125	50.98 ~ 51.18 mm/12 T	50.7 mm
KX250	60.99 ~ 61.19 mm/14 T	60.7 mm
	(US)(CA) 55.48 ~ 55.68 mm/13 T	55.2 mm
Rear sprocket diameter		
KX125	232.62 ~ 233.12 mm/48 T	232.1 mm
KX250	237.54 ~ 238.04 mm/49 T	237.0 mm
	(US)(CA) 232.62 ~ 233.12/48 T	232.1 mm
Rear sprocket warp	Under 0.4 mm	0.5 mm

(US): US Model

(CA): Canadian Model


Special Tool – Outside Circlip Pliers: 57001-144
 Bearing Driver Set: 57001-1129
 Jack: 57001-1238

Brakes

Specifications


Item	Standard	Service Limit
Brake Adjustment: Lever play	Adjustable (to suit rider)	---
Brake Fluid: Recommended disc brake fluid: Type Brand	D.O.T.3 or D.O.T.4 [D.O.T.3] Atlas Extra Heavy Duty Shell Super Heavy Duty Texaco Super Heavy Duty Wagner Lockheed Heavy Duty Castrol Girling-Universal Castrol GT (LMA) Castrol Disc Brake Fluid [D.O.T.4] Castrol Girling-Universal Castrol GT (LMA) Castrol Disc Brake Fluid Check Shock Premium Heavy Duty	--- --- --- --- --- --- --- --- ---
Brake Pads: Lining thickness: Front Rear	4.2 mm 4.7 mm	1mm 1 mm
Brake Disc: Thickness Runout	Front Rear 2.85 ~ 3.15 mm 4.35 ~ 4.65 mm Less than 0.25 mm	2.5 mm 3.8 0.3 mm

Special Tool - Inside Circlip Pliers: 57001-143
Jack: 57001-1238

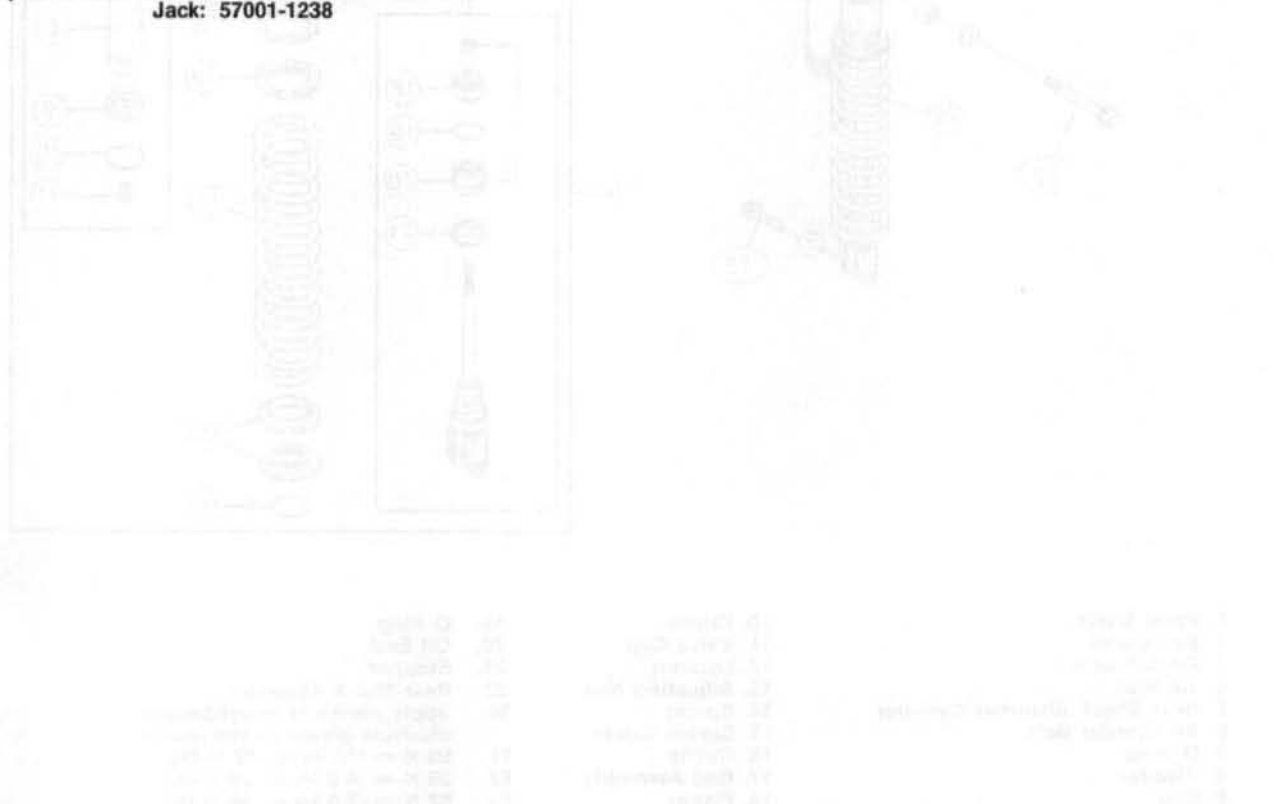

Suspension

Exploded View

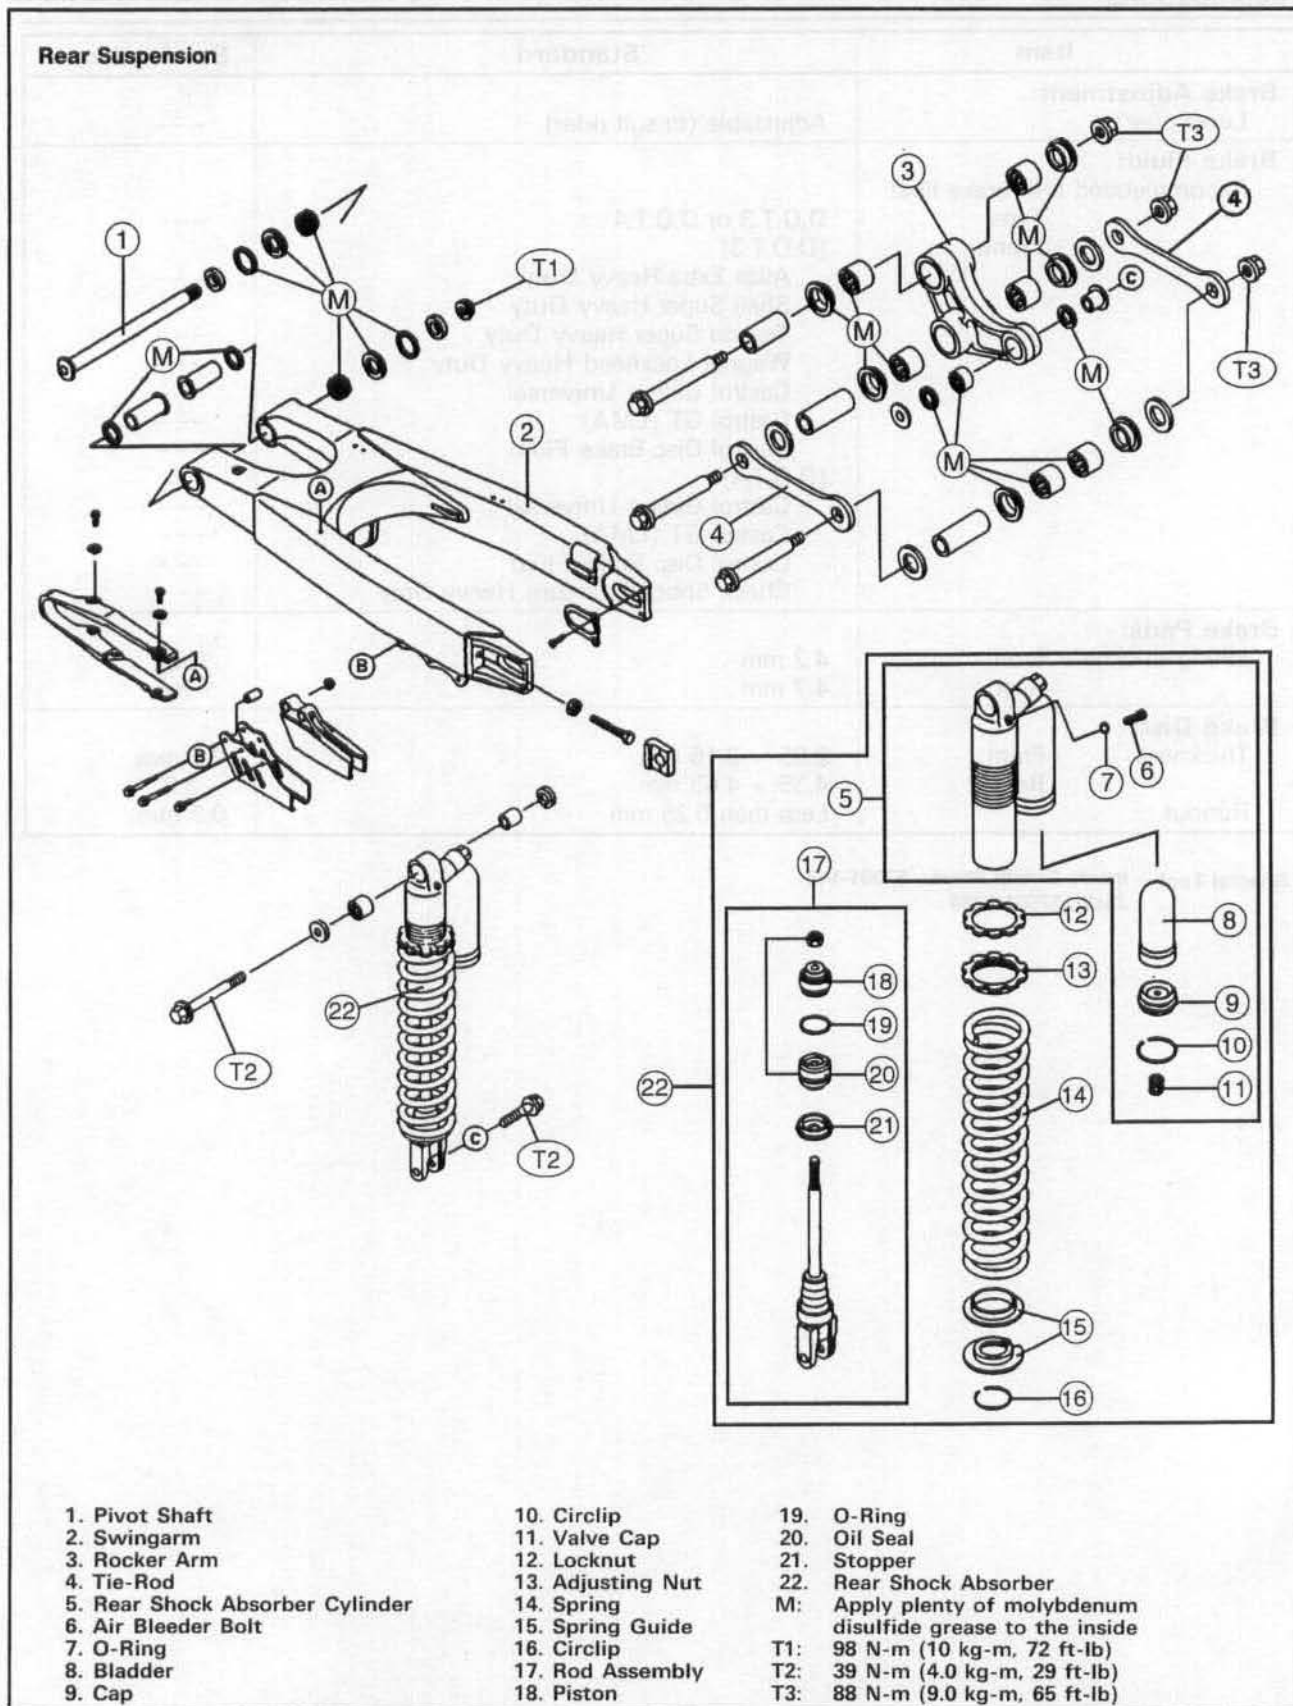

Specifications


Item	Standard	Service Limit
Front Fork:		
Air pressure	Atmospheric pressure	---
Rebound damping adjustment		
KX125	12 clicks	(Adjustable Range)
KX250	11 clicks	18 clicks or more
Compression damping adjustment:		
KX125	12 clicks	(Adjustable Range)
KX250	10 clicks	18 clicks or more
Oil viscosity	KAYABA 01 SAE 5W	---
Oil capacity:		
KX125	619 ±4 mL	---
KX250	619 ±4 mL	---
Oil level (fully compressed, spring removed)		
KX125	110 ±2 mm	(Adjustable Range) 105 ~ 140 mm
KX250	110 ±2 mm	(Adjustable Range) 105 ~ 140 mm
Fork spring free length	470 mm	460 mm
Rear Suspension (Uni-Trak):		
Rear Shock Absorber:		
Rebound damping adjustment		
KX125	12 clicks	(Adjustable Range)
KX250	11 clicks	20 clicks or more
Compression damping adjustment:		
KX125	12 clicks	(Adjustable Range)
KX250	12 clicks	18 clicks or more
Spring preload adjustment (Adjusting nut position from the center of the upper mounting hole):		(Adjustable Range)
KX125	109.5 mm	99.5 ~ 118 mm
KX250	111 mm	99.5 ~ 118 mm
Rear shock spring free length	280 mm	270 mm
Gas Reservoir:		
Gas pressure	980 kPa (10 kg/cm ² , 142 psi)	---
Tie-Rod, Rocker Arm:		
Sleeve outside diameter:		
Long	21.987 ~ 22.000 mm	21.85 mm
Short	15.989 ~ 16.000 mm	15.85 mm
Rocker Arm Mounting Bolt Runout	under 0.1 mm	0.2 mm

- Special Tool – Hook Wrench: 57001-1101**
Jack: 57001-1238
Fork Spring Holder: 57001-1286
Fork Cylinder Holder: 57001-1287
Oil Seal Driver, Ø46: 57001-1395
Fork Piston Rod Puller, M12 x 1.25: 57001-1289
Fork Oil Level Gauge: 57001-1290

Front Fork

Install Fork Cylinder

- Refer to p.11-14, noting the following.
 - Screw on the push rod nut [B]
 - Position the push rod nut at 18.5 mm [A] or more from the top of the push rod.
- KX250:
- A. 18.5 mm or more
 - B. Push Rod Nut
 - C. Spring Guide

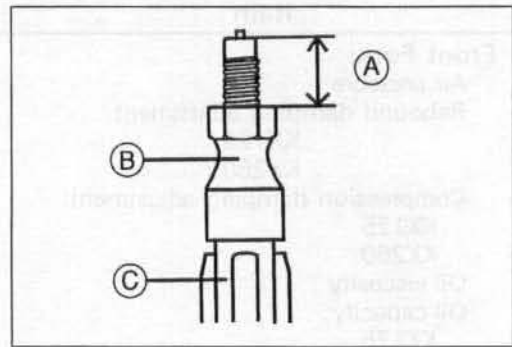


Model	Part No.	Quantity	Notes
KX250	110-11000-0000	1	Push Rod Nut
	110-11000-0001	1	Spring Guide
KX250	110-11000-0002	1	Push Rod Nut
	110-11000-0003	1	Spring Guide
KX250	110-11000-0004	1	Push Rod Nut
	110-11000-0005	1	Spring Guide
KX250	110-11000-0006	1	Push Rod Nut
	110-11000-0007	1	Spring Guide
KX250	110-11000-0008	1	Push Rod Nut
	110-11000-0009	1	Spring Guide
KX250	110-11000-0010	1	Push Rod Nut
	110-11000-0011	1	Spring Guide
KX250	110-11000-0012	1	Push Rod Nut
	110-11000-0013	1	Spring Guide
KX250	110-11000-0014	1	Push Rod Nut
	110-11000-0015	1	Spring Guide
KX250	110-11000-0016	1	Push Rod Nut
	110-11000-0017	1	Spring Guide
KX250	110-11000-0018	1	Push Rod Nut
	110-11000-0019	1	Spring Guide
KX250	110-11000-0020	1	Push Rod Nut
	110-11000-0021	1	Spring Guide
KX250	110-11000-0022	1	Push Rod Nut
	110-11000-0023	1	Spring Guide
KX250	110-11000-0024	1	Push Rod Nut
	110-11000-0025	1	Spring Guide
KX250	110-11000-0026	1	Push Rod Nut
	110-11000-0027	1	Spring Guide
KX250	110-11000-0028	1	Push Rod Nut
	110-11000-0029	1	Spring Guide
KX250	110-11000-0030	1	Push Rod Nut
	110-11000-0031	1	Spring Guide
KX250	110-11000-0032	1	Push Rod Nut
	110-11000-0033	1	Spring Guide
KX250	110-11000-0034	1	Push Rod Nut
	110-11000-0035	1	Spring Guide
KX250	110-11000-0036	1	Push Rod Nut
	110-11000-0037	1	Spring Guide
KX250	110-11000-0038	1	Push Rod Nut
	110-11000-0039	1	Spring Guide
KX250	110-11000-0040	1	Push Rod Nut
	110-11000-0041	1	Spring Guide
KX250	110-11000-0042	1	Push Rod Nut
	110-11000-0043	1	Spring Guide
KX250	110-11000-0044	1	Push Rod Nut
	110-11000-0045	1	Spring Guide
KX250	110-11000-0046	1	Push Rod Nut
	110-11000-0047	1	Spring Guide
KX250	110-11000-0048	1	Push Rod Nut
	110-11000-0049	1	Spring Guide
KX250	110-11000-0050	1	Push Rod Nut
	110-11000-0051	1	Spring Guide
KX250	110-11000-0052	1	Push Rod Nut
	110-11000-0053	1	Spring Guide
KX250	110-11000-0054	1	Push Rod Nut
	110-11000-0055	1	Spring Guide
KX250	110-11000-0056	1	Push Rod Nut
	110-11000-0057	1	Spring Guide
KX250	110-11000-0058	1	Push Rod Nut
	110-11000-0059	1	Spring Guide
KX250	110-11000-0060	1	Push Rod Nut
	110-11000-0061	1	Spring Guide
KX250	110-11000-0062	1	Push Rod Nut
	110-11000-0063	1	Spring Guide
KX250	110-11000-0064	1	Push Rod Nut
	110-11000-0065	1	Spring Guide
KX250	110-11000-0066	1	Push Rod Nut
	110-11000-0067	1	Spring Guide
KX250	110-11000-0068	1	Push Rod Nut
	110-11000-0069	1	Spring Guide
KX250	110-11000-0070	1	Push Rod Nut
	110-11000-0071	1	Spring Guide
KX250	110-11000-0072	1	Push Rod Nut
	110-11000-0073	1	Spring Guide
KX250	110-11000-0074	1	Push Rod Nut
	110-11000-0075	1	Spring Guide
KX250	110-11000-0076	1	Push Rod Nut
	110-11000-0077	1	Spring Guide
KX250	110-11000-0078	1	Push Rod Nut
	110-11000-0079	1	Spring Guide
KX250	110-11000-0080	1	Push Rod Nut
	110-11000-0081	1	Spring Guide
KX250	110-11000-0082	1	Push Rod Nut
	110-11000-0083	1	Spring Guide
KX250	110-11000-0084	1	Push Rod Nut
	110-11000-0085	1	Spring Guide
KX250	110-11000-0086	1	Push Rod Nut
	110-11000-0087	1	Spring Guide
KX250	110-11000-0088	1	Push Rod Nut
	110-11000-0089	1	Spring Guide
KX250	110-11000-0090	1	Push Rod Nut
	110-11000-0091	1	Spring Guide
KX250	110-11000-0092	1	Push Rod Nut
	110-11000-0093	1	Spring Guide
KX250	110-11000-0094	1	Push Rod Nut
	110-11000-0095	1	Spring Guide
KX250	110-11000-0096	1	Push Rod Nut
	110-11000-0097	1	Spring Guide
KX250	110-11000-0098	1	Push Rod Nut
	110-11000-0099	1	Spring Guide
KX250	110-11000-0100	1	Push Rod Nut
	110-11000-0101	1	Spring Guide


Electrical System

Exploded View

KX125:

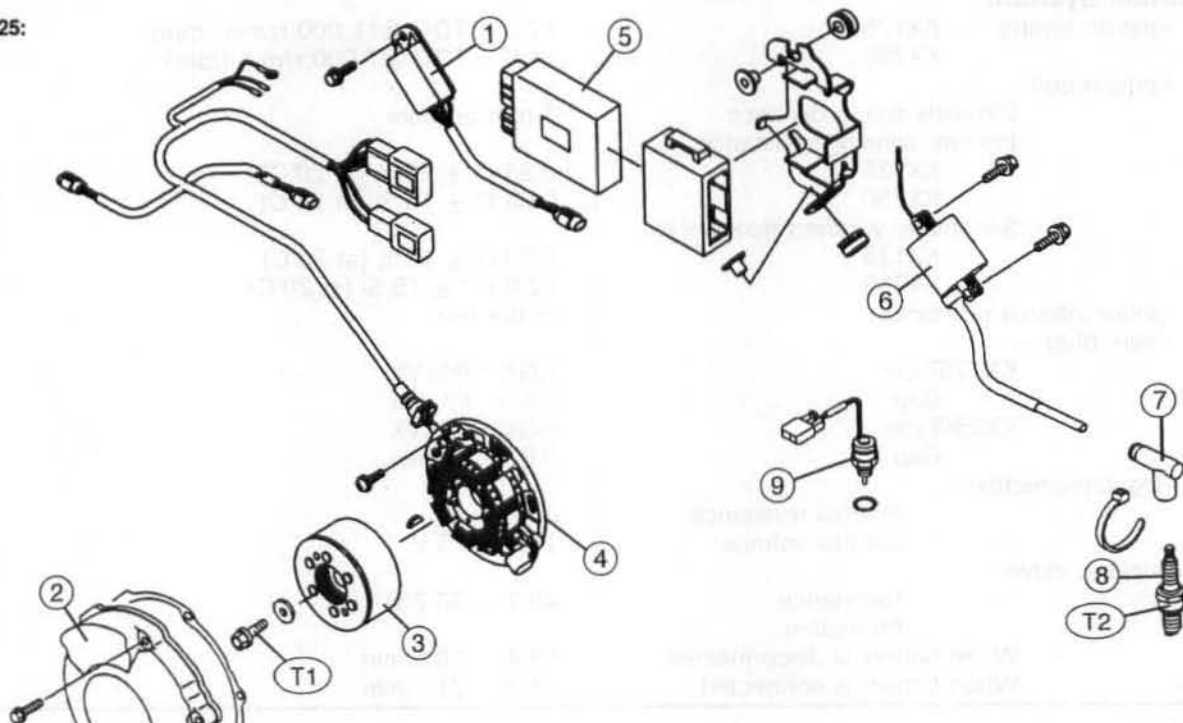

KX250:

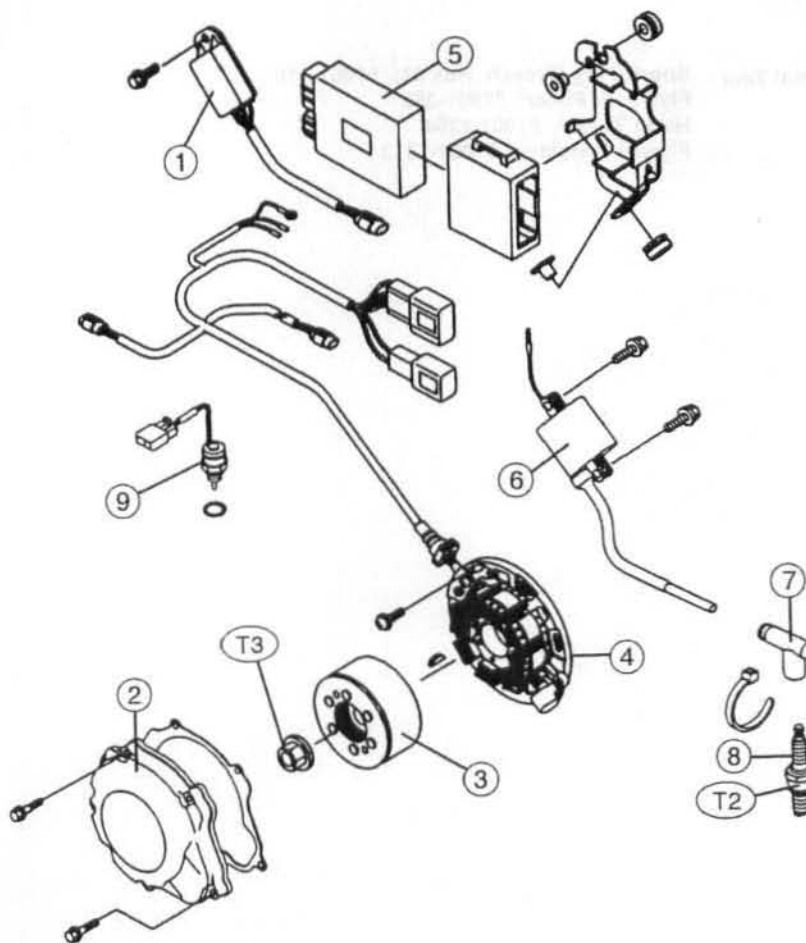

- 1. Regulator/Rectifier
- 2. Magneto Cover
- 3. Magneto Flywheel
- 4. Stator
- 5. I.C. Igniter
- 6. Ignition Coil
- 7. Spark Plug Cap
- 8. Spark Plug
- 9. Fuel Cat Valve
- T1: 22 N-m (2.2 kg-m, 16.0 ft-lb)
- T2: 27 N-m (2.8 kg-m, 20 ft-lb)
- T3: 78 N-m (8.0 kg-m, 58 ft-lb)

Specifications


Item	Standard
Ignition System:	
Ignition timing: KX125	12.0° BTDC @11 000 r/min (rpm)
KX250	11.0° BTDC @7 000 r/min (rpm)
Ignition coil:	
3 needle arcing distance	7 mm or more
Primary winding resistance:	
KX125	0.24 Ω \pm 15 % (at 20°C)
KX250	0.53 Ω \pm 15 % (at 20°C)
Secondary winding resistance:	
KX125	8.3 k Ω \pm 15 % (at 20°C)
KX250	12.6 k Ω \pm 15 % (at 20°C)
Igniter internal resistance	In the test
Spark plug:	
KX125Type	NGK BR9EVX
Gap	0.6 ~ 0.7 mm
KX250Type	NGK BR8EVX
Gap	0.6 ~ 0.7 mm
Regulator/rectifier:	
Internal resistance	in the test
out put voltage.	14.7 \pm 0.5 V
Fuel cut valve:	
Resistance	49.7 ~ 56.2 Ω
Protrusion:	
When battery is disconnected	19.4 ~ 19.6 mm
When battery is connected	21.3 ~ 21.7 mm

Special Tool – Spark Plug Wrench, Hex 21: 57001-110
Flywheel Puller: 57001-252
Hand Tester: 57001-1394
Flywheel Holder: 57001-1313

Wiring Diagram

KX125, 250:

1. Regulator/Rectifier
2. Magneto
3. Charging Coil
4. Exciter Coil
5. Pickup Coil
6. Igniter
7. Engine Stop Button
8. Fuel Cut Valve
9. Ignition Coil
10. Spark Plug

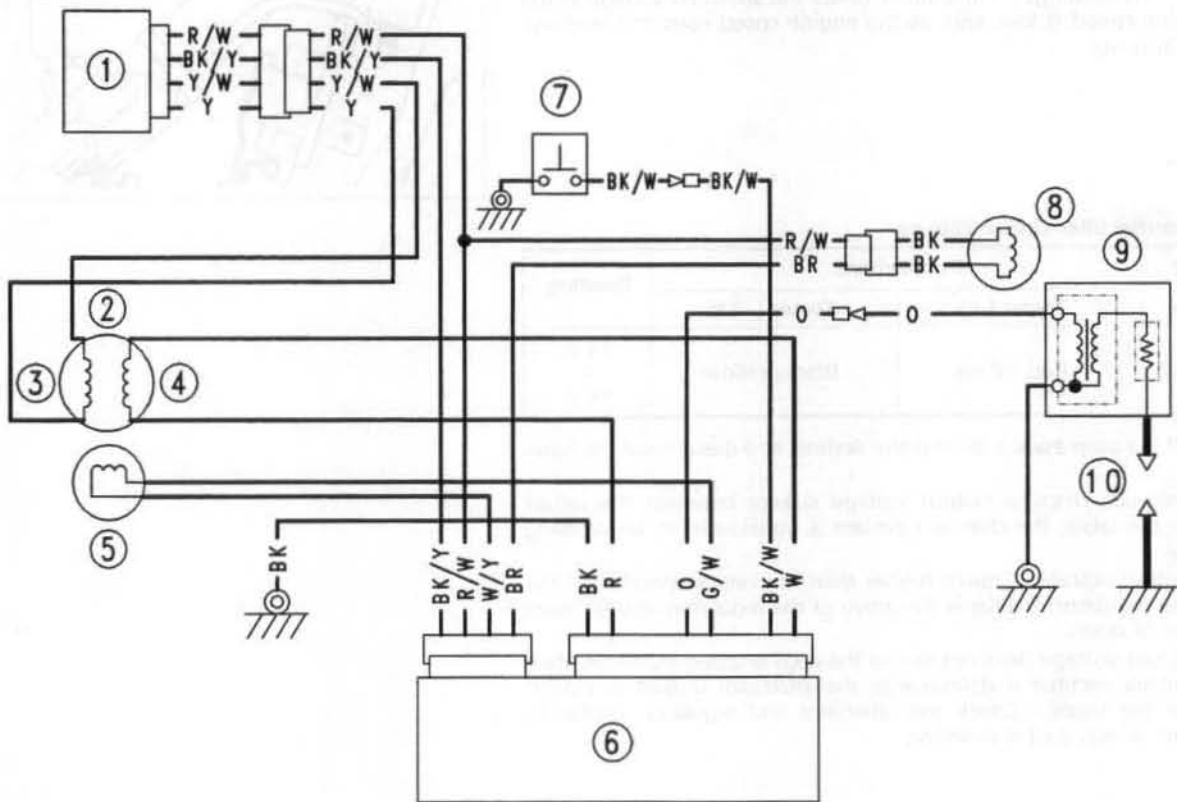


Color Code	
BK	Black
BR	Brown
G	Green
O	Orange
R	Red
W	White
Y	Yellow

Flywheel Magneto


Regulator/Rectifier Removal

- Remove:
 - Side Covers
 - Seat
 - Radiator shrouds
 - Fuel Tank
 - Band [A]
- Disconnect the regulator/rectifier lead connector [B].
- Unscrew the mounting bolt, and remove the regulator/rectifier [C].

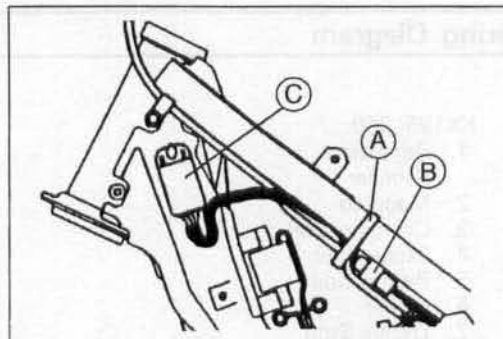

Regulator/Rectifier Output Voltage Inspection

- Warm up the engine to obtain actual alternator operating conditions.
- Stop the engine, and using an auxiliary wire, connect the hand tester [A] as shown in the table.
- Start the engine, and note the voltage readings at various engine speeds. The readings should show under the specified voltage when the engine speed is low, and, as the engine speed rises, the readings should also rise.

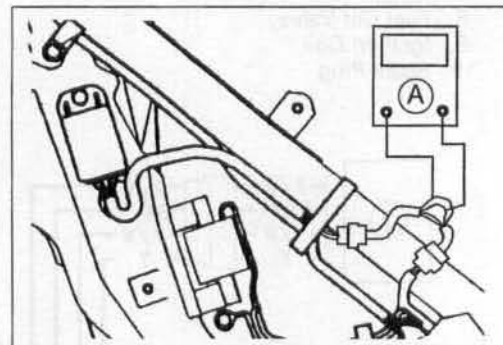

Regulator/Rectifier Output Voltage

Tester Range	Connections		Reading
	Tester (+)	Tester (-) to	
25 V DC	Red/White	Black/Yellow	14.2 ~ 15.2

- Push off the stop switch to stop the engine, and disconnect the hand tester.
- ★ If the regulator/rectifier output voltage is kept between the values given in the table, the charging system is considered to be working normally.
- ★ If the output voltage is much higher than the values specified in the table, the regulator/rectifier is defective or the regulator/rectifier leads are loose or open.
- ★ If the output voltage does not rise as the engine speed increases, then the regulator/rectifier is defective or the alternator output is insufficient for the loads. Check the alternator and regulator/rectifier to determine which part is defective.

Tester Range	Connections	Reading
25 V DC	Red/White	Black/Yellow
		14.2 ~ 15.2

Regulator/Rectifier Inspection

- Remove the regulator/rectifier.
- Set the hand tester x 100 Ω range, measure the internal resistance in both directions between the terminals.

Special Tool - Hand Tester: 57001-1394


★ If the reading is not specified value, replace the regulator/rectifier.

Internal Resistance (20°)

Unit: Ω

		Tester (+) Lead			
		Terminal	R/W	Y	Y/W
(-)*	R/W	-	500 ~ 5K	500 ~ 5K	300 ~ 3K
	Y	500 ~ 5K	-	500 ~ 50K	500 ~ 5K
	Y/W	500 ~ 5K	500 ~ 50K	-	500 ~ 5K
	BK/Y	300 ~ 3K	200 ~ 20K	200 ~ 20K	-

(-)* : Tester (-) Lead Connection

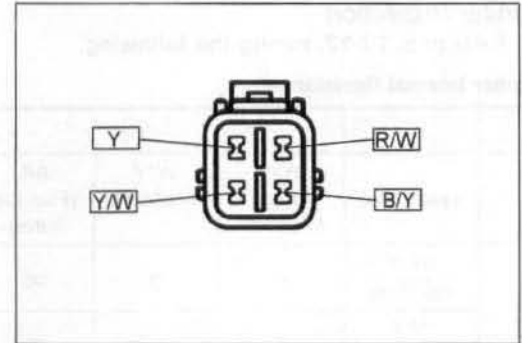


CAUTION

Use only Hand Tester 57001-1394 for this test. An ohmmeter other than the Hand Tester may show different readings. If a megger or a meter with a large-capacity battery is used, the regulator will be damaged.

Ignition System

Igniter Removal

- Remove:
 - Left Side Cover
- Disconnect the connector and remove the igniter [A]

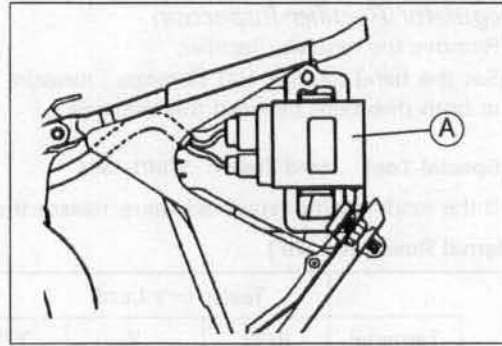

Igniter Inspection

Refer to p. 13-12, noting the following.

Igniter Internal Resistance


Lead Color	Tester Positive (+) Lead Connection									
	BK/Y (Reg. Ground)	W/Y (Pickup)	BR (Fuel Cut Valve)	BK (Ground)	R (Exciter)	O (Ign. Coil)	G/W (Pickup)	BK/W (Stop)	W (Exciter)	
BK/Y (Reg. Ground)	-	0	∞	0	6 ~ 24	4 ~ 19	∞	∞	28 ~ 110	
W/Y (Pickup)	0	-	∞	0	6 ~ 24	4 ~ 19	∞	∞	28 ~ 110	
BR (Fuel Cut Valve)	3 ~ 16	3 ~ 16	-	3 ~ 16	12 ~ 48	10 ~ 40	∞	∞	36 ~ 140	
BK (Ground)	0	0	∞	-	6 ~ 24	4 ~ 19	∞	∞	28 ~ 110	
R (Exciter)	4 ~ 18	4 ~ 18	∞	4 ~ 18	-	11 ~ 44	∞	∞	38 ~ 150	
O (Ign.Coil)	500 ~ ∞	500 ~ ∞	∞	500 ~ ∞	500 ~ ∞	-	∞	∞	500 ~ ∞	
G/W (Pickup)	20 ~ 85	20 ~ 85	∞	20 ~ 85	30 ~ 120	30 ~ 120	-	∞	50 ~ 250	
BK/W (Stop)	10 ~ 40	10 ~ 40	∞	10 ~ 40	20 ~ 80	19 ~ 80	∞	-	4 ~ 19	
W (Exciter)	4 ~ 16	4 ~ 16	∞	4 ~ 16	10 ~ 40	10 ~ 40	∞	∞	-	

* : Tester Negative (-) Lead Connection
∞ : Infinity

Range: x 1 kΩ
Unit: kΩ

Reg: Regulator/Rectifier
Ign.: Ignition

Color Code	
BK	Black
BR	Brown
G	Green
O	Orange
R	Red
W	White
Y	Yellow

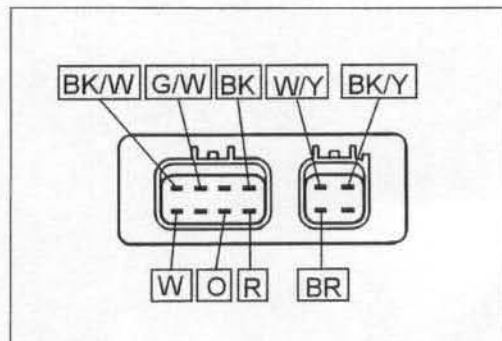

★The resistance values described above in the table will differ subject to the exhaustion degree of the tester battery, environmental temperature when measured and the temperature of igniter.


★Be careful not to contact the probe with the B terminal. This will damage the electrolytic condenser between A and B terminal.

★The conventional measurement of resistance cannot be executed as the huge electrolytic condenser is seated between A and B terminal. Measure the resistance as follows:

1. First, set the dial to X1K of OHM, then measure the resistance after connected the A terminal with the Ω terminal, and the B terminal with the COM terminal. Once the hand turns to 0 k Ω , then it will turn toward ∞ gradually. Release the probe when the hand turns to 50 k Ω .

2. Second, set the dial to 2.5 V of DC V, then measure the resistance after connected the A terminal with the COM terminal, and B terminal with V terminal. Once the hand turns to 1 V or more range, then it will turn toward 0V gradually.

The hand operation will be normal if operated as 1 and 2 above.

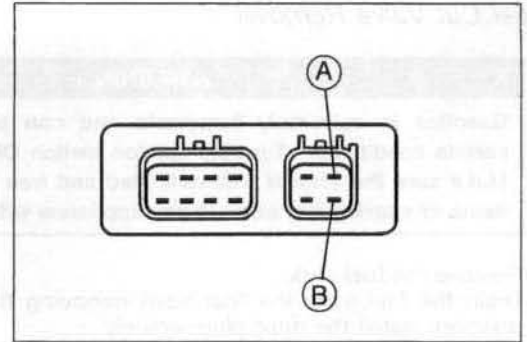

Stator Coil Inspection

Refer to p.13-13, noting the following.

Stator Coil Resistance (at 20°C)


Connections	Reading
White/Yellow - Green/White	180 ~ 380 Ω
Red - White	7 ~ 15 Ω
Yellow - Yellow/White	1 ~ 5 Ω

Fuel Cut Valve

Fuel Cut Valve Removal

▲WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

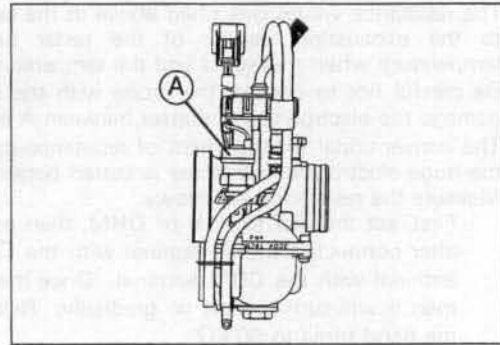

- Remove the fuel tank.
- Drain the fuel from the float bowl removing the drain plug. After draining, install the drain plug securely.
- Disconnect the connector of the fuel cut valve [A].
- Loosen the fuel cut valve and remove it.

Fuel Cut Valve Installation

- Installation is reverse of removal.


Fuel Cut Valve Inspection

- Remove the fuel cut valve [A].
- Connect and disconnect one 12 V battery [B] to the fuel cut valve connector as shown. The valve rod moves.
- ★ If the protrusion exceeds the standard (too long or too short), the valve is defective and must be replaced.

Testing Fuel Cut Valve

Standard Protrusion

- When battery is disconnected ← 19.4 ~ 19.6 mm
- When battery is connected ← 21.3 ~ 21.7 mm

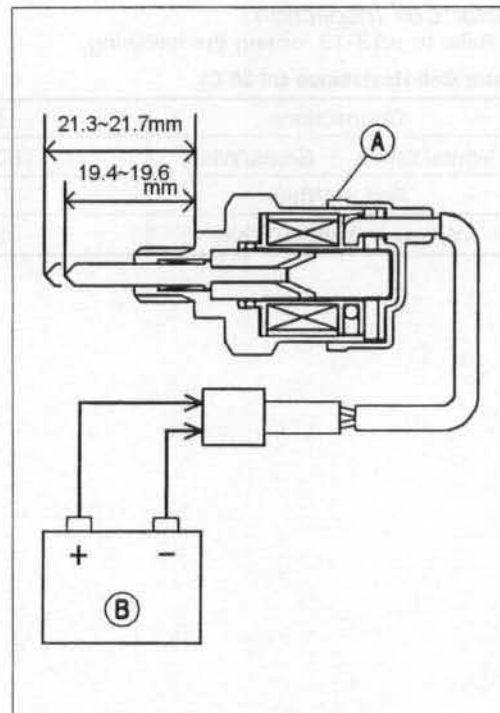

Appendix

Troubleshooting Guide

Engine Doesn't Start, Stating Difficulty:

No fuel flow:

Fuel cut valve left close (check fuel cut valve)

Poor Running at Low Speed:

Fuel/air mixture incorrect:

Fuel cut valve won't fully open (check fuel cut valve and igniter)

MODEL APPLICATION

Year	Model	Beginning Frame No.
1994	KX125-K1	JKAKXRK1□RA000001 or KX125K-000001
1994	KX250-K1	JKAKXMK1□RA000001 or KX250K-000001
1995	KX125-K2	JKAKXRK1□SA006001 or KX125K-006001
1995	KX250-K2	JKAKXMK1□SA006001 or KX250K-006001
1996	KX125-K3	JKAKXRK1□TA013001 or KX125K-013001
1996	KX250-K3	JKAKXMK1□TA014001 or KX250K-014001
1997	KX125-K4	JKAKXRK1□VA020001 or KX125K-020001
1997	KX250-K4	JKAKXMK1□VA020001 or KX250K-020001
1998	KX125-K5	JKAKXRKC□WA026001 or KX125K-026001
1998	KX250-K5	JKAKXMKC□WA027001 or KX250K-027001

□: This digit in the frame number changes from one machine to another.